



## **iNetVu™ 9000 Controller User Manual**

The iNetVu™ brand and logo are registered trademarks of C-COM Satellite Systems, Inc.  
© Copyright 2006 C-COM Satellite Systems, Inc.

**1-877-iNetVu6**  
**[www.c-comsat.com](http://www.c-comsat.com)**  
**Revision 1.0.8**  
**August 31, 2007**







## NOTICE

**C-COM Satellite Systems Inc. makes no warranty of any kind with regards to this manual including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.**

**C-COM Satellite Systems Inc. shall not be liable for errors contained herein or direct, indirect, special, incidental or consequential damages in connection with the furnishing, performance or use of this material.**

**The information contained in this document is subject to change without notice.**

**Copyright © 2006. All rights reserved. C-COM Satellite Systems Inc.**

This document contains information, which is protected by copyright. All rights reserved. Reproduction, adaptation, or translation without prior written permission is prohibited, except as followed under the copyright laws.

Both the iNetVu™ and C-COM names and logos are registered trademarks of C-COM Satellite Systems Inc.

Intel® Pentium is a registered trademark of Intel Corporation. Microsoft, Windows, Windows NT and MapPoint are registered trademarks of Microsoft Corporation.

All other product names mentioned in this manual may be trademarks or registered trademarks of their respective companies and are the sole property of their respective manufacturers.



---

**FCC and INDUSTRY CANADA INFORMATION TO THE USER:**

The FCC and Industry Canada have imposed the following conditions when operating, installing and deploying iNetVu™ Mobile Earth Stations and is mandatory for all installations made within the Continental United States and Canada as well as Hawaii, Alaska, Puerto Rico, the U.S. Virgin Islands and other U.S. Territories. The FCC requires that a certified installer perform the installation. It is also strongly recommended that a qualified professional RV dealer/installer mount the system on your vehicle. These conditions are also required by C-COM for all other installed locations.

All iNetVu™ Mobile earth station installers must be C-COM Certified, and must have specifically acknowledged the requirements for iNetVu™ Mobile installations, which are as follows:

1. "Installation" is the physical mounting and wiring of the Satellite provider's earth station on a vehicle or other stationary site in order to prepare for correct operation. Only Certified C-COM iNetVu installers may perform the installation and removal of an iNetVu™ Mobile system.
2. "Deployment" means the raising, pointing and orienting of the earth station to the communicating satellite, every time it is raised from a stowed position for use. The deployment of an iNetVu™ Mobile system must only be done by a trained installer or by a consumer using the deployment software.
3. Installers shall install the iNetVu™ systems only in locations that are not readily accessible to children and in a manner that prevents human exposure to potential radiation hazards.
4. For large vehicles with roof mounts, the height of the bottom lip of the earth station when fully deployed must be at least six feet above the ground at all times, or six feet above a surrounding surface which a person may easily access.
5. If a roof access ladder or any other means of access to the roof is installed on the vehicle, then the ladder or access must be blocked by a suitable rope or other barrier while the earth station is deployed or in operation. The installer must provide this rope or barrier directly to the end user at the time of installation and advise the user to use it at all times when the earth station is deployed or in operation. Warning signs shall also be provided by the installer to the end user to be posted on the rope or other barrier warning all persons not to attempt to access the roof of the vehicle while the earth station is deployed or in operation.
6. Warning signs shall be posted at prominent locations on the earth station informing all persons of the danger of harmful radiation from the earth station while it is deployed or while in operation.
7. The iNetVu™ Mobile system may only be operated when the vehicle is stationary.
8. The installer must inform the end user that the vehicle must be stabilized during the transmission, to prevent movement of the vehicle for any reason, including movement of persons on or off the vehicle, or high winds. The installer shall advise the end user how to appropriately stabilize their vehicle.
9. Installers shall be liable for all damages if they fail to comply with the above mandatory conditions. This includes, but is not limited to damages caused by improper installation or due to the failure to provide required information to the end user.



10. Installers and end users will be deemed directly liable for any damages resulting from either of their failure to comply with the above rules. These rules are meant to ensure that extraordinary precautions and measures are used to prevent satellite interference or exposure to harmful radiation. C-COM reserves the rights to immediately **suspend without liability or previous notice** the operation of the earth station upon detection of a deviation from its installation or operational requirements until the deviation is corrected. In addition, C-COM reserves the right to suspend or cancel the Installer Certificate of any installer that has not fully complied with these installation requirements.
11. Further, the installer and end user may be directly liable for any damages resulting from any change undertaken by either of them. Including but not limited to, any modification of any part of the hardware, software, specific operational frequencies, the authorized satellite, or the size or other characteristics of the earth station supplied to them by C-COM or C-COM's authorized representatives.

**Note 1:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with this instruction manual, may cause harmful interference with radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

**Note 2:**

This Class B digital apparatus complies with Canadian ICES-003.



## Table of Contents

Introduction .....	10
Specifications .....	11
Physical .....	12
Internal .....	13
Installation .....	17
Rack Installation .....	17
Setup .....	17
Existing iNetVu™ Mobile Platform Installation .....	18
LED Definition .....	19
Manual and Automatic Controls Button Operation .....	20
DVB Receiver Operation .....	21
Stand-alone Receiver .....	22
Existing Modem Integration .....	22
Setting Target Satellite .....	22
Disabling DVB Receiver .....	23
Web Interface .....	24
Network Configuration Example .....	25
How to Set Network Configurations on your PC .....	27
Navigation .....	28
Login .....	29
Controls .....	30
Configuration .....	40
Maintenance .....	46
Network .....	59
About .....	60
LCD Screen and Navigator Keypad Operation .....	63
Menu Tree .....	63
Opening Screen .....	64
Main Menu .....	64
Monitor .....	65
MAIN .....	66
MTR .....	68
GPS .....	68
CP .....	69
SAT .....	70
IP .....	70
GW .....	71
MODM .....	71
INFO .....	72
Operation .....	73
E_TX .....	73
E_TEST .....	73
Maintenance .....	74
RESET_IP .....	74



---

GPS Module.....	75
Serial Number .....	75
Image Recovery .....	76
Appendix 1: Utilizing the iNetVu™ 9000 Controller During O/S Failure.....	77



---

**Revision Notes**

The table below records the current version status of this document and any changes from the previous versions.

Rev.	Date	Edited By	Description
1.0.1	02-15-2006	J. Kwan	Document Creation
1.0.2	03-07-2006	J. Kwan	Updated Product Images
1.0.3	05-24-2006	J. Kwan	Appended Login Page Added A1800A and A980A Default Values
1.0.4	07-10-2006	J. Kwan	Updated to IMS 5.2.1 & FW 5.2
1.0.5	09-22-2006	J. Kwan	Added Image Recovery Notes
1.0.6	11-08-2006	J. Kwan	Added DVB Tuner Operation Section
1.0.7	11-24-2006	J. Kwan	Added Appendix 2
1.0.8	08-31-2007	A. Cheikhali	Added 1200C and 980 Limit Specifications Added software 6.2.1 version Released with Software 6.2.1

Proprietary Notice: This document contains information that is proprietary and confidential to C-Com Satellite Systems, Inc., and is intended for internal use
--



---

only. No part of this document may be copied or reproduced in any way, without prior written permission of C-Com Satellite Systems, Inc.



## Introduction



*Fig. 1: iNetVu™ 9000 Controller*

The iNetVu™ 9000 Controller is a one-box, one-touch solution for satellite auto-acquisition. Designed to interface with a growing number of Satellite Modems, VSATs, and DVB-RCS Receivers, the iNetVu™ 9000 Controller is an easily configurable and operated unit.

The iNetVu™ 9000 Controller does not require the user to install any software application to their own PC, and is fully functionally straight of the box.

It features Automatic Operations such as Find Satellite and Stow Antenna, as well as the ability to manually move the Antenna for cross-pol testing, demonstrations, or installations.

An onboard LCD displays real-time system status, and the Keypad Navigator makes using the iNetVu™ 9000 Controller extremely simple.

The iNetVu™ DVB-S Tuner Kit is an optional kit addition to the iNetVu™ 9000 Controller. Easily installed, the iNetVu™ DVB-S Tuner will speed up satellite acquisitions to less than 2 minutes. Once an integrated part of the iNetVu 9000 Controller, the iNetVu™ DVB-S Tuner works on all iNetVu antennas.

This high performance addition to the iNetVu™ 9000 Controller is programmable to any DVB-S Satellite and also features a list of pre-configured satellites for the user to select from.

The iNetVu™ DVB-S Tuner Kit can be used as a stand-alone receiver or as an integral component of existing service / modem integrations.



## Specifications

<b>Dimensions:</b>	17.5" x 13.0" x 1.75" (44.5 cm x 33 cm x 4.5 cm)
<b>Weight:</b>	15 lbs (6.8kg)
<b>Operating Temperature:</b>	32°F to 122°F (0°C to 50°C)
<b>Elevation Output:</b>	12VDC, 12 A (Max.)
<b>Azimuth Output:</b>	12VDC, 8 A (Max.)
<b>Polarization Output:</b>	12VDC, 2 A (Max.)
<b>Fuse Type:</b>	Blade-type Automotive, Fast-acting (15 A, 10 A, 5 A)
<b>Power Input:</b>	100 – 240 VAC, 3 –6 A, 50 – 60 Hz
<b>Motor Control Connector:</b>	9 Position Circular AMP Connector
<b>Signal Input:</b>	Female DB26 Connector
<b>GPS Connector:</b>	SMA ( <u>S</u> ub- <u>M</u> iniature Version <u>A</u> )
<b>Rx Connector:</b>	Type F RG6
<b>PC Interface:</b>	Web Interface (RJ45) Direct KVM Interface
<b>Front Panel Interface:</b>	Automatic and Manual Control Keypad LCD Screen and Keypad Navigator

## Tuner Specifications

<b>RF Input Range:</b>	950MHz to 2150MHz
<b>Input Dynamic Range:</b>	-75dBm to -25dBm
<b>Input/Output Impedance:</b>	75 $\Omega$
<b>Symbol Rate:</b>	1 to 45Msps

Item		Specification				Condition
		Min	Typ	Max	Unit	
Frequency		950		2150	MHz	
Return Loss		6	10		dB	950MHz to 2150MHz
Noise Figure			6	10	dB	Maximum Gain
Loop Through Gain		-2.0		4.0	dB	
Input Dynamic Range		-75		-25	dBm	
IMD3		40			dBc	Desired & undesired input Level are -25dBm
Local Leakage			-80	-70	dB	950MHz to 2150MHz
Phase Noise	10KHz		-84		dBc/Hz	
	100KHz		-105		dBc/Hz	



## Physical

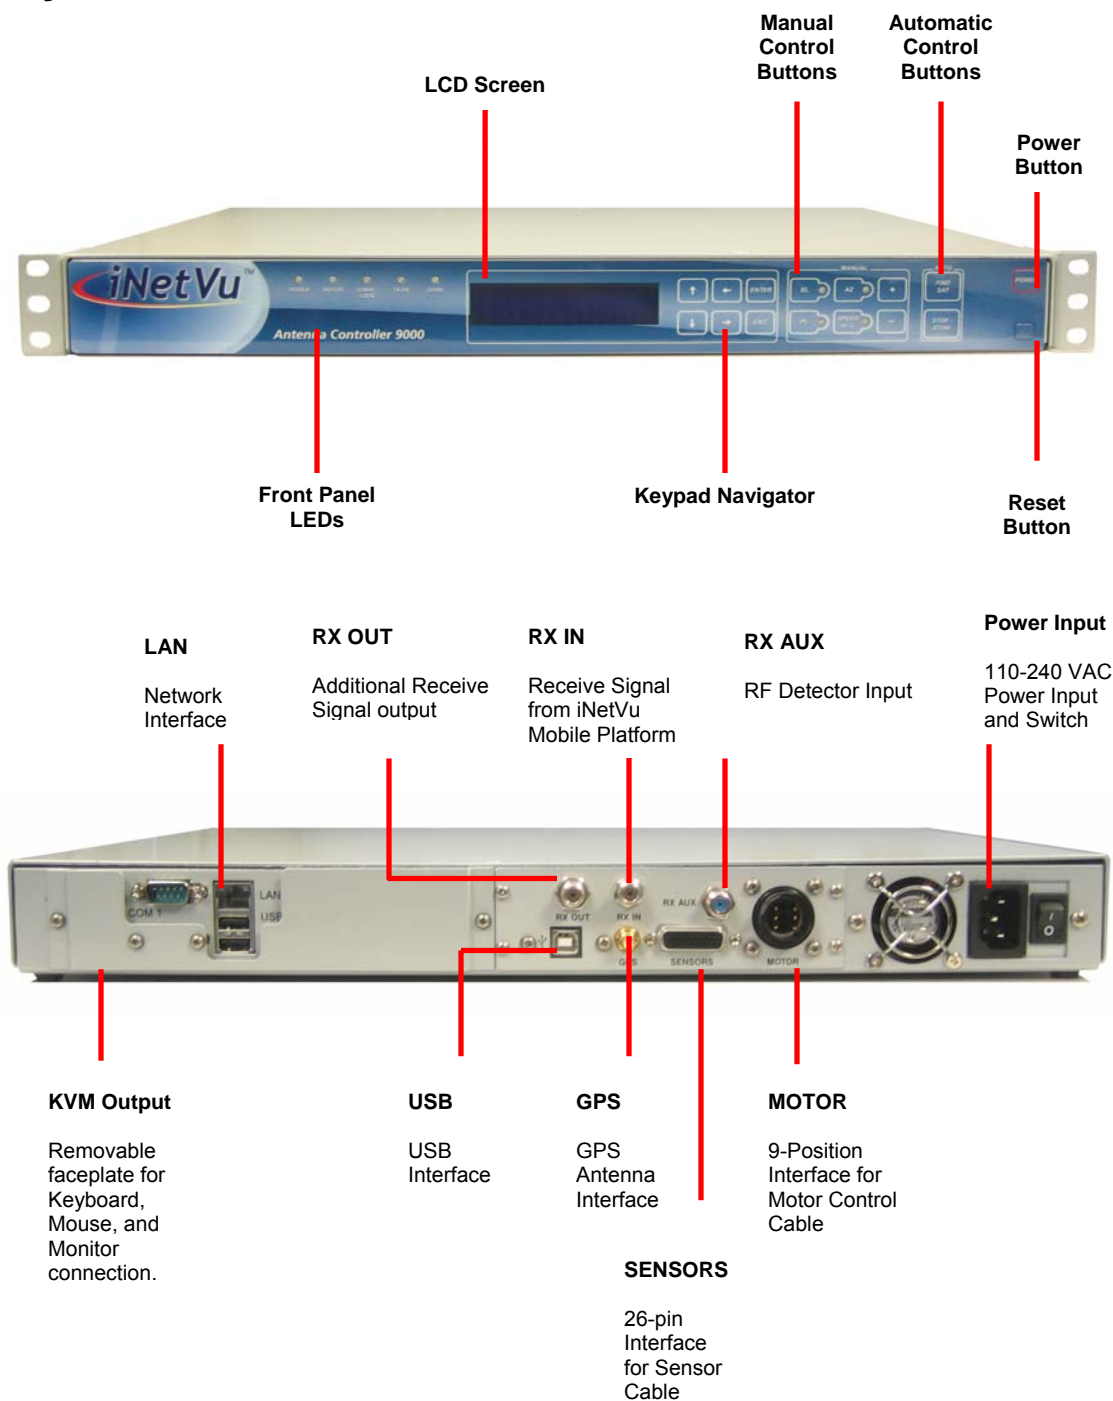


Fig. 2: iNetVu™ 9000 Front and Rear Panel



## Internal

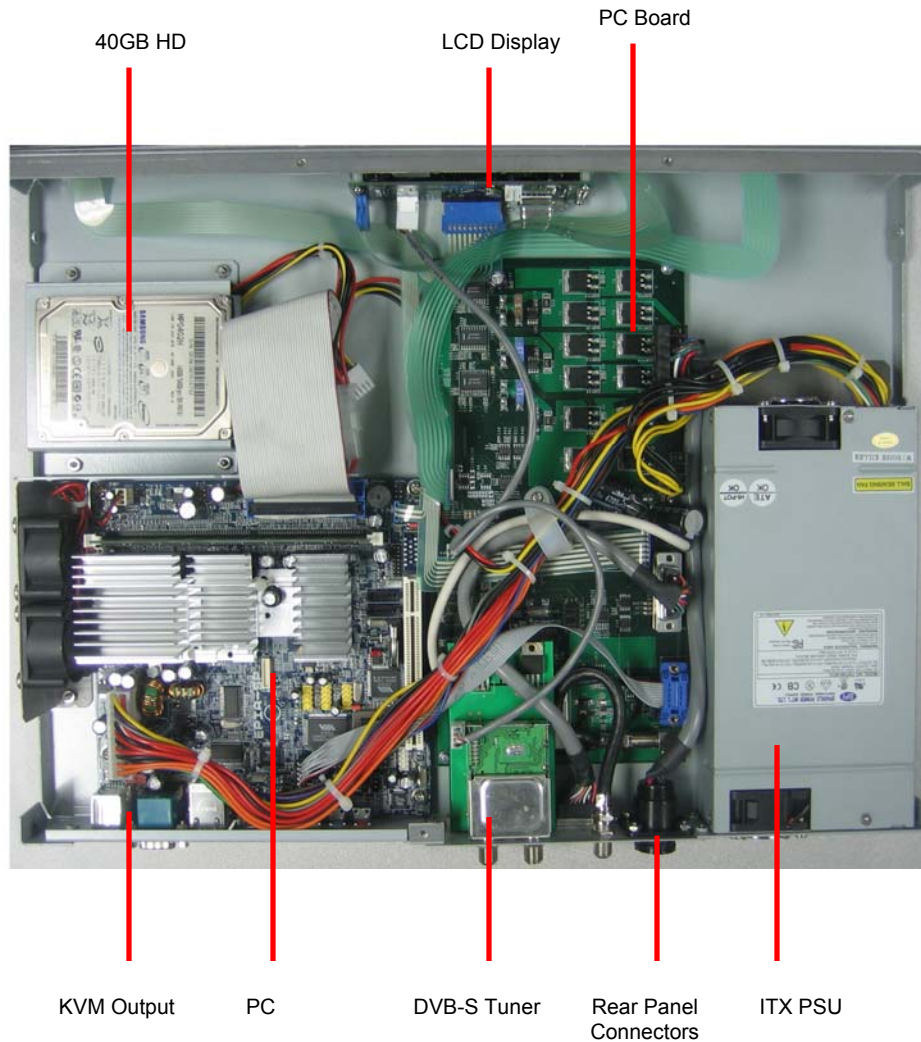


Fig. 3: iNetVu™ 9000 Controller (Internal)



---

## Typical Connection Configuration

The typical connection configuration for each service will be the same regardless of the Satellite Modem / VSAT. However, the configuration parameters for Satellite Modem / VSAT Communication will differ depending on service. Please consult the iNetVu™ System Manual for the service which you are using to determine how to set this up.



Be sure that you do not have any PCs or devices connected to the USB Port on the iNetVu™ 9000 Controller, as this will interrupt the normal boot-up sequence.



## Without Tuner Installed

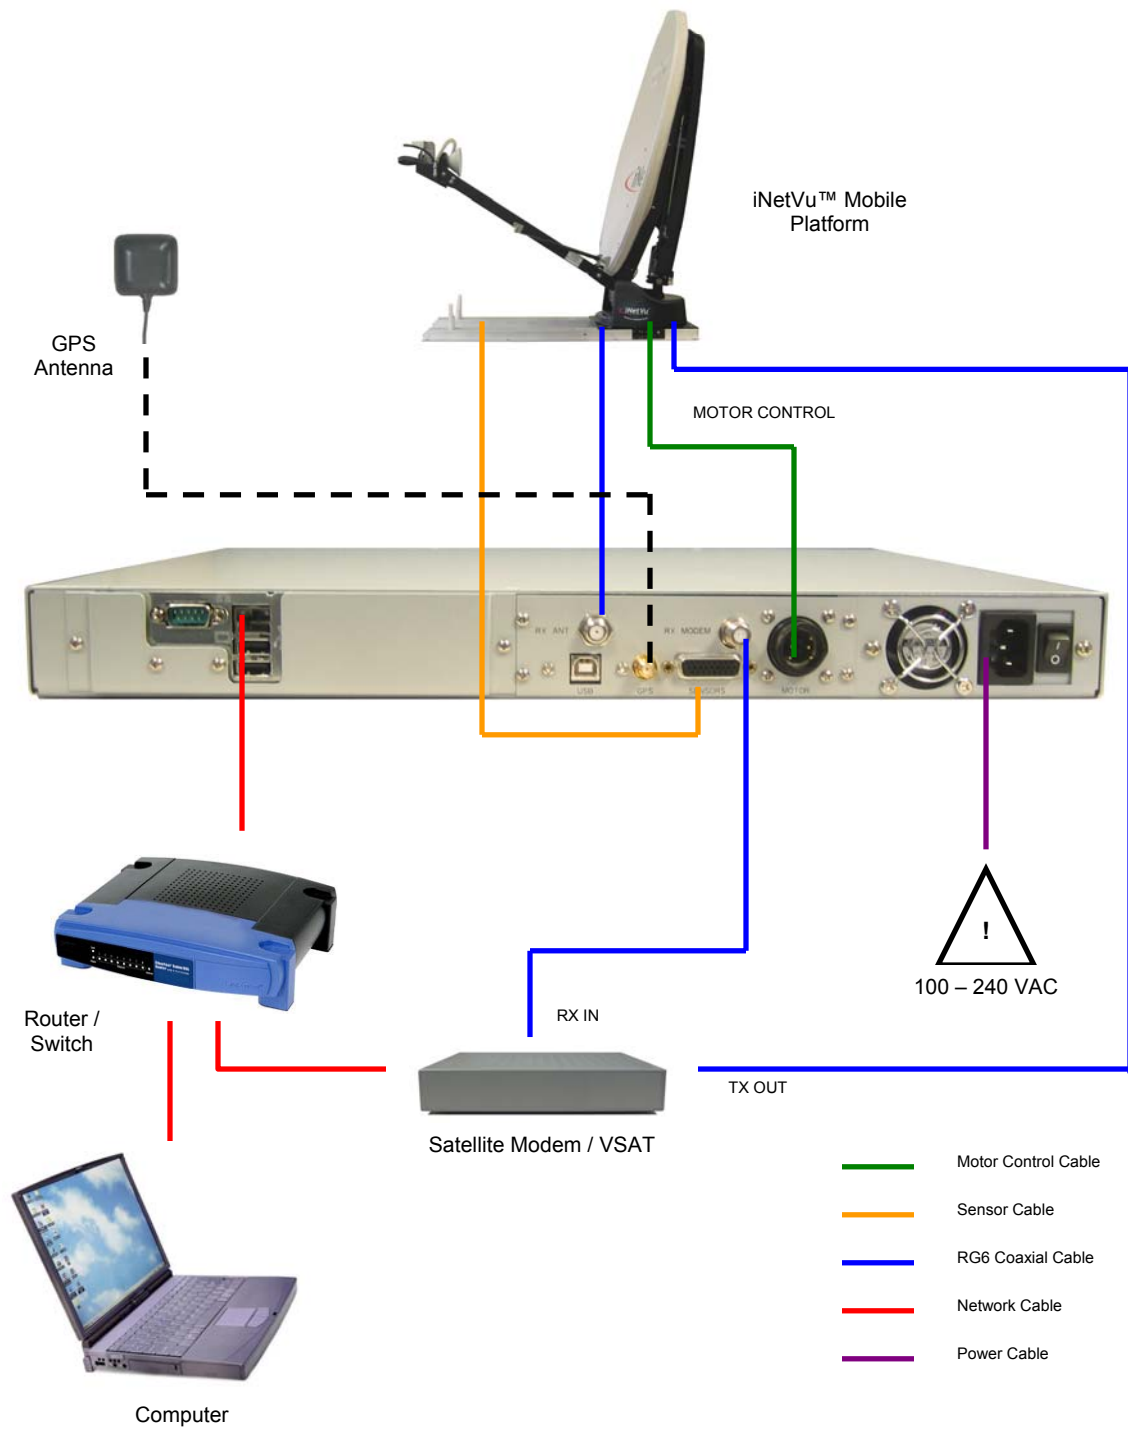


Fig. 4: iNetVu™ 9000 Controller Typical Connection Configuration (No DVB Tuner Installed)



## Tuner Installed

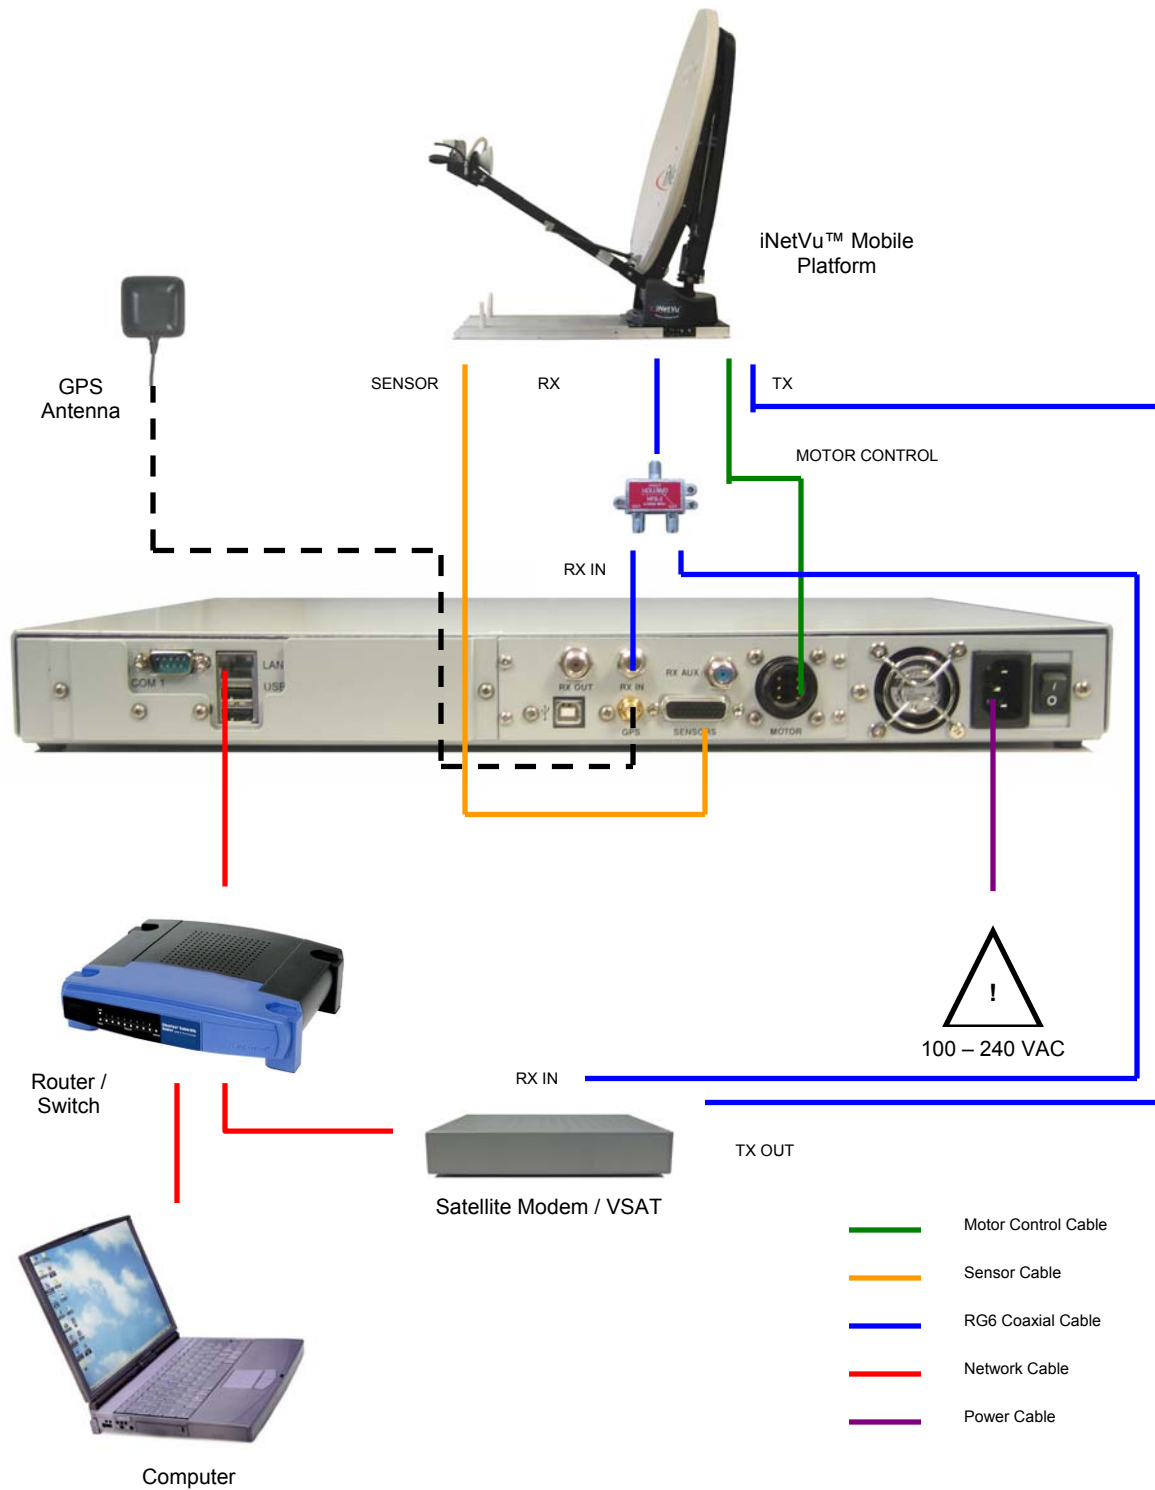


Fig. 5: iNetVu™ 9000 Controller Typical Connection Configuration (DVB Tuner Installed)



---

## Installation

The iNetVu™ 9000 Controller is shipped pre-configured for the iNetVu™ Mobile Platform and service which you plan to use, and only configuration of Satellite Modem / VSAT Communication parameters and the satellite you wish to find.

### Rack Installation

The iNetVu™ 9000 Controller includes attachable “ears” which make the iNetVu™ 9000 Controller configurable for rack-mounted installation.

If you are installing the iNetVu™ 9000 Controller onto a rack, ensure that you use supporting rails or a shelf to support the weight of the iNetVu™ 9000 Controller, and use the provided “ears” to fasten the unit to the rack face.

### Setup

1. Connect all of the cables and components as depicted by the previous section.
2. Power on the iNetVu™ 9000 Controller.
3. Set your external PC to the same subnet as the iNetVu™ 9000 Controller (Default IP Address of the 9000 is 192.168.0.2)
4. Access the iNetVu™ 9000 Controller's Web Interface via an external PC using the LAN Connection by entering the 9000's IP Address in your browser.
5. Logon using the “Installer” username. See “Login” Section of this document for the password.
6. After logging in, go to the Controls Screen and ensure that all the status panel indicators are green.
7. To configure the Satellite Modem / VSAT Communication Parameters, go to the Configuration Screen and configure as required for the type of service you are using, and click save. Refer to the iNetVu™ Mobile System User Manual Installation section to determine the proper parameters. This will be specific to the service which you are using.
8. To configure the Target Satellite, go to the Maintenance Screen, and enter the Satellite Name, Longitude, and Tx Polarity (Sat Pol Offset: 0 – Vertical, 90 – Horizontal), and click save.
9. If you need to reconfigure the 9000's Network Configuration (Dependant on the Satellite Modem / VSAT you are using. Refer to the iNetVu™ Mobile System User Manual Installation section to determine the proper parameters), go to the Network Screen and make the appropriate changes.



10. Go to Controls Section, and ensure that ALL System Status Panel Indicators are green.
11. That's it. You have successfully completed the installation and setup of the iNetVu™ 9000 Controller and are ready to find satellite.

## Existing iNetVu™ Mobile Platform Installation

If you are replacing an existing iNetVu™ Series Controller with an iNetVu™ 9000 Controller, you will need to perform an Azimuth and Polarization Calibration and set the iNetVu™ Mobile Platform ID prior to searching for satellite.

1. Once you have completed the above procedure, access the iNetVu™ 9000's Web Interface.
2. Login using the "Installer" Login Name.
3. Navigate to the Maintenance Screen.
4. Click Calibrate AZ, and IMS will begin the Azimuth Calibration Function. Verify that there are no obstructions that would impede a full Azimuth sweep.
5. After this is complete, navigate back to the Maintenance Screen.
6. Click Calibrate PL, and IMS will begin the Polarization Calibration Function. Verify that there are no obstructions that would impede a full Polarization sweep.
7. After this is complete, navigate back to the Maintenance Screen.
8. Enter your iNetVu™ Mobile Platform Serial Number into the "Platform SN" field and click "Save". The iNetVu™ Mobile Platform Serial Number will be found on your iNetVu™ Mobile Platform and ONLY THE LAST 4 DIGITS should be entered.
9. IMS will now reboot itself and will require you to login again into the Web Interface.
10. Verify that your iNetVu™ Mobile Platform Serial Number has been saved by navigating to the About Screen.
11. That's it. You have successfully completed the installation and setup of the iNetVu™ 9000 Controller and are ready to find satellite.



## LED Definition



*Fig. 6: iNetVu™ 9000 Controller Front Panel LED Panel*

### POWER

Solid light indicates power is ON.

### MOTOR

Flashes when any of the three motors are instructed to move.

### COMM / LOCK

Indicates Communication between Controller's internal Board and internal PC.

Slow blinking (1 sec. intervals) indicates idle communication.

Fast blinking (1/4 sec. intervals) indicates that command is being executed

Solid Light indicates lock on Satellite.

### TX EN

Solid Light indicates transmitter has been enabled.

### STOW

Solid Light indicates iNetVu™ Mobile Platform is in the stowed position.



## Manual and Automatic Controls Button Operation



Fig. 7: iNetVu™ 9000 Controller Front Panel Buttons

### How to Find Satellite

Press "FIND SAT" Button.

iNetVu™ Mobile Platform will automatically attempt to locate, lock, peak and enable the system onto the configured satellite.

### How to Stow the Antenna

Press "STOW" Button.

iNetVu™ Mobile Platform will automatically re-center itself and lower into the stow position.

### How to Stop

Press "STOW" Button.

Stops all ongoing operations such as motor movements and automatic functions like Find Satellite and Stow.

### How to Manually Move the Mobile Platform

Press "EL / AZ / PL" to select the axis of motion you wish to move

LED will turn on to indicate which motor you are set to move

Press "SPEED H/L" to select the speed (LED ON – HI, LED OFF - LOW)

Press and release "+" and "-" for short duration movement

Press and hold "+" and "-" for long duration movement

### How to Turn ON/OFF the Controller

Press "POWER" Button

Message will display on LCD Screen indicating power up/down status

### How to Reset the Controller

Press "RESET" Button

Power-cycles the iNetVu™ Controller

DOES NOT reset default values



## DVB Receiver Operation

The iNetVu™ DVB Receiver must be used in conjunction with IMS 6.1.1 and Firmware 6.1 at a minimum - any previous version of IMS or controller firmware ARE NOT compatible with the iNetVu™ DVB Receiver.

The iNetVu™ DVB Receiver can be used as for either:

- A stand-alone DVB Receiver
  - Used to locate and lock onto either a manually-configured or preset satellite
  - Manual Configuration requires:
    - Orbital Slot of Satellite
    - Receive Polarization
    - L-Band Rx Frequency (kHz)
    - Symbol Rate (kSps)
    - FEC Code Rate
- Integrated component of a modem / VSAT that the iNetVu™ Mobile System is compatible with.
  - Uses the DVB Receiver to locate and lock onto a preset satellite
  - Uses existing integration and communication with modem / VSAT to automatically enable/disable the transmitter, initiate ACP testing (if applicable), and all other modem / VSAT specific actions.

**Note:** Switching between services no longer requires the need for a Switch ID. A unique code previously used with older versions of IMS (5.2.1 and below).

A pre-indexed file (`satparam.txt`) contains a listing of transponders for many of the well-used and known satellites being operated with.

The target satellite entered by the user will always initially searched through this database, and should the satellite longitude match that of an entry in the database, IMS will use the preset transponders associated to the user-entered receive polarity.

If the satellite longitude entered does not appear in the database, ERR3091 will appear in the message panel notifying the user. At this time, the user is asked to manually enter the transponder parameters in the Advanced Maintenance section of IMS.



## Stand-alone Receiver

IMS service must be set to 'iReceiver'.

## Existing Modem Integration

IMS service must be set to that of the existing service/modem.

(For example, if you are using an iDirect modem, the IMS service must be set to 'iDirect')

## Setting Target Satellite

Using the Maintenance screen (either in Windows Interface or Web Interface), the user can set the Satellite Name, Longitude and the Receive/Transmit Polarity.

**Note: Sat Pol Offset;** Vertical Rx = 90; Horizontal Rx = 0 (For CONFIG Mode and Web Interface only)

The figure shows two screenshots of configuration windows. The left window, titled "Satellite Parameters", has fields for Name (IA6), Longitude (93), Transmit Polarization (V), AZ Search Window (60), and EL Search Window (5). The right window, titled "Satellite and GPS", has fields for Sat Name (G11), Sat Lon (91), Sat Pol Offset (0), AZ Window (60), GPS Lat (45.41), EL Window (5), GPS Lon (75.61), Refresh Period (23), and an Override GPS checkbox.

Fig. 8: Satellite Parameters for USER and CONFIG Mode

The figure shows a screenshot of the "Satellite" configuration window in the web interface. It has a title "Satellite" and fields for Sat Name (G11), Sat Longitude (91), Pol Offset (90), AZ Window (60), and EL Window (5).

Fig. 9: Satellite Parameters for Web Interface




---

## Disabling DVB Receiver

Should the user decide not to use the DVB Receiver for satellite acquisition, and prefers to use the standard integration method using the RF Detector, please follow the steps below.

1. Remove the rack tabs and top cover using a #1 and a #2 Phillips Screwdrivers.
2. Locate the DVB Receiver.
3. Remove the cable connected to the DVB Receiver (as shown in the figure below) and use a tie-wrap to secure it to the rest of the Internal Wiring Harness. Ensure that you leave the other two (2) ends connected to the PCB and LCD.

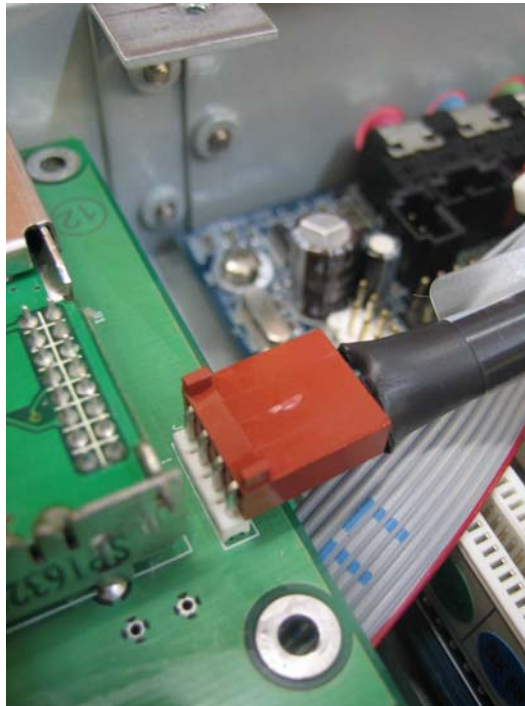

*Fig. 10: Remove Power Cable from DVB Receiver*

4. Re-attach the top cover and rack tabs using a #1 and a #2 Phillips Screwdrivers.
5. Re-connect the 'Rx' RG6 Coaxial Cable from the 'Rx In' port to the 'Rx Aux' port.
6. That's it! IMS will now detect that the DVB Receiver has been disabled after you power-cycle the iNetVu™ 9000 Controller.



## Web Interface


In order to interface directly with the iNetVu™ 9000 Controller, a simple to use Web Interface is available.

The Web Interface allows the user to operate the automatic functions such as Finding Satellite, Stowing the Antenna, and Stopping Operations, as well as monitoring System Status, real-time Motor Currents, and Signal Strength.

In order to access the Web Interface, simply enter the IP Address (Default 192.168.0.2) of the iNetVu™ 9000 Controller into your web browser.

### iNetVu™ 9000 Network Configurations:


Default IP Address:	192.168.0.2
Default Subnet Mask:	255.255.255.0
Default Gateway IP:	192.168.0.1

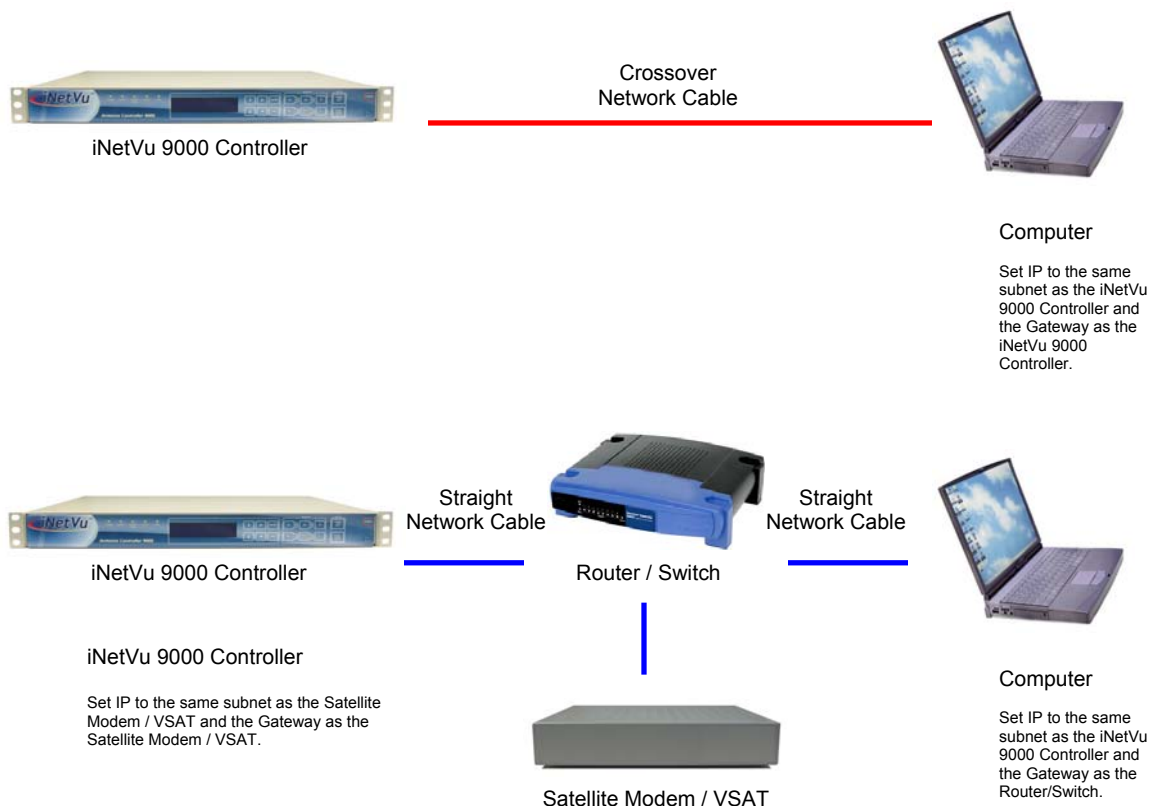




## Network Configuration Example


### Direct Connection to PC:

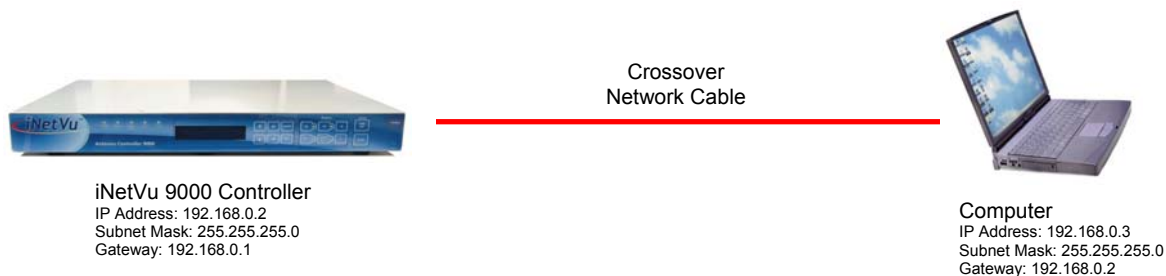

### Direct Connection to Satellite Modem/VSAT: Satellite Modem / VSAT – Fixed IP Address

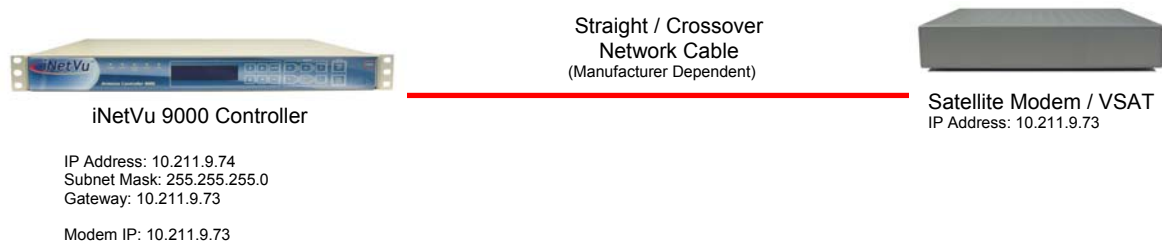


### Direct Connection to Satellite Modem/VSAT: Satellite Modem / VSAT – Dynamic IP Address (DHCP)

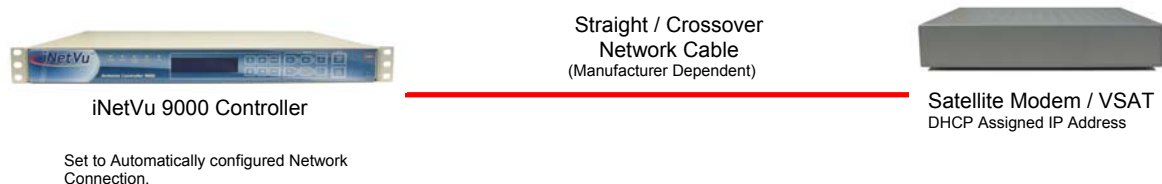


**\*\*** Once the IP Address is assigned to the iNetVu™ 9000 Controller by the Satellite Modem / VSAT, you may check the LCD Menu to view the assigned IP Address.



### Connection via Router/Switch: Satellite Modem / VSAT – Fixed IP Address

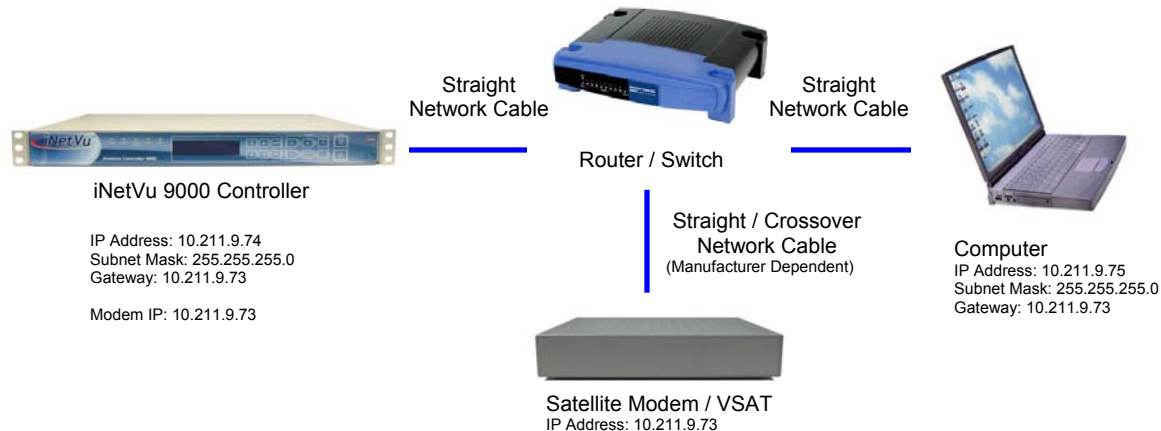

### Connection via Router/Switch: Satellite Modem / VSAT – Dynamic IP Address (DHCP)

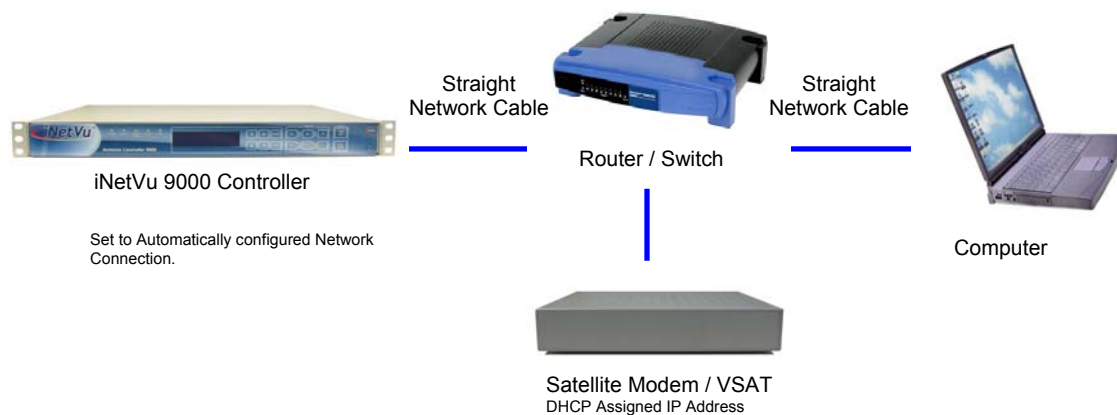


\* The Satellite Modem/VSAT should be the ONLY DHCP Server in the network. Ensure that all other DHCP Servers are disabled

\*\* Once the IP Address is assigned to the iNetVu™ 9000 Controller by the Satellite Modem / VSAT, you may check the LCD Menu to view the assigned IP Address.


*Fig. 11: Example Network Connection Configuration*




## How to Set Network Configurations on your PC

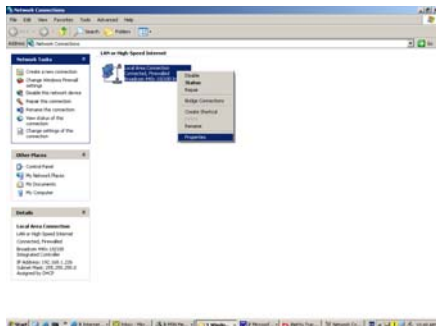

1. Open **Network Connections**, right-click your network card, and select **Properties**.

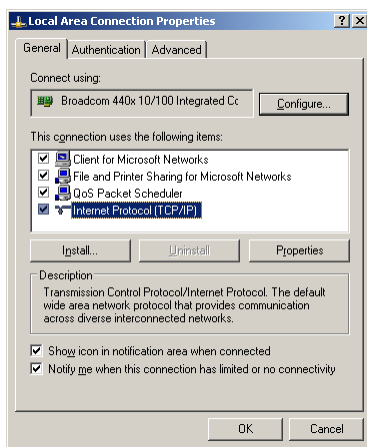

2. Select **Internet Protocol (TCP/IP)** and click **Properties**.

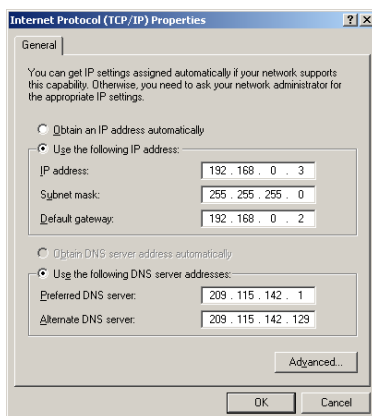

3. Direct Network Connection:

Set your PC to the same subnet as the iNetVu™ 9000 Controller, and the Default Gateway to the iNetVu™ 9000 Controller.

The screenshot depicts this configuration.

### Network Connection via Router/Switch:

Dependent on Network Configuration (See previous section)



## Navigation

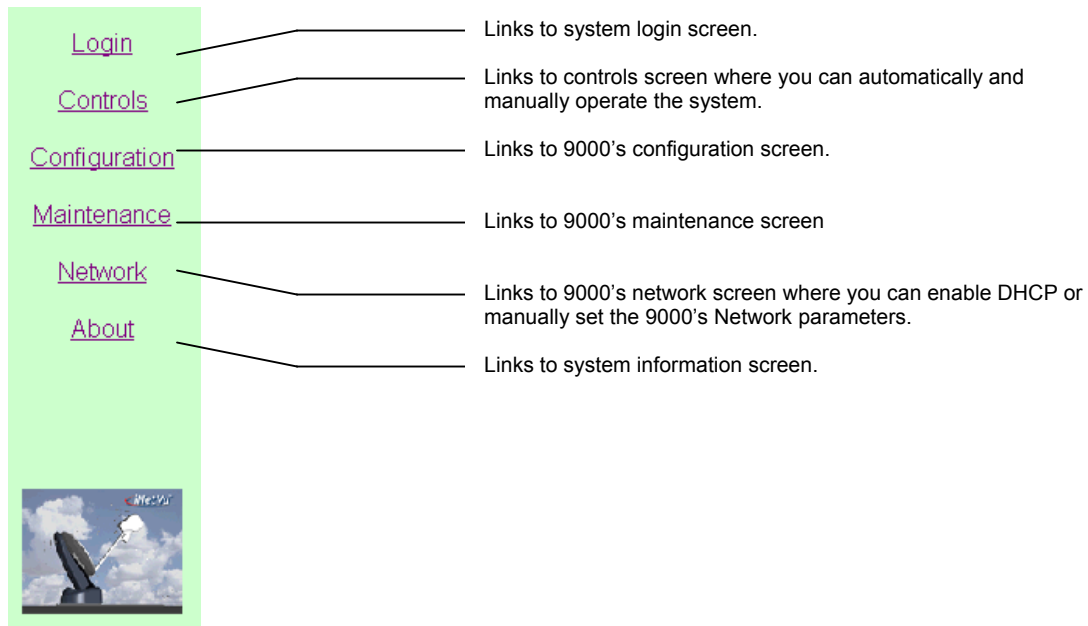


Fig. 12: Web Interface Navigation Bar



## Login


The Login Screen allows the user to login using three (3) user names.

- User
- Installer
- Admin

Each User Name provides the user with increasingly more access and abilities to modify system parameters.

Most users will never require using any other login other than “User”.

**Note:** The “Admin” login is only used by C-Com Satellite Systems Technical Support and does not require to be accessed for standard maintenance or monitoring.

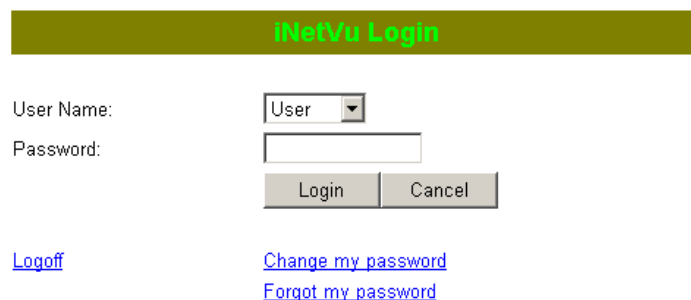

The image shows the iNetVu Login screen. At the top is a green header with the text "iNetVu Login". Below this, there are labels for "User Name:" and "Password:". The "User Name:" field is a dropdown menu with "User" selected. The "Password:" field is a text input box. Below the password field are two buttons: "Login" and "Cancel". At the bottom of the form, there are two links: "Logoff" and "Change my password". Below the "Change my password" link is another link: "Forgot my password".

Fig. 13: Web Interface Login Screen

User Name	Default Password	Privileges
User	iNetVu	Basic Functions and Abilities
Installer	C-COM	Basic Functions and Abilities Ability to calibrate Mobile Platform Ability to change Network Config.
Admin	---	---

\*\*\* Passwords are case-sensitive



## Controls

The Controls screen allows the user to monitor system parameters, manually move the Mobile Platform, as well as conduct automatic processes like “Find Satellite”, “Stow Antenna”, and “Stop Operation”.

From this screen, users can operate the iNetVu™ Mobile Platform while monitoring the real-time status and message updates from the system with the click of a mouse.

Fig. 14: Web Interface Controls Screen

### Note:

In order to make any changes to the input fields, the user must click “Stop Refresh” to stop the automatic refresh.

Once the change has been made and any button has been clicked, automatic refresh will resume.



Fig. 15: Stop Refresh / Start Refresh Buttons



**Improper use of Controls menu can render the iNetVu™ Mobile System inoperable and may be in violation of FCC regulations. The user can halt any operation at any time by clicking the STOP OPERATION button.**

**It is recommended that only trained installers or users under the direct consultation of C-COM Satellite Systems Technical Support staff use this menu.**



## Automatic Operation

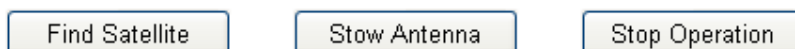


Fig. 16: Automatic Operation Buttons

### Find Satellite

Automatically finds and locks onto the satellite signal by communicating with the Satellite Modem and using the GPS coordinates, the compass heading, and internal parameters of the Satellite Modem. Typically, it takes approximately 3-5 minutes to find satellite.

If the Antenna is already pointed on the satellite, clicking **Find Satellite** will re-peak the Antenna onto the signal.

### Stow Antenna

Re-centers the antenna and lowers it into the stowed position.

### Stop Operation

Halts all motor movements and disrupts all communication between iNetVu™ Mobile System components.

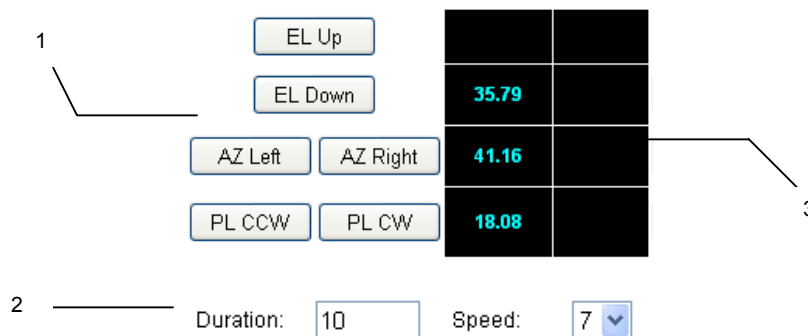


Fig. 17: Manual Movement and Angle Display


### 1 – Manual Movement Buttons

Elevation Up / Elevation Down  
Azimuth Left/ Azimuth Right  
Polarization Counter-Clockwise / Polarization Clockwise



## 2 – Duration and Speed

Using the Duration and Speed parameters, the Manual Movement Buttons allow you to move the antenna in six (6) directions. For the correct point of reference for the directional movements, you must be facing the Mobile Platform's Reflector.

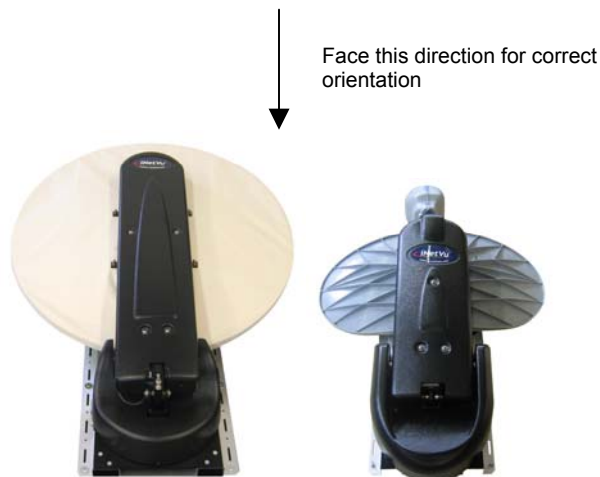

*Fig. 18: Movement Orientation*

## 3 – Angle and Limit Switch Indicators

Displays real-time angles and Limit Switch status.

Below is a table that depicts the direction of movement and the relative angle change that is displayed.

Direction	Angle Change
Elevation Up	+
Elevation Down	-
Azimuth Left	+
Azimuth Right	-
Polarization Left	+
Polarization Right	-



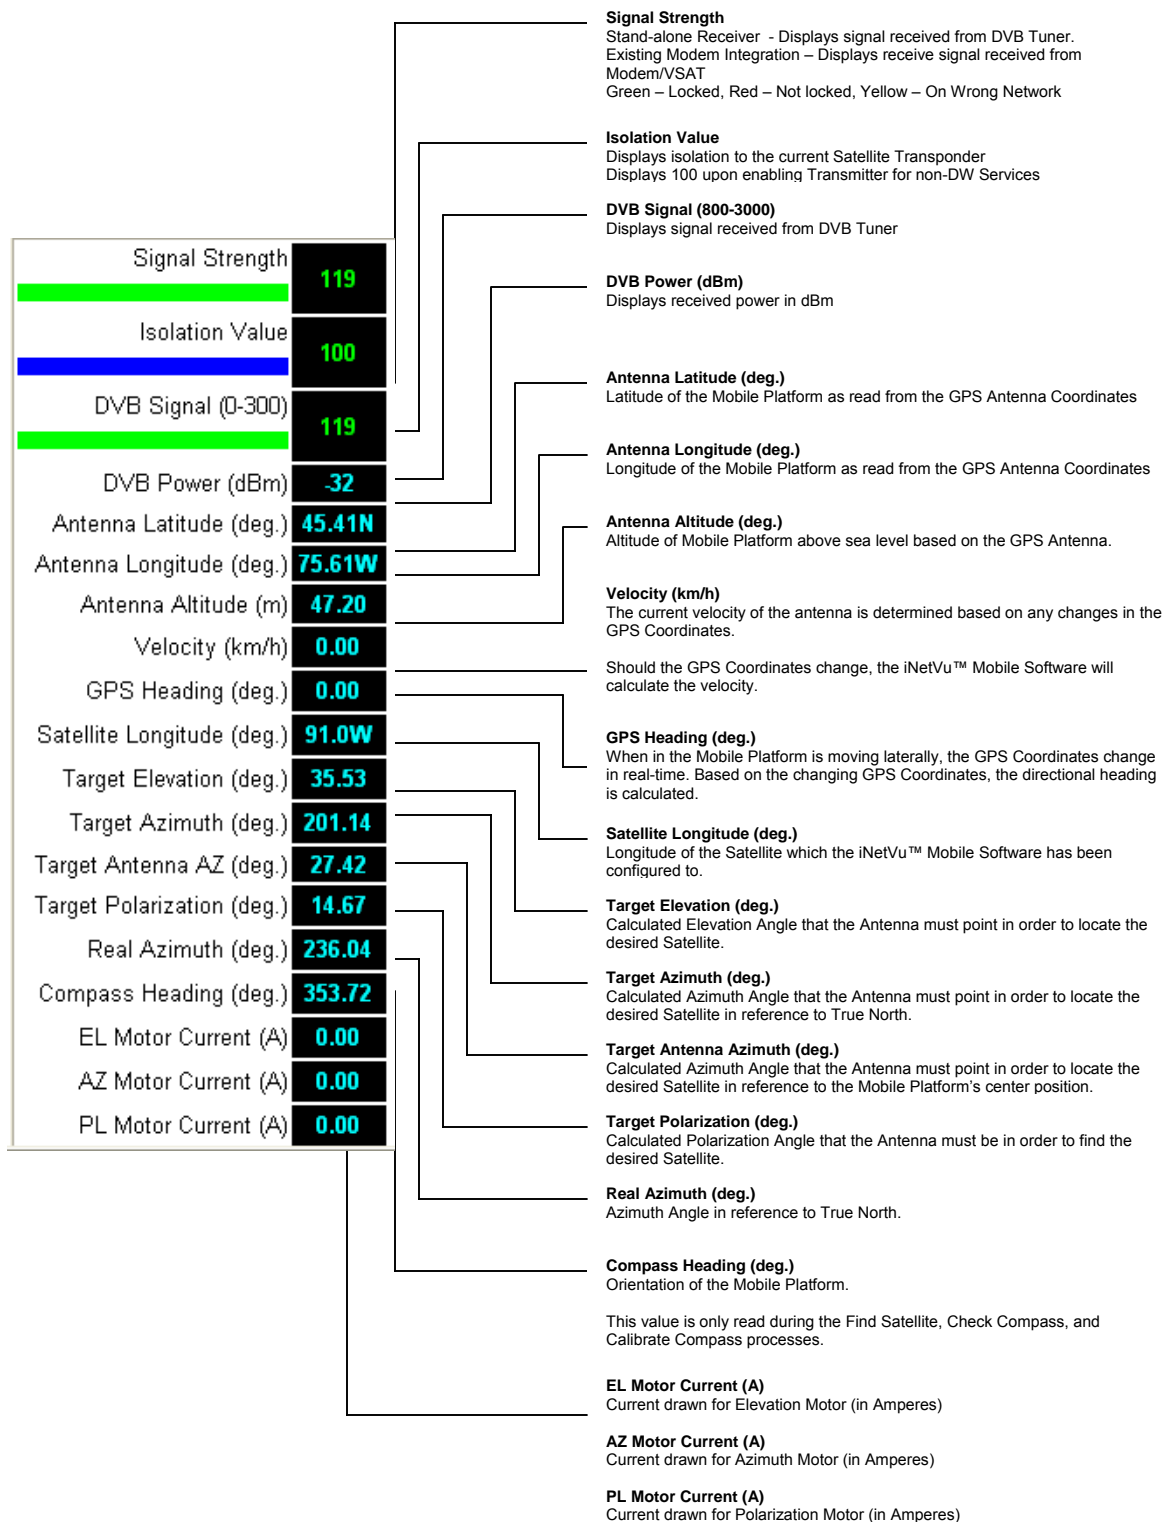






Fig. 19: Controls Screen Buttons

## 1 – Target Calibrate

Updates the Elevation, Polarization, and Compass offsets in the registry and iNetVu™ Controller's EPROM.

This function is automatically performed after finding satellite, and if IMS detects that the Elevation, Polarization, and Compass offsets require updating to fit the current environment which the iNetVu™ Mobile Platform is situated.

Target Calibration is typically not required as this procedure is done prior to the system being shipped. Only under the instruction of a certified C-Com technician should calibration be performed again.

## 2 – Polarization Adjustment

Conducts a manual 3dB Polarization adjustment.

The Adjust button may be replaced with the following (depending on the service):

- ACP (Automatic Cross-pol)
- Enable (Enable / Disable Transmitter)

## 3 – Deploy Antenna

Automatically moves antenna to the manually entered Elevation, Azimuth and Polarization angles.

Elevation:  Azimuth:  Polarization:

## 4 – Record Data

Enables and disables an "always-on" data recording process.

With iNetVu™ Mobile Software versions 4.0 and higher, parameters are continuously recorded while the platform is searching for the satellite. It automatically stops once the satellite is locked and confirmed. Messages are always recorded in the Message Panel.

Data Log File Name: iNetVuData5000.txt  
Data Log Backup Name: iNetVuData5000.bak



## 5 – Network Test

To confirm network connectivity, iNetVu™ Mobile Software will attempt to connect to the iNetVu™ Server via the Internet.

## 6 – Point Satellite

Automatically points antenna to the manually entered Satellite Longitude, but does not attempt to lock onto the signal, and/or enable the transmitter.


This function is recommended for Satellite TV subscribers for finding their desired Satellite.

Sat Long:

*Fig. 20: Point Satellite Field*


## Message Panel

Displays real-time status updates, system messages, and error codes.

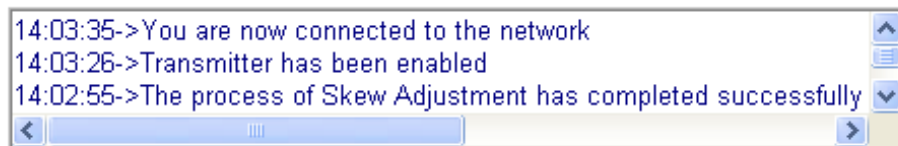

*Fig. 21: Message Panel*

## Test Mode

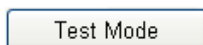

In order to perform a manual cross-pol test, the user must go into Test Mode (or Carrier Wave Mode). While in Test Mode, the user can manually move the Antenna in small increments with the transmitter still enabled.

After locking onto the correct satellite and with the transmitter enabled, click **Test Mode**.

The user will now be able to move the Antenna using the Manual Movement Buttons. The Duration and Speed parameters do not need to be adjusted because while in Test Mode, a pre-set duration and speed is used.



---

## Status Panel

The Status Panel describes system operations that are either imminent, taking place, or the current status of that component.

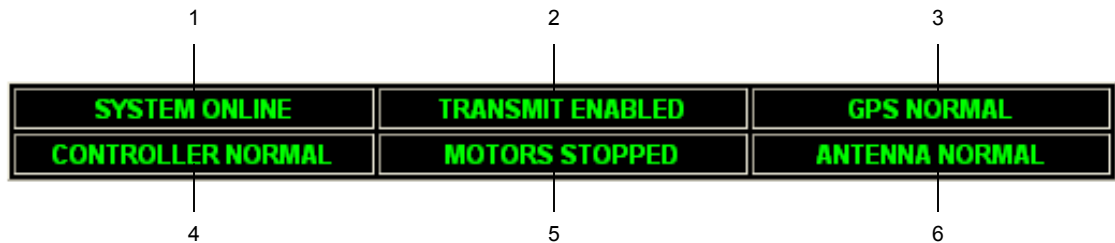


Fig. 22: Status Panel

The indicators notify the user of any actions taking place with a combination of color-coated messages.

- Solid “**GREEN**” messages indicates a stable and normal condition for that component.
- Flashing or solid “**LIGHT BLUE**” messages indicates a change in status occurring that the user should be aware of.
- Flashing “**RED**” and “**YELLOW**” messages indicates a problem with that component.

Should the entire Status Panel flash “**RED**” and “**YELLOW**”, a communication failure between the PC and the iNetVu™ Controller has occurred. Ensure that the Controller is powered, and that all USB drivers and cables (USB or Serial) are installed properly.



---

## 1 – System Status

Displays current system environment

- **System Running**  
Software is currently booting.
- **System Idle**  
No operations are currently being performed.
- **System Online**  
iNetVu™ system has found and locked onto the satellite, and is now ready for surfing the Internet.
- **ACP Testing**  
ACP Testing is being performed.
- **Skew Adjusting**  
Polarization adjustment for receiving the optimal Signal Strength. Polarization will rotate in both directions to locate the 3dB drop in Signal Strength, and then re-center itself using the best possible Polarization Angle.
- **Manual Operation**  
Manually controlled movement via Advanced Controls menu has been detected.
- **Mount Testing**  
System test or demo being performed via System Test and Demo menu.
- **Peaking on Satellite**  
System makes minor adjustments in positioning in order to receive optimal Signal Strength.
- **AZ Calibration**  
Azimuth Calibration is being performed.
- **PL Calibration**  
Polarization Calibration is being performed.
- **EL Calibration**  
Elevation Calibration is being performed.
- **CP Calibration**  
Compass Calibration is being performed.
- **Going to Position**  
An automatic movement command has been initiated (i.e. Find Satellite or Deploy Antenna) and the antenna is moving into the designated position.
- **Searching Satellite**  
Antenna is performing a search pattern to locate the satellite.
- **Stowing Antenna**  
Antenna is being stowed.
- **Antenna Stowed**  
Antenna is currently stowed.
- **Unknown Status**



---

## 2 – Satellite Modem / VSAT / Tuner Communication Status

Indicates the Transmitter status and displays any issues in communication with the Satellite Modem / VSAT.

- **Checking Modem**  
Verifying Satellite Modem's current status
- **Transmitter Enabled**  
Indicates that the transmitter has been enabled.
- **Transmitter Disabled**  
Indicates that the transmitter has not been enabled.
- **Transmitter Standby**  
Transmitter becomes idle during the ACP Test.
- **Modem Failed**  
A communication failure with the Satellite Modem has been detected.
- **Tuner Normal**  
Communication with the DVB Tuner has been detected and is active.
- **Tuner Failed**  
A communication failure with the DVB Tuner has been detected.

## 3 – GPS Status

Displays condition of the GPS signal

- **GPS Normal**  
GPS signal is being received from the GPS Antenna.
- **GPS Failed**  
GPS signal is not being received from the GPS Antenna.
- **GPS Searching**  
iNetVu™ Mobile Software attempts to detect a GPS signal from the GPS Antenna for 2 minutes.
- **GPS Override**  
GPS coordinates have been manually overridden from the Maintenance menu.

## 4 – Controller Status

Displays communication status between the PC and the iNetVu™ Controller

- **Controller Normal**  
Indicates normal communication status between the Controller and the PC
- **Controller Failed**  
A failure in communication between the Controller and the PC has been detected.



---

## 5 – Motor Status

Displays the movement of the 3-axis motors: Elevation, Azimuth, and Polarization

- **EL Moving UP / DN**  
Elevation Motor is moving in the respective direction  
(UP = Up, DN = Down)
- **AZ Moving Left / Right**  
Azimuth Motor is moving in the respective direction
- **PL Moving CCW / CW**  
Polarization Motor is moving in the respective direction  
(CCW = Counter Clock-Wise, CW = Clock-Wise)
- **Motor Unknown**  
Motor Status cannot be detected.

## 6 – Antenna Status / DVB Signal Status

Displays any relevant information regarding the Limit Switches and Potentiometers and/or Inclinator.

- **Antenna Normal**  
Sensors are calibrated
- **Antenna Failed**  
Sensors are not calibrated
- **Antenna Unknown**  
Mobile Platform cannot be found. Ensure that the iNetVu™ Controller is functioning and that all cables are connected should this indicator appear.

If the DVB Tuner is installed, this field will display the DVB Signal Status.


- **DVB-S LOCKED**  
Tuner has received a positive lock status on the target signal
- **DVB-S UNLOCKED**  
Tuner is not locked onto the target signal



## Configuration

The Configuration Screen allows the user the ability to modify communication parameters between the iNetVu™ 9000 Controller with the Satellite Modem / VSAT, as well as enable and disable various system parameters and options.

This Section will break the Configuration Screen down into four (4) parts to describe in detail the parameters and options found in each part.

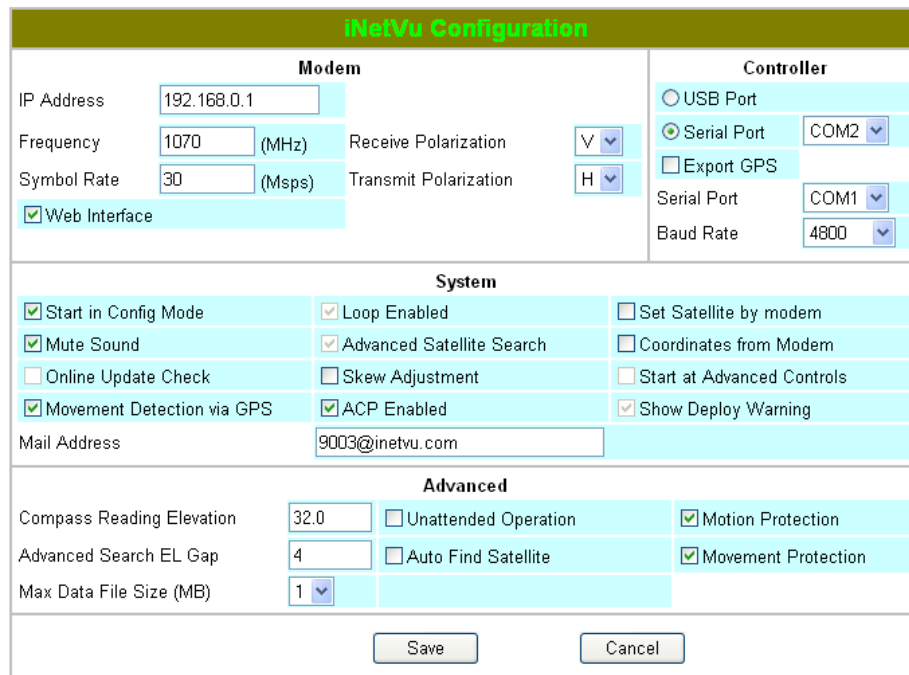

The screenshot shows the 'iNetVu Configuration' window, which is divided into four main sections: Modem, Controller, System, and Advanced. At the bottom are 'Save' and 'Cancel' buttons.

iNetVu Configuration		
<b>Modem</b>		
IP Address	192.168.0.1	
Frequency	1070 (MHz)	Receive Polarization: V
Symbol Rate	30 (Msps)	Transmit Polarization: H
<input checked="" type="checkbox"/> Web Interface		
<b>Controller</b>		
<input type="radio"/> USB Port		
<input checked="" type="radio"/> Serial Port: COM2		
<input type="checkbox"/> Export GPS		
Serial Port: COM1		
Baud Rate: 4800		
<b>System</b>		
<input checked="" type="checkbox"/> Start in Config Mode	<input checked="" type="checkbox"/> Loop Enabled	<input type="checkbox"/> Set Satellite by modem
<input checked="" type="checkbox"/> Mute Sound	<input checked="" type="checkbox"/> Advanced Satellite Search	<input type="checkbox"/> Coordinates from Modem
<input type="checkbox"/> Online Update Check	<input type="checkbox"/> Skew Adjustment	<input type="checkbox"/> Start at Advanced Controls
<input checked="" type="checkbox"/> Movement Detection via GPS	<input checked="" type="checkbox"/> ACP Enabled	<input checked="" type="checkbox"/> Show Deploy Warning
Mail Address: 9003@inetvu.com		
<b>Advanced</b>		
Compass Reading Elevation: 32.0	<input type="checkbox"/> Unattended Operation	<input checked="" type="checkbox"/> Motion Protection
Advanced Search EL Gap: 4	<input type="checkbox"/> Auto Find Satellite	<input checked="" type="checkbox"/> Movement Protection
Max Data File Size (MB): 1		
<div>Save</div> <div>Cancel</div>		

Fig. 23: Web Interface Configuration Screen

\*\*\* Any changes made on the Configuration Screen require the user to click **Save**.


\*\*\* Saving will cause the iNetVu™ 9000 Controller's software to temporarily re-boot, and will require the user to log in again to the Web Interface.



## Modem

Communication settings between iNetVu™ Mobile Software and the Satellite Modem.

Dependant on the type of Satellite Modem / VSAT which you would like to integrate with, this section may be slightly varied. Consult your Installation Guide to determine how to properly configure the Modem Communication parameters.

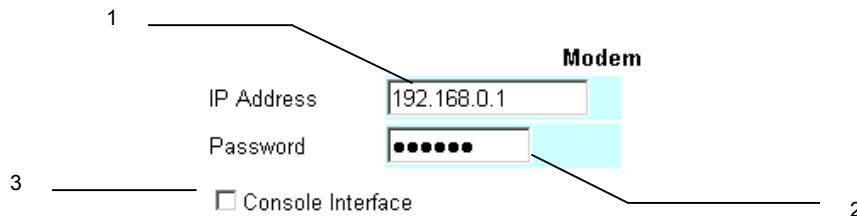

*Fig. 24: Configuration Screen - Modem*

### 1 – IP Address

IP Network Address of the Satellite Modem / VSAT.

### 2 – Password

Password required to access the Satellite Modem

### 3 – Secondary Interface

The iNetVu™ 9000 Controller may have a secondary interface with the Satellite Modem / VSAT and will be displayed here.

Enabling any of the following will attempt to use the COM Port located on the Rear Panel of the iNetVu™ 9000 Controller.

- Console Interface
- Serial Port Interface

Once you have selected the secondary interface, you must save the changes. At this time, the system will reboot and require the user to login again. Re-enter the Configuration Screen and confirm the Serial Port (COM1 is the Serial Port on the Rear Panel labeled COM) and baud rate.

Note 1: By default, HNS Users will have HTTP Interface enabled.



## Controller

**Controller**

1 — ☒ USB Port

2 — ☒ Serial Port COM2

☐ Export GPS

Serial Port COM1

Baud Rate 4800

Fig. 25: Configuration Screen - Controller

### 1 – Controller Communication Interface

By Default, Controller communication for the iNetVu™ 9000 Controller is set to Serial Port (COM 2).

This setting should only be changed if a 5000 Series Controller is to be used externally.

### 2 – Export GPS

Exports NEMA (Industry Standard) GPS Data stream to the external Serial Port (COM 1). Baud Rate must be set to 4800.

This function can be used for any external application that requires GPS information such as the iNetVu™ Navigator Application, or a Satellite Modem / VSAT that requires GPS input.

## System

**System**

1 — ☒ Start in Config Mode

2 — ☒ Mute Sound

3 — ☐ Online Update Check

4 — ☒ Movement Detection via GPS

Mail Address Controller9000@inetvu.com

☒ Loop Enabled

☒ Advanced Satellite Search

☐ Start at Advanced Controls

☒ Show Deploy Warning

Fig. 26: Configuration Screen - System

### 1 – Start in Config Mode

Enables the application to start in **CONFIG** Mode. Recommended for advanced users and installers for trouble-shooting purposes. When trouble-shooting issue is resolved, it is recommended that this option be disabled, and that the iNetVu™ Mobile Software be changed back the **USER** mode.

\*\* Only applicable when using Windows Interface (KVM Required for iNetVu™ 9000 Controller)



## 2 – Mute Sound

Mutes all iNetVu™ Mobile Software sound effects.

## 3 – Online Update Check

Enables an automatic check to the iNetVu™ Server when system is online for any released updates for the iNetVu™ Mobile Software, iNetVu™ Controller Firmware, and iNetVu™ Navigator.

## 4 – Movement Detection via GPS

Enables antenna to automatically stow in the event that the Mobile Platform moves while the antenna is deployed and is not in the stowed position.

## 5 – Loop Enabled

Enables IMS to continue to Find Satellite if it is unsuccessful (Max. 30 minutes)

## 6 – Advanced Satellite Search

Enabled by default, this feature enables a smart “Find Satellite” algorithm should your Mobile Platform be in an uneven surface.

## 7 - Start at Advanced Controls

Enables the iNetVu™ Mobile Software to startup in the Advanced Controls menu.

\*\* Only applicable when using Windows Interface (KVM Required for iNetVu™ 9000 Controller)

## 8 – Show Deploy Warning

Enables an automatic message prompt that notifies the user whenever the antenna is about to move.

## 9 – Email Address

Enables an automatic message prompt that notifies the user whenever the antenna is about to move.



## Advanced

The screenshot shows the 'Advanced' configuration screen with the following settings:

- 1 — Compass Reading Elevation: 32.0
- 2 — Advanced Search EL Gap: 4
- 3 — Max Data File Size (MB): 1
- 4 — Unattended Operation: ☐
- 5 — Auto Find Satellite: ☐
- 6 — Motion Protection: ☒
- 7 — Movement Protection: ☒

Fig. 27: Configuration Screen - Advanced

### 1 – Compass Reading Elevation

Number of degrees that the Antenna requires to be elevated to ensure that the compass is level and is able to acquire an accurate compass reading.

	PLATFORM TYPES						
	MF1200	ME1200	A1200B/ A1200C	A0980B	MF950	ME950	A0950B
COMPASS READING ELEVATION	35	32	32	35	37	35	35

	PLATFORM TYPES				
	MF740	ME740	A0740B	A1800A	A0660A
COMPASS READING ELEVATION	40	40	40	32	24.5

### 2 – Advanced Search EL Gap

Parameter used to determine the small incremental adjustments required for a more accurate satellite search. Decreasing this value will add accuracy to the Search Window, but will increase the search time.

### 3 – Max Data File Size (MB)

Maximum size of the Data Log file

Data Log File Filename: iNetVuData5000.txt  
Data Log File Backup Filename: iNetVuData5000.bak

### 4 – Unattended Operation

Automatically finds satellite should the Mobile Platform be forced to stow by external forces such extreme movement due to weather.

### 5 – Auto Find Satellite

Enables an automatic **Find Satellite** command when iNetVu™ Mobile Software is started.



## 6 – Motion Protection

The iNetVu™ Mobile Platform will automatically stow the antenna should it experience extreme motion, such as severe shaking caused by poor weather conditions.

## 7 – Movement Protection

The iNetVu™ Mobile Platform will automatically stow the antenna should it detect that it is moving faster than 5km/h.



## Maintenance

The Maintenance screen allows the user to change the Target Satellite, Search Window Size, override the GPS or compass, and it also displays all offsets, as well as the speeds and current limits for each motor.

Users also have the ability to calibrate the Azimuth, Polarization, and Compass, if necessary.

iNetVu Maintenance																																																	
<b>Satellite</b> Sat Name: <input type="text" value="G11"/> Sat Longitude: <input type="text" value="91"/> <input type="button" value="W"/> AZ Window: <input type="text" value="60"/> EL Window: <input type="text" value="5"/>				<table border="1"> <thead> <tr> <th></th> <th>Elevation</th> <th>Azimuth</th> <th>Polarization</th> </tr> </thead> <tbody> <tr> <td>Pot Zero</td> <td></td> <td>287.1376</td> <td>209.8754</td> </tr> <tr> <td>Pot Factor</td> <td></td> <td>0.5555</td> <td>0.4074</td> </tr> <tr> <td>Offset</td> <td>41.78</td> <td></td> <td>0.00</td> </tr> <tr> <td>Fast Speed</td> <td>9</td> <td>9</td> <td>9</td> </tr> <tr> <td>Slow Speed</td> <td>7</td> <td>5</td> <td>4</td> </tr> <tr> <td>Calibrate Speed</td> <td>7</td> <td>7</td> <td>7</td> </tr> <tr> <td>Current Limit 3 (A)</td> <td>1.60</td> <td>1.80</td> <td>0.40</td> </tr> <tr> <td>Current Limit 6 (A)</td> <td>5.00</td> <td>4.50</td> <td>1.20</td> </tr> <tr> <td>Current Limit 9 (A)</td> <td>12.50</td> <td>8.00</td> <td>1.50</td> </tr> </tbody> </table>							Elevation	Azimuth	Polarization	Pot Zero		287.1376	209.8754	Pot Factor		0.5555	0.4074	Offset	41.78		0.00	Fast Speed	9	9	9	Slow Speed	7	5	4	Calibrate Speed	7	7	7	Current Limit 3 (A)	1.60	1.80	0.40	Current Limit 6 (A)	5.00	4.50	1.20	Current Limit 9 (A)	12.50	8.00	1.50
	Elevation	Azimuth	Polarization																																														
Pot Zero		287.1376	209.8754																																														
Pot Factor		0.5555	0.4074																																														
Offset	41.78		0.00																																														
Fast Speed	9	9	9																																														
Slow Speed	7	5	4																																														
Calibrate Speed	7	7	7																																														
Current Limit 3 (A)	1.60	1.80	0.40																																														
Current Limit 6 (A)	5.00	4.50	1.20																																														
Current Limit 9 (A)	12.50	8.00	1.50																																														
<b>GPS</b> <input type="checkbox"/> Override Latitude: <input type="text" value="45.41"/> <input type="button" value="N"/> Longitude: <input type="text" value="75.61"/> <input type="button" value="W"/>																																																	
<b>RF</b> <input type="checkbox"/> Override Threshold: <input type="text" value="50"/> Lock Signal: <input type="text" value="31"/>																																																	
<b>Compass</b> <input type="checkbox"/> Override <input type="checkbox"/> Full Search Direction: <input type="text" value="4.96"/> Offset: <input type="text" value="8.60"/>				<b>Disable Limits/PL</b> <input type="checkbox"/> EL UP <input type="checkbox"/> AZ ST <input type="checkbox"/> EL DN <input type="checkbox"/> PL ST <input type="checkbox"/> EL ST			<b>Other</b> <input type="checkbox"/> Speed Current Calibration Controller ID: <input type="text" value="1908"/> Platform SN: <input type="text" value="3463"/>																																										
<b>DVB Receiver</b> Operation Mode: <input type="button" value="DVB"/> <input type="checkbox"/> Secondary Transponder Enabled																																																	
Frequency1 (KHz): <input type="text" value="1370000"/>		SymbolRate1 (Ksps): <input type="text" value="30000"/>		CodeRate1: <input type="button" value="5/6"/>		PowerType1: <input type="button" value="0"/>																																											
Frequency2 (KHz): <input type="text" value="1370000"/>		SymbolRate2 (Ksps): <input type="text" value="30000"/>		CodeRate2: <input type="button" value="5/6"/>		PowerType2: <input type="button" value="0"/>																																											
<input type="button" value="Save"/>		<input type="button" value="Cancel"/>		<input type="button" value="Calibrate PL"/>		<input type="button" value="Calibrate AZ"/>																																											
<input type="button" value="Calibrate CP"/>		<input type="button" value="Load Firmware"/>		<input type="button" value="Log File"/>		<input type="button" value="Diagnose"/>																																											
<input type="button" value="Reset Controller"/>		<input type="button" value="Reset Default"/>		<input type="button" value="Calibrate EL"/>		<input type="button" value="Check CP"/>																																											

Fig. 28: Web Interface Maintenance Screen

This Section will break the Maintenance Screen down into six (6) parts to describe in detail the parameters and options found in each part.



## Satellite

**Satellite**

1 — Sat Name

2 — Sat Longitude  W Pol Offset  4

AZ Window  EL Window

3 —

*Fig. 29: Maintenance Screen - Satellite*

### 1 – Sat Name


Name of the desired Satellite.

### 2 – Sat Longitude

Orbital slot / Longitude of the desired Satellite. The **Find Satellite** command will use this value when attempting to find and lock onto a satellite signal.

### 3 – AZ / EL Window

The Search Window is the area of the sky which the iNetVu™ Mobile System will search for the desired Satellite. It uses a rectangular window and searches for the Satellite using smaller concentric windows until the desired Satellite is found. The Search Window range may be manually changed from the default settings which iNetVu™ uses to find the satellite should the desired Satellite cannot be found.

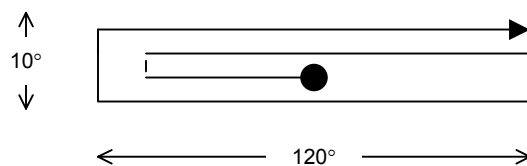

*Fig. 30: Satellite Search Window*

The default Azimuth (Horizontal) range is 60° on each side of the Target Point and the default Elevation (Vertical) range is 5° on each side of the Target Point.

Increasing the size of the Search Window will increase the ability to find the desired Satellite, although increasing the Search Window will lengthen the search time.


### 4 – Pol Offset

Transmit Polarization Offset. Default values below.

**0** Vertical Transmit  
**90** Horizontal Transmit

\*\* Can only be modified from **CONFIG** Work Mode



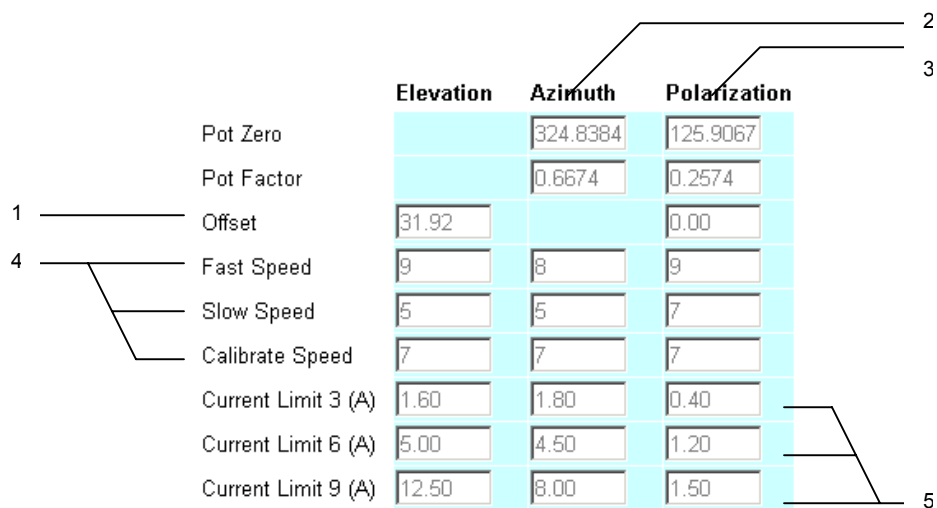

	Elevation	Azimuth	Polarization
Pot Zero		324.8384	125.9067
Pot Factor		0.6674	0.2574
Offset	31.92		0.00
Fast Speed	9	8	9
Slow Speed	5	5	7
Calibrate Speed	7	7	7
Current Limit 3 (A)	1.60	1.80	0.40
Current Limit 6 (A)	5.00	4.50	1.20
Current Limit 9 (A)	12.50	8.00	1.50

Fig. 31: Maintenance Screen – Elevation, Azimuth, Polarization Parameters

## 1 – Elevation Offset

The number of degrees at which the iNetVu™ Mobile Software will offset the reading from the Inclinator in order to produce an accurate (+/- 2°) Elevation Angle.

The Inclinator is installed with an offset in order to produce an accurate Elevation Angle reading. Each type of Mobile Platform has its own default offset value.

This value is normally changed when performing the Target Calibration process to compensate for un-level surroundings, and should be left at this updated value.

	PLATFORM TYPES						
	MF1200	ME1200	A1200B/ A1200C	A0980B	MF950	ME950	A0950B
EL OFFSET	42.00	42.00	42.00	31.00	25.00	31.00	31.00

	PLATFORM TYPES				
	MF740	ME740	A0740B	A1800A	A0660A
EL OFFSET	25.40	31.00	31.00	46.5	55.00

## 2 – Azimuth Parameters

The Azimuth Angle is based on 2 values:

- AZ Pot Factor
- AZ Pot Zero

AZ Pot Factor is an A/D value from the potentiometer which allows the iNetVu™ Mobile Software to convert the A/D value of the Potentiometer into an equivalent angle. The AZ Pot Factor should vary approximately  $\pm 15\%$  from the Default values below.



AZ Pot Zero is an A/D value from the potentiometer which physically determines where the iNetVu™ Mobile Software places Azimuth Angle 0°. The AZ Pot Zero may vary approximately  $\pm 15\%$  from the Default values below.

The AZ Pot Factor and AZ Pot Zero are calculated during the Azimuth Calibration process.

	PLATFORM TYPES						
	MF1200	ME1200	A1200B/ A1200C	A0980B	MF950	ME950	A0950B
AZ POT ZERO	376.14	286.1878	286.1878	343.0747	226.0722	343.0747	343.0747
AZ POT FACTOR	0.737	0.5525	0.5525	0.6683	0.4515	0.6683	0.6683

	PLATFORM TYPES				
	MF740	ME740	A0740B	A1800A	A0660A
AZ POT ZERO	226.0722	343.0747	343.0747	280.7808	343.0747
AZ POT FACTOR	0.4515	0.6683	0.6683	0.5484	0.6683

### 3 – Polarization Parameters

The Polarization Angle is based on 2 values:

- PL Pot Factor
- PL Pot Zero

PL Pot Factor is an A/D value from the potentiometer which allows the iNetVu™ Mobile Software to convert the A/D value of the Potentiometer into an equivalent angle. The PL Pot Factor should vary approximately  $\pm 15\%$  from the Default values below.

PL Pot Zero is an A/D value from the potentiometer which physically determines where the iNetVu™ Mobile Software places Polarization Angle 0°. The PL Pot Zero may vary approximately  $\pm 15\%$  from the Default values below.

The PL Pot Factor and PL Pot Zero are calculated during the Polarization Calibration process.

	PLATFORM TYPES						
	MF1200	ME1200	A1200B/ A1200C	A0980B	MF950	ME950	A0950B
PL POT ZERO	250.2905	203.066	203.066	128.5094	80.2096	128.5094	128.5094
PL POT FACTOR	0.5304	0.3852	0.3852	0.2574	0.1586	0.2574	0.2574

	PLATFORM TYPES				
	MF740	ME740	A0740B	A1800A	A0660A
PL POT ZERO	80.2096	128.5094	128.5094	205.4144	128.5094
PL POT FACTOR	0.1586	0.2574	0.2574	0.4012	0.2574

### 4 – Speeds

Default speed values for the automated processes such as Finding Satellite, Stowing Antenna, and Calibration processes.



## 5 – Current Limits

A software controlled current protection for the Mobile Platform's motors.

When any of the Mobile Platform's motors are moving at the associated speed, the current drawn to move the motor is monitored and should it exceed the Current Limit, an error message will appear. For Motor Speeds that are not listed (Speed 1, 2, 4, 5, 7, 8), the Current Limit for those speeds are calculated using a percentage of the Current Limit above it.

- Current Limit 8 – 90% of Current Limit 9
- Current Limit 7 – 80% of Current Limit 9
- Current Limit 5 – 90% of Current Limit 6
- Current Limit 4 – 80% of Current Limit 6
- Current Limit 2 – 90% of Current Limit 3
- Current Limit 1 – 80% of Current Limit 3

### Default Speeds and Current Limits

	PLATFORM TYPES						
	MF1200	ME1200	A1200B/ A1200C	A0980B	MF950	ME950	A0950B
EL FAST	9	9	9	9	9	9	9
EL SLOW	7	5	4	4	5	4	4
EL CALIBRATE	7	7	7	7	7	7	7
EL CURRENT3	1.60	1.60	1.60	1.60	1.60	1.60	1.60
EL CURRENT6	5.00	5.00	5.00	5.00	5.00	5.00	5.00
EL CURRENT9	12.50	12.50	12.50	12.50	12.50	12.50	12.50
AZ FAST	9	9	9	8	8	8	8
AZ SLOW	6	5	7	6	5	4	4
AZ CALIBRATE	7	7	7	7	7	7	7
AZ CURRENT3	1.30	1.80	1.80	1.80	1.30	1.80	1.80
AZ CURRENT6	3.50	4.50	7.00	4.50	3.50	4.50	4.50
AZ CURRENT9	6.00	8.00	8.00	8.00	6.00	8.00	8.00
PL FAST	9	9	9	9	9	9	9
PL SLOW	4	4	4	7	7	7	7
PL CALIBRATE	7	7	7	7	7	7	7
PL CURRENT3	0.40	0.40	0.40	0.40	0.40	0.40	0.40
PL CURRENT6	1.20	1.20	1.20	1.20	1.20	1.20	1.20
PL CURRENT9	1.50	1.50	1.50	1.50	1.50	1.50	1.50



	PLATFORM TYPES				
	MF740	ME740	A0740B	A1800A	A0660A
EL FAST	9	9	9	9	9
EL SLOW	4	4	4	7	4
EL CALIBRATE	7	7	7	7	7
EL CURRENT3	1.60	1.60	1.60	1.60	1.60
EL CURRENT6	5.00	5.00	5.00	5.00	5.00
EL CURRENT9	12.50	12.50	12.50	12.50	12.50
AZ FAST	8	8	8	9	8
AZ SLOW	4	4	4	6	4
AZ CALIBRATE	7	7	7	7	7
AZ CURRENT3	1.30	1.80	1.80	1.80	1.80
AZ CURRENT6	3.50	4.50	4.50	5.50	4.50
AZ CURRENT9	6.00	8.00	8.00	9.00	8.0
PL FAST	9	9	9	9	9
PL SLOW	7	7	7	4	7
PL CALIBRATE	7	7	7	7	7
PL CURRENT3	0.40	0.40	0.40	0.40	0.40
PL CURRENT6	1.20	1.20	1.20	1.20	1.20
PL CURRENT9	1.50	1.50	1.50	1.50	1.50



**GPS**

1 ☒ Override

Latitude 45.41 N Longitude 75.61 W

**RF**

2 ☒ Override

Threshold 1701 Lock Signal 31

**Compass**

3 ☒ Override ☐ Full Search

4 Direction 357.55 Offset -9.34

5

6

Fig. 32: Maintenance Screen – GPS, RF, Compass Parameters

### 1 – GPS Override

Enables the GPS coordinates to be manually overridden to the Latitude and Longitude coordinates.

This should only to be enabled in the event that the GPS Antenna is malfunctioning and the user has a reliable, alternate source for coordinates.

**Note:** If you have overridden the GPS coordinates, they will have to be updated if the Mobile Platform has moved to a new location since the overridden values will no longer be accurate.

### 2 – RF Override

Used by the iNetVu™ Mobile Software to begin a signal optimization process for peaking on a Satellite signal after initially locating it. Enabling this option and setting the RF value too low will result in an inability to acquire a reliable signal and IMS will be unable to distinguish between the desired signal and noise.

### 3 – Compass Override

Enables the Compass to be manually overridden. Ensure that you are using a reliable alternate source.

### 4 – Direction

After enabling Override, you may enter the vehicle's direction as indicated on your alternate compass. Keep in mind that the base of the iNetVu™ Mobile Platform is oriented to the rear of your vehicle, and the Direction must be based in reference to True North.



This end faces the front  
of the vehicle

Fig. 33: Compass Direction Orientation




## 5 – Full Search

Performs a full 360° Azimuth search for the desired Satellite. This process may take up to 30 minutes to find and lock onto Satellite.

## 6 – Compass Offset

The number of degrees the Mobile Platform is rotated in reference to True North.



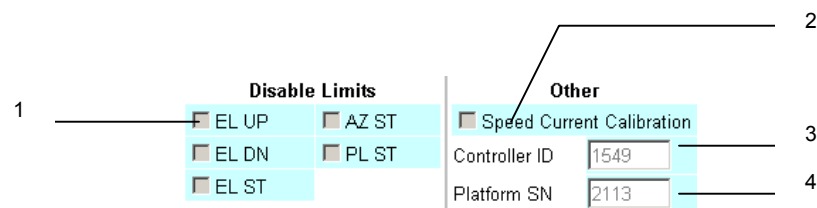

*Fig. 34: Maintenance Screen – Disable Limits and Other*

### 1 – Disable Limits

Disables UP, DN, and ST limits for testing and troubleshooting. In the event that a limit is disabled, a yellow colored “F” will appear in the **Controls** menu to alert the user that a limit has been disabled.

#### **Note for Disabling Polarization Rotation:**

For **A1800A** and **A0660A** Mobile Platforms, **PL RT** will also appear in this section. This function, when checked, will disable the Polarization Rotation of the Mobile Platform. Enabling this function will set the Polarization Angle to display 0.00, and also require the Polarization ST Limit Switch to be closed with a shorted connector.

### 2 – Speed Current Calibration

Enables a calibration process which optimizes the current protection values for the motors and allows for elevation to be calibrated.

### 3 – Controller ID

iNetVu™ 9000 Controller's ID Number

### 4 – Platform SN

iNetVu™ Mobile Platform's Serial Number



1

2

3

**DVB Receiver**

Operation Mode: DVB

☐ Secondary Transponder Enabled

Frequency1 (kHz)	<span style="border: 1px solid black; padding: 2px;">1370000</span>	SymbolRate1 (Ksps)	<span style="border: 1px solid black; padding: 2px;">30000</span>	CodeRate1	<span style="border: 1px solid black; padding: 2px;">5/6</span>	PowerType1	<span style="border: 1px solid black; padding: 2px;">0</span>
Frequency2 (kHz)	<span style="border: 1px solid black; padding: 2px;">1370000</span>	SymbolRate2 (Ksps)	<span style="border: 1px solid black; padding: 2px;">30000</span>	CodeRate2	<span style="border: 1px solid black; padding: 2px;">5/6</span>	PowerType2	<span style="border: 1px solid black; padding: 2px;">0</span>

### 1 – Operation Mode

Displays the standard / modulation scheme used

### 2 – Secondary Transponder Enabled

Enables a second set of transponder parameters (Frequency 2, Symbol Rate 2, Code Rate 2, Power Type 2) during satellite search. This function is enabled when adjacent satellites may be using the same transponder parameters, and the user requires to distinguish the target satellite with a secondary transponder.

### 3 – DVB Receiver Parameters

Frequency (kHz) – L-Band Frequency of the receive signal

Symbol Rate (kSps) – Symbol Rate of the receive signal

Code Rate – FEC Rate of the receive signal

Power Type (dBm) - Power ratio in decibel (dB) of the measured power referenced to one milliwatt (mW). This value should always be set to 0.



**Calibrate PL****Calibrate PL**

Performs automated Polarization Calibration process.

- i. Antenna will completely rotate counter-clockwise to the physical limit and temporarily record the A/D value from the Potentiometer.
- ii. Antenna will completely rotate clockwise to the physical limit and temporarily record the A/D value from the Potentiometer.
- iii. Based on the A/D values of the two (2) physical limits, and the maximum range of motion for the Mobile Platform, the PL Pot Factor is calculated.
- iv. Antenna will center itself and attempt to locate the cut-off edges of the Polarization Stow Switch.
- v. After detecting at which angles the ST Switch turns OFF, the Polarization zero position is calculated and the PL Pot Zero is set at the zeroed A/D value.
- vi. You will then be prompted to enter the Platform ID Number prior to finishing the Calibration Process.

**Calibrate AZ****Calibrate AZ**

Performs automated Polarization Calibration process.

- i. Antenna will completely rotate counter-clockwise to the physical limit and temporarily record the A/D value from the Potentiometer.
- ii. Antenna will completely rotate clockwise to the physical limit and temporarily record the A/D value from the Potentiometer.
- iii. Based on the A/D values of the two (2) physical limits, and the range of motion for the Mobile Platform, the AZ Pot Factor is calculated.
- iv. Antenna will center itself and attempt to locate the cut-off edges of the Azimuth Stow Switch.
- v. After detecting at which angles the ST Switch turns OFF, the Azimuth zero position is calculated and the AZ Pot Zero is set at the zeroed A/D value.
- vi. You will then be prompted to enter the Platform ID Number prior to finishing the Calibration Process.

**Calibrate EL****Calibrate EL**

Calibrates Elevation by adjusting and optimizing the Elevation Current Limits.

**Calibrate CP****Calibrate CP**

Tests the compass' heading and accuracy by rotating the antenna at 90° intervals and comparing the compass readings with the actual antenna's movement. If IMS finds that the Compass is inaccurate, it will automatically calibrate the compass.

**Compass Check**

- i. Antenna will center itself; move to the proper Elevation for reading the compass, then read the compass heading.
- ii. Antenna will rotate 90° to each of the following positions and read the compass at each: 0°, 90°, 180°, -90°, 0°
- iii. iNetVu™ Mobile Software will compare the compass heading values read at each position, and determine if they differ by approximately 90°.
- iv. The Compass Check will display a message regarding the accuracy of the compass.

**Compass Calibration**



- 
- i. Ensure that there are no metallic objects that could interfere with the Compass, and that the Mobile Platform is on level surroundings.
  - ii. Orient the Mobile Platform as depicted in the following figure. It is recommended that you use an external compass to be as accurate with the orientation as possible.



This end faces South



This end faces North

- iii. The Antenna will now rotate in 90° intervals and attempt to calibrate the compass.
- iv. A message prompt will appear to notify you that the Compass Calibration has been completed successfully or not.




### Log File

Opens the iNetVuData5000.txt data log file into notepad.



## Network

The Network Screen allows the user to modify the iNetVu™ 9000 Controller's IP Address, Subnet Mask, Gateway IP, and DNS Settings.

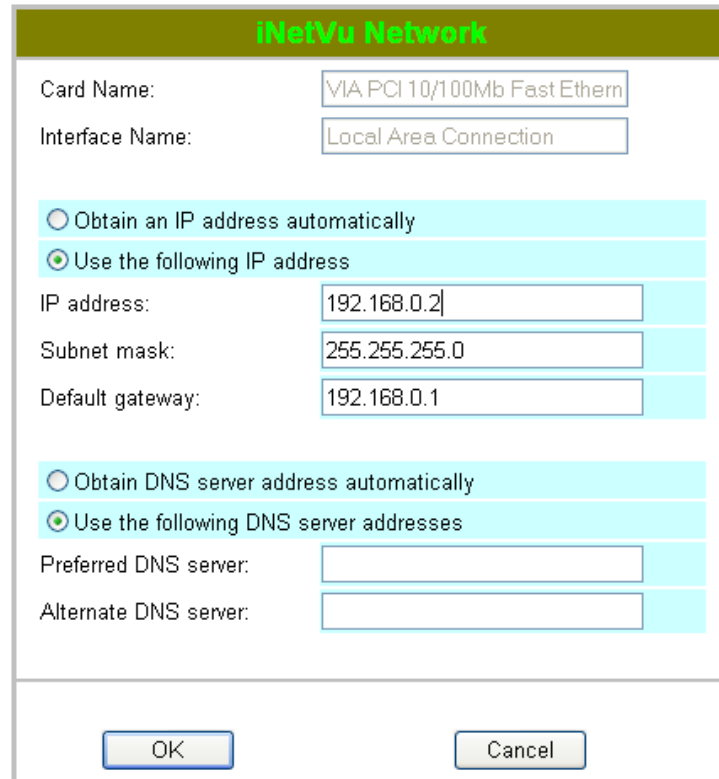

The image shows a web interface titled "iNetVu Network" with a green header. It contains several input fields and radio buttons for network configuration. The "Card Name" is "VIA PCI 10/100Mb Fast Ethernet" and the "Interface Name" is "Local Area Connection". Under the IP address section, the "Obtain an IP address automatically" radio button is selected. The "Use the following IP address" section has input fields for "IP address" (192.168.0.2), "Subnet mask" (255.255.255.0), and "Default gateway" (192.168.0.1). Under the DNS section, the "Obtain DNS server address automatically" radio button is selected. The "Use the following DNS server addresses" section has input fields for "Preferred DNS server" and "Alternate DNS server". At the bottom are "OK" and "Cancel" buttons.

iNetVu Network	
Card Name:	VIA PCI 10/100Mb Fast Ethernet
Interface Name:	Local Area Connection
<input type="radio"/> Obtain an IP address automatically	
<input checked="" type="radio"/> Use the following IP address	
IP address:	192.168.0.2
Subnet mask:	255.255.255.0
Default gateway:	192.168.0.1
<input type="radio"/> Obtain DNS server address automatically	
<input checked="" type="radio"/> Use the following DNS server addresses	
Preferred DNS server:	
Alternate DNS server:	
<input type="button" value="OK"/> <input type="button" value="Cancel"/>	

Fig. 35: Web Interface Network Screen

### iNetVu 9000 Controller Default Settings

Default IP Address:	192.168.0.2
Default Subnet Mask:	255.255.255.0
Default Gateway:	192.168.0.1

If your Satellite Modem / VSAT is DHCP Enabled:

1. Enable **Obtain an IP address automatically**.

If your Satellite Modem / VSAT is not DHCP Enabled:

1. Set the IP Address to the same network as the Satellite Modem / VSAT.
2. Set the Subnet Mask to that of the Satellite Modem / VSAT.
3. Set the Default Gateway to the IP of your Satellite Modem / VSAT.



## About

The About Screen displays all the system component information for the Controller, including the Software installed, Mobile Platform, Satellite Modem / VSAT, and Target Satellite.


iNetVu About	
<b>Software</b> Version: 6.2.1 Build ID: 103020061030 Work Mode: Special Service: iDirect Controller API: USB Modem API: Telnet Applied Field: IA	<b>Controller</b> Firmware: 6.0 Service/ID: ID1908 Boot Loader: 3.5 Revision: 3.1 DVB Tuner: No  <b>Modem</b> Firmware: ID: Type: iDirect
<b>Platform</b> Type: A1200B Serial Number: 3463 PL Rotation: Enabled	<b>Satellite</b> Name: G11 Longitude: 91.0W Tx Polarity: V
Tel: 1-877-463-8886 <a href="http://www.inetvu.com">Http://www.inetvu.com</a> Copyright © 2005, All Rights Reserved C-COM Satellite Systems Inc.	
<div style="text-align: right;">   <input type="button" value="Online Update"/>  <input type="button" value="Send Feedback"/> </div>	

Fig. 36: Web Interface – About Screen

This Section will break the Maintenance Screen down into five (5) parts to describe in detail the parameters and options found in each part.

Software
Version: 6.2.1
Build ID: 103020061030
Work Mode: Special
Service: iDirect
Controller API: USB
Modem API: Telnet
Applied Field: IA

Fig. 37: About - Software

- **Version**  
iNetVu™ Mobile Software version
- **Build ID**  
Date of software release
- **Work Mode**  
Current Operation Mode
- **Service**  
Service which iNetVu™ Mobile Software is configured for
- **Controller API**  
Method of communication between the iNetVu™ Controller and iNetVu™ Mobile Software
- **Modem API**  
Method of communication between Satellite Modem and iNetVu™ Mobile Software
- **Applied Field**



#### Abbreviation for Service

CT – Comtech  
 DW – Direcway  
 EM – EMS  
 GL – Gilat  
 ID – iDirect  
 IR - iReceiver  
 NR – Nera  
 SF - Surfbeam  
 SB – StarBand  
 TS – Technisat  
 TY – Tachyon  
 VS - Viasat

#### Controller

Firmware: 6.0  
 Service/ID: ID1908  
 Boot Loader: 3.5  
 Revision: 3.1  
 DVB Tuner: No

*Fig. 38: About - Controller*

- **Firmware**

iNetVu™ Controller's firmware version.

For compatibility purposes, Controllers are pre-configured with the appropriate firmware for the accompanied software version.

- **Service/ ID**

iNetVu™ Controller Serial Number ID.

- **Boot Loader**

- 9.0 / 9.1 - Latest Version at time of publication (July 7, 2006)

- **Revision**

- 3.1 - Latest Version at time of publication (November 29, 2005)

- **DVB Tuner**

DVB Tuner Detected.

#### Platform

Type: A1200B  
 Serial Number: 3463  
 PL Rotation: Enabled

*Fig. 39: About - Platform*

- **Type**

Mobile Platform type and size

A1800A, A1200B, A0950B, A0740B, A0660A, ME1200, ME950, ME740, MF1200, MF950, MF740,



Unknown

- 1800 - 1.8m
- 1200 - 1.2 m
- 950 - 0.95 m
- 740 - 0.74 m
- 660 - 0.66 m

- **Serial Number**

Mobile Platform serial number

- **PL Rotation**

Enabled / Disabled - Only be disabled for circular signaled frequency bands

#### Modem

Firmware:

ID:

Type:

*Fig. 40: About - Modem*

- **Firmware**

Satellite Modem's firmware version.

- **ID**

Satellite Modem's Hardware ID or Serial Number

- **Type**

Modem type

#### Satellite

Name:

Longitude:

Tx Polarity:

*Fig. 41: About - Satellite*

- **Name**

Name of Satellite

- **Longitude**

Orbital slot of Satellite

- **Tx Polarity**

Transmit Signal Polarization



## LCD Screen and Navigator Keypad Operation


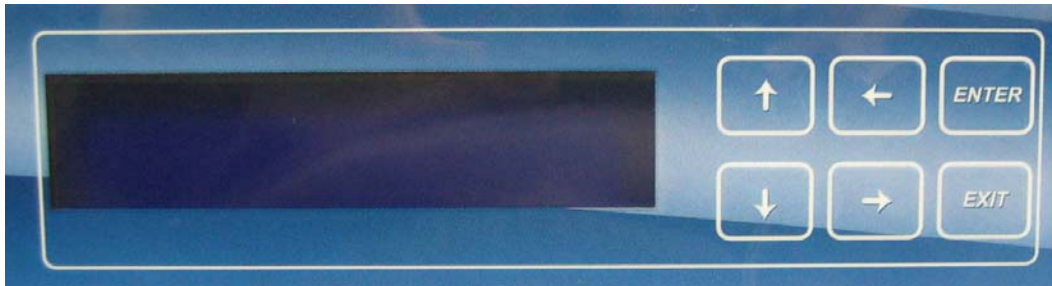


Fig. 42: iNetVu™ 9000 Controller LCD and Keypad Navigator

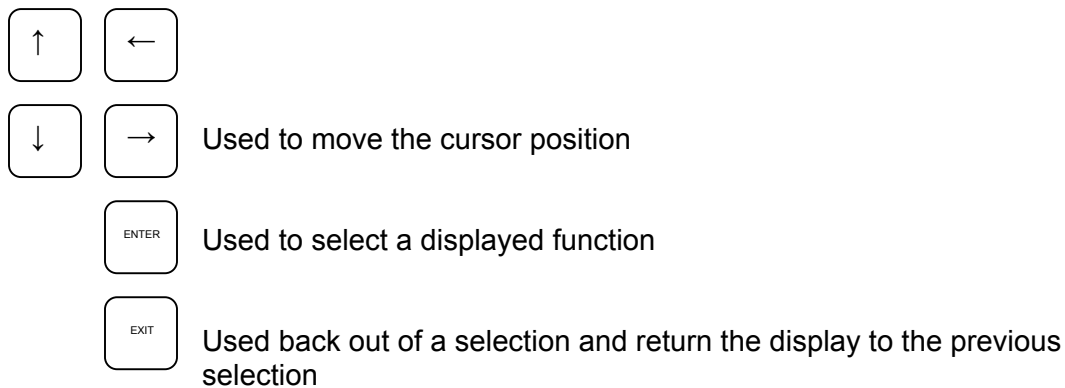

### Menu Tree

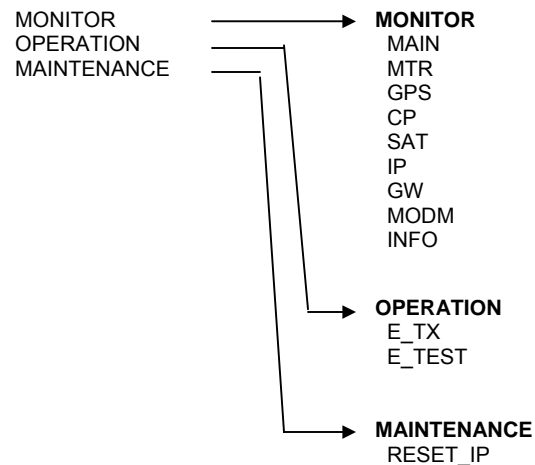


Fig. 43: iNetVu™ 9000 Controller LCD Menu Options



## Opening Screen

When powering the iNetVu™ 9000 Controller, the LCD will display the following during the initial boot-up sequence.

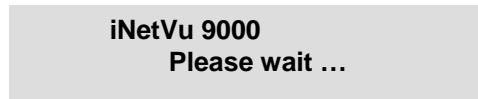


Fig. 44: LCD Opening Screen

## Main Menu

The iNetVu™ 9000 is ready for usage when the following is displayed on the LCD.

There are three (3) Main Menu items to select from: **Monitor** and **Maintenance**.

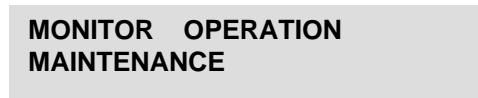


Fig. 45: LCD Main Menu

<b>MONITOR</b>	This menu branch allows the user to monitor the status of the iNetVu Mobile Platform, its components, and displays information concerning the iNetVu 9000 Controller and the Satellite Modem / VSAT.
<b>OPERATION</b>	This menu branch allows the user to perform miscellaneous functions, such as enabling/disabling the transmitter, and enter CW Test Mode.
<b>MAINTENANCE</b>	<p>This menu branch allows the user to reset the IP Settings of the iNetVu™ 9000 Controller to default.</p> <p>The Maintenance menu branch is password protected, with a default password of '1234'.</p>



## Monitor

**MAIN MTR GPS CP SAT**  
**IP GW MODM INFO**

*Fig. 46: Monitor Menu*

<b>MAIN</b>	Displays real-time system status and receive signal.
<b>MTR</b>	(Motor) Displays real-time current drawn and speed settings for each motor.
<b>GPS</b>	Displays GPS Status.
<b>CP</b>	(Compass) Displays Compass Status.
<b>SAT</b>	(Satellite) Displays Target Satellite and its coordinates, real-time RF Signal and RF Threshold.
<b>IP</b>	Displays IP and Subnet Mask of iNetVu 9000's Ethernet Port.
<b>GW</b>	(Gateway) Displays Gateway Parameters.
<b>MODM</b>	(Modem) Displays Modem Parameters.
<b>INFO</b>	Displays the Controller ID, IMS Software Version, Firmware Version, Platform Type, Platform ID, and any Error Codes.



## MAIN

This branch menu displays the real-time Elevation, Azimuth, Polarization Angles, their respective limits (Up, Down, Stow), the RF Receive Signal, Signal Strength, and the System Status.

Any out of range outputs will be displayed as \*\*\*.

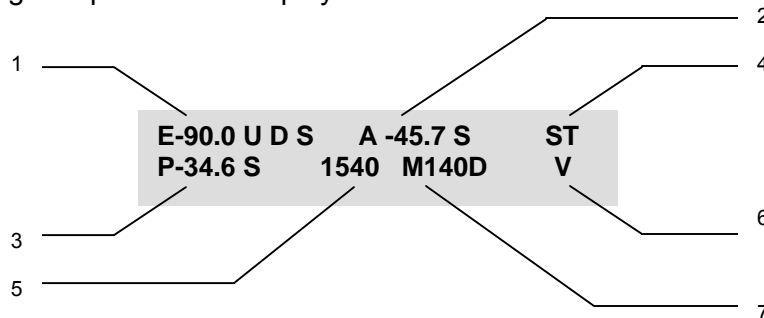


Fig. 47: "MAIN" (Main) Display

### 1 – Elevation Angle and Limit Indicators

Ka66/740/950/980 Mobile Platform Range: -90.0° to 65°+  
 1200/1800 Mobile Platform Range: -90.0° to 75°+

Elevation Angle will be -90.0 when the Elevation Stow Indicator is ON

- U** Elevation Up Limit has been reached.  
Typically set above 75° for 1200 Mobile Platforms, and above 65° for 740/950/980 Mobile Platforms.
- D** Elevation Down Limit has been reached.  
Typically set between 5° and 10° for 1200 Mobile Platforms, and between 0° and 10° for Ka66/740/950/980 Mobile Platforms.
- S** Elevation Stow Limit has been reached.

### 2 – Azimuth Angle and Stow Limit Indicator

Range: -200° to +200°

- S** Azimuth Stow Limit has been reached.  
Mobile Platform should be physically centered on the Azimuth axis.

### 3 – Polarization Angle and Stow Limit Indicator

740/950/980 Mobile Platform Range: -70° to 70°  
 1200/1800 Mobile Platform Range: -90° to 90°  
 Ka66 / 1800 Circular Band Signals will have the Polarization Angle disabled, and will display 'DDDDD'

- S** Polarization Stow Limit has been reached.  
Mobile Platform should be physically centered on the Polarization axis.



#### 4 – System Status

I	Idle
PS	Positioning
SR	Searching
PK	Peaking
EC	Elevation Calibration
AC	Azimuth Calibration
PC	Polarization Calibration
CC	Compass Calibration
SG	Stowing
ST	Stowed
DT	Dish Testing
MM	Manual Movement
LK	Locked on Satellite
AT	ACP Testing

#### 5 – Receive RF Signal

Receive RF Signal as measured from the LNB

#### 6 – GPS Status Flag

V	GPS Status is Valid/Normal
F	GPS Status has failed
O	GPS Coordinates have been overridden

#### 7 – Modem Status


Displays the receive strength of the satellite, and the Modem/Transmitter Status.

D	Transmitter Disabled
E	Transmitter Enabled
U	Unknown (Communication with Satellite Modem / VSAT has failed)



## MTR

Displays the real-time current drawn by each of the motors, and the speed settings for “FAST” and “SLOW” movement for each axis of motion.

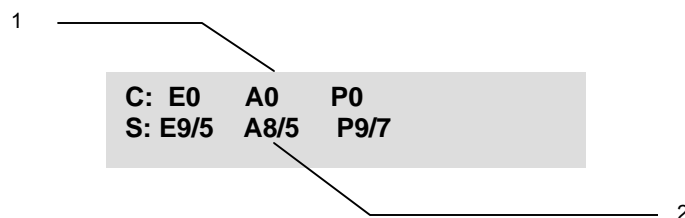

*Fig. 48: “MTR” (Motor) Display*

### 1 – Motor Current


<b>E</b>	Elevation Current Drawn
<b>A</b>	Azimuth Current Drawn
<b>P</b>	Polarization Current Drawn

### 2 – Speed Setting

<b>EX/Y</b>	Elevation Speed Setting for “FAST” (X) and “SLOW” (Y)
<b>AX/Y</b>	Azimuth Speed Setting for “FAST” (X) and “SLOW” (Y)
<b>PX/Y</b>	Polarization Speed Setting for “FAST” (X) and “SLOW” (Y)

## GPS

Displays GPS Status and current GPS Heading.

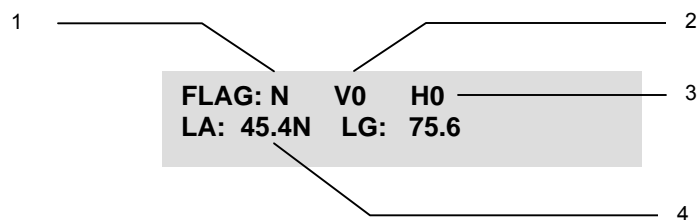

*Fig. 49: “GPS” (GPS) Display*

### 1 – FLAG

<b>N</b>	GPS Status is normal
<b>F</b>	GPS Status has failed
<b>O</b>	GPS Coordinates have been overridden



## 2 – Velocity

Displays the current velocity in real-time of the antenna based on any changes in the GPS Coordinates. Should the GPS Coordinates change, the iNetVu™ Mobile Software will calculate the velocity.

## 3 – Heading

Displays the direction in which the Antenna is moving laterally. The GPS Coordinates change in real-time, and based on the changing GPS Coordinates, the directional heading is calculated.

## 4 – GPS Coordinates

**LA** Current Latitude Coordinate  
**LG** Current Longitude Coordinate

## CP

Displays Compass Status, Compass Heading and the Elevation at which the Compass is read.



*Fig. 50: "CP" Compass Display*

## 1 – FLAG

**V** Valid  
**O** Override  
**FS** Full Search

## 2 – Compass Heading

Compass Heading after Compass has been read.

Approximate Headings:	North	354°
	East	87°
	South	176°
	West	265°


## 3 – Compass Elevation Reading

Elevation at which the iNetVu™ 9000 Controller will read the compass. At this Elevation, the Compass must be level in reference to the ground.



## SAT

Displays the Target Satellite and its calculated coordinates based on the GPS Heading, Compass Reading, and orbital slot of the desired Satellite.

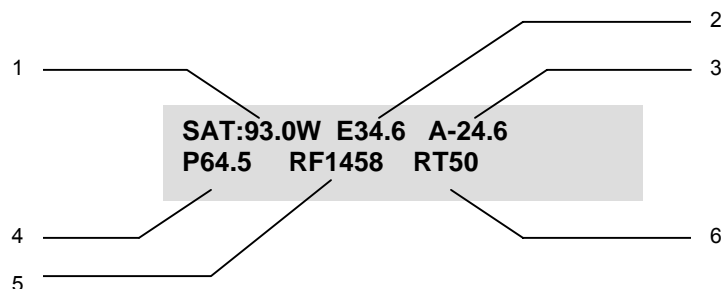


*Fig. 51: "SAT" (Satellite) Display*

- 1 – Target Satellite
- 2 – Target Elevation
- 3 – Target Azimuth (in reference to North)
- 4 – Target Polarization
- 5 – Receive RF Signal
- 6 – RF Threshold

## IP

Displays the IP Address and Subnet Mask of the iNetVu™ 9000 Controller

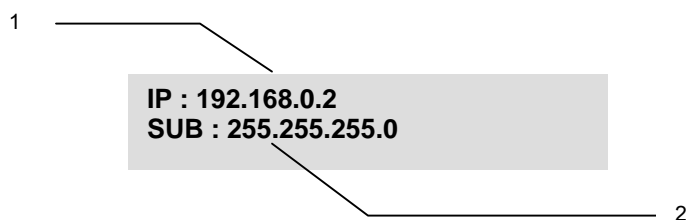

*Fig. 52: "IP" (IP) Display*

- 1 – iNetVu™ 9000 Controller's IP Address (Default: 192.168.0.2)
- 2 – iNetVu™ 9000 Controller's Subnet Mask (Default: 255.255.255.0)



## GW

Displays the Gateway Parameters of the iNetVu™ 9000 Controller

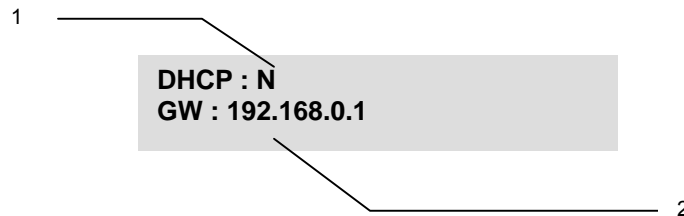


Fig. 53: "GW" (Gateway) Display

1 – DHCP Enabled

<b>Y</b>	Yes – DHCP Enabled
<b>N</b>	No – DHCP Not Enabled

2 – Gateway IP Address (Default: 192.168.0.1)

## MODM

Displays the Satellite Modem / VSAT IP Address and Firmware/Software version as read directly from the Satellite Modem / VSAT.

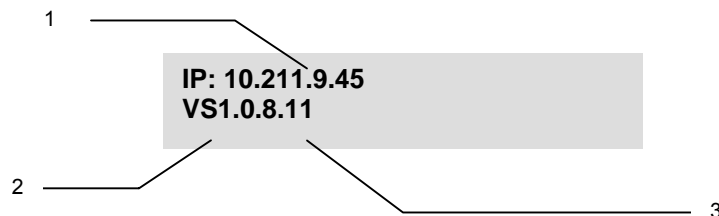


Fig. 54: "MODM" (Modem) Display

1 – Satellite Modem / VSAT IP Address as read from the Satellite Modem / VSAT

2 – Service / Manufacturer


<b>IR</b>	iReceiver (DVB Tuner Stand-alone)	<b>NT</b>	Newtec
<b>CT</b>	Comtech EF Data	<b>SF</b>	Surfbeam
<b>EM</b>	EMS Satellite Networks	<b>TY</b>	Tachyon Networks Inc.
<b>GL</b>	Gilat Satellite Networks	<b>TS</b>	TechniSat
<b>ID</b>	iDirect Technologies Inc.	<b>VS</b>	Viasat
<b>NR</b>	Nera	<b>DW</b>	Direcway (Hughes Network Systems)
<b>SB</b>	Starband Networks		

3 – Firmware / Software version of the Satellite Modem / VSAT as read from the Satellite Modem / VSAT



## INFO

Displays information regarding the iNetVu™ 9000 Controller's firmware and software versions installed, the Mobile Platform it is configured to, and also any Error Codes detected.

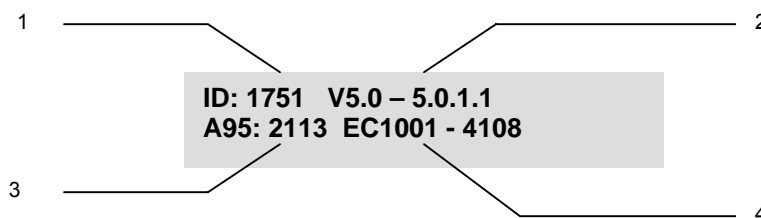

*Fig. 55: "INFO" (Information) Display*

- 1 – iNetVu™ 9000 Controller ID
- 2 – iNetVu™ Controller Firmware Version and IMS Software Version
- 3 – Mobile Platform Model Number and Serial Number

<b>F74</b>	MF740
<b>F95</b>	MF950
<b>F12</b>	MF1200
<b>E74</b>	ME740
<b>E95</b>	ME950
<b>E12</b>	ME1200
<b>A66</b>	A0660A
<b>A74</b>	A0740B
<b>A95</b>	A0950B
<b>A12</b>	A1200B
<b>A18</b>	A1800A

- 4 – Displays the last two (2) ECs (Error Codes), if any. Please refer to the iNetVu™ Mobile Software Error Code List Document for the complete listing of Ecs



## Operation



**E\_TX E\_TEST**

*Fig. 56: Operation Menu*

<b>E_TX</b>	Enables / Disables the transmitter when locked on the correct satellite.
<b>E_TEST</b>	Enables / Disables Test Mode (CW Mode) when locked on the correct satellite. Used for adjusting the unit for x-pol testing.

### **E\_TX**

Enables and disables the transmitter after locking onto the designated satellite.

### **E\_TEST**

Enables and disables Test Mode (CW or Carrier Wave Mode) when locked on the correct satellite. This function should be used for adjusting the unit during cross-pol testing.

While in Test Mode, the user may use the Manual Movement Buttons located on the iNetVu™ 9000's Front Panel.

It is recommended to keep the Speed Setting at LOW (Speed H/L LED is OFF) and to quickly press and release the Manual Movement Buttons in order to make fine adjustments. Please be aware that holding down the buttons too long may result in a loss in signal.



## Maintenance

The Maintenance menu branch is password protected. The default password is '1234'.



**RESET\_IP**

*Fig. 57: Maintenance Menu*

<b>RESET_IP</b>	Resets the iNetVu™ 9000 Controller's Network Configuration back to its default values.
-----------------	--

## RESET\_IP

Resets the iNetVu™ 9000 Controller's Network Configuration back to its default values.

IP Address: 192.168.0.2  
Subnet Mask: 255.255.255.0  
Gateway IP: 192.168.0.1



## GPS Module

- Requires iNetVu™ Controller Firmware 5.1
- Requires 3.3VDC GPS Antenna (Labeled as 3VDC)
- 5VDC GPS Antenna NOT COMPATIBLE
- GPS Antenna Cable length 15 ft and 25 ft compatible
- DO NOT connect GPS Antenna while iNetVu™ Controller is powered ON

## Serial Number

The iNetVu™ Controller Serial Number is located on the base of the controller. It is the last 4 digits of the Serial Number.

In the figure below, the Serial Number of this controller is 9000.

0550 – Manufactured in 2005, 50<sup>th</sup> week of the year.



Fig. 58: iNetVu™ 9000 Controller Serial Number Label



---

## Image Recovery

The iNetVu™ 9000 Controller is equipped with a 3<sup>rd</sup> party Image Recovery Application (Phoenix Always and Phoenix Recovery Pro 6) that allows the end user the ability to restore the O/S to a previous state.

Should the end user experience any type of O/S malfunction, contact the C-Com Satellite Systems Technical Support Team.



### **WARNING**

**At no time should the end user attempt to initiate an Image Recovery without the direction and/or supervision of a C-Com Satellite Systems Technical Support Engineer.**



## Appendix 1: Utilizing the iNetVu™ 9000 Controller During O/S Failure

Should your iNetVu™ 9000 Controller experience an O/S Failure, and you are unable to communicate with via the Web Interface AND the KVM (Keyboard, Video, and Monitor) Interface, you would still be able to utilize the iNetVu™ 9000 Controller to control the iNetVu™ Mobile Platform.

### Required Materials:

- iNetVu™ 9000 Controller
  - External PC
  - IMS 5.1.1 (and above) Installation CD
    - 6.1.1 is required for DVB Tuner Users
  - USB Cable (Type A Male to Type B Male)
1. Install IMS onto your PC and configure. Consult the iNetVu™ Mobile System User Manual for assistance.
  2. Ensure that you have configured IMS for USB Communication.
  3. Connect the GPS, Motor Control, Sensor Cable and Power Cable to the iNetVu™ 9000 Controller.
  4. Connect the USB Cable from your PC to the USB Port on the iNetVu™ 9000 Controller.
  5. Once IMS recognizes the iNetVu™ 9000 Controller, you will be able to use the iNetVu™ 9000 Controller like an iNetVu™ 5000 Series Controller.