ZTE MF90 Let's go

Getting started with your device.

ZTE CORPORATION

NO. 55, Hi-tech Road South, ShenZhen, P.R.China

Postcode: 518057

LEGAL INFORMATION

Copyright © 2013 ZTE CORPORATION.

All rights reserved.

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior LED Indicators

Version No : R1 0

Edition Time: 7.30.2013

Do not use the device in an enclosed environment or where heat dis-. microSD Card Slot sipation is poor. Prolonged work in such space may cause excessive heat and raise ambient temperature, which may lead to automatic shut down of the device for your safety. In the case of such event, cool the device in a well-ventilated place before turning on for normal use.

Getting to Know Your Device

. 0

 
(b)—

3. WPS Button

5. Micro USB Port

7. RESET Button

be different.



microSD logo **Micro** is a trademark of SD-3C, LLC.

Indicators

Status

Green blinking

Blue blinking

LED light off

 
Red blinking

Red solid

(IIIII)

Appearance

The following figure is only for your reference. The actual product may



- . Power Button
- 4. External Antenna Connector
- 6. (U)SIM Card Slot

Connection Scenario

Description

Error status. Not registered to the mobile

network. no (U)SIM card inserted or no

Connected to the 2G/3G network and

Connected to the 4G network and data is

i-Fi is off or your device is in sleep

The battery is empty. Please charge the

The battery is low. Please charge the

The battery is in the over-voltage

network service available.

data is being transferred.

being transferred.

charging status.

The battery is being charged.

The battery level is middle or high.

Your device is in sleep mode and not be-

ing charged, or the battery is not inserted.

WPS is active.

Registered to the 2G/3G network.

gistered to the 4G network.

 
Your device supports two methods to connect to the Internet and supports multi-clients for surfing on the Internet at the same time. The following figure is only for your reference.

4G Mode: Use your (U)SIM card to access the Internet.



Internet Wi-Fi Mode: Your device will connect to other WLAN device (hotspot device, wireless router, etc.) via Wi-Fi to access the Internet. The WLAN device has already connected to the Internet.

The subnets of your device and other WLAN device must be different.



Installing Your Device

. Slide the back cover and remove it



. Insert the (U)SIM card.

them.

IMPORTANT: Your device does not support Micro/Nano or any other nonstandard SIM cards. To avoid device damage, please do not use



Insert the microSD card if necessary



4. Insert the battery.



Close the back cover.



Connecting to Your Device

Via Wi-Fi

- Power on your device directly.
- . Use your normal Wi-Fi application on the client to search for the available wireless networks.



NOTE: Please set the client to obtain an IP address automatically referring to the chapter "Configuring your PC", and then the client will get an IP address like "192 168 0 101"

Select the SSID of your device, and then click Connect



NOTE: Please check the label on your device to get the default SSID.

4. Input the password, and then click Connect



NOTE: You may need to input the password for Wi-Fi connection Please check the label on your device to get the default.

5. Wait a moment, and then the client will connect to your device successfully.

Via USB Cable

. Connect to the device.



3. The OS detects and recognizes new hardware and finishes the

installation automatically. NOTE: If the system does not launch installation automatically, you can

run the installation program in path of My Computer > ZTEMODEM.

4. Wait a moment, and then the client will connect to your device suc-

Using the WPS(Optional)

Power on your device.

If your client device supports WPS, you don't have to input the password manually after WPS has been available. Please do the following:

- . Power on your device, and enable the Wi-Fi function on your de-
- Press and hold the WPS button on your device about three seconds to start Wi-Fi Protected Setup authentication process.
- Enable the WPS function on your client to respond this authentication process.
- . Follow the system prompts on your client to finish the connection. **NOTE**: For the detailed operations about the client, please refer to the

client's instruction.

Automatic.

Accessing the Internet

4G Mode

After the client connected to your device successfully, you can access the Internet in the Automatic or Manual mode. The default mode is

Mode	Operations	
Automatic	Your device will connect to the Internet automatically, and your clients can surf on the Internet directly.	
Manual	Log in the 4G Mobile Hotspot page. Select Settings > Network Settings > Dial-up Settings > WAN Connection Mode > Manual, and then click Apply. Select Home, and then click Connect or Disconnect.	

NOTE: If you want to modify the detailed parameters of your device, please log in the 4G Mobile Hotspot page by visiting http://192.168.0.1 or http://m.home. The default password is admin.

Internet Wi-Fi Mode

- Log in the 4G Mobile Hotspot page.
- Select Settings > Internet Wi-Fi.
- . Enable the Internet Wi-Fi Switch, and then click Apply

				600	N
	Internet Wi-Fi			My Ne	Open
Internet Wi-Fi Switch		Plac	Explore Search for Computers		
	Current Status	No connection	Apply		Map Network Drive Disconnect Network Drive
					Create Shortcut

- Connect to the WLAN device.
- There are two methods for your reference.
- Select the WLAN device which will be listed in the Wi-Fi Hotspot area, and then click Connect.

 Click Add, input the WLAN device information in the Add Wi Fi Hotspot area, and then click Apply.



can access the Internet.

Configuring Your PC

Delete

Rename

Follow the following steps and figures for Windows XP to configure the Internet Protocol for your Wi-Fi connection.

. Right-click My Network Places, and then select Properties.



Right-click Wireless Network Connection, and then select Prop-



Select Internet Protocol(TCP/IP), and then click Properties.

Disable

Repair


Bridge Connections

his connection uses the following items


☑
☐ QoS Packet Scheduler

Create Shorto

Rename

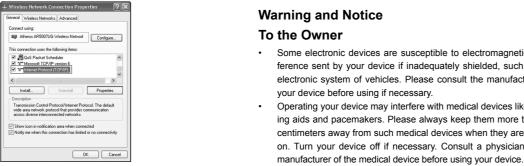

Select Obtain an IP address automatically and Obtain DNS Be aware of the usage limitation when using your device at places server address automatically, and then click OK to finish the such as oil warehouses or chemical factories, where there are explosive gases or explosive products being processed. Turn off your

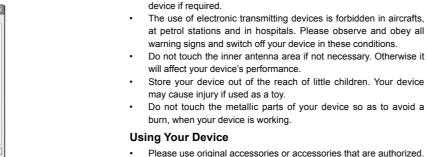

Using any unauthorized accessories may affect your device's per-

OK Cancel

General Alternate Configuration

Obtain an IP address automatically

Use the following IP address:

Obtain DNS server address automatically

Use the following DNS server addresses:

You can get IP settings assigned automatically if your network support this capability. Otherwise, you need to ask your network administrator to the appropriate IP settings.

- · Some electronic devices are susceptible to electromagnetic interlishments that can emit electromagnetic waves. Otherwise it may ference sent by your device if inadequately shielded, such as the influence signal reception. electronic system of vehicles. Please consult the manufacturer of Your device is not waterproof. Please keep it dry and store in a your device before using if necessary. shady and cool place.
- Operating your device may interfere with medical devices like hear-Do not use your device immediately after a sudden temperature ing aids and pacemakers. Please always keep them more than 20 change. In such case, it will produce dew inside and outside your centimeters away from such medical devices when they are turned device, so don't use it until it becomes dry. on. Turn your device off if necessary. Consult a physician or the Handle your device carefully. Do not drop, bend or strike it. Other
 - wise your device will be damaged.

- No dismantling by non-professionals and only qualified technicians can undertake repair work. Operating temperature range of 0°C ~ +35°C and humidity range
- of 5% ~ 95% are recommended.

Using Battery

- Do not short-circuit the battery, as this can cause excessive heat
 - Do not store battery in hot areas or dispose of it in a fire to avoid
 - Do not disassemble or modify the battery.

WARNING:

- When not using the battery for a long period, remove it from your device and store it in a cool dry place.
 - Never use any charger or battery damaged or worn out.
 - Return the wear-out battery to the provider or put it in the appointed recycle place. Do not put it in familial rubbish

If the battery is broken, keep away from it. If it taints your skin, wash purpose, unless otherwise required under the mandatory proviyour skin with abundant fresh water and ask doctor help if necessary. sions of the law.

Limited Warranty

- This warranty does not apply to defects or errors in the Product caused by:
- Reasonable abrasion.
 - ii. End User's failure to follow ZTE's installation, operation or maintenance instructions or procedures.
 - iii. End User's mishandling, misuse, negligence, or improper ir stallation, disassembly, storage, servicing or operation of the

nected to the device signal.

v. Power failures, surges, fire, flood, accidents, actions of third	Problem	Suggested Solution
parties or other events outside ZTE's reasonable control. vi. Usage of third-party products, or usage in conjunction with third-party products provided that such defects are due to the combined usage. vii. Any other cause beyond the range of normal usage intended for the Product.	Can not establish the USB connec- tion between your device and PC.	You need to install the software. Run the installation program in path of My Computer > ZTEMODEM. If the driver of your device is abnormal, please reinstall the software. You need to uninstall the software first.
End User shall have no right to reject or return the Product, or receive a refund for the Product from ZTE under the above-mentioned situations. This warranty is End User's sole remedy and ZTE's sole liability for defective or nonconforming items, and is in lieu of all other warranties, expressed, implied or statutory, including but not limited to the implied warranties of merchantability and fitness for a particular purpose, unless otherwise required under the mandatory provisions of the law.	Can not establish the Wi-Fi connec- tion between your device and client.	Make sure the Wi-Fi function is active. Refresh network list and select the correct SSID. Check the IP address to make sure your client can obtain an IP address automatically in the Internet protocol (TCP/IP) properties. Type the correct network key (Wi-Fi password) when you connect to the device.
Limitation of Liability		Make sure your (U)SIM card is available.

can not access the • Check WAN Connection mode setting.

firm your APN settings.

Problem

iv. Modifications or repairs not made by ZTE or a ZTE-certified

ZTE shall not be liable for any loss of profits or indirect, special, inci-

dental or consequential damages resulting from or arising out of or in

connection with using of this product, whether or not ZTE had been ad-

vised, knew or should have known of the possibility of such damages,

including, but not limited to lost profits, interruption of business, cost of

capital, cost of substitute facilities or product, or any downtime cost

Limitation of Liability

Can not establish the USB connec- tion between your device and PC.	 You need to install the software. Run the installation program in path of My Computer > ZTEMODEM. If the driver of your device is abnormal, please reinstall the software. You need to uninstall the software first. 	
Can not establish the Wi-Fi connec- tion between your device and client.	 Make sure the Wi-Fi function is active. Refresh network list and select the correct SSID. Check the IP address to make sure your client can obtain an IP address automatically in the Internet protocol (TCP/IP) properties. Type the correct network key (Wi-Fi password) when you connect to the device. 	
The client con-	Make sure your (U)SIM card is available.Change the location to find a place with good	

Suggested Solution

Contact with your service provider and con-

For more assistance, please:

About the password

the Internet

Can not visit the

4G Mobile Hotspot

- Send E-mail to mobile@zte.com.cn
 - Visit www.ztedevice.com
 - Call Service Hotline: +86–755–26779999

When I use Internet | • Make sure the other WLAN device has al-

ready connected to the Internet.

Do not use any proxy server.

check the label on the device

spot page is admin.

Make sure that the subnet of your device

Enter the correct address. The default ad-

Only use one network adapter in your PC.

For the Wi-Fi connection password, please

The default password of the 4G Mobile Hot

If you changed the password and forgot the

new password, you need to restore the de-

vice to the factory default settings.

dress is http://192.168.0.1 or http://m.home.

and the other WLAN device is different

C € 0700 ①

formance, and violate related national regulations about telecom

Avoid using your device near or inside metallic structures or estab-