



i-mate™

Intelligence built in.
Quick Start Guide



6150



8150



8502



9502



Step 1 Let us know who you are

Thank you for purchasing the Ultimate hand set from i-mate. You can automatically configure your device and automate your device settings through the i-mate website. This allows you full-control over your Ultimate device.

- Write down your ROM lock code located on your device's box and place in secure location.
- Go to www.imate.com and click "Sign In" from your computer.
- "Not a member? Sign up here!"
- Fill in the necessary information then select: Create Account.

If you are an Existing Member, Enterprise, or registered for Enhanced Support, please select the fields that apply to you or visit www.imate.com for more information.

Step 2 Install your SIM and Battery



6150 and 8150 SIM card and battery installation.

- Open the battery cover latch.
- Remove the back plate.
- Insert the SIM Card with the gold contacts facing down.
- Slide the battery into position and replace the back plate.



8502 and 9502 SIM card and battery installation.

- Open the battery cover latch.
- Remove the back plate.
- Slide the metal SIM cover to the left and lift. Insert the SIM Card with the gold contacts face down. Place the SIM cover down, slide it to the right and lock into position.
- Slide the battery into position and replace the back plate.

Step 3 Time to meet your Ultimate / Grab your stylus!

