

SPACEMAN H@LO WATCH



MT840

User Manual

Overview

Package contents

- Watch,
- Mini-Stylus (foldable in the watchstrap),
- Earphones,
- USB cable,
- User manual.

Battery/SIM card/T-flash card installation

Remove battery cover, install SIM card and microSD card as shown below:



microSD slot SIM card Rechargeable battery

Charging

Use USB cable and plug it to PC computer for few hours.

Power On/Off

Press and hold "Power" button for 3 seconds. To power off press and hold for 1 second.

Using the device

Use mini-Stylus on touch screen to operate, enter data. You can press "Power" button to resume home screen, press "Menu" button to enter menu options.



 
Calling

When in home screen click "SEND" and enter phone number or click "Name" and select from phonebook. To reject incoming call press "Power" button, to accept press "Menu" button. Press "Power" button to end call.



Taking pictures


Go to "menu/multimedia/camera" to open camera module:

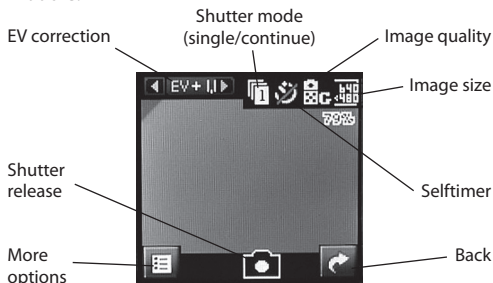

Note! Before taking pictures it is recommended to install microSD card and select "Memory card" as storage.

Recording video

 Go to "menu/multimedia/video recorder" to open video recorder module:

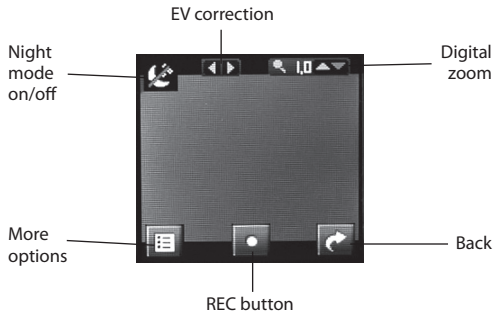


Note! Before recording video it is recommended to install microSD card and select "Memory card" as storage.

FM radio

Note! Plug earphones before opening FM radio module.



 When in home screen press "menu" button to show menu icons:

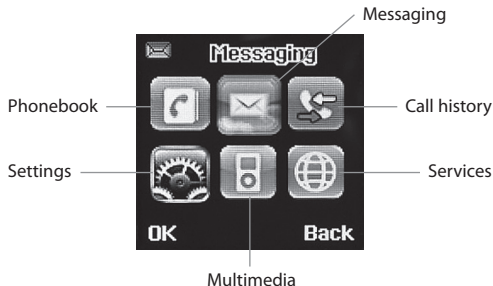

Phonebook

- Search contact
- Add new contact
 - To SIM
 - To phone
- Copy contacts
 - SIM to phone
 - Phone to SIM
- Delete all contacts
 - From SIM
 - From phone

■ Caller groups

- Friends
- Family
- VIP
- Business
- Others

■ Extra numbers

- Owner number
- Service dialing
- SOS number

■ Phonebook settings

- Memory status
- Preferred storage

■ Caller picture

■ Caller ringtone



Messaging

- Write message
- Inbox
- Drafts
- Outbox
- MMS
 - Write message
 - Inbox
 - Drafts
 - Outbox
 - MMS Settings

- Broadcast message
 - Receive mode
 - Read message
 - Languages
 - Channel setting
- Templates
 - Call me now.
 - How about lunch?
 - Be right back.
 - I am busy now.
 - Sorry!
 - Thank you
 - How was the day?
 - Long time no see.
 - Lots of luv!
 - How are you?
- SMS settings
 - Profile settings
 - Voicemail server
 - Common setting
 - Memory status
 - Preferred storage



Call history

- Missed calls
- Dialed calls
- Received calls

- Delete call logs
 - Missed calls
 - Dialed calls
 - Received calls
 - Delete all
- Call timers
- Call cost
- Text message counter
- GPRS counter
- Auto quick end



Settings

- Pen calibration
- User profiles
 - General
 - Meeting
 - Outdoor
 - Indoor
 - Headset
 - Bluetooth
- Phone settings
 - Time and date
 - Set time zone
 - Set time/date
 - Set format
 - Update with time zone
 - Schedule power off

- Language
- Preferred input method
- Encoding
 - Big5
 - GB2312
- Display
 - Wallpaper
 - Screen saver
 - Power on display
 - Power off display
 - Show date and time
- Greeting text
 - Status
 - Greeting text
- Flight mode
 - Normal mode
 - Flight mode
 - Query when power on
- Handwriting
 - Pen speed
 - Pen color
- LCD backlight
- Call settings
 - Caller ID
 - Call waiting
 - Call divert
 - Call barring
 - Line switching
 - Call time reminder
 - Call time display
 - Auto redial
 - Closed user groups
 - Blacklist
- Network settings
 - Network selection
 - New search
 - Select network
 - Select mode
 - Preferences
- Security settings
 - Security settings
 - Phone lock
 - Auto keypad lock
 - Change password
- Restore factory
 - Input password



Multimedia

- Organizer
 - Calendar
 - Tasks
 - Alarm
 - E-book reader
- File manager

- Options:
 - Open
 - Format

■ Camera

- Options:
 - Photos
 - Camera settings
 - Shutter sound
 - EV
 - Contrast
 - Anti-flicker
 - Delay timer
 - Continue shot
- Image settings
 - Image size
 - Image quality
- White balance
 - Auto
 - Daylight
 - Tungsten
 - Fluorescent
 - Cloudy
 - Incandescent
- Scene mode
 - Auto
 - Night
- Effect setting

- Normal
- Grayscale
- Sepia
- Sepia green
- Sepia blue
- Color invert

- Storage
 - Phone
 - Memory card
 - Restore defaults

■ Image viewer

- Options:
 - View
 - Browse style
 - Send
 - Rename
 - Delete
 - Sort by
 - Delete all files
 - Storage

■ Video recorder

- Options:
 - To player
 - Camcorder settings
 - EV
 - Contrast
 - Anti-flicker

- Video settings
 - Video quality
 - Size limit reached
 - Time limit reached
 - Record audio
 - White balance
 - Auto
 - Daylight
 - Tungsten
 - Fluorescent
 - Cloudy
 - Incandescent
 - Effect setting
 - Normal
 - Grayscale
 - Sepia
 - Sepia green
 - Sepia blue
 - Color invert
 - Storage
 - Phone
 - Memory card
 - Restore defaults
- Video player
 - Options:
 - Play
 - Send
 - Rename
 - Delete
 - Delete all files
 - Sort by
 - Storage
 - Audio player
 - Sound recorder
 - Options:
 - New record
 - List
 - Options:
 - Play
 - Rename
 - Delete
 - Delete all files
 - Use as
 - Send
 - Settings
 - Storage
 - File format
 - FM radio (when earphones plugged in)



Services

- Operator menu (if available)
- Bluetooth
 - Power
 - Search audio devices

- Visibility
- My device
- My name
- Advanced
 - Audio path
 - Storage
 - Sharing permission
 - My address
- WAP
 - Homepage
 - Bookmarks
 - Recent pages
 - Input address
 - Service inbox
 - Settings
- Data account

*Functions and technical specification of device are subject to change without prior notice. For technical support please visit **www.media-tech.eu***