



The reader is too far from a bar code (more than 12" from the bar code reader).



The reader is too close to a bar code (less than 1" from the bar code reader).



The optimal distance to read most bar codes is 3-4" away from the bar code reader.

CR3500's unique targeting function uses two converging targeting LEDs to guide the user to optimal reading range.

Quick Tips

1. Press either trigger button to turn the reader on, or to scan a bar code.
2. Press the Soft Key, under 'Options' to: manually enter data, view stored data, connect to a Bluetooth device, send all stored data to a PC, and change reader settings.
3. Use the arrow buttons to navigate through lists, data and more.
4. Use the Enter button to select an item.



Visit www.codecorp.com to download the CR3500 User Manual for a complete reference guide of CR3500 functions.

Code Reader™ 3500 (CR3500) - Wireless



Included with your Wireless CR3500

Depending on the reader configuration ordered, you will have received one of the following with your CR3500:



Battery Cartridge



Battery Handle

Installing a Battery Cartridge

1. To install a battery, place the plastic tab on the bottom of the battery cartridge into the slot on the reader. Slide the locking mechanism up, and press the battery into place. Slide the locking mechanism down to secure the battery.
2. To detach a battery, slide the locking mechanism on the reader up and pull the battery cartridge up and away from the slot on the reader.



Note: Battery ships with approximately 50% battery life. Fully charge battery before use. Approximate charge time is 4 hours when battery depleted.

Installing a Battery Handle

1. To attach a Battery Handle, insert the tab on the back of the Battery Handle into the reader's recessed slot.
2. Press the reader down, towards the handle to snap into place. Optionally, the reader can be further secured to the handle with two threaded screws on the underside of the reader and handle (screws are included with Battery Handles).
3. To detach a Battery Handle, slide the locking mechanism on the reader up and pull the battery handle up and away from the slot on the reader.



Powering On a CR3500

To power on a CR3500, press and hold either trigger button for approximately one second.



CR3500 Wireless Setup

To establish a Bluetooth connection via Code's CodeXML® M3 Modem, please refer to the CodeXML® M3 Modem QuickStart Guide, available at www.codecorp.com.

Establishing a Bluetooth Connection with a non-Code Bluetooth Adapter:

1. Visit <http://www.codecorp.com/bdaddr.php> and follow the instructions to create and print a *QuickConnect Code* that is specific to your adapter.
2. Plug the adapter into the USB port on your computer, and follow the installation instructions included with your adapter. Make note of the COM Port assigned to the adapter (e.g. COM 11).

Note: Detailed instructions, including screen shots, on connecting a CR3500 to non-Code Bluetooth devices can be found in the CR3500 User Manual available at www.codecorp.com.

3. Scan the newly created QuickConnect code, and then scan the Save Settings code (M188_02).



4. Next, a Serial Application must be opened to transmit data from the CR3500 to the PC. Visit www.codecorp.com/downloads.php and download/install CodeXML® Router, CortexTools™ or open a HyperTerminal. Once installed, select the COM Port of your reader (see step 2) to complete the wireless setup.

CR3500 Default Settings

The CR3500, out of the box, will read the following bar codes:

Codabar	Code 39 Trioptic	Int 2 of 5
Codablock F	Code 93	PDF417
Code 11	Code 128	Telepen
Code 39	Code 128 Short Margin	UPC
Code 39 Short Margin	Data Matrix	UPC Short Margin
		UPC-E Expansion

To configure a CR3500 to read bar codes not listed, please download the CR3500 User Manual from www.codecorp.com and scan the appropriate 'Enable' bar code reading symbology configuration code.

Suffix Enter Configuration

The default setting on the CR3500 has Suffix Enter disabled. To enable the Suffix Enter for USB and Carriage Return/Line Feed for RS232 scan the configuration code, followed by the Save Settings (M188_02) bar code above:



M161_04

Enable Suffix Enter - **USB**



M170_04

Enable Carriage Return/Line Feed - **RS232**

For more configuration options, including disabling the Suffix Enter configuration, download the CR3500 User Manual from www.codecorp.com.