



Model NO.: Scout X4
 Latest version:1009

Date	Update history	download
2014-10-10	BT-2401A program document R1009 version release BT-2401B program document SI009 version release	BT-2401A_R1009 BT-2401B_S1009

[latest version update details](#)

Note:

- 1: It's necessary to use the UP02 and UP02 adaptor for this upgrade steps.
- 2, it is better to improve the communication link performance with this upgrading, also becomes more stable
- 3, it is better to use BT2401A and BT2401B at the same time

please insert the UP02 to the USB port once the UP02 software installed in computer, and open the upgrading interface, click "connect" to connect the communication port

BT-2401B upgrading

Please refer to bellow picture to connect the UP02 adaptor plug to the BT2401B UART port




keep the UART switch to the position "on"



UART Download SW
拨到ON位置

Turn on power, this interface will show model number and version as below

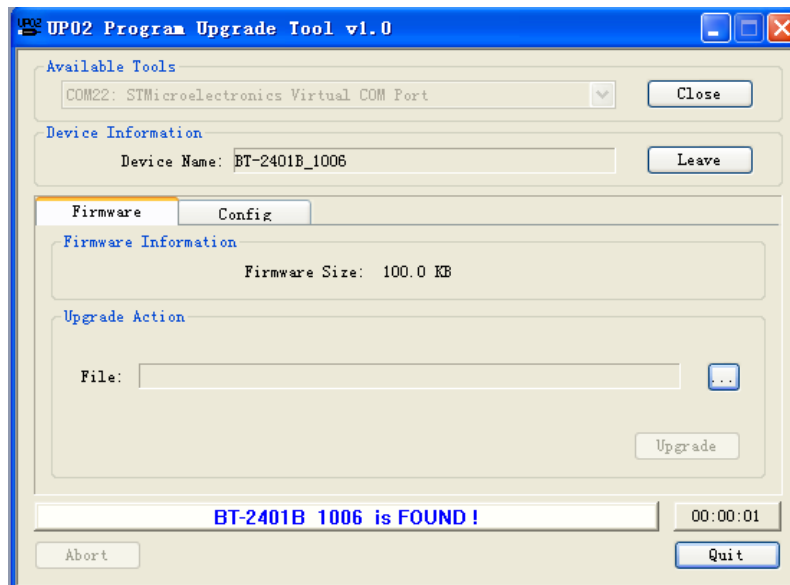

Follow the user manual v1.0 to upgrade, chose firmware BT-2401B_****.bin .

Click Upgrade,




Leava will light up after upgrade finished, Click Leave or Quit to exit.

BT2401A upgrade


Connect UP02 adapter plug to BT2401B's UART socket as below picture.



Turn on the USB Download SW、UART Download SW switch.

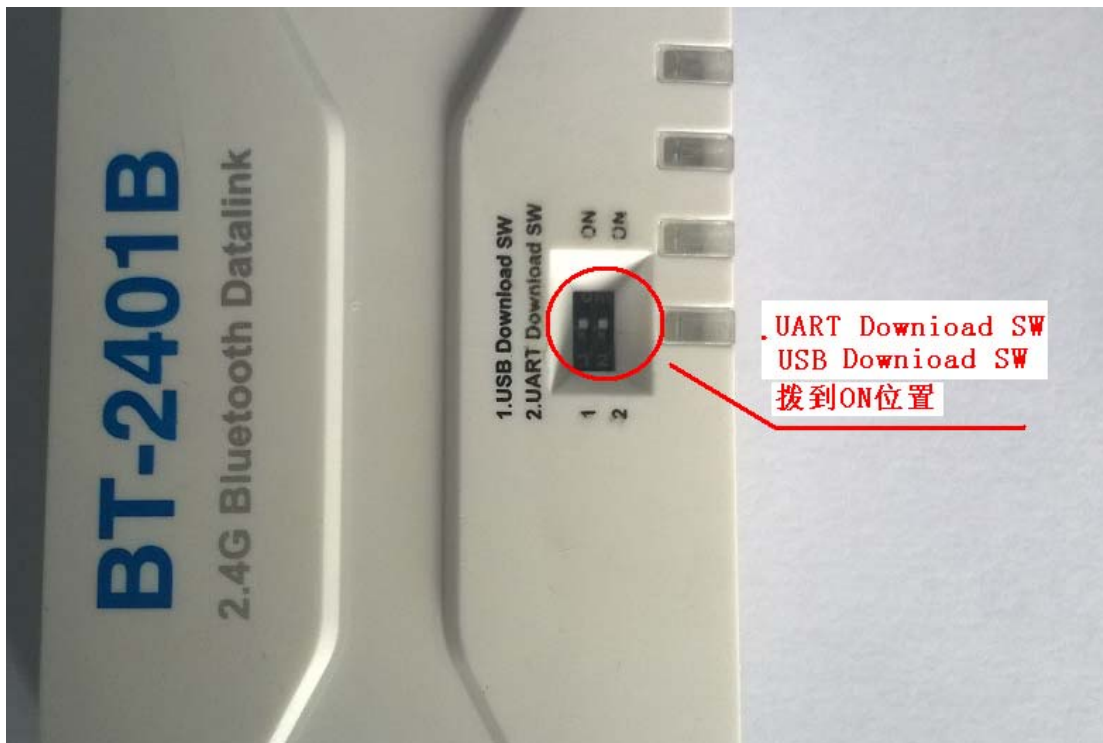


Turn on the BT-2401-B power, then contact with BT-2401 power, this interface will show model number and version as below

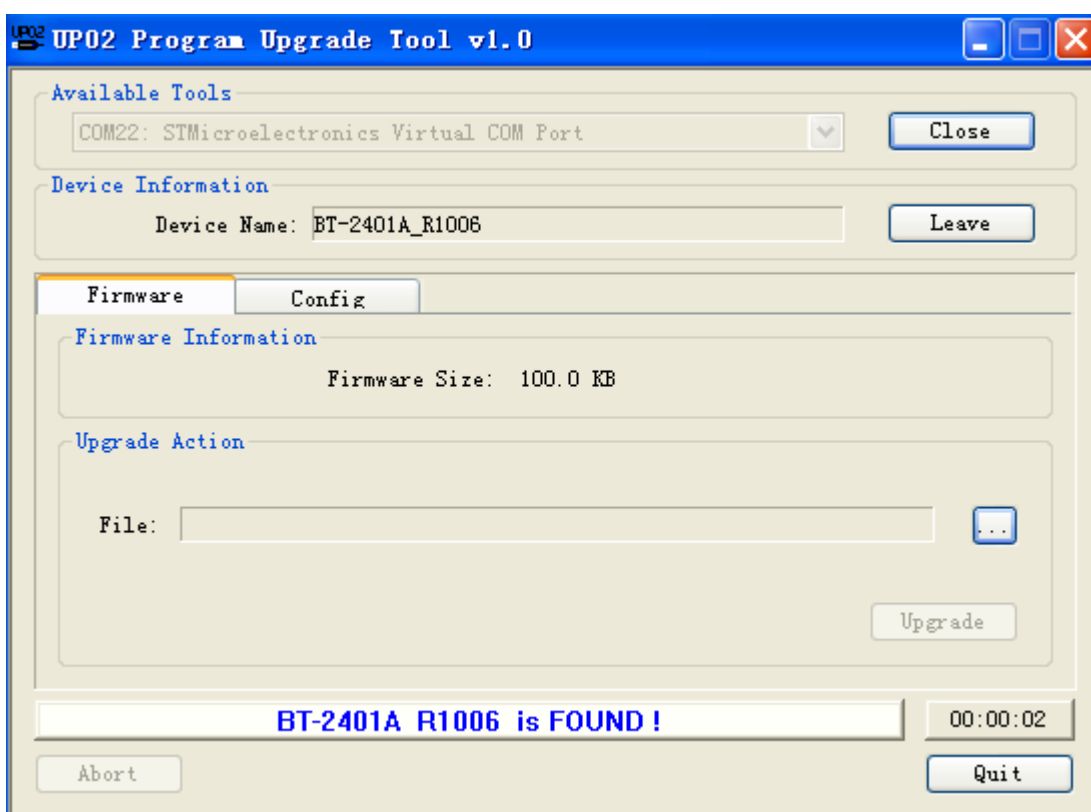

Please refer to the User Manual v1.0.pdf and choose the document BT-2401A_****.bin to upgrade.

Click Upgrade to upgrade

1 调入升级文件

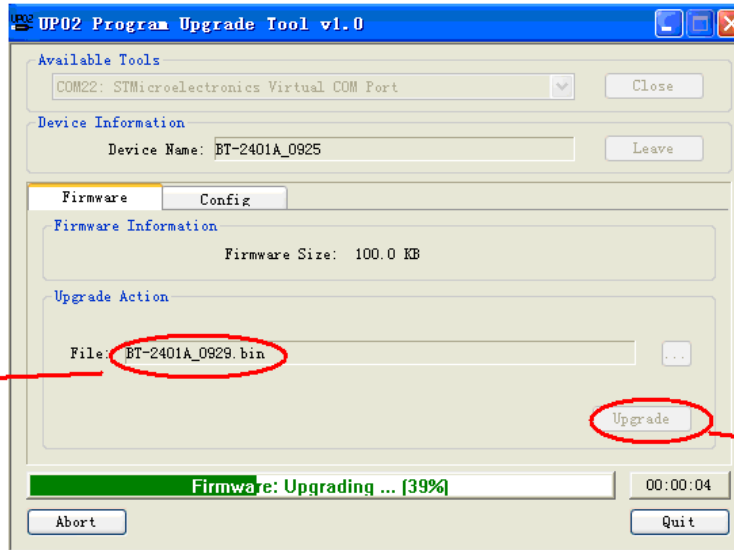

2点Upgrade升级

When upgrade is finished, the Leava will lighten. Click Leava or Quit to exit.

For your reference: enclosed with the user manual of the UP02.



UP02适配器使用说明

UP02 adaptor user manual

本产品用于三种不同插座的接收器升级转换。

1. 四芯：黑蓝黄红四线升级转换插头，用于间距1.25mm四芯直座的接收器升级。
2. 三芯：黑红蓝线和黑红黄线升级转换插头，用于间距1.25mm三芯直座的接收器升级。
3. 单线：黄色、蓝色和黑色单线升级转换插头，用于标准插座的接收器升级。

This adaptor used for connecting with UP02 and receivers with three different jacks to upgrade.

1. 4 cores jack: Plug the jack with black, blue, yellow and red four different colors' wire to the receiver's 4 cores jack which is 1.25 mm space between the 4 cores.
2. 3 cores jack: Plug the jack with black, blue and red three different colors' wire to the receiver's 3 cores jack which is 1.25 mm space between the 3 cores.
3. Single wire: Plug the jack with yellow, blue and black single wire to the standard receivers for upgrade.

示意图：
see the illustration:

