



SLINGSHOT™ WIRELESS STEREO SPEAKER

Equipped with Bluetooth® Wireless Technology



SYSTEM REQUIREMENTS

Transmitting device with Bluetooth® wireless technology (phones, MP3 players, etc.)

BEFORE USE

Please read all instructions carefully before using the speaker.

CHARGING



Be sure speaker is fully charged before initial use.

The SPEAKER has a built-in rechargeable DC3.7V 1000mA Lithium battery that will last for up to 53 hours in standby mode when fully charged.

1. Plug the micro USB cable into the back of the speaker.
2. Plug the other end of the cable into a USB port.
3. It will take approximately ***__ hours to charge the SLINGSHOT fully.

PARTS

- | | |
|---------------------|---------------------|
| 1. SPEAKER | 6. POWER/PLAY/PAUSE |
| 2. TRACK REWIND | 7. LED INDICATOR |
| 3. TRACK FORWARD | 8. BUILT-IN MIC |
| 4. VOLUME +/- | 9. RESET |
| 5. HANDS-FREE PHONE | 10. USB PORT |

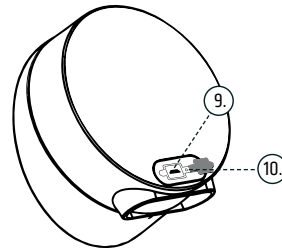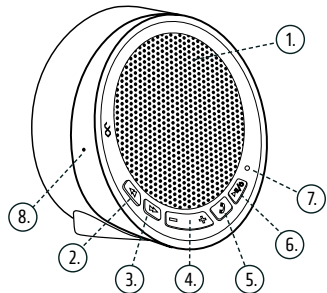

GETTING STARTED

PAIRING WITH BLUETOOTH® DEVICES

Refer to your BLUETOOTH device's user's manual for further information.

1. Place the SLINGSHOT SPEAKER and device where they are no more than 1 meter apart.
2. Activate your device's Bluetooth function. Set your device to search for Bluetooth enabled devices.
3. Press and hold POWER/PLAY/PAUSE button for 3 seconds. When you hear 4 tones, release the button.
4. While searching for the device, the SLINGSHOT's LED indicator will light steadily.
5. If you release too soon, power SLINGSHOT off and start over.
6. Wait until "Slingshot" appears in the list on your Bluetooth device
7. Select "Slingshot".
8. When Bluetooth connection is made, there will be a beep sound and the LED will blink slowly.

SPLASH-PROOF

The Slingshot Speaker is water resistant, with an IPX4 rating and will resist splashing water from all angles.

ENERGY SAVING MODE

If the BLUETOOTH communication link is disconnected for 5 minutes, the unit will power off automatically.

CONTROLS

POWER/PLAY/PAUSE BUTTON

Press and hold POWER/PLAY/PAUSE BUTTON to turn unit on, play music, pause music.

TRACK BUTTONS

Press <</>> buttons to select track.

VOLUME BUTTONS

Press +/- buttons to adjust volume. When you reach maximum volume, a beep will sound.

HANDS-FREE PHONE BUTTON

Music will automatically pause when you receive an incoming call. Press HANDS-FREE PHONE BUTTON to answer an incoming call. Press HANDS-FREE PHONE BUTTON to hang up. When call is finished, speaker automatically reverts back to music.

Note: Press the HANDS-FREE PHONE BUTTON twice to redial the last outgoing number.


RESETTING THE UNIT

If the unit is not responding to any commands, it may need to be reset. Use a straightened paper clip or toothpick to press the RESET button located at the rear of the unit.

Please Note: The RESET operation clears the system memory. All of your previous settings will be erased. Do not use a sharp, pointed object to press the RESET button.

CONVERTIBLE SPEAKER SYSTEM

The Slingshot speaker is part of a convertible speaker system. Slip the Slingshot speaker out of the Shower Sling and into another BlueFlame sling. Try all of the Blueflame slings (sold separately).

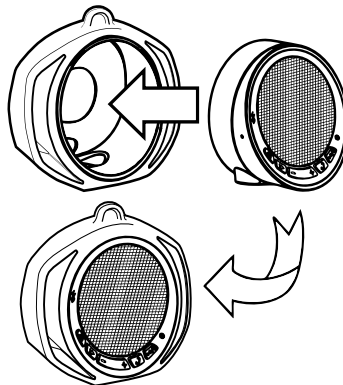

IMPORTANT SAFETY INSTRUCTIONS

Read all safety instructions before using the SLINGSHOT

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazard. Please read all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference.

1. Ventilation

The unit should be situated so that its location does not interfere with its proper ventilation. Do not place on a bed, sofa, rug or similar surface that may block the vents (see parts diagram). Do not cover the ventilation openings with items like newspapers, table cloths, curtains, etc. Do not place in a built-in installation, such as a bookcase or cabinet, which may impede the flow of air through the ventilation openings, keep a minimum distance 20 cm around the apparatus for sufficient ventilation.

2. Heat & Flame

The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat. No naked flame sources, such as lighted candles, should be placed on the apparatus.

3. Care and Maintenance

- Do not subject unit to excessive force, shock, dust or extreme temperature.
- Do not tamper with internal components of unit.
- Surface clean only with a dry or damp cloth only.
- Do not use solvents or detergents.
- Avoid leaving unit in dusty places.
- Keep unit away from heating appliances and sources of electrical noise, such as fluorescent lamps or motors.

4. Attachments

Do not use attachments not recommended by the product manufacturer.

5. Damage Requiring Service

This unit should be serviced by qualified service personnel when: A. The unit has been dropped or the enclosure damaged. B. The unit exhibits a marked change in performance or does not operate normally.

6. Periods of Non-Use

If the unit is to be left unused for an extended period of time, such as a month or longer, take out the batteries from the unit to prevent damage or corrosion.

7. Servicing

The user should not attempt to service the unit beyond those methods described in the user's operating instructions. Service methods not covered in the operating instructions should be referred to qualified service personnel.

8. Do not submerge unit in liquid.

Do not use abrasive cleaning solvents to clean the receiver. Do not expose the receiver to extremely high or low temperatures. Don't dispose of the receiver in a fire, as it will result in an explosion. Don't attempt to disassemble the receiver as it may get damaged.

If you don't plan to use the receiver for an extended period of time, store it in a dry, dust free place.

(a) CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in

accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNINGS

Do not change the parts without professional instructions. Any change may cause malfunctions. Keep the wrapping bag out of the reach of children to avoid a choking hazard.

Always move the product carefully to avoid damage to outer covering and inner components. The product should not come in contact with acid or alkali. It should not be operated where there is corrosive or excessively moist air around to avoid corrosion of the electrical contacts

CUSTOMER ASSISTANCE

Phone: 866.710.8424

Email: info@blueflamegear.com

Colors and specifications depicted on this guide may vary slightly from your product. Ages 14+. This product is not a toy.

Blueflame Technologies LLC, 745 Boylston Street, Boston, MA 02116 USA. Made In China. Blueflame and the Blueflame logo are trademarks of Blueflame Technologies LLC. The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Blueflame Technologies LLC is under license. Other trademarks and trade names are those of their respective owners. © 2013 Blueflame Technologies LLC. All Rights Reserved.

Limited Warranty: blueflamegear.com/warranty BF4081.MEF.01