 


4. Tap **Next**. The device will automatically retrieve the email settings.
  - To add another email account, tap **Menu > Add Account**.
5. Enter **Account Name** and **your name**.
6. Tap **Done**.

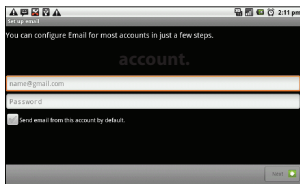

### Opening Email

From the Application Drawer, tap **Email** to view your emails.

 
### Select an account

1. Tap **Application Drawer > Email**.
2. The account picker screen lists the available email accounts.
3. Tap the account you want to access.

### Configure email settings

Configure message settings using the **Account settings** submenus.


1. On Your accounts screen, tap to select an email account.
2. Tap **Menu > Account settings** to open the email setting submenus.

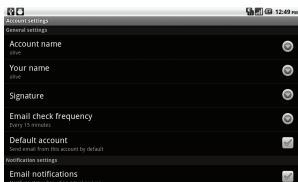

## 4.5 Using Email

### Composing and Sending an Email

 1. Tap **Application Drawer > Email**, then tap an email account.
2. Tap **Menu > Compose**.
3. In the **To** field, enter the recipient's email address.
4. To enter a subject, tap **Subject**.
5. Compose your email.
6. Tap **Send**.

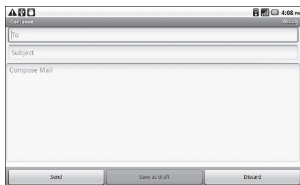


### Send an Email from Contacts

You can send an email to a contact with an email address stored in Contacts.

1. Tap **Application Drawer > Contacts**.
2. Tap a name to open contact.
3. Tap **Email**.
4. Enter a subject and compose your email.
5. Tap **Send**.

## Add attachments to an email message

 1. Before sending your message, tap **Menu > Add attachment**.
2. Select a folder and select the file you want to attach.

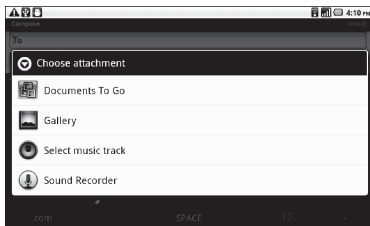

## Receiving Emails

Emails are automatically received in Inbox folder when the device connects to a network.

## Manually receive e-mails

1. Tap **Application Drawer > Email**, then tap an email account.
2. Tap **Menu > Refresh**.

## Reading and Replying to Emails

The Inbox displays the email headers. Download the email to view the complete content.

**NOTE:** Only supported file types can be opened on this device.

 
## Reply or forward an e-mail

1. Open the message.
2. Do any of the following:
  - Tap **Reply** or **Reply all** to reply the email.
  - Tap **Menu > Forward**. Then enter the recipient in the **To** field.
3. Compose your message.
4. Tap **Send**.

## Managing Email Folders

### Delete an email

1. Tap **Application Drawer > Email**, then tap an email account.
2. Tap and hold the message in the inbox
3. Tap **Delete**

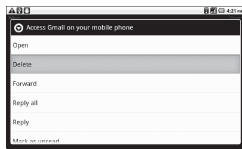


## To move between messaging accounts

If you are viewing the messaging list screen of one account and you want to view the list of another account, tap **Menu** > **Accounts**, then tap the account you want to view.

## Customizing Email Settings

 You can configure the general settings of your email account such as account name, email checking frequency, default account, notifications, and server settings etc

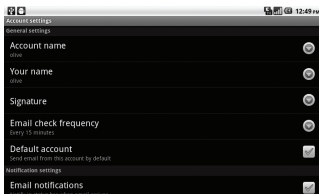

### Set up your account name

1. Tap an email account.
2. Tap **Menu** > **Account settings** to view the email account settings.
3. Tap **Account name** to change the account name.
4. Tap **OK** to confirm.

### Set up the email checking frequency

1. Tap an email account.
2. Tap **Menu** > **Account settings** to view the email account settings.
3. Tap **Email check frequency**.

 
You can set the device to automatically check for new email every 5 mins, every 10 mins, every 15 mins, every 30 mins, every hour, or never.

### Set up default account

1. Tap an email account.
2. Tap **Menu** > **Account settings** to view the email account settings.
3. Tap **Default account** to send email from this account by default.

### Delete an email account

1. Tap **Application Drawer** > **Email**
2. Tap and hold the account to delete.
3. Tap **Remove account**.
4. Tap **OK** to confirm.

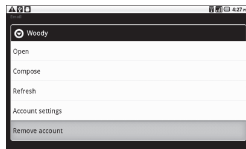

## Chapter 5: Using Internet

### 5.1 Connecting to Internet

This device connects to Internet via:

- Wi-Fi
- Cellular Data Networks

 
 
 
#### Wi-Fi

##### Turn Wi-Fi on or off

1. Tap **Application Drawer** > **Settings** > **Wireless & networks**
2. Tap to check the **Wi-Fi** function and turn Wi-Fi on or off.

##### Connect to a Wi-Fi network

1. Turn Wi-Fi on.
2. Tap **Wi-Fi settings**. The device scans for Wi-Fi signals.
3. Detected networks are displayed below. Tap a network connection then tap **Connect**
4. If you select an unsecured network, the connection is automatically established.
5. Otherwise, proceed to the next step.

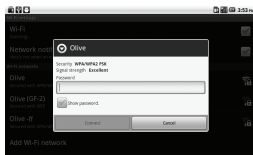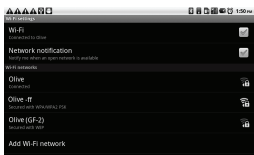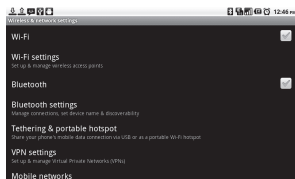


6. When connecting to a secured network, you will be prompted for the password. Enter the password, then tap **Connect**.

When Wi-Fi is connected, the  connection icon is displayed on the status bar.


##### Add Wi-Fi network

 1. Tap **Application Drawer** > **Settings** > **Wireless & networks**
2. Tap **Wi-Fi settings**.
3. In Wi-Fi networks, tap **Add Wi-Fi network**. A new window is displayed.
4. Follow the on-screen instructions and enter the necessary information, then tap **Save** to save the settings.

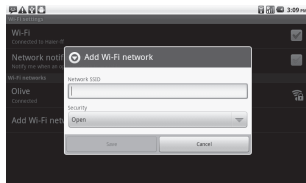

## Configure Wi-Fi settings

 
1. Tap **Application Drawer** > **Settings** > **Wireless & networks**
2. Tap **Wi-Fi settings** > **Menu** > **Advanced**.  
**NOTE:** If you use static IP, enter the IP settings as required.
3. Tap **Use static IP**
4. In IP settings, enter the IP address, gateway, netmask, and DNS. Tap **OK** to save your settings.

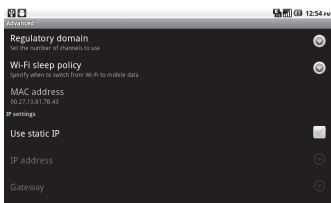

## Cellular Data Network


Check the availability of these connections with your network service provider and obtain the following information:

 - Access Point Names
- Proxy
- Port
- User name
- Password
- MMSC, MMS proxy, MMS port (for MMS only)

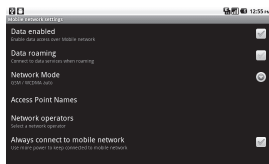

## Set up wireless data connection

 1. Tap **Application Drawer** > **Settings** > **Wireless & networks**
2. Tap **Mobile networks** > **Access Point Names**.
3. Tap **Menu** > **New APN**.
4. Tap **Name** to enter a name for the connection, then tap **OK**
5. Enter the **APN**, then tap **OK**
6. Enter the **Proxy**, **Port**, **Username**, and **Password** (if applicable) etc., then tap **OK**
7. Tap **menu** then tap **Save** to store your settings or tap **Discard** to exit without saving the changes.

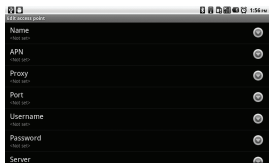

## Starting a Data Connection

Data connection is automatically activated when the device is turned on.

## Manually start a data connection

1. Tap **Application Drawer** > **Settings**.
2. Tap **Wireless & networks** > **Mobile networks** > **Access Point Names**.
3. A list of connections will be displayed. Tap the connection you want to use.

 
## Chapter 6: Using Bluetooth

### Bluetooth modes

- **On:** Bluetooth is turned on. This device detects other Bluetooth devices, but this device is not visible to others.
- **Discoverable:** Bluetooth is turned on and this device is visible to other Bluetooth devices.
- **Off:** Bluetooth is turned off.

### To turn Bluetooth on or off

1. Tap **Application Drawer > Settings > Wireless & networks**
2. Tap to check **Bluetooth** and activate.
3. To make your device visible to others, tap **Bluetooth settings** and check **Discoverable** to make this phone visible to other devices.

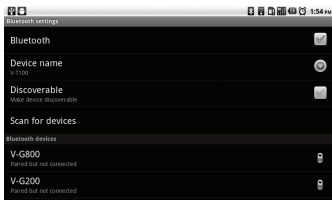

### 6.1 Connecting to Bluetooth Devices

A connection to a Bluetooth device is called a partnership. You need to pair and create a partnership with a Bluetooth device to exchange information.

1. Tap **Application Drawer > Settings > Wireless & networks**.
2. Tap **Bluetooth settings** to view the menu options.
3. To search for a new device, tap **Scan for devices**.
4. Tap the device to connect.
5. Enter the **PIN** to start pairing, then tap **OK**.  
**NOTE:** PIN of the device must be the same PIN on the other Bluetooth pairing device.
6. If you connect with an audio device which only supports HSP/HFP, "**Connected to phone audio**" will be displayed on the screen.
7. If you connect with audio device which supports HSP/HFP/A2DP, "**Connected to phone and media audio**" will be displayed on the screen.

**NOTE:** Tap and hold the selected device to enter device options menu.

**NOTE:** Once a partnership has been created, connecting to that device again will no longer require entering the password



## Chapter 7: Multimedia Applications

### 7.1 Videos and Photos



This device is equipped with a 3.0 megapixels camera to take videos and photos.

 
#### Recording Video



1. Tap **Application Drawer** > **Camcorder**
2. Aim the device at the subject.
3. To start recording, tap  To stop recording, tap 


#### Taking a Photo

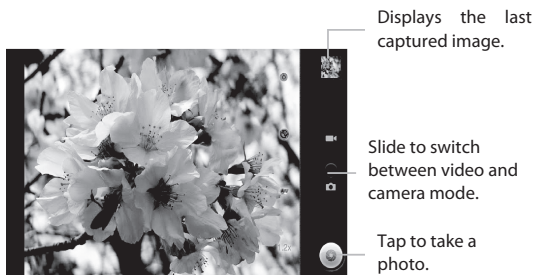


1. Tap **Application Drawer** > **Camera**
2. Aim the device at the subject, then tap and hold  to focus.  
Tap  to take the shot.



#### Reviewing a Photo Or Video

After recording a video, the video thumbnail is displayed at the top right corner of the screen.

- Tap the video thumbnail to playback the video in full screen mode.
- Tap **Delete**  to delete the video and view the next video.

- Tap **Share**  to share the video via Gmail or Messaging etc.
- Tap **Play**  to playback the video clip.
- Tap  **More** to view more options.



## Configuring Camcorder Settings

The Camcorder settings menu is displayed on the right of the screen. Swipe your fingers up and down to scroll the page for more options.



Tap an option to configure camcorder settings.

Tap to view and adjust the general settings of your camcorder:

Mode	Setting	Available options
Video mode	Color effect	None, Mono, Sepia, Negative
	Video quality	VGA, CIF, QVGA, QCIF
	Video Encoder	MPEG4, H263, H264
	Video duration	30 seconds ( MMS), 10 minutes, 30 minutes
	Camera setting	Restore to Default
	White balance	Auto Incandescent, Daylight, Fluorescent, Cloudy
Picture mode	Video quality	High (30m), Low (30m), MMS (Low, 30s), YouTube (High, 10m), custom
	Switch Camera	Switch to main camera, Switch to front camera
	Picture Size	3M Pixels, 2M Pixels, 1M Pixels, VGA, QVGA
	Picture Quality	Super fine, Fine, Normal
	Color effect	None, Mono, Sepia, Negative
	Metering mode	Frame Average, Center Weighted, Spot Metering



 
Anti Banding	50 Hz, 60 Hz, Auto
Saturation	Level 0, Level 1, Level 2 (Default), Level 3, Level 4
Contrast	Level 0, Level 1, Level 2 (Default), Level 3, Level 4
Sharpness	Level 0 (Default), Level 1, Level 2
Brightness	Level 0, Level 1, Level 2, Level 3 (Default), Level 4, Level 5, Level 6
Grid	Off, On
Shutter sound	Off, On
Camera setting	Restote to default.
Store location	Off, On
White balance	Auto, Incandescent, Daylight, Fluorescent, Cloudy
Zoom	1x, 2x, 3x, 4x

---

## 7.2 Viewing Videos & Photos

### Playback Videos in the Album

1. Tap **Application Drawer** > **Videos** . All saved video clips are displayed.
2. Tap the video to playback.

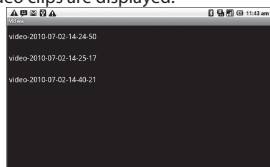


### View Photos in the Album

1. Tap **Application Drawer** > **Gallery**.
2. Tap a folder to view the images in thumbnails.
3. Tap an image to view.
4. To view previous/next image, slide left/right on the screen.



To play the slideshow, tap **Slideshow** .

 Tap **Menu** to show more options.

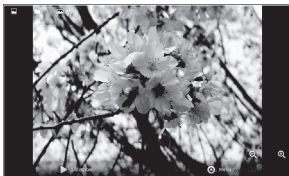


### 7.3 Using Music Player


Tap Application Drawer > Music

#### Music Screen

 - **Playback screen:** Displays the playback area with the playback controls.

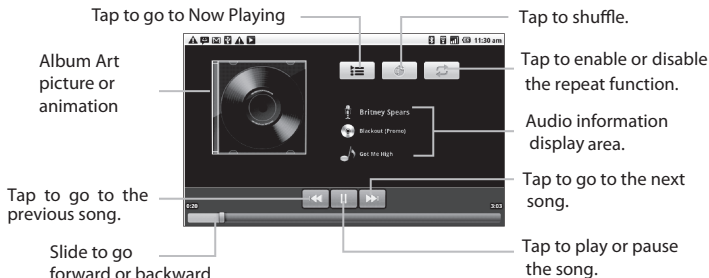

 
- **Library screen:** Displays folder categories which makes searching for media files quick and easy. It contains the following categories: **Artists, Albums, Songs, Playlists**, now playing.

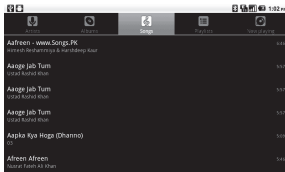

#### Playing Music

##### To play music

 1. Tap Application Drawer > Music
2. Library screen is displayed
3. Tap **Songs**, and all songs on the device are displayed.  
Tap to select the song, then the music playback automatically starts.

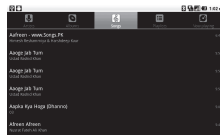

#### Changing Playback Options

While in the Playback screen, tap **Menu**

- Tap **Library** to go to the Music Library screen.
- Tap **Party shuffle** to play all songs in shuffle order.
- Tap **Add to playlist** to add the song to a preferred playlist.
- Tap **Use as ringtone** to set this song as your ringtone.
- Tap **Delete** to delete this song.