

USER'S MANUAL (MD-7250)

Forward

Thank you for purchasing our product. For best results and to ensure that you are able to employ the features and functions of this product to their fullest, please read this user's manual carefully and keep it on hand for future reference.

Important

You are strongly recommended to keep a separate record of all important data on other media to protect against its loss. We assume no responsibilities for any damages or losses caused by deletion of data as a result of malfunction, repair or battery replacement. We also assume no responsibilities for any loss or claim by the third parties, which may arise through the use of this product.

Table of Contents

Chapter 1 Operation Instructions

- 1.1 Open & Close the Unit
- 1.2 About Power Supply
- 1.3 Keyboard Layout
- 1.4 Touch Pad Instructions
- 1.5 Input Methods
- 1.6 Automatic Power-off
- 1.7 Category of Content
- 1.8 Cautions
- 1.9 Specification of the Parameter

Chapter2 Dictionary Functions

- 2.1 Oxford Dictionary
 - 2.1.1 General Search
 - 2.1.2 Spell-check & Nearest Word
 - 2.1.3 Wildcard Search
 - 2.1.4 Grammar Inquiry
 - 2.1.5 Cross-search
 - 2.1.6 Example
- 2.2 Chinese-English Dictionary
 - 2.2.1 General Search
 - 2.2.2 Nearest Word
 - 2.2.3 Wildcard Search
 - 2.2.4 Cross-search
 - 2.2.5 Chi-Eng User's Dictionary
- 2.3 English-English Dictionary
 - 2.3.1 General Search
 - 2.3.2 Spell-check & Nearest Word
 - 2.3.3 Wildcard Search
 - 2.3.4 Cross-search
 - 2.3.5 Eng-Eng User's Dictionary
- 2.4 Chinese-Chinese Dictionary
 - 2.4.1 General Search
 - 2.4.2 Cross-search
- 2.5 Network Dictionary
 - 2.5.1 General Search
 - 2.5.2 Spell-check & Nearest Word
 - 2.5.3 Wildcard Search

- 2.5.4 Cross-search
- 2.6 Proverb
- 2.7 Sentence Repository
 - 2.7.1 English Word Searching
 - 2.7.2 Chinese Word Searching
- 2.8 Vocabulary
- 2.9 Conversation
- 2.10 User's Dictionary
 - 2.10.1 Chi-Eng User's Dictionary
 - 2.10.2 Eng-Eng User's Dictionary

Chapter 3 Organizer Functions

- 3.1 Personal Information
 - 3.1.1 Inputting Data
 - 3.1.2 Editing and Deleting Data
- 3.2 Telephone Directory
 - 3.2.1 Inputting Data
 - 3.2.2 Searching Data
 - 3.2.3 Editing and Deleting Data
- 3.3 Memorandum
 - 3.3.1 Inputting Data
 - 3.3.2 Searching Data
 - 3.3.3 Editing and Deleting Data
- 3.4 Schedule
 - 3.4.1 Inputting Data
 - 3.4.2 Searching Data
 - 3.4.3 Editing and Deleting Data
- 3.5 To Do List
 - 3.5.1 Inputting Data
 - 3.5.2 Searching Data
 - 3.5.3 Editing and Deleting Data
- 3.6 Time
 - 3.6.1 Local time
 - 3.6.2 World time
- 3.7 Calendar
- 3.8 Commemoration
 - 3.8.1 Inputting Data
 - 3.8.2 Searching Data
 - 3.8.3 Editing and Deleting Data
- 3.9 Scheduler
 - 3.9.1 Inputting Data

- 3.9.2 Searching Data
- 3.9.3 Editing and Deleting Data
- 3.10 Schedule Class
 - 3.10.1 Inputting Data
 - 3.10.2 Editing and Deleting Data

Chapter 4 Calculation Functions

- 4.1 Simple Calculator
- 4.2 Scientific Calculator
- 4.3 Unit Conversion
- 4.4 Currency Conversion
- 4.5 Size Equivalent
- 4.6 Financial Management
- 4.7 Loan-Bidding Scheme
 - 4.7.1 Simple Bidding Calculation
 - 4.7.2 Complex Bidding Calculation
- 4.8 Loan Interest
- 4.9 Mathematical Formula

Chapter 5 Others Functions

- 5.1 Reference
 - 5.1.1 English Name
 - 5.1.2 Travel Guide
 - 5.1.3 Telephone Information
- 5.2 Revision Test
 - 5.2.1 Oxford Revision
 - 5.2.2 Chi-Eng Revision
 - 5.2.3 English Test
- 5.3 Games
 - 5.3.1 Brick Game
 - 5.3.2 Apple Chess
 - 5.3.3 Snake
 - 5.3.4 Shooting
 - 5.3.5 Riddle
 - 5.3.6 5-Tile
 - 5.3.7 Hangman
 - 5.3.8 Puzzle
 - 5.3.9 Pipes
 - 5.3.10 Mine
- 5.4 Data Deletion

- 5.5 Display Setting
- 5.6 PC SYNC
- 5.7 System Setting
 - 5.7.1 Auto Power Off
 - 5.7.2 Display Format
 - 5.7.3 Alarm Setting
 - 5.7.4 Sound & Speech Setting
 - 5.7.5 Password Setting
 - 5.7.6 Hot Menu Setting
 - 5.7.7 Hotkey Setting
 - 5.7.8 Calibration
 - 5.7.9 Game Lock
- 5.8 Memory Check
- 5.9 Brief of Function
- 5.10 Company Information

Chapter 6 Appendix

- 6.1 Chart of Cangjie Input Method
- 6.2 Chart of Wang Ma 5-strokes Input Method
- 6.3 Contrastive Chart between Pinyin and Zhuyin
 - 6.3.1 Chart of Initial Consonant of a Chinese syllable
 - 6.3.2 Chart of Compound Vowel of a Chinese syllable

Chapter 1 Operation Instructions

1.1 Open & Close the Unit

The cover of the unit is designed loose-leaf, it is convenient and easy to open or close the unit.

1.2 About Power Supply

This unit is powered by two 3A batteries. If the unit doesn't work properly, which indicates battery voltage is weak, please turn off the unit and replace the batteries with new ones.



Procedures of replacing batteries:

1. Turn off the unit.
2. Push the battery compartment lock, which is on the back of the unit, to the position of "Unlock", open the battery compartment door and replace the used batteries with new ones.

Note: Please use alkaline batteries.




3. Cover the battery compartment door and push the lock to the position of "Lock", otherwise, the unit can not be switched on.

Cautions:

1. Follow the right procedures and make sure that the polarities of the batteries are correct.
2. Never leave used batteries in the battery compartment.
3.  indicates the battery voltage is enough.  indicates the battery voltage is weak, in this case, please replace the batteries with new ones following the information on screen.
4. To avoid data loss, please always keep alkaline battery in the unit for sufficient power supply.

Note: When the adapter is in use, there will be no flag indicating the battery voltage.

Using AC adapter:

1. Press  to turn off the unit before plugging the AC adapter.
2. After using, press  to turn off the unit before unplugging the AC adapter. If the unit hangs because of improper use, simply take out the batteries and replace them again (Please use  if necessary).
3. Specifications of the AC adapter:

Hong Kong	Input :	AC 220V	50Hz
	Output :	DC 6V	350mA



Taiwan	Input :	AC110V	60Hz
	Output :	DC6V	350mA
U.S.A	Input :	AC110V	60Hz
	Output :	DC6V	350mA

4. You are highly recommended to use the AC adapter provided by our agency or other qualified brands. We assume no responsibility for any damage to the unit arising through the use of AC adapters which do not meet the specification mentioned above.
5. To keep the real-time clock in the unit working properly in case of a sudden power cut, please always keep good alkaline battery in the unit even if you are using an AC adapter.

 
Data recovery

1. The unit is able to recover the data of loss caused by sudden power cut while preparing to save. Don't cut power, reset the unit or open the battery compartment in the process of making data recovery, otherwise, all the data will be lost permanently.
2. We strongly suggest the use of alkaline battery with sufficient power supply to prevent from sudden power cut which may result in data loss. Please make sure that there is steady electrical current, 6 volt power pressure and proper plugging while using adapter.

Resetting the Unit

Press  after replacing batteries or press  because of malfunction of the unit , a message “Please wait...”appears on the screen, then shows “ Time and other setting may be changed, please reset if necessary”, meanwhile the system checks itself automatically, and then goes to main menu.


1.3 Keyboard Layout

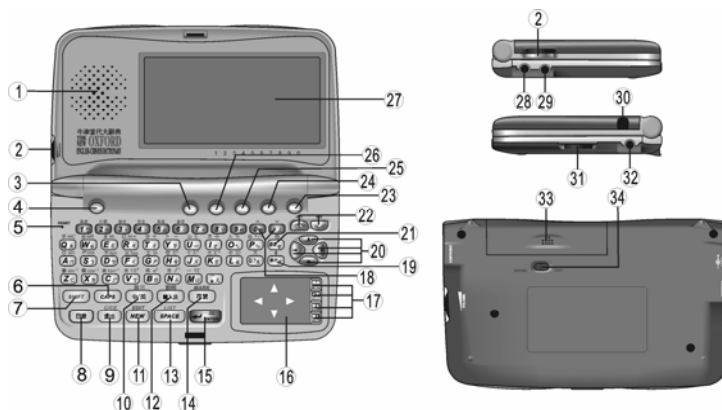


 


 
 
 









- | | |
|--------------------|---|
| 1. Speaker | 2. Screen contrast adjustment button |
| 3. Function button | 4. Power button |
| 5. Reset button | 6. Uppercase / Lowercase of Eng. letter |
| 7. SHIFT | 8. Menu |

- | | |
|--|--|
| 9. Esc /C /CE | 10. Switch between Eng & Chi input modes |
| 11. New/Edit | 12. Chinese input methods / help |
| 13. Space / List | 14. Symbol / Mark |
| 15. ENTER / = | 16. Touch Pad |
| 17. Touch –and- go icons on Touch Pad | 18. Page up / down in Dict. |
| 19. Linefeed / Set alarm | 20. Up / Down / Left / Right arrow |
| 21. Backspace / Time inquiry | 22. Turn page / Insert |
| 23. Cantonese pronunciation | 24. Mandarin pronunciation |
| 25. English pronunciation | |
| 26. User-defined key (press this key to enter the hotkey function you set) | |
| 27. LCD | 28. AC adapter jack |
| 29. Data link jack | 30. Stylus slot |
| 31. Volume | 32. Earphone jack |
| 33. Battery compartment door | 34. Battery compartment lock |

 
Special Function Keys

The followings are special function keys. You should press  first and then press special function key instead of pressing them simultaneously to perform corresponding function.

- | | | |
|----|---|---|
| 1. |   | Switch display mode between Chinese and English |
| 2. |   | Inquire operation instructions |
| 3. |   | Store records in Dict. / mark or unmark the records in Organizer |
| 4. |   | Inquire time (Remark: the function is unavailable in input mode or a pop-up window appears) |
| 5. |   | Edit record |
| 6. |   | Set alarm in Schedule |
| 7. |   | Delete record |
| 8. |   | Switch mode between inserting and overwriting |


 
 
1.4 Touch Pad Instruction

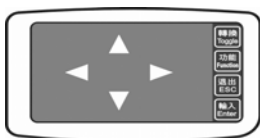

Besides key entry function, the Touch Pad is specially designed. The operation is specified below.


 


—Touch and go icons on Touch Pad


 Switch between Touch and Handwrite


 Same function as  

 
 Same function as 

 

 Same function as 

— Main features of Touch Pad: Handwrite and Touch.



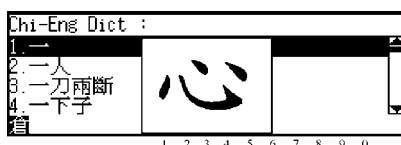

In input / edit mode, touch  to switch between Touch and Handwrite.

— Handwrite mode: in input mode, directly write on Touch Pad to input or edit data. ( shows on the upper right corner indicates the mode of handwrite; otherwise it indicates the mode of touch.)




1. Write on Touch Pad, your handwriting will be displayed on LCD.
2. After system makes recognition on your handwriting, relative letters / characters will be displayed on the bottom of LCD, press numeric key to choose desired one directly.
3. If no desired letter / character is found in the short list, press  or click  twice to cancel, then write on the Touch Pad to input again.

— Touch mode: you can tap up /down / left / right arrow on Touch Pad to complete relative operations same as pressing up /down / left / right key.

1. In menu screen, tap up / down / left / right arrow to move the highlight bar. Hold on the key, the highlight bar moves circularly.
2. In input screen of Organizer, tap up / down / left / right arrow to move the cursor. When you tap the down arrow, the cursor moves to the next field.
3. In index screen of Organizer and menu screen of Reference, tap up / down arrow to move the highlight bar; press  or  to enter view screen or submenu screen.
4. In input screen of Dictionary, tap up / down arrow to move the highlight bar; hold on the key, the highlight bar moves circularly. Tap  or  to enter explanation screen.
5. In explanation screen of Dictionary, tap up / down / left / right arrow on the Touch Pad to highlight a word or character for cross-search.
6. In view screen of Organizer, Dictionary, Currency Exchange and Reference, tap up / down arrow to view the content if there is more than one page. Hold on the key to turn page up or down automatically.

 
1.5 Input Methods


 
 
 

 
11 input methods are available in the unit, they are English & Number, Symbol, Cangjie, Simple, Radical, Mandarin, Taiwan, Cantonese, Wang Ma 5-strokes, 5-strokes and Strokes. Cangjie and Simple only exist in traditional Chinese mode, Wang Ma 5- strokes only exists in simplified Chinese

number “4”, then press . All relative characters are displayed, press numeric key to choose the desired character;


—Mandarin

Input Mandarin phonetic alphabets, e.g. input “GUANG”, and then input tone, e.g. input “ˊ”. Press numeric key to select the desired character.

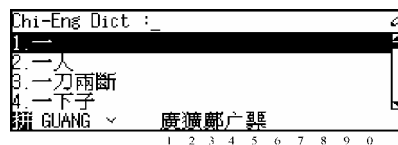

Note: press  for the first tone; press  for the second tone; press  for the third tone; press  for the fourth tone; press  for the soft tone; press  to input “ü”.

—Taiwan

Input characters by inputting Taiwanese Pinyin. e.g. input “ㄅㄛˊ”, then input the tone (same as Mandarin), e.g. press  to input the first tone, and relative characters are displayed on the bottom of LCD, then press the numeric



key to choose the desired one.

—Cantonese

Input Cantonese phonetic alphabets, e.g. input “YIN”, relative characters are displayed on the bottom of LCD, press the numeric key to choose the desired one.



—Wang Ma 5-strokes (only exists in simplified Chinese mode)

Usually, to find a character, input the codes of first three roots and the last root. If the character has less than 4 roots, just input the codes of its roots plus a recognition code to make it 4 codes. If this still cannot make 4 codes, use SPACE key to make the balance.

e.g. input “sgct”, the corresponding character

“酸” is shown.




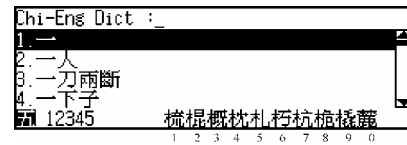 
Note: Please refer to appendix “ 6.2 Chart of Wang Ma 5-strokes Input Method”.

—5-strokes



Input codes of the first 4 strokes and the last stroke. If the total strokes of the character are less than 5, input codes of the strokes sequentially.

 
代號	筆劃名稱	筆劃走向	筆劃及其變形
1	橫	左→右	一 丿
2	豎	上→下	丨 冫
3	撇	右上→左下	丿
4	捺	左上→右下	㇇ ㇏
5	折	帶轉折	乙 冫 ㇇ 冫 冫

After inputting, press . e.g. input “12345”, the relative characters are displayed on the bottom of LCD, press numeric key to choose the desired one.




—Strokes

Input the number of the total strokes, then press . e.g. input “4”, and press , the relative characters are displayed on the bottom of LCD, press numeric key to choose the desired one.

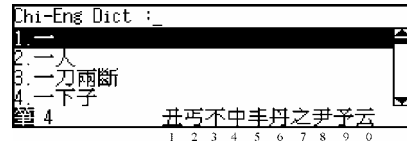




 



1.6 Automatic Power-off

- The unit will be automatically switched off if it is left idle within the automatic power-off period.
- Press  button to restart it. (the default automatic power-off period is 3 minutes)
- If the unit is automatically powered off, the data you have inputted or edited will not be saved.
- The alarm will still function upon the set time even if the unit is power off.




 



 
 
 
1.7 Categories of Content

4 main Categories such as Dictionary, Organizer, Calculation and Others are particularly designed for your convenient operation. Besides this, the hot menu for which you can select desired applications in System Setting is added.

Hot menu:

- Press     to select an item, or tap up / down / left / right arrow on Touch Pad to move the cursor to the desired item, then press  to enter the application.
- Press   to switch into main menu of the previous or next category.

Main menu

- Press     to select an item, or tap up / down / left / right arrow on Touch Pad to move the cursor to the desired item, then press  to enter the application. You can also press numeric key to enter corresponding application directly.
- Press   to switch into main menu of the previous or next category.
- Press  to toggle among the categories circularly.
- Press  to switch display language between Chinese and English.
- Press  to return to hot menu.

1.8 Cautions

- Avoid humidity. Never let water or other liquids flow into the unit.
- Don't place the unit under direct sunlight or near heat.

- Don't repair the unit by yourself! Bring the malfunctioned unit to our Customer Service Center for repair.
- Prevent the unit from falling down on the ground, bending or strong impact.
- Don't apply strong detergent cleaning agents to clean the unit.
- Don't touch the screen with sharp-headed objects.
- Before doing reset or sending the unit for repair, please keep a copy of all important data so as to reinput them later.

1.7 Specification of the Parameters

1. Flash Memory Size: 2 MBits
2. Maskrom Size: 128 MBits
3. LCD Size: 240×79 dots
4. Memory size for saving Organizer records: about 1.8 MBits

Chapter 2 Dictionary Functions


This unit provides various English/Chinese Dictionaries for your usage, and the total number of vocabularies amounts to 280,000.





2.1 Oxford Dictionary

 
You can find an English word or phrase by using either of inputting method or browsing method. It is available in this dictionary to view the phonetic alphabet and Chinese explanation; view the relative or general grammars; cross-search to Chi-Eng Dictionary or Chi-Chi Dictionary; listen to pronunciations of Chinese/English words in Mandarin, Cantonese or English.

2.1.1 General Search

Choose "Oxford" in the Dictionary menu,


then input the desired word/phrase by pressing keys or handwriting, then press  to confirm, e.g. input "close".

 
Press   to browse word/phrase orderly, press   to browse word/phrase page by page.

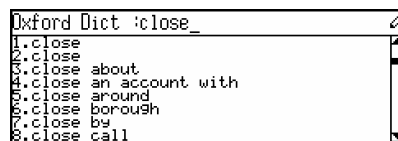




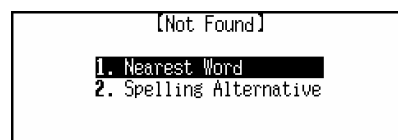 
2.1.2 Spell-check & Nearest Word

These two functions are usually used when the inputted word/phrase is wrongly spelled or unavailable in Oxford Dictionary.

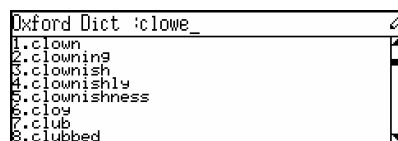Input "clowe"(misspelled word), then press  to confirm.




Press numeric key or press   and  to choose "Nearest Word" or "Spell-Alternative".



Nearest Word

If you choose "Nearest Word", you can view the explanation of the nearest word.




Press  to return to input mode.

 
[MD7250 User Manual]

 


Spell-Alternative

If you choose "Spell-Alternative", it will list the corrected words (or show "Not Found!" alert on screen, if no results).

Press   to highlight the desired word in the list, then press  to view the explanation.

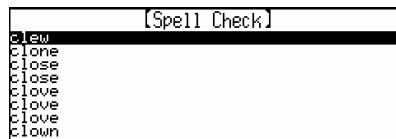 


Note: The searching time may be longer, you can stop searching by pressing .



2.1.3 Wildcard search

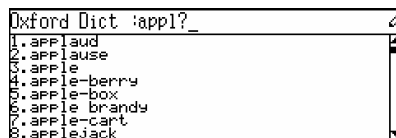

If you are not sure about the spelling of the desired word/phrase, you can use wildcard "?" or "*" to confirm. ("?" represents one uncertain letter, "*" represents one or more uncertain letters.)




Input "appl?", then press  to confirm.

 


 
 
The first word matched will be shown on screen.

 
Press   to view the previous/ next matched word.


Press   to view the details of the word.

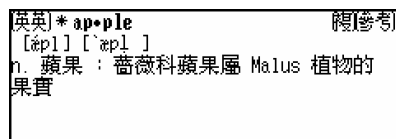


Press    to listen to the relative pronunciation.

 
 


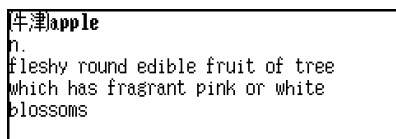When "[英英]" appears on the upper left corner, press  to enter Eng-Eng Dictionary to view its explanation, press  to return to Oxford Dictionary.



Press  to enter function selection screen.

Press numeric key or press   and  to select items.

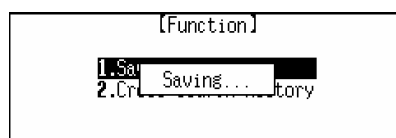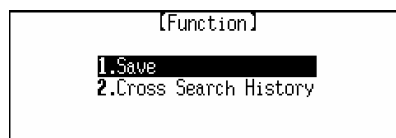

Choose "Save" to save the record you are viewing for revision and test.

Note: you also can save the record by pressing **SHIFT** + **MARK** 符號 .

Under the input mode or view mode, press **LIST** **SPACE**

view the dictionary-history list.

Press **▲** **▼** to choose record orderly.

Press **▲** **▼** to choose page by page.

Press **ENTER** to view the details of the chosen word.

Press **C/CE** 退出 to return to the former screen.

【Dictionary-History List】	
1.close	(From Oxford)
2.clown	(From Oxford)
3.apple	(From Oxford)

2.1.4 Grammar Inquiry

While viewing some English word, you can inquire the Oxford Built-in Grammar, Instant-Dict Grammar, or Oxford Paradigm. The Oxford Built-in Grammar includes phrase, compound word, derivative, others and example; the Instant-Dict Grammar includes grammar, homonym, example, run-ons, synonym, antonym, confuse word in meaning, adjective.

Note: The indicators that appearing on the upper right corner indicate available grammars.

In the view screen of some word, press numeric key to inquire relevant grammar according to the indicators.

e.g. in the view screen of "close",

press **2** 句 for Phrase; press **3** ㄩ for Compound Word; Press **4** ㄣ for Derivative.

英英 詞 close' (片語/詞類參考)
[kloʊz] [klos]
adj., adv. (closer ; closest), n.
adj.
1 接近...的, 極近的(near)<to> : 比 near 更近.

Note: If the indicator "[其]" appears, it means you can inquire other grammars.

Press **6** 厶 to enter Instant-Dict Grammar screen, press numeric key or press **▲** **▼** and **ENTER** to view the content of the chosen grammar.

【Instant Dict Grammar】
1. Adjective
2. Antonym
3. Example
4. Homonym
5. Run-Ons






Press **SHIFT** + **ü?光** for Oxford Paradigm, press **▲** **▼** or **▲** **▼** to view the details.

 
1. 條目
本辭典除一般英文單字片語外, 尚收列專有名詞、常用外來語、字首、字尾等, 全部字彙均按字母順序編排。




2.1.5 Cross-search


 
While viewing the explanation, you also can highlight desired Chinese or English word/phrase to

 
apply for cross searching function.

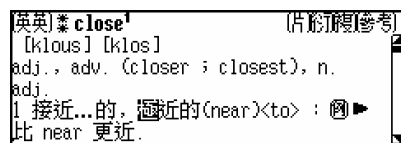


In the view screen of the word "close",
press  to highlight first word, then
press     to move the highlight
bar to highlight the word you want to cross-search.



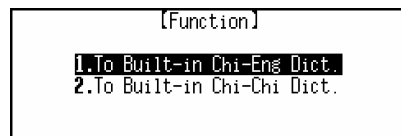

Note: If you want to highlight more than one word, just press  +  .

 
When a Chinese character is highlighted,
press  or  to enter the dictionary
selection screen.




Press numeric key or press   and 
to choose dictionary to view the explanation of
the highlighted character.

Note: If a Chinese phrase is highlighted, press  or  , it will cross-search to Chi-Eng
Dictionary directly.



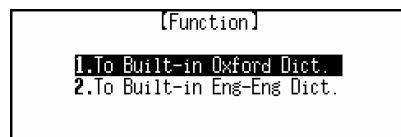


When an English word is highlighted,
use the way mentioned above to perform
cross-search, please notice the dictionaries
for cross-search are different.

 



Note: If an English phrase is highlighted, press  or  , it will cross-search to Oxford
Dictionary directly.

In the view screen of some cross-searched
word/character, press  to display function
selection screen, then choose "Cross Search History"
to view Cross Search History list.



 
Press   to choose record orderly;
press   to choose page by page;
press  to view the record's explanation.

Note: The Cross Search History list is limited to headwords; if you want to return to Oxford
Dictionary after cross-searching, please press  or press  to choose it.

2.1.6 Example

When you are viewing the explanation of some word, you also can view its examples.

e.g. in the view screen of "close",
 press to highlight of one explanation, then press to see the example.

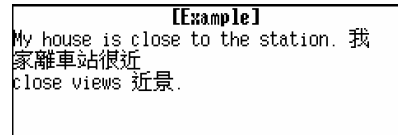 


2.2 Chinese-English Dictionary

 
You can search the desired Chinese character/phrase through inputting or browsing method. You can input Chinese character by handwriting method or Chinese input methods, including Cangjie, Simple, Radicals, Mandarin/Cantonese, Taiwan, Wangma, 5-Stroke and Strokes.

2.2.1 General Search

 
Choose "Chi-Eng Dict." in the Dictionary menu.
 Input the desired character/phrase, then press to confirm, e.g. input "才".

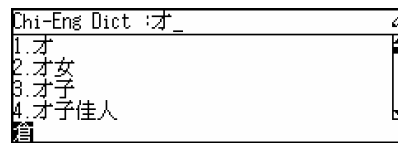

Press to browse word/phrase orderly,
 press to browse page by page.

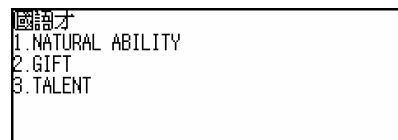

 
When "[國語]" appears on the upper left corner,
 press to enter Chi-Chi Dictionary to view its explanation, press to return to Chi-Eng Dictionary.

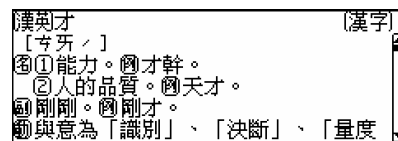

 
2.2.2 Nearest Word

If the character/phrase inputted cannot be found directly, you can choose to view the Nearest Word in the dictionary.

 
Input a character which is not collected in C-E Dictionary, then press to confirm, e.g. input "伊".

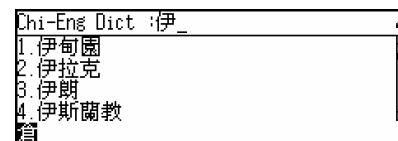

Press to view the previous/next records.
 Press / / to listen to the relative pronunciation.

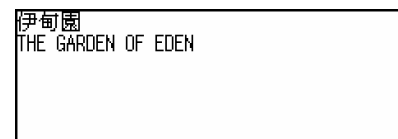

Press to enter function selection screen.
 Press numeric key or press and to choose one item.

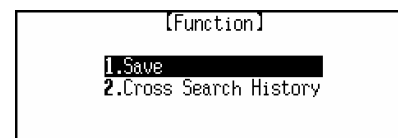

Choose "Save" to save the record you are viewing for revision and test.



Note: You also can save the record by press + .

 
Under the input mode and view mode, you can view the Dictionary-History List.

Press to view the Dictionary-History List.

Press to choose record orderly.

Press to choose record page by page.

Press to return to the former screen.

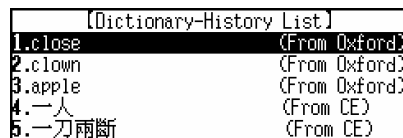

 
2.2.3 Wildcard Search

If you are not sure about some parts of the desired phrase, use wildcard "?" or "*" to search the phrase. ("?" represents one uncertain character, "*" represents one or more characters.)

e.g. input "建?", then press to confirm.

Press to view the previous/next records.

Press to return to input screen.

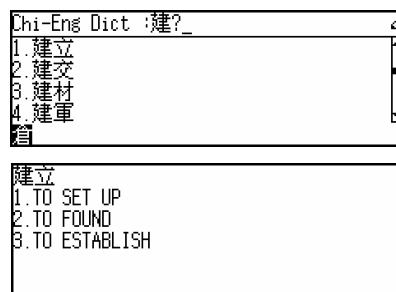

2.2.4 Cross-search

While viewing the explanation, you also can highlight any English word/phrase to cross-search to Oxford or Eng-Eng Dictionary to view its explanation.

 
(Please refer to "2.1.5 Cross-search" for details.)


2.2.5 Chi-Eng User's Dictionary

If you have created your user-defined records in Chi-Eng User's Dictionary (please refer to "2.10.1 Chi-Eng User's Dictionary" for details), you can view those user-defined records in Chi-Eng Dictionary.

Input the desired character/phrase which exists in Built-in Dict. and User's Dict., then press to confirm.

Press the numeric key or press

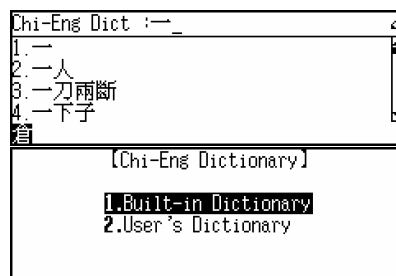


and  to choose one of dictionaries to view its explanation.





Note: If the desired character/phrase only exists in Chi-Eng User's Dictionary, it will enter the user's dictionary directly to view its explanation.

 
2.3 English-English Dictionary

You can search the desired English word/phrase and view its English explanation by inputting or browsing method.

2.3.1 General Search


Choose "Eng-Eng Dict." in the Dictionary menu.
Input the desired word/phrase, then press  to confirm, e.g. input "abate".

 
Press   to browse word/phrase orderly,
press   to browse word/phrase page by page.

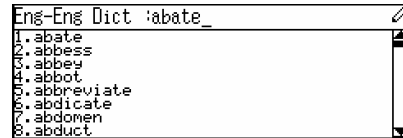




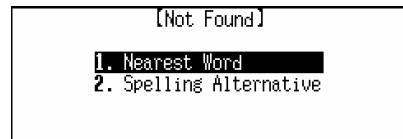 
2.3.2 Spell-check & Nearest Word

If the inputted word/phrase cannot be found directly (mostly caused by misspelling), you can do a further search using Spell-check and Nearest word.

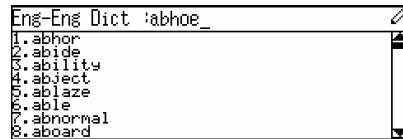 
Input "abhoe" (misspelled word), then press  to confirm.

 


Press numeric key or press   and  to choose either "Nearest Word" or "Spell-Alternative".






Nearest Word

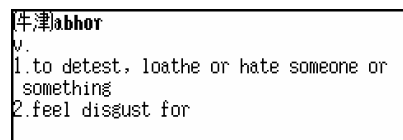 
If you choose "Nearest Word", you can view the explanation of the nearest word.
press  to return to the input screen.

 


Spell-Alternative

If you choose "Spell-Alternative", it will list all corrected word/phrase according to the inputted word/phrase (or show "Not Found!" message on screen, if no matched word can be found).


Press   to choose record, press  to view the explanation.

 
Press  to return to input screen.

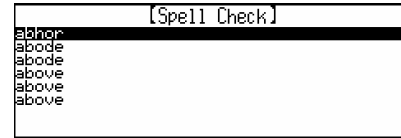






2.3.3 Wildcard Search

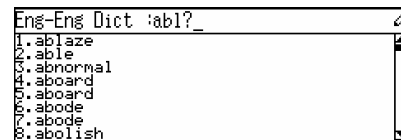 
If you are not sure about the spelling of the desired word/phrase, you can use wildcard "?" or "*" to confirm ("?" represents one uncertain letter, "*" represents one or more uncertain letters).

 

Input "abl?", then press  to confirm.

 


Press   to view previous/next word, press   to view more information of the word.

Press  to listen to the English pronunciation of present word or highlighted word.

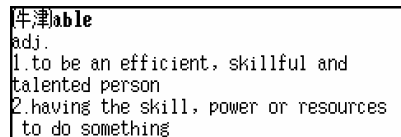
 




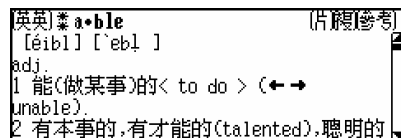When "[牛津]" appears on the upper left corner, press  to enter Oxford Dictionary to view its explanation, press  to go back to Eng-Eng Dictionary.

 


 
Under the input mode and view mode, you can view the Dictionary-History List.

 
Press  to view Dictionary-History List.

Press   to choose record orderly.

Press   to choose record page by page.

Press  to view the explanation of the record.

Press  to return to former screen.

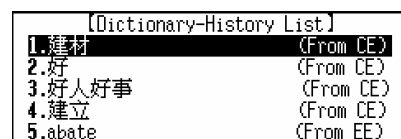


2.3.4 Cross-search

 
While view the explanation, you can highlight any English word/phrase to cross-search to Oxford or Eng-Eng Dictionary to view its explanation.




(Please refer to "2.1.5 Cross-search" for details.)

 
2.3.5 Eng-Eng User's Dictionary

If you have created your user-defined records in Eng-Eng User's Dictionary (please refer to "2.10.2 Eng-Eng User's Dictionary" for details), you can view those user-defined records in Eng-Eng Dictionary.

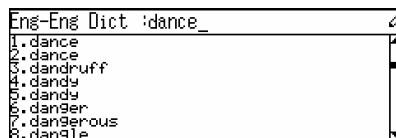Input the desired word/phrase which exists in Built-in Dict. and User's Dict., then press  to confirm.



Press the numeric key or press   and  to choose one of dictionaries to view its explanation.

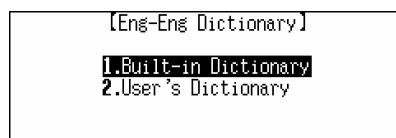

 
Note: If the desired word/phrase only exists in Eng-Eng User's Dictionary, it will enter the User's dictionary directly to view its explanation.





2.4 Chinese-Chinese Dictionary

 
You can view the Chinese explanations of Chinese characters in this dictionary, with the information of Taiwan, Strokes, Mandarin, Cantonese, Cangjie and Radicals, etc.



2.4.1 General Search

Choose "Chi-Chi Dict." in the Dictionary menu.

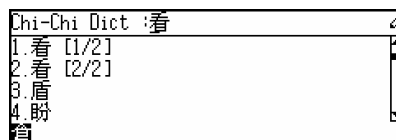

Input the desired Chinese character, then press  to confirm, e.g. input "看".

 
Press   to choose character orderly, press   to choose page by page.



Press   to view the details of the character.

 
Press   to view previous/next record.

Press  /  to listen to the relative pronunciation.

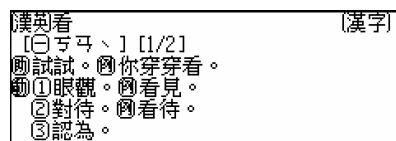


7.

 

Press to view

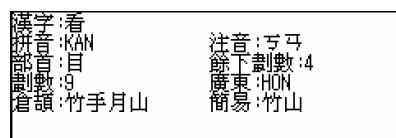

other information of the

Chinese character, including Taiwan, Strokes, Mandarin, Cangjie and Radicals, etc.



Press  to go back to the former screen.



If "[漢英]" appears on the upper left corner, press  to enter Chi-Eng Dictionary to view its explanation, press  to return to Chi-Chi Dictionary.

 


 
Under the input mode and view mode, you can view the Dictionary-History List.

 
Press  to view Dictionary-History List.

Press   to choose record orderly.

Press   to choose record page by page.

Press  to view the explanation of the record.

Press  to return to the former screen.

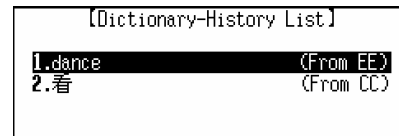

2.4.2 Cross-search

While viewing the explanation, you also can highlight any Chinese character/phrase to cross-search to Chi-Chi Dictionary or Chi-Eng Dictionary to view its explanation.


(Please refer to "2.1.5 Cross-search" for details.)



2.5 Network Dictionary



This dictionary collects many common-used words in network. You can search the desired word/phrase by inputting or browsing method.

 
2.5.1 General Search

Choose "Network Dict." in the Dictionary menu.

Input the desired word/phrase, then press  to confirm, e.g. input "lcd".

Press   to choose word/phrase orderly,


press   to choose page by page.

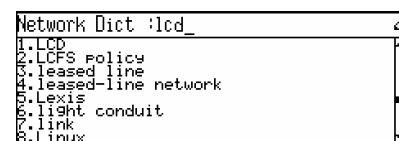 




 
2.5.2 Spell-check and Nearest Word

 
[MD7250 User Manual]

These two functions are usually used when the inputted word/phrase is wrongly spelled or unavailable.

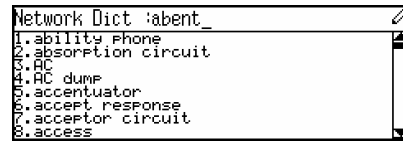Input "abent"(misspelled word), then press  to confirm.




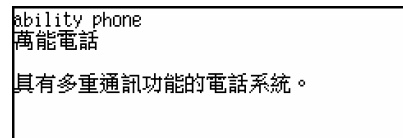 
Press numeric key or press   and  to choose "Nearest Word" or "Spell-Alternative".

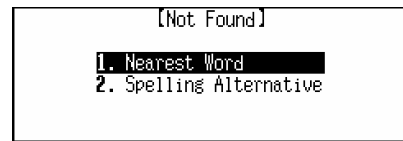

Nearest Word



 
If you choose "Nearest Word", you can view the explanation of the nearest word.

Press  to return to input screen.



Spell-Alternative


If you choose "Spell-Alternative", it will list the corrected words (or show "Not Found!" alert on screen, if no matched word can be found).

Press   to highlight the desired word in the list, then press  to view the explanation.





 
2.5.3 Wildcard Search



If you are not sure about the spelling of the desired word/phrase, use wildcard "?" or "*" to perform a further search. ("?" represents one uncertain letter, "*" represents one or more uncertain letters.)




Input "aben?", then press  to confirm.

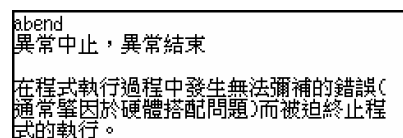The first word matched will be shown on screen.

Press   to view more information of present word.



Press   to view the previous/ next matched words.

Press  /  /  to listen to the relative pronunciation.

2.5.4 Cross-search

While viewing the explanation, you also can highlight some word/phrase to cross-search to Oxford Dictionary, Eng-Eng Dictionary, Chi-Eng Dictionary, Chi-Chi Dictionary to view its explanation.




(Please refer to "2.1.5 Cross-search" for details.)

 
2.6 Proverb

This application collected a great number of English proverbs, you can search them by inputting or browsing method.




Choose "Proverb" in the Dictionary menu.


Input the desired proverb, then press 

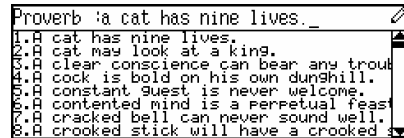 
to confirm; you also can input initial part of the proverb, then press numeric key or press   and  to choose and view the explanation of the desired proverb.



Press   to view previous/next proverb.

Press    to listen to the proverb's pronunciation in English/Mandarin/Cantonese.

Press  to return to input screen.

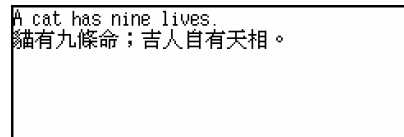

 


 
Note: Cross-search function is available in Proverb, please refer to relevant instructions of dictionaries.

2.7 Sentence Repository


There are many typical Chinese/English sentences in Sentence Repository. You can use either Chinese or English to search them.

 
Choose "Sentence Rep." in the Dictionary menu.

Press   and  to choose one of the items.

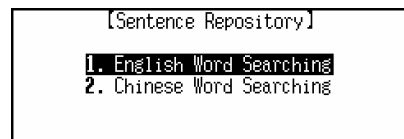 


2.7.1 English Word Searching

Input a desired English word, then press  to confirm, e.g. input "account".

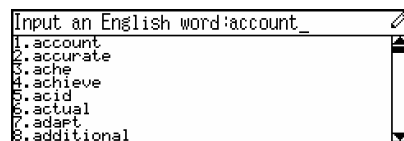

Press to view the previous/next sentence. Press to listen to the pronunciation of the sentence in English/Mandarin/Cantonese.

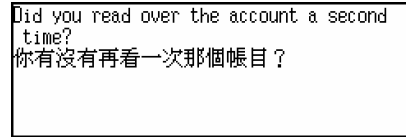 


Press to return to input screen.

 
Note: Cross-search function is available in this application, please refer to the relevant instructions of dictionaries.

2.7.2 Chinese Word Searching

Input a desired Chinese word, then press to confirm, e.g. input "入口".

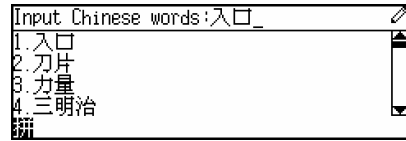

Press to view the previous/next sentence. Press to listen to the pronunciation of the sentence in English/Mandarin/Cantonese.

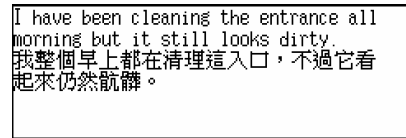

 
Press to return to input screen.

Note: Cross-search function is available in this application, please refer to the relevant instructions of other dictionaries.

2.8 Vocabulary

It has huge storage and is divided into 17 categories to help you look up and remember English words/phrases more conveniently. You can cross-search to Oxford, Eng-Eng, Chi-Eng and Chi-Chi Dictionary; you also can listen to English / Mandarin / Cantonese pronunciation.

 
Choose "Vocabulary" in the Dictionary menu. Press or tap the touch pad to select category, or press to select, then press to confirm(or press numeric key to choose directly).

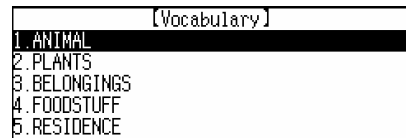

 
e.g. choose "ANIMAL" in Vocabulary menu. Then choose "HEAD" using the same method mentioned above.



Press to view previous/next record. Press to listen to the

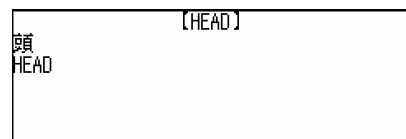

pronunciation in English / Mandarin/ Cantonese.






Press  to go back to the former screen.

Note: Cross-search function is available in Vocabulary, please refer to the instructions of dictionaries.

2.9 Conversation

This application owns 9 categories of common-used conversations; you can cross-search to Oxford, Eng-Eng, Chi-Eng and Chi-Chi Dictionary; you can listen to English / Mandarin / Cantonese pronunciation.





Choose "Conversation" in the Dictionary menu.

 
Press   or tap touch pad to select category, or press   to select, then press  to confirm (or press numeric key to choose directly).







 
e.g. choose "BASIC CONVERSATION" in Conversation menu to enter. Then choose "GENERAL" using the same method mentioned above.

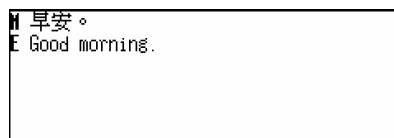



Press   to view previous/next record .
Press   to listen to the pronunciation in English or Mandarin.

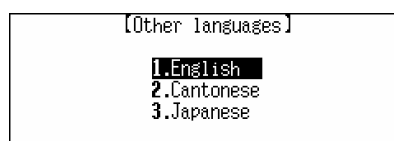

Press  to enter language selection screen, press   and  or press numeric key to choose language for pronunciation.



e.g. choose "Cantonese".

Press  to listen to pronunciation in Cantonese.
Press  to go back to former screen.






Note: Cross-search function is available in conversation, please refer to the relevant instructions of dictionaries.

 
2.10 User's Dictionary

It contains Chi-Eng User's Dictionary and Eng-Eng User's Dictionary. You can create user-defined records to expand the storage of dictionaries. User-defined record can be searched in Chi-Eng and



 
Eng-Eng Dictionary.

Choose "User's Dict." in the Reference menu.

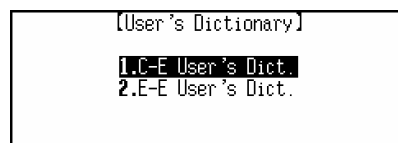 
Press   and  or press numeric key to choose one of the items.




 
2.10.1 Chi-Eng User's Dictionary

 
Input the headword and its English explanation (press   to move cursor between the two input fields), then press  to save.


(**Note:** Headword must be inputted for saving record)

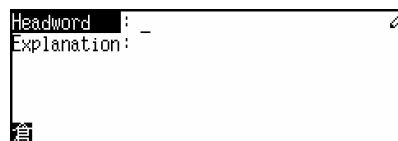




e.g. input "和平", press , then input its English explanation.

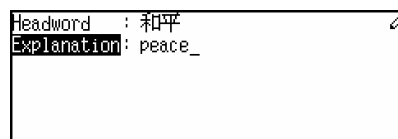
Press  to abort inputting.



Note: Under input mode, press  to choose performing "Renew Record" or "Save Record" function.

 
In the browse screen, press   and  to choose record to view its details.



Press   to choose record page by page.

Press  to create new record;


press  to edit record;

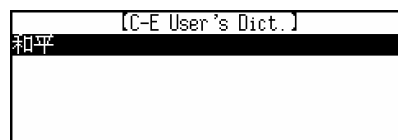press  +  to delete record.






In the view screen, press   to view more information of the record.

 
Press   to view previous/next record.


Press  to create new record;

press  to edit record;




press  +  to delete record.

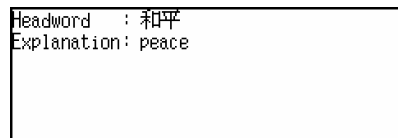Press    to listen to the relative pronunciation.



Note: In the browse and view screen, press  to choose performing "New", "Edit" or "Del" function.

2.10.2 Eng-Eng User's Dictionary

Input the headword and its English explanation
(press   to move cursor between the
two input fields), then press  to save.
(**Note:** Headword must be inputted for saving
record)



A screenshot of a text input field. The field is divided into two sections. The top section is labeled 'Headword' and contains a single underscore character '_'. The bottom section is labeled 'Explanation' and is currently empty. A small cursor icon is visible in the top right corner of the input area.

Note: Please refer to "2.10.1Chi-Eng User's Dictionary" for details.

Chapter 3 Organizer Functions


3.1 Personal Information

Saving personal information for your reference.

 
3.1.1 Inputting Data



Enter “Personal Information”.

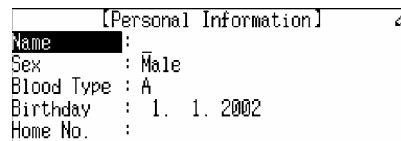 
Press  to switch Chinese and English input mode.



```
[Personal Information]
Name : 
Sex   : Male
Blood Type : A
Birthday : 1. 1. 2002
Home No. : 
```


In Chinese input mode, press  to choose a Chinese input method.


Press   to choose a desired field to input data. After inputting one field, press


 to move to next field.

Press   to turn page.


In “Sex” and “Blood Type” fields, press

  to change the selection.

Press  to save data.

You may also press  and choose “Save Record” to save data.




(You must input data in Name field, if you want to save it.)

Press  in input mode or edit mode.

 
Press the numeric key to perform corresponding function.




```
[Function]
1. Renew Record
2. Save Record
3. Mark Record/Unmark Record
```

You may also press   to choose an item and then press  to confirm.

Choose “Renew Record”.

Press  to reserve the data.

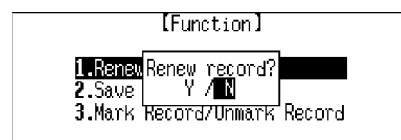

```
[Function]
1. Renew Record?
2. Save Y/N
3. Mark Record/Unmark Record
```

Press **Y** to delete the data and input new data again.

Choose “Mark Record/Unmark Record” to mark the record for locking.(If the record has been marked before, choose this function to unmark it.)

- Note:** 1. Only when the password is preset in System Setting either, the marked record can be locked. If you want to view the marked record, you must clear or turn off the password in System Setting first.
2. In any one application of Organizer, if you haven't saved a record before entering another one, the message below will appear. “Warning: New entry is pending in last application. Press [Y] to abort the entry. Press [N] to return entry.”

3.1.2 Editing and Deleting Data

In view mode, press **▲** **▼** to view more if necessary.

```
      [Personal Information]
Name      : ivy
Sex       : Female
Blood Type : 0
Birthday  : 12. 25. 1979
Home No.  : 07598145313
```

In view mode, press **功能**.

Press the numeric key to perform corresponding function.

```
      [Function]
      1.Edit
      2.Del
```

You may also press **▲** **▼** to choose an item and then press **ENTER** to confirm.

Choose “Del” to delete the record.

Press **Y** to confirm.

Press **N** to abort.

```
      [Function]
      Delete this record?
      Y / N
```

Note: In view mode, you can also press **SHIFT** + **EDIT NEW** to edit the record or press **SHIFT** + **▲** to delete the record.

3.2 Telephone Directory

With this function, you can input personal information like name, telephone, etc., to make up records for your reference.

3.2.1 Inputting Data

Enter “Telephone Directory”.

Press **←=ENTER** to save data after inputting completely.

(You must input data in Name field.)

In Category field, press **→** **←** to change the selection.

[Telephone]	
Name	: _
Category	: relative
Tel Number	:
Pager No.	:
Fax Number	:

Note: About inputting data, please refer to “3.1.1 Inputting Data” for details.

3.2.2 Searching Data

In index mode, press **▲** **▼** to search the record one by one, press **▲** **▼** to turn page.

[Telephone]	
cathy	Classmate 020-86765533
jack	Friend 0759-8467991
jenny	Colleague 0760-6588721
田森	Colleague 0568-453281
林恒	Classmate 0765-992346

In view mode, press **▲** **▼** to view more if necessary.

Press **▲** **▼** to view the previous or next record.

[Telephone]	
Name	: jenny
Category	: Colleague
Tel Number	: 0760-6588721
Pager No.	: 95000-13659
Fax Number	: 287508435

Press **功能** in index mode or view mode.






Press the numeric key to perform corresponding function.

 
You may also press **▲** **▼** to choose


[Function]	
1.	New
2.	Edit
3.	Del
4.	Family Name List
5.	Keyword Search




an item and then press  to confirm.

 
Choose “Family Name List” to display all the family names that have been inputted.

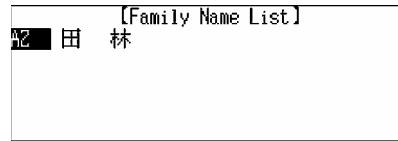Press     to highlight the desired family name and press  to search the record.




Highlight “AZ” and press  to search the English name.

 
Press   to choose a record and press  to view.

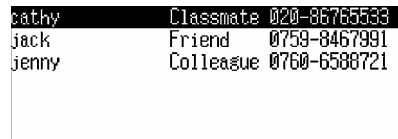


Note: If there is English name in the records, “AZ” will appear before the Chinese Family name(s), otherwise, it won’t appear. Same for the Chinese Family name(s).

Choose “Keyword Search”.


Input the keyword and press  to confirm.

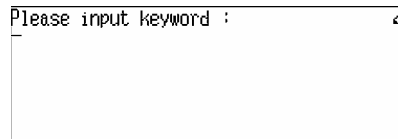

 
 
3.2.3 Editing and Deleting Data






Choose “Edit” and press  to edit the record.

Choose “Del” to delete the record.

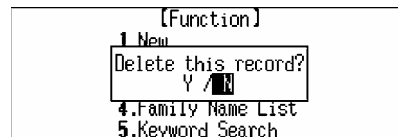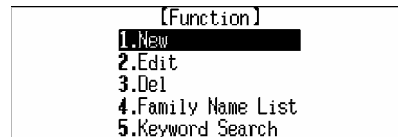Press  to confirm.

Press  to reserve the data and exit.




Note: In index mode or view mode, you may also press  +  to edit the record; press  +  to delete the record or press  to create a new record.

 
3.3 Memorandum

With this quick and convenient function, you can input, edit, view and delete records at any time.

3.3.1 Inputting Data



Enter “Memorandum”.

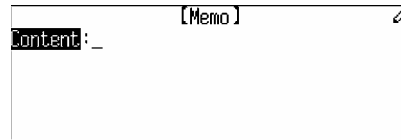Press  to save data after inputting completely.

 




Note: About inputting data, please refer to “3.1.1 Inputting Data” for details.



3.3.2 Searching Data

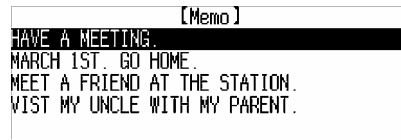



In index mode, press   to search the record one by one.

 
Press   to turn page.



In view mode, press   to view more if necessary.

Press   to view the previous or next record.

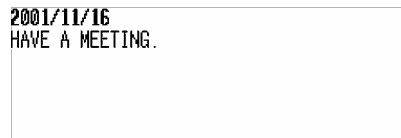

Press     to highlight the word to apply for cross searching function.

 


Note: Please refer to “2.1.5 Cross-search” for details.

In index mode or view mode, press .


Press the numeric key to perform corresponding function.


You may also press   to choose

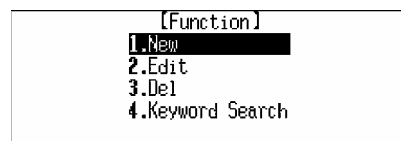

an item and then press  to confirm.

Choose “Keyword Search”.

Input the keyword and press  to confirm.



```
Please input keyword :
|
```

3.3.3 Editing and Deleting Data

 
Please refer to “3.2.3 Editing and Deleting Data” for details.

3.4 Schedule


 
You can record date, time and contents of a schedule or an appointment, which will be marked both in solar and lunar calendar. There is also an alarm function to remind you of the appointment time. You can be reminded if there is any clash in schedule.


3.4.1 Inputting Data

Enter “Schedule”.

Press  to save after inputting data.


 

(You must input data in Content field.)

Press  and  for AM and PM time format respectively.

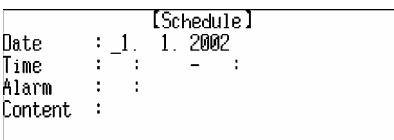





```
                [Schedule]
Date   : _1. 1. 2002
Time   : : : - :
Alarm  : :
Content :
```

Note: 1.About inputting data, please refer to “3.1.1 Inputting Data” for details.



2.Input the time and press  +  to set alarm on, at the same time,  will appear on screen. The alarm will function upon the alarm time.



3.4.2 Searching Data


In index mode, press   to search the record one by one, press   to turn page.






```
                [Schedule]
8.10.2001 4:00PM MEETING
8.11.2001 9:00PM PARTY
```


In view mode, press   to view more if necessary.

Press   to view the previous or next record.

In index mode or view mode, press .
Press the numeric key to perform corresponding function.

You may also press   to choose an item and then press  to confirm.


Choose “Date Search”.

Input the date and press  to search.


```
[Schedule]
Date   : 8. 10. 2001
Time   : 4:00PM - 6:00PM
Content : MEETING
```

```
[Function]
1.New
2.Edit
3.Del
4.Date Search
5.Keyword Search
```

Choose “Keyword Search”.

Input the keyword and press  to search.

```
[Date Search]
Date : _1. 1. 2002
```

```
Please input keyword : 
```

3.4.3 Editing and Deleting Data

 
Please refer to “3.2.3 Editing and Deleting Data” for details.



3.5 To Do List

To Do List can be divided into two status: “Done” and “To Be Done”. User can deal with the affairs quickly and clearly.

3.5.1 Inputting Data

Enter “To Do List”.



Press  to save after inputting data.

 
Press   in “Category”, “Priority” and “Status” fields to change the selection.

```
Due Date : 1. 1. 2002
Category : Personal
Priority  : 1
Status   : To be done
Content  :
```

Note: About inputting data, please refer to “3.1.1 Inputting Data” for details.

3.5.2 Searching Data

In index mode, press   to switch to view the records of “To be done” or “Done”.

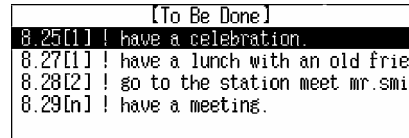


 
Note: Please refer to “3.4.2 Searching Data” for details.

3.5.3 Editing and Deleting Data

Please refer to “3.2.3 Editing and Deleting Data” for details.

3.6 Time

Local Time and World Time are displayed at the same screen for your convenience.




You can set the time of any city as the local time. You can look up the current time by pressing  +  at any time(except in input mode or when a pop-up window appears).

Enter “Time”.



 
Press  to enter function selection screen.



Press the numeric key to perform corresponding function.

You may also press   to choose an item and then press  to confirm.

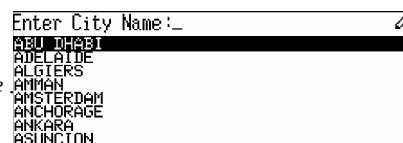


Choose “Set Local City”.



Press   to search the city one by one.

Press   to turn page.


Highlight the desired city and press 

to confirm. Or you may input the city

directly and press  to confirm.


Note: The operation of “Set World City” is the same as “Set Local City” mentioned above.



Choose “Set Date”.

Input the date and press .

[Set Date]
_1. 1. 2002 (M.D.Y)

Choose “Set Time”.


Input the time and press .



Press  and  for AM and PM time format respectively.)


[Set Time]
12:00AM

Note: You just need to set the Local date and time, the World date and time will be changed automatically according to Local date and time.


Choose “Daily Alarm”.

Input the time and press  to move cursor to the next field.



Press   to choose “ON/OFF”.

Press  to confirm after completing.

 
[Alarm Setting]
12:00AM
ON/OFF

Note: If the alarm is on, the alarm will function upon the alarm time even if the unit is power off. When alarm sounds,  will appear on the screen.


Choose “Local DST Mode”.

Press   to choose ON / OFF.


 
Press  to confirm.

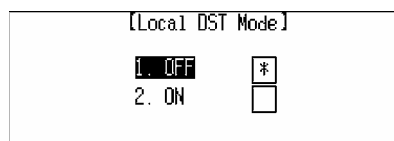 


Note: 1. The operation of “World DST Mode” is the same as “Local DST Mode” mentioned above.

2. If the Local(World) DST is on, one hour will be added in Local(World) time automatically, at the same time,  will appear on the screen.

You can look up the current time by

pressing  +  (except in input mode or when a pop-up window appears).

Press  to quit.





Note: You can set the date format and 12/24-hour time format in System Setting.


3.7 Calendar


It provides a solar calendar covering the year of 1901-2059. In addition, a lunar calendar is displayed beside the solar calendar at the same screen for your reference. You can also view the relevant data in Commemoration and Schedule.


Enter “Calendar”.

Press   to view the previous or next month.

 
Press     to choose a certain date.

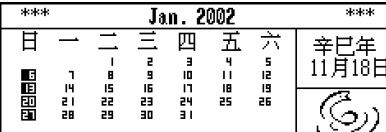




日	一	二	三	四	五	六	辛巳年 11月18日
	1	2	3	4	5		
6	7	8	9	10	11	12	
13	14	15	16	17	18	19	
20	21	22	23	24	25	26	
27	28	29	30	31			

Press  to enter function selection screen.


Press the numeric key to perform

 


corresponding function.


You may also press   to choose an item and then press  to confirm.

Choose “Date Search”.

Input the date and press  to view the calendar.

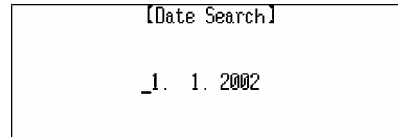





 


Choose “Quarterly”.

Press  to view the Calendar quarterly.

 
Dec. 2001	Jan. 2002	Feb. 2002
SMTWTFS	S M T W T F S	SMTWTFS
3 4 5 6 7 8	1 2 3 4 5	3 4 5 6 7 8 9
10 11 12 13 14 15	6 7 8 9 10 11 12	10 11 12 13 14 15 16
17 18 19 20 21 22	13 14 15 16 17 18 19	17 18 19 20 21 22 23
24 25 26 27 28 29	20 21 22 23 24 25 26	24 25 26 27 28
31	27 28 29 30 31	

Note: The date that you inputted in “Date Search” will be displayed in the specific quarter.

The date with a mark “+” at upper right corner indicates there is Schedule record on that date; the date with a mark “-” at the lower right corner indicates there is Commemoration record on that date.

Press     to highlight the marked date, and press  to view the relevant record. If there are records of Schedule and Commemoration on a certain date, you should press   to choose viewing “Schedule” or “Commemoration” record.

*** Jan. 2002 ***						
日	一	二	三	四	五	六
						辛巳年
6	7	8	9	10	11	12
13	14	15	16	17	18	19
20	21	22	23	24	25	26
27	28	29	30	31		

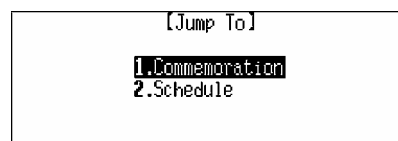

3.8 Commemoration

You can input commemorative date and contents, which can be marked in Calendar.

3.8.1 Inputting Data

Enter “Commemoration”.

Press the relevant numeric key to choose Solar or Lunar Commemoration.



e.g. choose “Lunar Commemoration”.

Input the date and contents and then

press  to save.



(You must input data in both of the fields.)

Note: About inputting data, please refer to “3.1.1 Inputting Data” for details.

3.8.2 Searching Data

Please refer to “3.2.3 Searching Data” for details.

3.8.3. Editing and Deleting Data



Please refer to “3.2.3 Editing and Deleting Data” for details.

 
3.9 Scheduler


Including daily and weekly scheduler, it shows the Schedule, To Do List and Commemoration data as well, so that you can search and view data quickly.

3.9.1 Inputting Data

Enter “Schedule”.

Press   to view the previous or next date record.

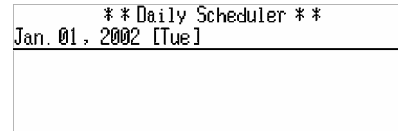




Press  to enter function selection screen.



Press the numeric key to perform




corresponding function.

You may also press   to choose an item and then press  to confirm.

Choose “New” to create new record.


Press   to choose an item to input data.



Press  to enter the relevant input mode.





 
Note: About inputting data, please refer to the relevant parts in “Schedule”, “To Do List” and “Commemoration” for details.)

3.9.2 Searching Data


Press  and choose “Daily Scheduler”.



Press   to turn page to view the records of different date.




Press   to view more records of the same date.


Choose a record and press  to view.



Press  and choose “Weekly Scheduler”.

Press   to view the records of the previous or next week.

Press   to select a desired date, then press  to view the records of the date.

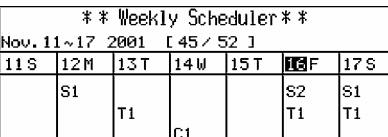

** Weekly Scheduler**						
Nov. 11 ~ 17 2001 [45 / 52]						
11 S	12 M	13 T	14 W	15 T	16 F	17 S
	S1	T1	C1		S2 T1	S1 T1

Note: “S”, “T” and “C” represent the records of “Schedule”, “To Do List” and “Commemoration” respectively; the number beside the letter represents the total amount of the records.

Press **功能** and choose “Date Search”.

Input the desired date and press **ENTER**

to search.

[Date Search]	
Date :	_1. 1. 2002

3.9.3 Editing Data

Press **功能** and choose “Edit” to edit the data.

3.10 Schedule Class

With the two choices of Day Class Schedule and Night Class Schedule, you can input, edit, search, view and delete data at any time.

3.10.1 Inputting Data

Enter “Schedule Class”.

Press **←** **→** to select a period.

Press **↑** **↓** to select the weekday.

Select a field and press **ENTER** or **EDIT NEW** to go to the input mode.

(You may also press **功能** and choose “Edit” to enter input mode.)

Input data and press **ENTER** to save.

	m1	m2	m3	m4	a1	a2	a3	a4	e1	e2	e3	e4
SU	*											
MO												
TU												
WE												
TH												
FR												
SA												

Note: 1. Press **A** and **P** for AM and PM time format respectively.

2. About inputting data, please refer to “3.1.1 Inputting Data” for details.

3.10.2 Searching Data

Enter “Schedule Class”.



Press **↑** **↓** **←** **→** to choose one field with “*” and press **ENTER** to view.

	m1	m2	m3	m4	a1	a2	a3	a4	e1	e2	e3	e4
SU	*											*
MO	*	*					*	*			*	*
TU	*								*	*	*	*
WE					*					*	*	*
TH												
FR			*						*			
SA										*		

Press **↑** **↓** to view the previous or




[Schedule Class]	
Course :	English
Time :	7:45AM - 9:45AM
Teacher :	bob
Location :	501

next record.

Press   to view more content of a record.



In index mode or view mode, press .




Press the numeric key to perform corresponding function.

 
You may also press   to choose an item and then press  to confirm.




Choose “Weekday Search”.

 
Press   to turn page to view the records of different weekday.

Press   to select a record and then press  to view.

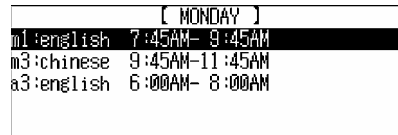

Choose “Course Name Search”.

Input the keyword and press  to search.

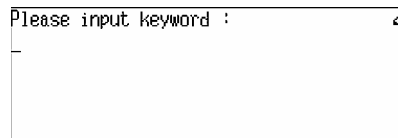






3.10.3 Editing and Deleting Data

 
In index mode or view mode, press .

and then choose “Edit” to edit the data.

You may also press  or  to edit data.

In view mode, press  and choose “Del” to delete the record. You may also press  +  to delete record.

Press  to abort. Press  to confirm.

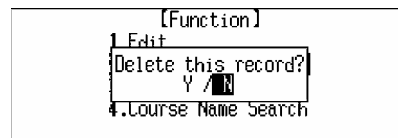

Chapter 4 Calculation Functions

4.1 Simple Calculator

It includes the main functions of a calculator, including basic calculations, square, square root and percentage calculation.

Enter Simple Calculator.

Input the numbers to perform calculation, press $\left(\frac{C/CE}{退出}\right)$ to clear the inputted number).

[Simple Calculator]	
M	0.
	0.

e.g. calculate $126 + 12 = ?$.

Input "126", press $\left(\frac{T}{+}\right)$ (i.e. "+"), input then press $\left(\frac{\leftarrow}{=}\right)$ (i.e. "=") to get: $126 + 12 = 138$.

[Simple Calculator]	
M	0.
	138.

"12",

Press $\left(\frac{C/CE}{退出}\right)$ to clear the number.

e.g. calculate $200 \times 10\% = ?$.

Input "200", press $\left(\frac{U}{\times}\right)$ (i.e. " \times "), input "10", press $\left(\frac{O}{\%}\right)$ (i.e. "%"), then $\left(\frac{\leftarrow}{=}\right)$ to get: $200 \times 10\% = 20$

[Simple Calculator]	
M	0.
	%
	20.

Press $\left(\frac{C/CE}{退出}\right)$ to clear the number.

Press $\left(\frac{R}{M+}\right)$ (i.e. "M+") to memorize the result calculated;

Press $\left(\frac{E}{M-}\right)$ (i.e. "M-") to subtract the numbers from memory;

Press $\left(\frac{W}{MR}\right)$ (i.e. "MR") to display the memorized numbers;

Press $\left(\frac{Q}{MC}\right)$ (i.e. "MC") to clear the memorized number.

[Simple Calculator]	
M	20.
	M+
	20.

e.g. calculate $\sqrt{81} = ?$.



Input "81", press $\left(\frac{N}{\sqrt{\quad}}\right)$ (i.e. " $\sqrt{\quad}$ ") to get: $\sqrt{81} = 9$

[Simple Calculator]	
M	0.
	9.

e.g. calculate the multiples of 3.

Input "3", press $\left(\frac{U}{\times}\right)$ (i.e. " \times "), press $\left(\frac{\leftarrow}{=}\right)$ (i.e. "=") to get: $3 \times 3 = 9$.


[Simple Calculator]	
M	0.
	27.

 
Press  (i.e. "=") again to get $3 \times 3 \times 3 = 27$; Press  successively to get the multiples of 3.

4.2 Scientific Calculator



Besides simple calculations, various functions are also included.

 
Enter Scientific Calculator.

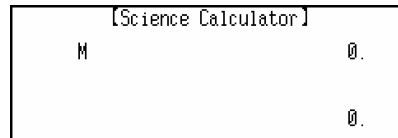
Input the numbers to perform the relevant calculation, press  to clear the inputted number.





e.g. calculate $786 + 269 = ?$.

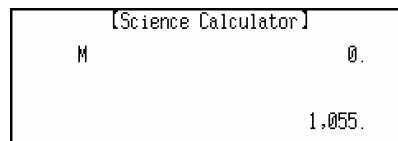 
Input "786" (10 digits can be inputted), press  (i.e. "+"), input "269", then press  (i.e. "=") to get: $786 + 269 = 1055$.

 


Press  (i.e. "M+") to memorize the result calculated;

Press  (i.e. "M-") to subtract the numbers from memory;

Press  (i.e. "MR") to display the memorized numbers;



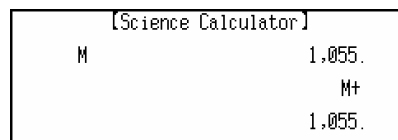


Press  (i.e. "MC") to clear the memorized number.





4.3 Unit Conversion

It provides various conversions of common units, such as conversion in the categories of Length, Area, Volume, etc. Two-way conversion is available for all units.



Enter Unit Conversion.

 
Press     and  or press the relevant numeric key to select conversion category

Press   to turn pages to select or touch to select conversion category.





e.g. choose "Length" to perform the Length

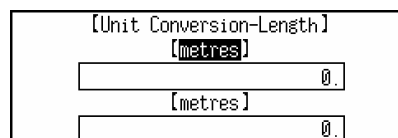
Press   to select the conversion up and down .



 
conversion.
item

 
press   to select the conversion item left and right.

e.g. convert "10 feet = ? mm".
Highlight "foot", and input "10".

Press  to get the result:

10 feet = 3,048 mm



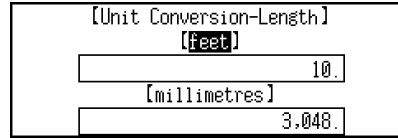
Press  to clear the inputted number for recalculating.

 


4.4 Currency Conversion

It stores 25 different currencies for conversion. Set the exchange rate first so as to perform two-way conversion. You can also set up three other currencies to perform two-way conversion.



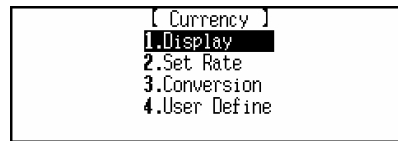

 
Enter "Currency Conversion".

 
Press   and  or touch to select conversion category.



Display




Choose "Display"

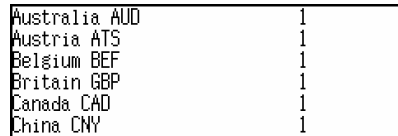
Press   to select the item one by one, press   to turn pages, press  to exit.

 


Set Rate

Choose "Set Rate".

Press   to select the item, and input the exchange rate, then press  to save.





e.g. choose "China CNY", and input "8.26".
then press  to save (Set rates of other currencies in the same way).

Press  to clear the inputted number.



Conversion

Choose "Conversion".

Press   to move cursor up or down to select the currency. Press   to select the currency left and right.


e.g. choose "China CNY" and "US USD" to




convert.

Select either of them as the basic currency,
input the number.

e.g. input "4,000" China CNY.

Press  to figure out the value of USD.




Press  to clear the inputted number
for recalculation.


 



```
[ Currency ]
[China CNY ]
4,000
[US USD ]
484.26150121
```

User Define

Choose "User Define" to self-define a
currency.

Press   and , or press the
relevant numeric key to select the item.

e.g. choose "User Define 1", input the
currency name "Dinar". Press  to
save after inputting the new currency
name. Press  to exit.

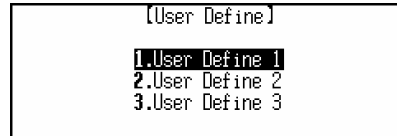

```
[User Define]
1.User Define 1
2.User Define 2
3.User Define 3
```






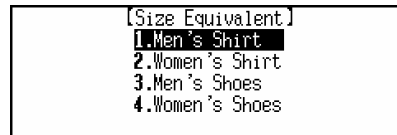
```
[User Define]
Please input new name:
User Define 1
```

4.5 Size Equivalent

It lists out different sizes of the shirt and shoes for male and female in various regions for your
reference.








Enter "Size Equivalent".


Press   and , or press the
relevant numeric key, or touch to select
the item.



```
[Size Equivalent]
1.Men's Shirt
2.Women's Shirt
3.Men's Shoes
4.Women's Shoes
```

e.g. choose "Women's Shoes".

Press   to view the information left
and right. Press   to view the
up and down, press   to
turn pages, press  to exit.

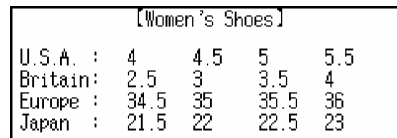

	4	4.5	5	5.5
U.S.A. :	4	4.5	5	5.5
Britain:	2.5	3	3.5	4
Europe :	34.5	35	35.5	36
Japan :	21.5	22	22.5	23

information


4.6 Financial Management

It helps user to deal with different kinds of accounts which includes the balance, transaction, credit,
debit, etc., user can also edit and delete data while browsing.



Enter "Financial Management".

Input data, press  to save.

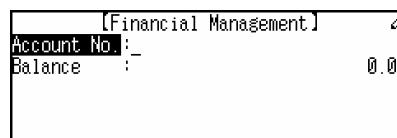



e.g. Input the Account No. "123-456".




```
[Financial Management]
Account No. :
Balance : 0.00
```

 

Press  and input "3000" in "Balance" (12 digits can be inputted), press  to save. (The data can be only saved after inputting the Account No., only 10 records can be saved.)



Note: Press  to select "Renew Record" or "Save Record" to perform the relevant function.



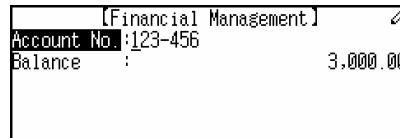

Press   to view the Account No. one by one; press   to turn pages to view.

 


Press  to view the details of the selected one



Press   to view the previous or next records.



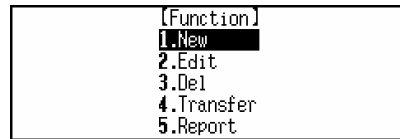


Press  to enter the Function Mode, press   and  or press the numeric key to perform the relevant



function.



New, Edit and Delete

 
Choose "New" to create a new record.
Choose "Edit" or "Del" to edit or delete record.


Note: Press  to create a new record, press  +  to edit record, press  +  to delete record.

Transfer

Choose "Transfer".

Input the transfer date "2001. 08. 15", press   to choose "Credit" or "Debit", then input transfer number "4,000".

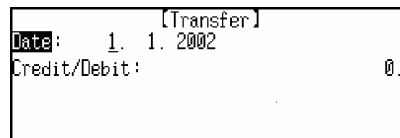

Press  to save the inputted data.

Note: Press  to select "Renew Record" or "Save Record" to perform the relevant function.

Press to view the Account No. one by one. Press to turn pages to view. Press to view the details of the selected one.

Press to select "New", "Edit" or "Del" to perform the relevant function.

Note: Press to create a new record, press + to edit record, press + to delete record.

Choose "Report" to view the content.
Press to select "Credit" or "Debit" to view the content.
Press to exit.

Account No :	123-456
Previous Balance :	3000
Total Credit :	4000
Total Debit :	2000
Next Balance :	5000

4.7 Loan-Bidding Scheme

It includes simple bidding and complex bidding, which can calculate correctly the total gain, annual interest rate, return, etc..

Enter "Loan-Bidding Scheme".
Press and , or press the relevant numeric key, or touch to select the item.

[Loan-Bidding Scheme]	
1.	Simple Bidding Calculation
2.	Complex Bidding Calculation

4.7.1 Simple Bidding Calculation

Input the data, press to get the result.
(After inputting an item, press or to move cursor to the next item for inputting.

[Simple Bidding Calculation]	
No. of Loan Raiser:	(3-100) [-]
No. of Bidders:	[-]
Principal:	[]
Bidding Offer:	[]

e.g. input the following data:

No. of Loan Raiser: 80
No. of the Bidders: 60
Principal: 500000
Bidding Offer: 360800

Press to get the result.

[Result]	
Total Gain:	32644800
Annual Int. Rate:	26.5255109541%

Note: When inputting data, press to select "Renew Data" or "Calculate" to perform the relevant function; press to clear the inputted data.

Press to enter the Function Mode

[Function]	
1.	Edit
2.	Renew Data

Press and or press the relevant numeric key to select the item.
 Choose "Edit" to edit the data.
 Choose "Renew Data" to input new data.
 Press to exit.

4.7.2 Complex Bidding Calculation

Press to choose "Internal" or "External", press then input the No. of Loan Raiser "5", press to input Principal "10000", press to move cursor to the next field, press again, then input Bidding Offer of each time one by one. e.g. input the Bidding Offer "1000" at the second time, "2000" at the third time, "3000" at the fourth time..., press to confirm after inputting.

```
Bidding:Complex Internal/External
No. of Loan Raiser:(3-100) [ 0 ]
Principal: [ 0. ]
Bidding Offer:(Press ENTER)
```

```
Bidding:Complex Internal/External
Input the Bidding Offer
Pr 2 nd Time: [ - 0. ]
Bi 3 rd Time: [ - 0. ]
4 th Time: [ - 0. ]
```

Press to enter the Function Mode
 Press and or press the relevant numeric key to select the item.

```
[Function]
1.Renew Data
2.Calculate
```

Choose "Renew Data" to input new data.

Choose "Calculate" to inquire one of the calculations.

```
Bidding:Complex Internal/External
No. of Loan Raiser: [ 5 ]
Principal: [ 0. ]
Bidding Offer: [ 0. times ]
Calculate [ 5 ]
```

e.g. input to inquire the third time.

Input "3", press to calculate the total gain, annual interest rate, total offer and return rate.

```
[ 3rd Time ]
Total Gain: 36000
Annual Int. Rate: 133.33333333%
Total Offer: 39000
Return Rate: -7.6923076923%
```

Renew Data

Press to select "Renew Data" to input new data.

Press to exit.

```
[Function]
1.Renew Data
```

4.8 Loan Interest

User can calculate the capital, annual interest rate, total interest and monthly payment of a certain period. You can also quickly look up the amount paid and loan left by a certain period of time.

Enter "Loan Interest".

Press or to select the item to input data (the unit cannot calculate if input error or incomplete data).

[Loan Interest]	
Start (Yr./Mo.)	: [2002/ 1]
Mortgage	: [0]
Annual Int. Rate	: [0 %]
Loan Period	: [0 Yr.]

e.g. input the following data:

Start (Yr./Mo.): [1999/08]

Loan : [40000]

Annual Int. Rate: [6%]

Loan Period : [5Y]

[Loan Interest]	
Start (Yr./Mo.)	: [1999/ 8]
Mortgage	: [40000]
Annual Int. Rate	: [6 %]
Loan Period	: [5 Yr.]

Press to calculate.

[Result]	
Monthly Payment:	773.312061178
Total Interest :	6398.72367068

Note: When inputting data, press to select "Renew Data" or "Calculate" to perform the relevant function; Press to input new data; Press to clear the inputted data.

Renew Data

Press to select each item to perform its relevant function.

Choose "Renew Record" to renew all the data. (Press to input new data.)

[Function]	
1.Renew Record	
2.Inquire	
3.Edit	

Edit

Choose "Edit" to edit the data (You can also press + to edit the data).

Inquire

Choose "Inquire" to look up the amount paid and loan left by a certain period of time.

e.g. to inquire loan return situation by August, 2001.

Input "2001/8", press to start calculation.

Press to view how much loan left.

Press to choose "Inquire" to input new Year/Month to start loan inquiry.

Press to exit.

[Loan Inquiry]	
Inquire (Yr./Mo.)	: 2002/ 1
Interest Paid	:
Principal Paid	:
Total Amt. Paid	:




[Loan Inquiry]	
Inquire (Yr./Mo.)	: 2001/ 8
Interest Paid	: 4106.14055585
Principal Paid	: 15226.6609735
Total Amt. Paid	: 19332.8015294


[Loan Inquiry]	
Inquire (Yr./Mo.)	: 2001/ 8
(Loan Left)	
Principal	: 24773.3390264
Amount	: 27065.9221412

4.9 Mathematics Formulae






This function provides user with mathematics formulae on different subjects for reference.

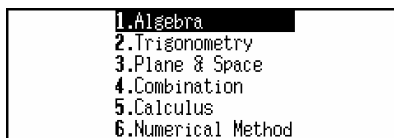Enter "Mathematics Formula".

Press   and , or press the relevant numeric key, or touch to select the item.





 
- 
- 1. Algebra
 - 2. Trigonometry
 - 3. Plane & Space
 - 4. Combination
 - 5. Calculus
 - 6. Numerical Method


e.g. choose "Trigonometry"

Press   to select the item one by one, press   to turn pages for choosing, then press  after selecting an item or press numeric key directly.

- 
- 1. Sum Of Angles
 - 2. Double Angles
 - 3. Triple Angles
 - 4. Half Angle
 - 5. Sum Of Squares
 - 6. Product \leftrightarrow Sum

e.g. choose "Double Angles".

Press   to view formula one by one
Press   to turn pages for viewing formula.
Press  to exit.

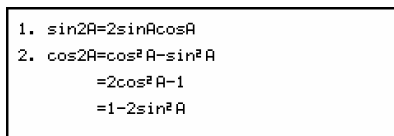- 
- 1. $\sin 2A = 2\sin A \cos A$
 - 2. $\cos 2A = \cos^2 A - \sin^2 A$
 $= 2\cos^2 A - 1$
 $= 1 - 2\sin^2 A$




one;

 
Chapter 5 Other Functions

5.1 Reference

This function includes English Name, Travel Guide, and Telephone Information for reference.

Enter “Reference”.

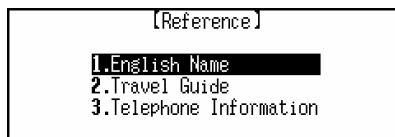


Press   and  or press relevant numeric key to enter the desired item.

 


5.1.1 English Name





 
It provides you with English names and it's Chinese translation of male and female for reference.

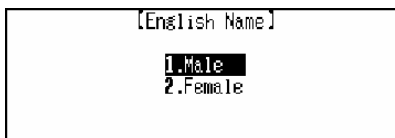Enter “English Name”.

Press   and  or press relevant numeric key to select “Male” or “Female”.

 


e.g. choose “Female”.

Press   to view one by one, press   to turn pages, or input English name directly, then press  to search.



e.g. input “Linda”.








Press  to escape.

 


5.1.2 Travel Guide

It provides data as follows: the names of airlines, airports, average temperature of different region, general information of major cities of the world, and travel reference for reference.


Enter “Travel Guide”.

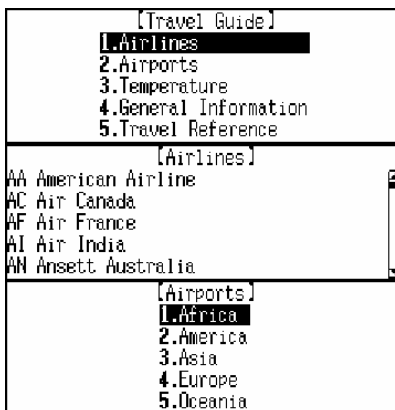

Press   and  or press relevant numeric key to select a desired item in the menu of Travel Guide.
e.g. choose “Airlines”. Press   to view one by one, press   to turn pages.



numeric key
Guide.

one by one,

 and
one of five

If choose “Airports” for reference, press   or press relevant numeric key to select any continents.

e.g. choose “Europe”.



Press or to search more airport information.

Press to escape.

e.g. choose “France”.

Press or to view its airport

Press to escape.



information.

5.1.3 Telephone Information

It provides five continental telephone information for you to make international telephone call conveniently.

Enter “Telephone Information”.

Press and or press relevant to select a continent.



numeric key

e.g. choose “Europe”.

Press to turn pages to search the desired country or district, press to select any one, then press to view its information.



 
e.g. choose “Spain”.

Press to view its information.

Press to escape.



Press to apply “Search by name” or “Search

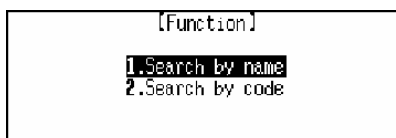

 
by code”.

Search by name

 
Choose “Search by name”, input the name and to view its information.

Search by code

Choose “Search by code”, input the code and to view its information.

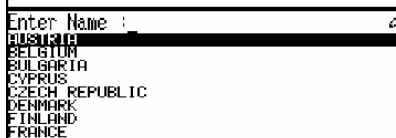

press

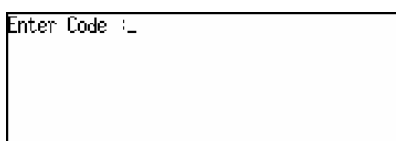

press

 
5.2 Revision Test

Revision Test consists of three tests: namely Oxford Revision, Chi-Eng Revision, and English Test. Relative records should be stored in each dictionary function before applying Revision Test.

Enter “Revision Test”.

[MD7250 User Manual]

Page

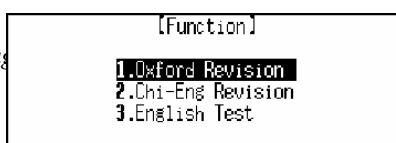 


Press and or press relevant numeric key to select the desired item.

5.2.1 Oxford Revision

Enter “Oxford Revision”.

Press and or press relevant numeric key to select a type of test. (If there is no record saved before, pop-up message “Not Found!” will appear.)

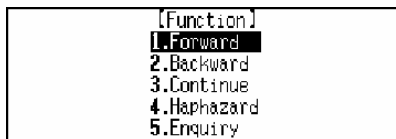

 
Enter “Enquiry”.

Input keywords or select the desired word directly displayed, and press to view its meaning.



from the list

Press to view other parts of the same record, press to view the previous or next record. Press to apply “Del Record”.

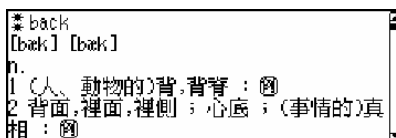

Press to hear the pronunciation of the headword.

Press to escape.

5.2.2 Chi-Eng Test

 
Please refer to the operation of “5.2.1 Oxford Revision”.

5.2.3 English Test

English Test is to input the correct English word or phrase according to its Chinese meaning.

Choose “English Test”.

Press and or press relevant numeric key to select an item.

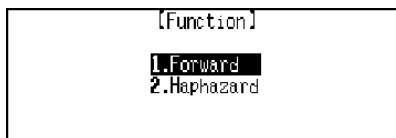 


numeric key

 
Press to view the previous or next test.

Press to choose “Answer” or “Result”.

Press to hear the pronunciation of the headword. Input word or phrase according to its pronunciation and Chinese meaning, and press to view the result (If the inputted word is right, “Right!” will appear; if wrong, “Wrong!” will appear).

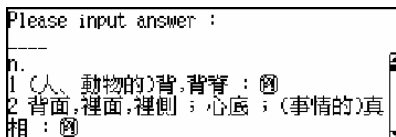 


Press to show the previous or next test.

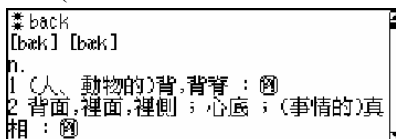

Press or to enter Function mode.

Press to view its result.

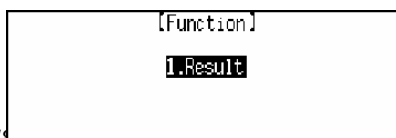

Press to escape.

5.3 Games

Press and or press numeric key to choose a game.



 
relevant

Note: If the game is locked by password set in “Game Lock”, you must input correct password before entering Games.

 
5.3.1 Brick Game

Enter “Brick Game”.

Press to enter the game.

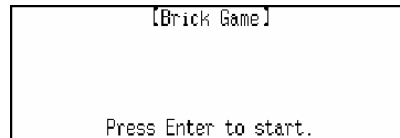 


Press to select a level, and press to start the game.

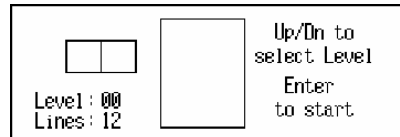

to start the

 
Press to rotate the brick, press to move the brick leftward, to move the brick rightward, press to make the brick down fast-moving.

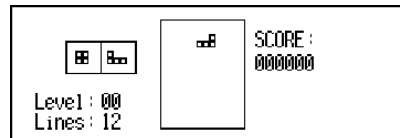

When a line is filled with the bricks, it will disappear completely, meanwhile the scores will be added automatically which is shown at the right top of the screen. Lines indicates the number of lines required to be filled in one-run. Press to pause the game, and press again to resume the game.

Press to change the falling speed of the bricks.

Press to apply “New Game” to restart the

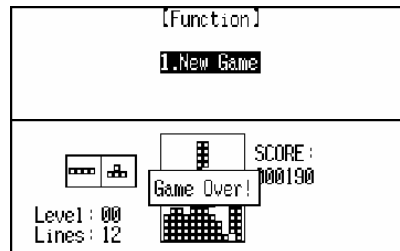

game.

 
As soon as no more bricks can fall down, “Game Over” will appear.

Over” will

 
5.3.2 Apple Chess

Enter “Apple Chess”.



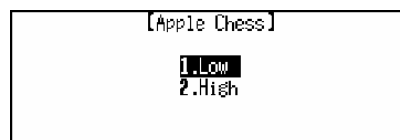


Press and or relevant numeric a level.

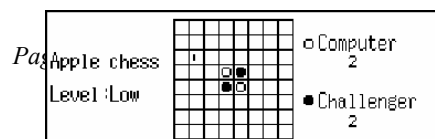 


key to select



e.g. choose “Low”.


Press     to move the cursor and press  to place a checker.

Press  to escape.

Games Rules:




Computer

 
You

The chess in traverse-line, longitudinal-one or oblique-one will be submitted to the opponent provided it's raided by the two-chess opposite. While confronting, if player shifts the cursor before pressing  but fail to raid the chess possessed by computer or the motion cursor is located in the checked frame that's fed up with chess, the computer indicates the sign “Invalid key”. When it's nowhere for you to place the chess, “ by Computer “ will appear, so computer will take its turn. If it's nowhere to place the chess for computer, you will be suggested as “By You”. While the chessboard is fully occupied, the party who has more chess is the winner.


5.3.3 Snake

Enter “Snake”.

Press   and  or press relevant to select a level.

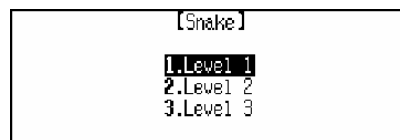





 
numeric key

e.g. choose “Level 1”. Press  to start the




game.

 
 
Press     to move the snake capture food.

Press  to escape.

head to




Games rules:

 
 Represents food.

When the snake head captures a grain of food, automatically the accumulative scores add 100, meantime the snake body is elongated by one-segment; press  to pause the game, re-press  to go on. As soon as the snake head touch its body or the fence-ridge, “Game Over!” is displayed. When you score up to 5,000, you'll see “Congratulations!”, and the game access to the next level automatically. The snake body here moves faster than that does at the first level, so does at the third level.

5.3.4 Shooting

Enter “Shooting”.


Press   and  or press relevant

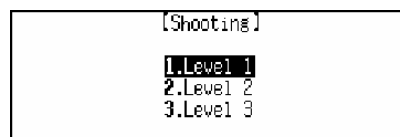 




 

numeric key

 
to select a level.


 
e.g. choose "Level 1".

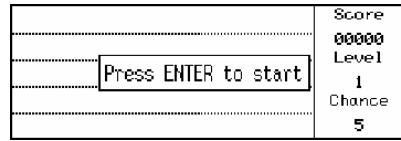Press  to start the game.



Press   to move the machine gun, and to shoot; press  to pause the game, and press  to resume the game.

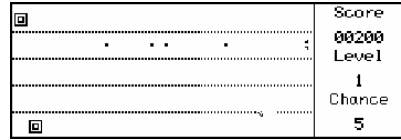

press   again

When the bomb or target is beaten, the system adds extra-scores automatically. Score is shown on the upper right corner, level is shown in the middle, and Chance is shown at the lower right corner. (When the gun touches a bomb or a target, the number of chances is deducted automatically.)



"Game Over!" will appear when 5 chances are used up, then the result appears automatically.



Provided the specific scores have been achieved, then goes to the next level at which the target and bomb move faster than the last level.

 
When you win the level 3 smoothly, the screen will display the message "Congratulations!". After a few seconds the result will appear automatically.

 
5.3.5 Riddle



Enter "Riddle".

Press   to view other parts of the riddle.

 to view the previous or next riddle. Press  to view the result.

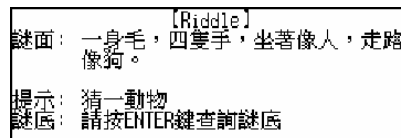Press  to escape.






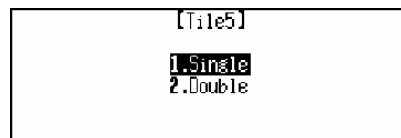 
Press   to

5.3.6 5-Tile

The player who can first place 5 consecutive pieces in a line first will be the winner.




Enter "5-Tile".

 
Press   and  or press relevant to choose one of the two types: "Single" and



numeric key "Double".


e.g. choose "Single".

 
Press   and  or press relevant to select a level.

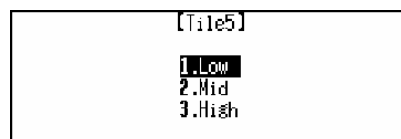




 



numeric key

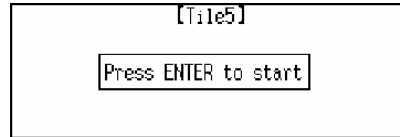 
e.g. choose “Low”.

Press  to start the game.






Press     to move the cursor, then press  to place a checker; press  to undo one step.

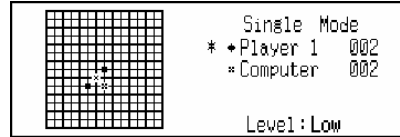 
Press  to escape.



 
5.3.7 Hangman

 
Enter “Hangman”.

Press   and  or press relevant to choose a level.

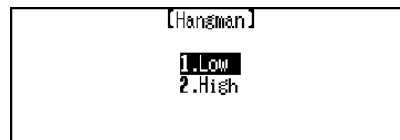

numeric key

 
Guess and input the word according to the pronunciation of the word by pressing . (The black boxes displayed in the guessing bar amount of the letters of the word).

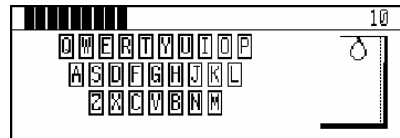 


number of indicates the


If correct word is inputted within 10 chances, the display “Right!”; otherwise “Wrong!” will appear, result will be displayed automatically.

Press  to view the result.

Press  to escape.

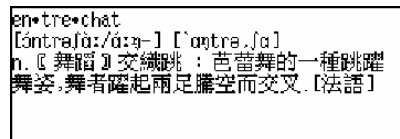




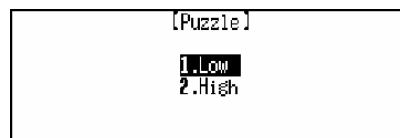 
screen will then the

Note: If the inputted letter is a part of the word, the black box(es) at the guessing bar will be discovered. When you input a right letter or press  to hear its pronunciation, one chance will be deducted. You will fail if you cannot guess the correct word within 10 chances.

5.3.8 Puzzle

Enter “Puzzle”.

 
Press   and  or press relevant to select a level.



numeric key

e.g. choose “Low”.


Press     to move the number

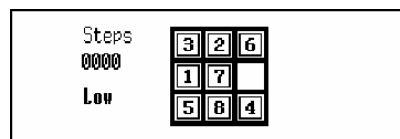

squares to line them up in sequential order.









 
(**Note:** There are eight numbers 1-8 in the game at low level, and fifteen numbers 1-15 at high level.)

 
While playing the game, press  to start another round of the same level.



Press  to escape.


5.3.9 Pipes

Enter “Pipes”.

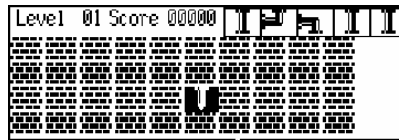Press   to select a level, and press   to confirm, then press     to highlight the desired brick, and press  to start the game.






Press  to pause the game, and press  again to resume the game.

Press  to escape.

Games Rules:




There are 3 levels in this game, 5 sub-levels in level 1, and you must pass the 5 sub-levels before entering level 2. In the first sub-level, you should make the water flow through 20 pipes, otherwise you will lose a chance; and after the water flowing 24 pipes you will enter Level 2. Like Level 1, the water should flow through 24-29 pipes before you can pass the relative sub-levels to enter Level 3. In Level 3, there is no sub-levels, if the water cannot flow through 30 pipes you will lose a chance, and you can play the game continuously until the game is over when 3 chances are used up.

 
There are 5 pipes that shown on the screen as hints. Press   to highlight bricks and , the first pipe from the left will be displayed, then the other pipes will be displayed randomly.

Once the water flows through a pipe, you will get 50 points. Highlight any pipe with no water in it can change its shape, but 50 points will be deducted every time.

5.3.10 Mine



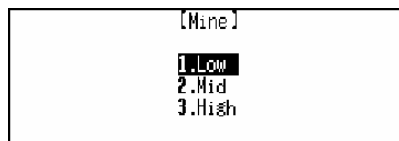

 

 
Enter “Mine”.

 
Press   and  or press relevant to select a level.



 
numeric key

e.g. choose “Low”.



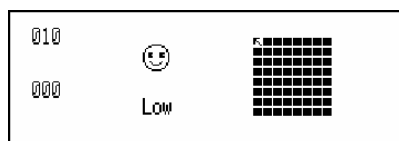


Press     to move the cursor to highlight the desired square and press  to open it; if you think there is a mine hidden in the square, press  to mark it and press  again to unmark




it.

Press  to escape.

You will win if you can mark all of the squares with mines within 999 seconds.






Press     to move the cursor to highlight a square, press  to open it, if there is a mine, it will explode; if there is a number (1-8), the number indicates how many mines are spread in the eight adjacent squares around this one, from which you can judge the way the mines are distributed.

 
When a game is over, press  to restart.

5.4 Data Deletion

The unit can delete the following data for once: Tel, Memo, To Do List, Schedule, Schedule Class, Solar Comm., Lunar Comm., Financial Management, Personal Information, C-E User's Dictionary, E-E User's Dictionary, Oxford Revision, Chi-Eng Revision. In addition, "Marked Records" can delete all the marked records, "Delete All" will delete all data including the password.


Enter "Data Deletion".

 
Press     and  or press numeric key to select the desired item.

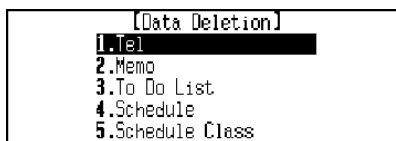 


relevant

e.g. choose "Schedule".

Press  to confirm deletion.

Press  to abort.

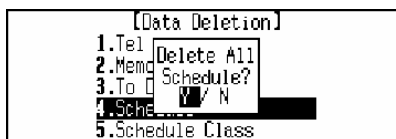




- Note:**
1. Only the unlocked records of Tel, Memo, To Do List, Schedule, Schedule Class, Solar Comm., Lunar Comm., Personal Information can be deleted if you choose these items to delete the information stored in them.
 2. All the records of Financial Management, C-E User's Dict., E-E User's Dict. Oxford Revision and Chi-Eng Revision can be deleted if you choose these items to delete the information stored in them.
 3. "Marked Records" can delete all the marked records.
 4. "Delete All" can delete all the information including password.

5.5 Display Setting

English display and regular/simple Chinese display are available.

Enter “Display Setting”.

 
Press   to move the cursor to select display language and press  to confirm.



desired

Note: 1. When a display mode is set, the original display mode will change to the new one automatically.

2. In English display format, all the display modes will be displayed in English.


Press  to switch to Chinese display mode.

 
3. In regular Chinese display mode, the handwriting pad can identify regular or simple Chinese character inputted by hand; but in simple Chinese display mode, the handwriting pad can only identify simple Chinese character inputted by hand.

5.6 PC SYNC

This unit can be connected to a computer and transmit data with each other conveniently and efficiently.

Make sure transmitting wires are properly connected before transmitting and data transfer is ready.




Press  to escape.

Press  to start transmitting data.

5.7 System Setting

A series of settings can be made in this unit, which will make this product more suitable to your operational needs.

Enter “System Setting”.



Press   and  or press relevant to select the desired item.




 
numeric key

 
5.7.1 Auto Power Off

Enter “Auto Power OFF”.

Press   to set the auto power off period.

Press  to confirm.

Press  to escape.

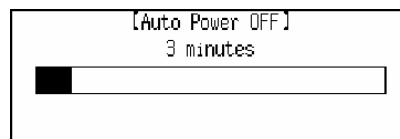

 
Note: You can set auto power off period from 1 to 30 minutes, the default time is 3 minutes. And it will switch off automatically when no key has been pressed or touched within the auto power off period. The period cannot be set 0.

5.7.2 Display Format

Enter “Display Format”.

Press or press relevant numeric key to display format or date display format, then press confirm.

Press to escape.

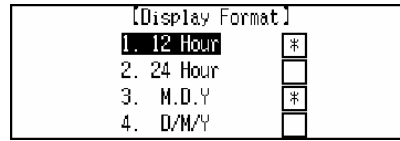

select time

to

Note: In English display mode, if “M.D.Y” is selected, then the date will be displayed in the format “DD.MM.YYYY”; if “D/M/Y” is selected, then the date will be displayed in the format “DD/MM/YYYY”.

 
5.7.3 Alarm Setting

Enter “Alarm Setting”.

Press numeric key to input time, and press , to choose On or Off.

Press to confirm.

Press to escape.

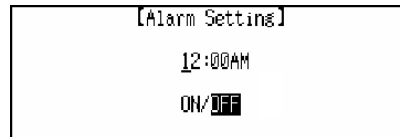

then press

Note: If set alarm on, the alarm will function upon the time even if the unit is power-off.

5.7.4 Sound & Speech Setting

 
Enter “Sound & Speech Setting”.

Press and or press relevant numeric key to choose the desired item.

 
Choose “Keytone & Alarm”.

Press to select “Keytone” or “Alarm”, to choose “On” or “Off”, and press confirm.

Press to escape.

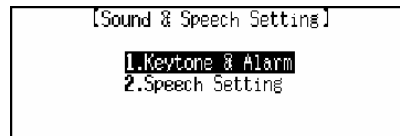

numeric key

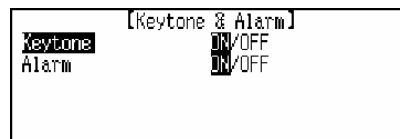

 
then press

to

Note: The default setting is Off, but if you set alarm on in other applications, the alarm sound will be turned on automatically; if the alarm sound is set off, the unit will be power-on upon the alarm time, but the alarm will not function.

Choose “Speech Setting”.

Press to select “speed” or “Frequency”, to adjust, and press to confirm.

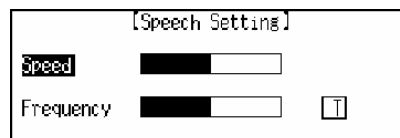

then press



Press

 
to escape.

 
5.7.5 Password Setting

Password is composed of 1-8 digital numbers or English letters, the marked records can be locked only when the password is set on. The locked data cannot be viewed unless the password is cleared or closed.

Enter “Password Setting”.

Input password, press  and input the again, then press  to confirm.

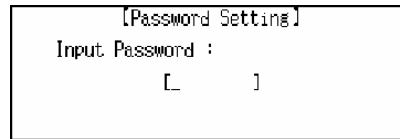



 

To clear the password, first enter Password Setting, and select “Clear Password”. Input the password, then press  to confirm, and the password will be cleared; if select “Password Off”, the password will be closed.



If you would like to set password on, enter Password Setting, and choose “Password On”, the password will be turned on.


5.7.6 Hot Menu Setting

You can set at most 10 hot menus for your convenience.

Enter “Hot Menu Setting”.

Press   to move the highlight bar and  to set hot menu, and press  to confirm.

Press   to turn pages to view other items.




 
 
Press  to escape.




5.7.7 Hotkey Setting

You can use Hotkey Setting to make shortcuts to some useful functions for you convenience.

Enter “Hotkey Setting”.

Press     and  or press relevant numeric key to select the desired item.



 
Press , Hot Key Setting screen can be shown at any time.

5.7.8 Calibration

Calibrate the unit to correctly recognize the position on the touch pad which the stylus is touching.

Enter “Calibration”.

Hit the corresponding position on the touch pad until calibration is OK.

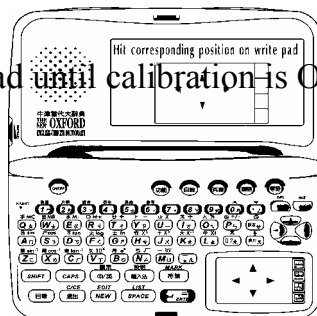

 
 
5.7.9 Game Lock

 
Set personal password for games. The password is composed of 8-digital number or English letters. The games will be locked only when the password is set on. You cannot enter Games unless the password is cleared or closed.

5.8 Memory Check

You can check the memory capacity (in percentage) left for use.

Enter “Memory Check”.

 

Press  or  to escape.

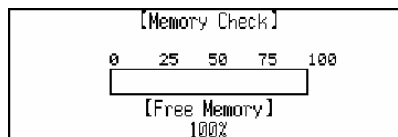 



 
5.9 Brief of Function

It provides you with introductions of all kinds of major functions.

Press   or   to view its content.

Press  or  to escape.

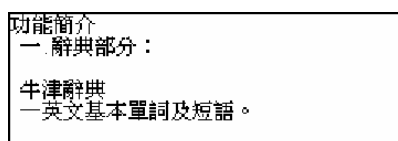 



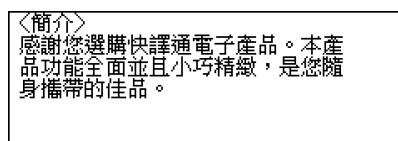 
Note: In each function mode, you can press  +  to get detailed introduction of the relative function.

5.10 Company Information

This function provides a brief introduction of our company.

Press   or   to view its content.

Press  or  to escape.



Chapter 6 Appendix

6.1 Chart of Cangjie Input Method

哲理類		筆劃類		人體類		字形類	
日	𠄎	竹	ノ 厶	人	亻 𠂇	尸	冂 冃 冄
	A	斜	H		O	側	S
月	冂 冃 冄	戈	ノ 厶	心	匕 𠂇 𠂈	廿	卅 卌 卍
	B	點	I		P	並	T
金	ノ 儿 八	十	宀	手	丰 𠂇	山	凵 屮
	C	交	J		Q	仰	U
木	十 ㇇	大	又 𠂇 𠂈	口		女	㇇ ㇈ ㇉
	D	又	K		R	紐	V
水	又	中	丨 𠂇 𠂈	難字	重字	田	口 母
彳	E	縱	L	X		方	W
火	灬 小 𠂇	一	㇇ 厶	造字	片語	卜	一 彳 卜
灬	F	橫	M	Z		卜	Y
土	土	弓	丨 𠂇 𠂈				
扌	G	鈎	N				

6.2 Chart of Wang Ma 5-strokes Input Method

	i 一 衣	u ㄨ 烏	ü ㄩ 迂
a ㄚ 啊	ia 一ㄚ 呀	ua ㄨㄚ 蛙	
o ㄛ 喔		uo ㄨㄛ 窩	
e ㄜ 鵝	i 一ㄝ 耶		üe ㄩㄝ 約
ai ㄞ 哀		uai ㄨㄞ 歪	
ei ㄟ 欸		uei ㄨㄟ 威	
ao ㄠ 熬	iao 一ㄠ 腰		
ou ㄡ 歐	iou 一ㄡ 憂		
an ㄢ 安	ian 一ㄢ 煙	uan ㄨㄢ 彎	üan ㄩㄢ 冤
en ㄣ 恩	in 一ㄣ 因	uen ㄨㄣ 溫	ün ㄩㄣ 暈
ang ㄤ 昂	iang 一ㄤ 央	uang ㄨㄤ 汪	
eng ㄥ 亨的韻母	ing 一ㄥ 英	ueng ㄨㄥ 翁	
ong (ㄨㄥ) 轟的韻母	iong ㄩㄥ 雍		

- Note:** 1. 韻母 儿 寫成 er, 用作韻尾的時候寫成 r
2. 韻母 ㄝ 單用的時候寫成 ê

The new Oxford English-Chinese Dictionary
© Oxford University Press 1989, 1993, 1997

TruVoice is a registered trademark of Lernout & Hauspie Speech Products N.V. in the U.S.A and other countries.

Copyright© 1996-1998 Lernout & Hauspie Speech Products N.V., All rights reserved.

The ULC15 voice compression software in this product is owned by and proprietary to Voxware, Inc.

中文手寫輸入法由北京漢王科技有限公司授權使用。

Contact:

Website: www.gsl.com.hk

Email: gsl@gsl.com.hk

Addresses and telephone numbers of GSL branches, please refer to the appendix of the warranty card.

Manufacturer: Group Sense Ltd.

Address: Caiwu Industrial Park, Wusha, ChangAn, Dongguan, Guangdong, People's Republic of China

Due to a huge database, mistakes are inevitable despite the great effort we have made to minimize them. We apologize for any defects. Your invaluable comments are therefore highly appreciated.

We strive for the improvement of product quality and release upgraded versions constantly, so all upgraded versions are subject to changes in their features, specification and design without further notice.