



## Operating and Maintenance Instructions

### WARNINGS



T/POWER system users must be familiar with workplace hazards prior to using the equipment and must be fully trained in the use of the apparatus.



T head-tops must be used with a T/POWER blower. Read this Manual in conjunction with the appropriate User Manual for the air-supplying device prior to using the equipment.



T/POWER must be fitted with filters selected from the PF or TF range of filters which are appropriate for the workplace hazard.



This product must only be used with Protector-branded filters manufactured by Scott Health and Safety Limited. The use of any other filters will negate the approval and will be likely to reduce the level of protection provided.



DO NOT confuse the AS/NZS1716 : 2003 filter markings with filter markings relating to any other standard.



Ensure that your selection of respiratory protective devices conform to the requirements AS/NZS1715 : 2009.



DO NOT use T2 in confined spaces, oxygen deficient atmospheres (<19.5%), oxygen enriched atmospheres (>23%) or where there is an immediate hazard to life or health.



DO NOT use the hood if the ambient temperature is outside of the range -10°C to +50°C. Humidity levels up to 95% RH do not present any operational problems.



DO NOT use if the apparatus is damaged. The head-top and air hose must be inspected on every occasion before use to ensure that no damage of any kind is evident, (eg chemical damage, splits or broken stitching), which could cause leakage or reduced levels of protection. A monthly inspection of the apparatus is strongly recommended.



Protection will only be obtained if the unit is fitted correctly.



Protection levels may be reduced if wind speed exceeds 2 metres per second.



In the unlikely event that the air-supplying device fails while in a hazardous area, there may be a depletion of oxygen within the head-top. DO NOT remove the head-top, LEAVE THE AREA IMMEDIATELY.



T head-tops can be used in certain explosive and flammable atmospheres when used with T/POWER which is marked as intrinsically safe. It is the employer's responsibility to ensure that the intrinsic safety approval is compatible with the particular environment.



At very high work-rates, pressure in the device may become negative at peak inhalation flow.



It is unlikely that the requirements for leakage will be achieved if hair, spectacle side arms or clothing intrude into the face-seal.



Filters must not be fitted directly to the helmet/hood.

## SPECIFICATION

Description:		Full Hood and Cape
Classification when used with:	T/POWER & T2 or T2/AS T/POWER & T2/SU	AS/NZS1716 : 2003 PAPR-P2 AS/NZS1716 : 2003 PAPR-P3
Minimum Design Flow Rate when used with:	T/POWER	140 L/min
Required Minimum Protection Factor (RMPF) * when used with:	T/POWER, with T2 or T2/AS & Particulate Filters T/POWER, with T2 or T2/AS & Gas/Vapour Filters T/POWER, with T2/SU & Particulate Filters T/POWER, with T2/SU & Gas/Vapour Filters	Upto 50 x RMPF Upto 10 x RMPF Over 100 x RMPF Upto 10 x RMPF
Maximum Gas/Vapour Concentration present in the air when used with:	T/POWER	1000 ppm (by volume)
Operating Temperature Limits:	Hood Air-supplying device	-10°C to +50°C Refer to User Manual for air-supplying device being used.
Material:	Hood  Visor	Polyurethane-coated nylon or polyurethane encased between two layers of textured non-woven polypropylene. Acetate
Weight:		290 Grams

\* According to AS/NZS1715 : 2009

## SELECTION OF AIR-SUPPLYING DEVICE

The following table identifies which air-supplying device(s) is/are approved for use with each type of T2 head-top:

Type of Head-top		Type of Air-supplying Device
Part No.	Description	T/POWER
T2	Full Hood and Cape - Standard	✓
T2/AS	Full Hood and Cape - Anti-static*	✓
T2/SU	Full Hood and Cape - Single-use	✓

\* Anti-static, surface resistivity of less than  $1 \times 10^{12}$  Ohms.

## MARKINGS AND MEANINGS

The T2 head-top markings are in conformance with AS/NZS1716, as follows:

Marking	Meaning
SCOTT	Manufacturer - Scott Health & Safety
T2	Product name - T2 Standard
T2/AS	Product name - T2 Anti-static
T2/SU	Product name - T2 Single-use
0086	Certifying body - (BSI)
AS/NZS1716	Australian/New Zealand Standard
PAPR-P2	Class designation - T2 & T2/AS
PAPR-P3	Class designation - T2/SU

## WEARING

### Note:

Remove the protective transit film from the outside and inside surfaces of the visor before donning.

### CAUTION:

**Whilst the materials which may come into contact with the wearer's skin are not known to be likely to cause skin irritation or other adverse effect to health, they may cause allergic reactions in particularly susceptible individuals.**

1. Pull the face-piece over the head so that the visor is in front of the face. If necessary adjust the **Velcro™** over-head strap for a comfortable fit.
  - **T2 and T2/AS:** adjust the drawstring for a comfortably tight fit around the neck.
  - **T2/SU:** using the external tab on the hood, pull the seal over the chin until a comfortably tight fit around the neck is achieved.
2. Ensure that hair and clothing are NOT trapped in the seal.
3. Arrange the breathing hose so that it trails freely down the back and is not kinked or looped.
4. For further information, please refer to the User Manual for air-supplying device being used.

## AFTER USE

### WARNING:

**DO NOT remove the face-piece until safely clear of the hazardous area.**

1. Remove the hood, disconnect the hose and (if required) use a sponge moistened in warm water to clean and sanitise the face-piece and outer hose.

### CAUTION:

- **DO NOT use solvent or detergent cleaners as they may cause damage.**
  - **DO NOT allow water to enter the breathing hose.**
2. Care should be taken not to scratch the visor. If the head cover or face-seal is damaged in any way, it should be replaced.

## STORAGE

When not in use, the equipment should be stored in a clean, dry environment, away from direct heat sources between +10°C and +30°C, at a humidity of less than 65% RH.

## MAINTENANCE

Carry out a thorough inspection of all component parts before and after each occasion of use, paying particular attention to the exhale valve flap. The valve flap must be replaced annually regardless of condition. Valve flaps in storage have a shelf-life of five years, after which time they should be discarded.

Exhalation valve flaps are marked with a code indicating the year of manufacture. The code '07' corresponds to 2007 and a dot is added each year thereafter, so '07.' would equate to 2008.


## RECORD INSPECTION AND MAINTENANCE DETAILS

Record test and maintenance details on the Inspection and Maintenance Record Sheet provided at the back of this Manual.

Information recorded usually includes:

- Name of employer responsible for the apparatus.
- Make, model number or identification mark of the apparatus, together with a description of any distinguishing features, sufficient to enable clear identification.
- Date of the inspection/maintenance together with the name, signature or unique authentication mark of the examiner.
- Condition of the apparatus, details of any defects found and any remedial action taken.

SPARE PARTS

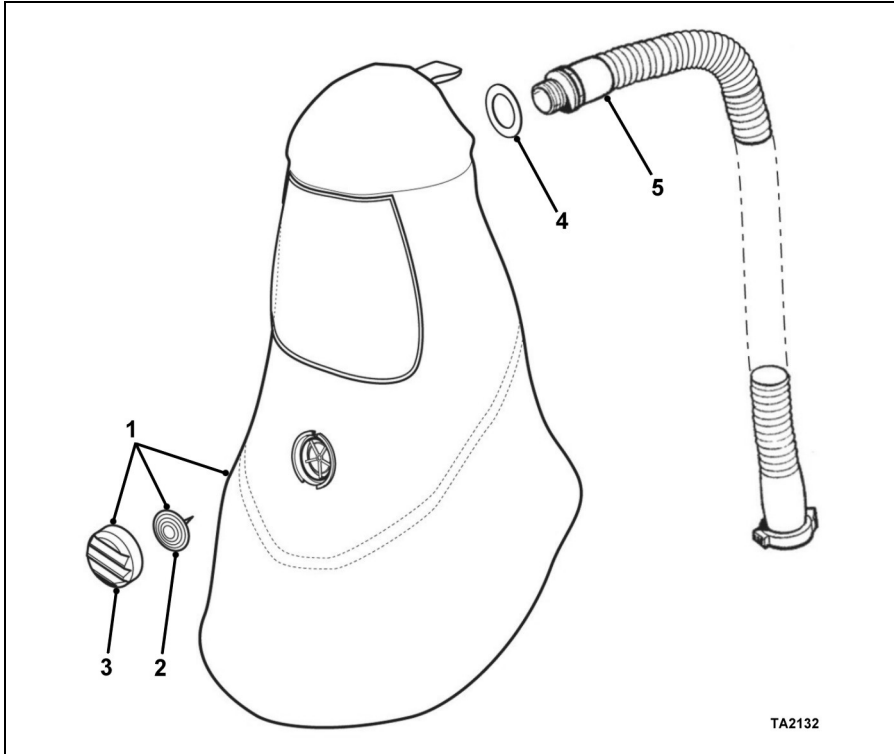

TA2132

Item No.	Description	Part No.
1	Hood - Standard	(Pack of 5) T2/HOOD
1	Hood - Anti-static	(Pack of 5) T2/HOOD/AS
1	Hood - Single-use	(Pack of 5) T2/HOOD/SU
2	Exhale Valve Flap	(Pack of 2) TOR/VALVE
3	Exhale Valve Cover	(Pack of 5) 2017146
4	Support Washer	(Pack of 5) 2016236
5	Breathing Hose	(Pack of 3) T2/HOSE
-	Tear-off Visor Cover	(Pack of 10) KIT96/VP

---

## FITTING SPARES

### To Replace the Hose:

1. Undo the nut on the rear inner hood, remove the support washer from the end of the hose and withdraw the hose.
2. Insert the new hose into the hood, fit the support washer over the end of the hose and secure with the nut. Ensure that both layers of hood fabric are trapped under the washer.

### To Replace the Exhale Valve:

1. Pull the valve cover from the valve and pull the exhale valve flap from its housing.
2. Fit the replacement valve and check that the valve flap lies flat on the frame. Align the valve cover with the slots in the valve and snap it onto the valve.

## WARRANTY

The products manufactured at our factories in Skelmersdale and Vaasa carry a warranty of 12 months (unless stated otherwise) for parts, labour and return to site. The warranty period runs from the date of purchase by the end user.

These products are warranted to be free from defects in materials and workmanship at the time of delivery. **SCOTT** will be under no liability for any defect arising from wilful damage, negligence, abnormal working conditions, failure to follow the original manufacturer's instructions, misuse or unauthorised alteration or repair.

Evidence of purchase date will need to be provided for any claims arising during the warranty period. All warranty claims must be directed through **SCOTT Customer Services** and in accordance with our sales return procedure.

## NOTIFIED BODIES

Inspec International Limited (0194)  
56 Leslie Hough Way,  
Salford,  
Greater Manchester,  
M6 6AJ,  
England.

BSI Product Services (0086)  
Kitemark House,  
Maylands Avenue,  
Hemel Hempstead,  
HP2 4SQ,  
England.

SAI Global  
286 Sussex Street,  
Sydney,  
NSW 2000,  
Australia.

Certificate No. SMK1214