 


**MEIZU**  
*by* **DANE-ELEC**  
Portable Media Player

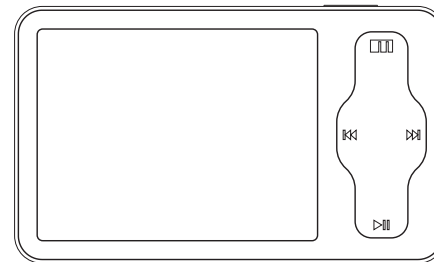

SL Version  
**miniPlayer**

**MEIZU**  
*by* **DANE-ELEC**  
Portable Media Player

Welcome to DaneDigital website!

The DaneDigital home page provides the overview of company and products, other related information, and answers to common questions.

Firmware and software updates are also available as well as the most recent information about your Meizu by Dane-Elec product.


[www.danedigital.com](http://www.danedigital.com)



## Welcome
 
### 1 Getting Started

3

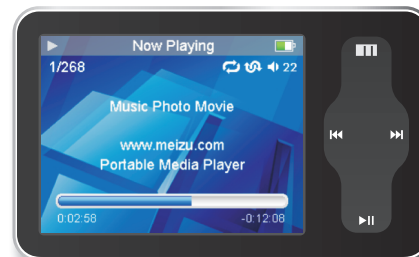

Thank you for purchasing the product.  
Please read the manual carefully before use.  
We recommend you to keep it for future reference.

## Table of Contents

### 1. Getting Started

• Important Cautions	7
• Copyright Notice	8
• Product Features	9
• Package Contents / Parts and Names	10-11
• Protection Film on the Player	12
• Touch Keypad	13
• LCD Display	14-16

### 2. Basic Operation

• Connecting Mini Player	17-19
• Using for the First Time	20
• Installation CD	21
• Downloading from the PC	22-23
• Saving Files & Disconnecting to Your PC	24

## Table of Contents

### 3. Quick Start

• Using Buttons / Menu Controls	25-27
• Using Browser / Listening to Music	28-29
• Update the Music Library / Sorting the Music Library	30-31
• Playback Mode / Sound Effect	32-33
• Spatializer Sound Effect / Equalizer	34-35
• Volume Restriction/ Displaying Lyrics	36-37
• Photo Library / Slideshow Settings	38-39
• Converting Video Files	40-43
• Play Video / Video Settings	44-45

## Table of Contents

• Voice Recorder	52-53
• Play Recorded Files	54
• E-book	55
• Games & Tools	56-57
<b>4. Menu</b>	
• Detailed Features by Menu	58-66
<b>5. Guide to Firmware Upgrade</b>	
• Upgrade Firmware	67-69
<b>6. Additional Information</b>	
• Format	70-72
• Handling Instructions	73
• Precautions for Using the Product	74
• Trouble Shooting	75
• Product Specifications	76

## Important Cautions



### Turn On / Auto Power Off

To power on the player, make sure it has enough power, press the Power On/Off button for over 3 seconds. Click it again to start play. When there is no button operation for about 3 minutes while the player is stopped, it is automatically turned of. To power off the player, press and hold the Power On/OFF button until it finishes with shutting down procedure.



### Reset Mini Player

When it is dead caused by improper operation, you have to reset your mini player. Disconnect it to a USB cable or AC Adapter, press and hold on the Enter key for over 12 seconds to reboot.



### Update Music Library

After finish copying the music, using Main Menu-Music-Update Music Library on the player before your listening music so that you can organize and assort them by artist, album or genre. Otherwise, you can only browse the new copied songs from All Songs on the player.



### Initialize OS to the Original Factory Settings

When it is not able to turn on and disable connecting the player to your PC after resets, please click and hold the Next key (▶) and Power On/OFF button for about 8 seconds to initialize the OS to the original factory settings. All data will be deleted in the player.



### ■ General

### ■ Copyrights/Trademarks

This product is the registered trademark of Meizu Technology Co., Ltd.  
Meizu Technology Co., Ltd, has the exclusive copyright for this User Manual.  
It is prohibited to distribute this User Manual in part or in whole without permission.  
Meizu Limited, Has the copyright for the product software.

It is prohibited to distribute or commercially use them without written permission from Meizu Limited.

The various examples, drawings and pictures and included in this User Manual are subject to change without prior notice when new product enhancements become available.

Do not change or modify the product without permission or authority of manufacturer. It may cause undesirable operations, permanent damages or harmful interferences.

Windows 2000, Windows XP and Windows Media Player are the registered trademarks of Microsoft Corp.

### ■ Certifications

CE, FCC, CCC

- Stylish and Luxurious Design with High Portability  
Mini Player has a Super mini size with High Portability, and Boasts a Stylish and Luxurious Design with Stainless Steel Surface.
- Large & Vibrant LCD with Dynamic GUI; Human User Sliding-touch Keypads
- 2.41 Inch 260,000 Color QVGA 320\*240 TFT-LCD
- Professional Spatializer Sound Effects, Various and Adjustable EQ Modes  
Including: User adjustable POP, Classical, Rock, Jazz, Live, Bass Booster, User.
- Supports WMA, WMA VBR, WMA Lossless, WAV, OGG, Flac, APE Playback
- Movie Player(AVI video files), Game, Calculator, Calendar and Stopwatch
- Real-time Clock Setting
- Photo Album + Slide Show: JPG, BMP, GIF Formats
- Music library, Playlist Setting, MTP and MSC mode, Easier and Faster to search music
- Support DRM10
- Plays Up to 26 Hours for Music Playback (Based on our company's test)
- High Speed USB2.0 Ultra Fast Data Transfer
- High Capacity USB Flash Storage for Removable Disk
- Built-in Microphone Supports High Quality Recording
- Synchronized Song Lyrics Display and ID3 Supported
- Text Reader (TXT)
- Multiple Language Supported
- Resume Function
- Power Saving Function: Auto Power OFF and Sleep Timer
- Hold key Function
- Firmware Upgradable

## Package Contents



 
Mini Player Main Body



Quick start



Earphones



USB Cable



Installation CD

Note: Design and specifications are subject to change without notice.

## Parts and Names

### 1. Top

 
HOLD



### 2. Front Side




### 3. Right Side

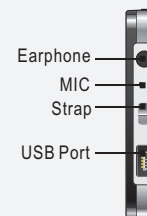

## Protection Film on the Player

### ■ Protection Film on the Front Panel

 The surface of player is easy to be contacted with other objects during use. To protect the player from scratches, the front and rear plate surfaces of the player are attached the transparent protection films. The films are featuring high light transmittance, anti-reflection and abrasion-resistance. Please keep the film on the front panel of the player.

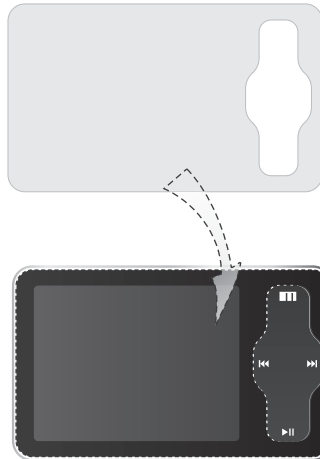

The surfaces of the player are attached with the protection films before leaving factory.


Please do not peel off the Mask!

## Touch Keypad
 
### ■ Touch Keypad

Touch keypad is an important part of the player, including sliding touch control and key operations, which used for controlling operations of all kinds of functions of the player.


#### Sliding touch keypad:

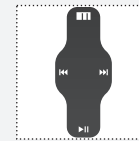

Touch keypad




 Lay your finger on one end of keypad

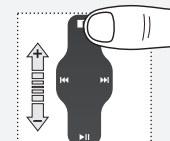


Sliding lightly on keypad


#### Clicking Key:

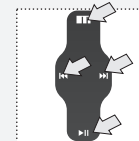 

Key positions

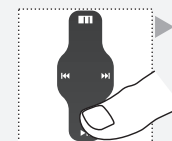 

 Lay your finger on key positions of keypad

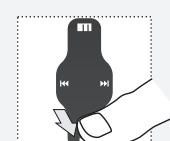


Press lightly

1. While HOLD is locked, any operation will be invalid.
2. Too fast operation will be easy to cause error.
3. Slide your finger on the touch keypad up and down to reach the desired operation.
4. Click Enter key or the center keypad to enter the sub menu interface or execute an operation.
5. Clicking Menu key to go back to the previous menu interface or cancel an operation.
6. Click Next key to enter the sub menu interface.

## LCD Display

 
### 1. Play Music

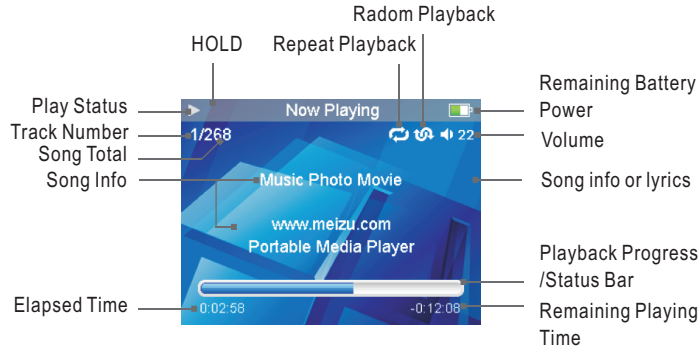

In the playback mode, the playback progress bar shows the elapsed and remaining time of current song. Slide your finger on touch keypad up and down to adjust the volume. Click Enter key, the sliding bar will display a diamond object in the bar. It shows the current playback position. Slide your finger on touch keypad up and down to move playback position forward or backward. Click Enter key again, it shows the song's detailed information. Click the key once again, it displays dynamic frequency spectrum (it does not support for FLAC/WMA lossless/APE file). Click Enter, return to normal playback mode.

## LCD Display
 
### 2. Video Playback

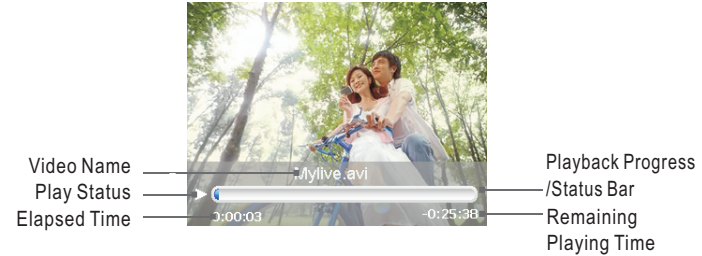


### 3. Photo View



## LCD Display
 
### 5. MIC Record

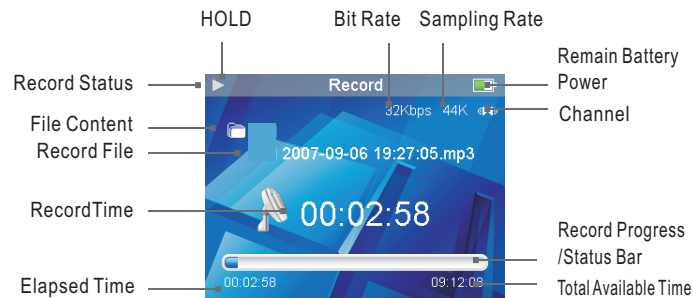


## Connecting Mini Player

### ■ Connecting Mini Player


#### Connecting to a Computer

 Connect the small end to player, large end to PC.

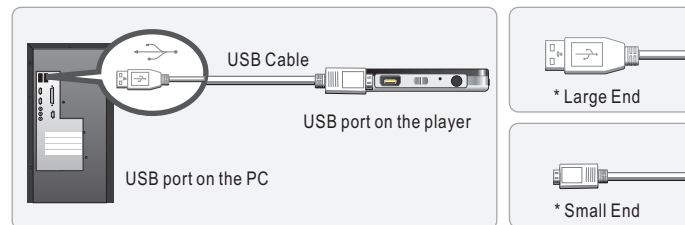

#### 1. During Power Off

 Connect it to the computer using the USB cable supplied in the package during the player powered off. It will be charged using the power supply from the PC.

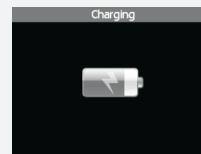

Connecting to a computer during it power off, it will charge its built-in battery and appears as the left figure.

## Connecting MiniPlayer

### 2. During Power On

Connect it to the computer using the USB cable supplied in the package during the player powered on. It will charge its built-in battery and appears as the figure.



In the normal Windows environment, as soon as the cable or simple USB jack is connected, the message "Searching for new device" appears and USB driver is installed automatically. For Windows 98SE, put the included CD-ROM in your disk drive, then follow the instructions on your PC screen to install the USB drive.

Note: While connecting to PC, tracks and operations cannot be applied. Pulling out the PC connection cable from the player before your listening to music / viewing a picture and so on.

### ■ Charging the Battery

- \* Charging the Battery before using your player.
- \* While the player is connected to the computer via USB cable, it will charge its built-in battery. The battery is fully charged in about 3 hours.
- \* Check if the player is connected to a high-power USB2.0 port. Some low-power USB ports available in keyboards and other USB hubs may not provide enough power to charge or sync the player.
- \* If the computer is in sleep mode, the player may not be charged.

The Remaining Battery Charge icon indicates the remaining time the battery can be used. The more the battery is used, the fewer the number of segments in the icon.

This page was intentionnaly left blank

## Using for the First Time

### ■ Using for the First Time

#### Handling



If you grab the player as picture, it is easier to handle them.



#### The procedures of using for the first time

1. Insert the installation CD in your computer and install applicable softwares.  
(Detail see to 21 Install CD.)
2. Click and turn on your player.
3. Connect the player to the computer using the USB cable supplied.
4. Open up the [Removable Disk](which represents the memory of this player) on My Computer.
5. Transfer the desired files from PC into your player under their specified directories.  
You can also create folder for your need, such as Ebook.
6. Safely disconnect the USB cable to the player.  
(All keys of the player can not be operated during connecting to PC.)
7. Plug the earphone to the player.
8. You can now use the player to play music, video, view your favorite photographs and a lot of other features.

## Installation CD

### ■ System Requirement

Pentium 133MHz or Higher  
32MB Main Memory or Higher  
40MB Hard Disk Space or More  
CD-ROM Drive  
USB Port (2.0)  
Windows 98SE/ ME / 2000 / XP

### ■ Install Software

Insert the installation CD into the CD-ROM drive. The following screen appears after inserting the CD.

The installation CD contains the following contents:

- Device Driver for Windows98
- Video Converter for MEIZU MiniPlayer
- Video Converting Tools

(Note: Window 98 driver is only required for OS with win 98 or lower version.

If you are using Win2000 or above, you will not need to install driver. The PC will automatically recognise the player when it is connected. The video convert tool installation is required for video conversion. When installation is automatically not started, execute the setup.exe in the installation CD, and then the Manager program is automatically setup.

 


## Downloading from the PC


### ■ Music files can be transferred to the player using the following steps, set MSC as USB mode.

Access from a CD or download music, video or picture files from internet and transfer to your PC hard disk, then transfer them to your player's Removable Disk. Take example for copying songs as below,

- 1 Select the desired music to download to the player from the computer.

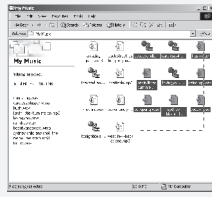

- 2 Click the [Edit] - [Copy] Menu.

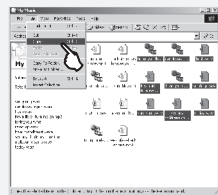 


- 3 Double click [My Computer], then [Removable Disk] again.




The player is shown as the Removable Disk on your PC.

 Note: you can also drag and drop the selected files from your PC into the [Removable Disk] window.

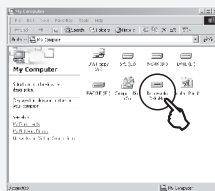


## Downloading from the PC

 
- 4 It appears on your PC as shown in the figure as follows (while finish formatting).

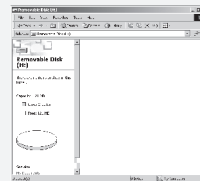

- 5 Select [Edit] - [Paste].

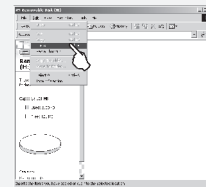 

 - 6 After finishing copying, it appears the music files on the Removable Disk. Disconnect the player to your PC, then you can start listening to the music.

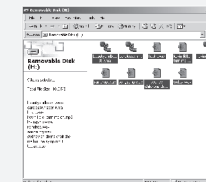


 
When copy files, you should save the video and photo files to specified directories of the player, video files into Video directory, photo files into Pictures directory. Otherwise, they won't be identified by Mini Player.



## Saving Files & Disconnecting to Your PC

### ■ Saving Files and Disconnecting to your PC Copy the Files in the Player into your PC

1. With the USB cable, connect the USB ports of the player and your PC.  
(It should not use a USB hub. It is assumed that you connect to the USB port on the main board.)
2. Save the music files under the hard disk on your PC.
3. After saved the files, click the icon  on the screen of your PC.



4. It pops the message as above, then click it.

 


5. It runs 'Safely Remove Hardware'.
6. Then draw out and disconnect the USB cable.

To make sure to save the data on your player safely and fully, please follow the above steps accordingly when you disconnect the player to the PC. While disconnecting, it appears the warning, click OK and finish it.



## Using Buttons


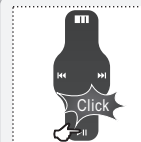


### 1. Power On

Click the Power ON/OFF button, the power comes on and MEIZU logo appears.





  Press the Power ON/OFF button again, start to play. If it displays no file, pls run Update Music Library (Detail see to 30 Update the Music Library.)

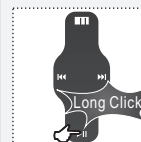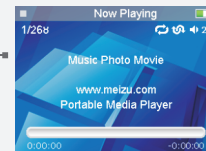


### 2. Power Off

  When you press and hold the power ON/OFF button for about 3 seconds, the power turns off. If the PC and the player are connected via a USB cable, you cannot turn the power off.

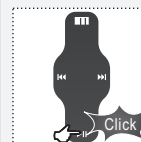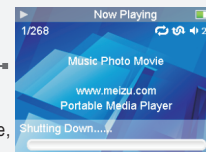


### 3. Playback & Stop

 Press ON/OFF briefly, start to play.  
Press it again while in Play status, the play stops.

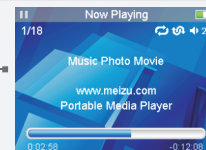

## Using Buttons
 
### 4. Hold

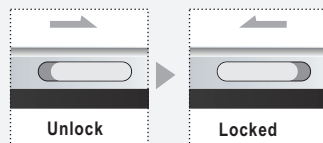

By turning Hold ON, all the keys on the player will not function. It is irrelevant while listening to music.

### 6. Reset



If the player stops responding, please reboot it: Long click the Enter key for over 10-sec to force shutdown, then press ON/OFF to turn on the player.

### 9. To select music

⏮ To select previous music ⏭ To select next music

### 10. Initializing the operating system in the player

A. Click and hold the Next key and then hold the power ON/OFF button, do not remove your finger until it appears the yellow screen. Then it initializes the OS to the original factory settings. All data will be deleted.

B. Click and hold the Previous key and then hold the power ON/OFF button, do not remove your finger until it appears the purple screen. After 2 seconds, it appears the green screen, then it initializes the OS to the original factory settings. All data will be deleted. After finish this, you may need to download the firmware package from internet and operate the upgrading. (Detail see to Page68 Upgrading Product Firmware)

### 5. To adjust the volume in the music operation menu, sliding your finger on the touch keypad.

→ To increase volume  
← To decrease volume  
in the video operation menu, click the Menu key to increase

volume click the Enter key to decrease volume.

### 7. Menu

Press the Menu briefly to Main Menu or move to the upper folder

 
### 8. Display off on LCD

Long click Menu key for


this effect, click Menu key again to resume the display.

## Menu Controls


### Menu Controls

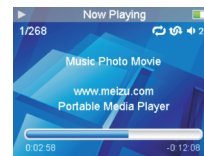


Click the Menu key briefly

 

Sliding up and down on the touch keypad

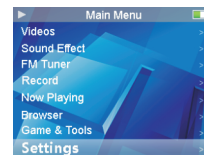 

Click the Enter key briefly

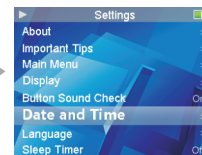 

Click the Menu key to exit

### Select the Menu Options

 
Click the Menu key to go back to main menu, sliding the keypad up and down to select the menu options. Click the Enter key or Next key, then enter the submenu (submenu is available when there is ">" symbol on the right of menu item). Click the Menu key to the upper menu (it will return to current playback interface, when you operate on top menu).

### Adjust the Values


Enter the Settings from main menu. Sliding on the keypad up and down to adjust the values. Press the Enter key and the options applied. During the selection, click the Menu key and exit.

## Using Browser


### ■ Using Browser

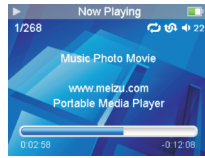


Click the Menu key briefly

 

Sliding up and down on the touch keypad

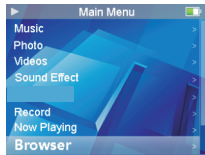 

Click the Enter key briefly

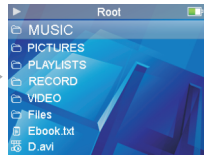 

Click the Menu key briefly

#### Open Browser

 
 
 
 
 
 
Click the Menu key, sliding the keypad up and down to select Browser option.  
Click the Enter key to apply it.  
Sliding on the keypad up and down to select the submenu options.  
Click the Menu key and return to the upper menu or playback mode.

#### Play Music

There pops up the following functions after you select Music folder or a song,  
1. Play 2. Add to Current Playlist 3. Add to My Playlist.

## Listening to Music

### ■ Listening to Music

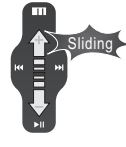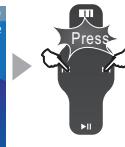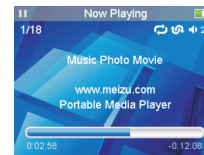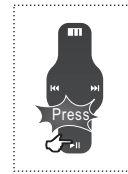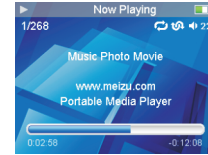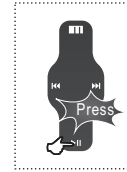

You can conveniently navigate through your music files and listen to them. Select Music in the main menu. Slide up/down to browse for a song by Artist, Album, Genre, Rate and Playlist. Select the desired song/playlist and click the Enter key to play. Click the Previous/Next key to previous/next music, slide up and down on the keypad to adjust the volume. You can conveniently transfer your favorite music to the player. It supports following audio format: WMA (VBR): 8 Kbps ~ 355 Kbps

WAV: PCM, MS-ADPCM, IMA-ADPCM OGG: Q1 ~ Q10, and etc.

Note: 1. If the keys cannot function, please check if the HOLD is on.

2. Continuous playback time: About 26hrs (128kbps/volume 20/EQ normal/LCD off)

## Sorting the Music Library

 
## ■ Sorting the Music Library



Click the Enter key briefly



1. Click the main Menu key and select Music mode.
2. Click Enter key - Update the Music Library, then the option is applied. During the updating, it will take you a few seconds.
3. When finishes, it returns back the menu options automatically.



## Playlist

b. **Save Playlist.** After finishing adding the songs, select **My Playlist - Save Playlist** and click the **Enter** key to apply it. Folder names are created automatically as **PLAYLIST1**, **PLAYLIST2**...

**Artists** Assorting by all artists and unknown artists.

 
**Albums** Assorting by all albums and unknown albums.

**Song Order** (assort All Songs only). You can assort the songs by Title, File name, Artist and Album.

During Main Menu - Music - All Songs/Playlists/Artists/Albums, press the Power ON/OFF button, it will start to play the songs on the current item.

## Playback Mode

### ■ Playback Mode

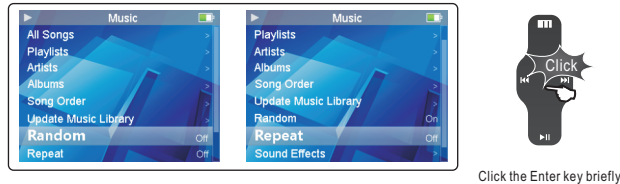

#### Random playback

 
This sets whether or not to play randomly. Click the Enter key and select On, the next playlist is played randomly.

#### Repeat playback

Click the Repeat option in the controls window, then click the Enter key and select On, the next playlist is played repeatedly.

## Sound Effect

### ■ Sound Effect

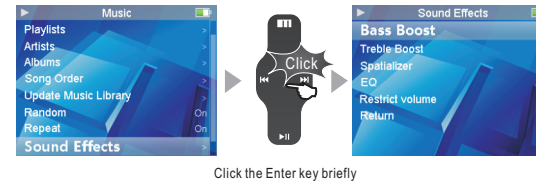


This is the feature to set the Sound Effect. There are the following sound field effects:

- A. EQ: Pop, Classical, Rock, Jazz, Live, Bass Booster, User-defined and Load Default.  
It provides you to adjust the values of EQ by yourself.
- B. Bass Boost You can choose the value from 0~15 to set the bass effect.
- C. Treble Boost You can choose the value from 0~3 to set the treble effect.
- D. Spatializer You can choose: Spatializer, Spatializer Mode, Virtual3D, Phase Corrected Equalizer, Virtual Bass Enhancement, Speaker Type.
- E. Volume restriction There are level 5~ 40 optional.

## Spatializer Sound Effect
 
### ■ Spatializer Sound Effect

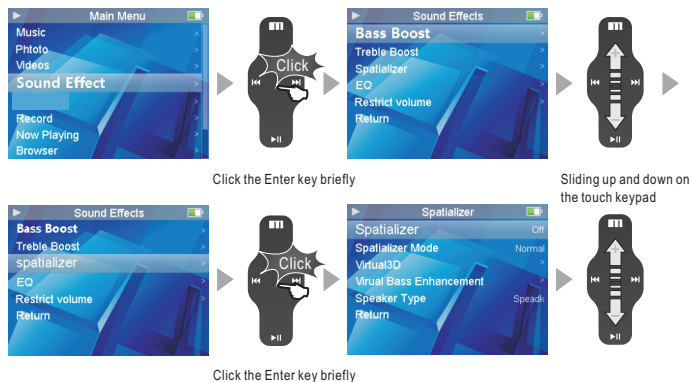


#### To select Spatializer sound effect

1. During Main Menu mode, Select Sound Effect and click the Enter key.
2. Using your figure and sliding on the keypad up and down, select Spatializer effect. Click the Enter key and apply it. You can choose the following options,
  - A. Spatializer To set Close or Open Spatializer sound effect
  - B. Spatializer Mode To set Spatializer mode: Normal, Virtual 3D, Natural Head Phone.
  - C. Virtual 3D To set values of Virtual 3D, you can adjust it from 0~9.
  - D. Phase Corrected Equalizer To adjust sound effect from value 0~9.
  - E. Virtual Bass Enhancement To adjust sound effect from value 0~9.
  - F. Speaker Type To provide Hearphone and Speaker options.  
(The player does not have a built-in speaker)

## Equalizer
 
### ■ Equalizer

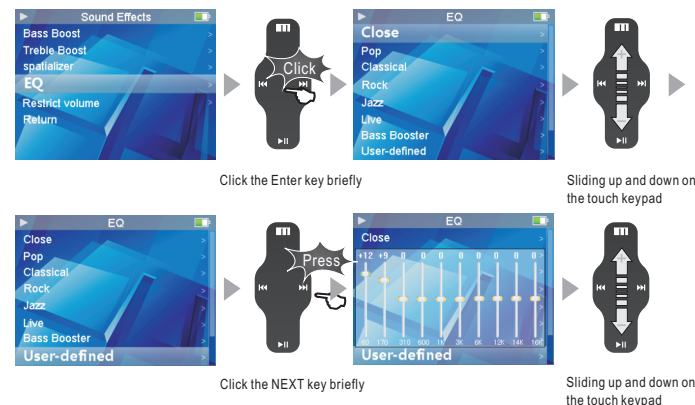

#### Select EQ

The player offers various EQ:

Pop, Classical, Rock, Jazz, Live, Bass Booster, User

#### User EQ

You can adjust the User EQ.

Function up and down on the keypad to select the value and apply it. Click the Previous or Next key and move to different items.

## Volume Restriction

### ■ Volume Restriction



#### To Set the Volume restriction

1. During the Main Menu mode, select Sound Effect and click Enter key.
2. Using your figure and sliding on the keypad up and down, select Volume Restriction.
3. Click the Enter key, slide it up and down to adjust and apply the setting.  
You can choose it from 5 ~ 35 level.

## Displaying Lyric

### ■ Synchronized song Lyrics

1. Download the lyrics from the internet to your PC. The lyrics file is the format of .lrc.
2. Connect the player and your PC via USB cable.
3. Copy and drag the music audio lyric files on your player. (The lyrics file and music file must be stored in the same folder, their filenames must also be the same.)  
For example, for song named my angel.wma, the matching lyrics file will be my angel.lrc.
4. Disconnect the player and your PC.
5. Turn on the player, click left/right key to select the favorite song and play it.

#### Copy the lyric files from your PC to the Player.



 
Song Title

Song Info

It will display three lines of lyrics on the screen during playing, the current line will be highlighted in different colour.

## Photo Library

### ■ Photo Library

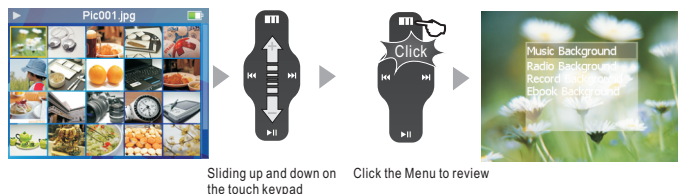

#### Photo Library

##### Searching for a picture

 
Function up/down to select previous/next image. Click the Enter key to display the selected image in full screen.

##### Viewing a picture

Click left/right key to view previous/next image. Click the Enter key, you can select and set the selected picture as Music background, Radio background or Record background. Click the Menu key to exit, click the power ON/OFF button to display the browsing information and progress/status bar. It supports JPEG, BMP, GIF formats.

## Slideshow Settings

### ■ Slideshow Settings

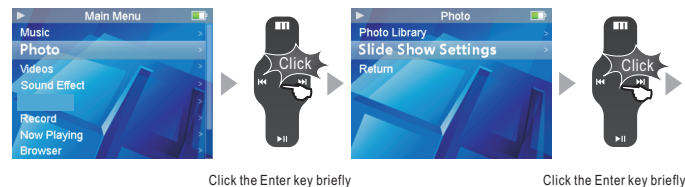

Click Slide Show Settings to open following sub menu:

#### A. Time per Slide (Image Delay)

Selects the time each picture is displayed on the screen during a slide show.

#### B. Repeat: Displays each picture repeatedly.

#### C. Shuffle Photos: Displays each picture randomly.

#### D. Auto Rotate: Rotate it automatically to fit for screen display according to the size of a picture in the player.

#### E. Transitions (Slide Effect)

Enables/disables overlap effects between each image during a slide show. You can choose: Random, Push Across, Push Down, Wipe Across, Wipe Down, Wipe from Center.



## Converting Video Files

### ■ Converting Video Files

The player supports .avi format.

However, as the resolution and code vary, some .avi will not be properly displayed on the player. Therefore it is strongly recommended that user convert every video files before saving to the player.

Install the converter tool enclosed in the CD disk.

Use the program to convert your .avi and other formats of video files.

 
After the conversion, you can save the file into the video directory in your player disk.

#### 1. Installing Video Converter

- 1 Insert the Installation CD in the CD-ROM driver. Click [Video Converter Software] to start the installation on the displayed window.



- 2 The Installation program starts automatically. When it finishes, click Finish and exit.

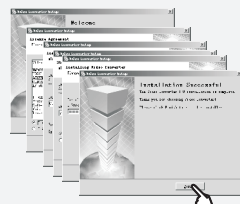


It will take you some time to finish the installation. It may pop up the warning window of installing related plugin, it possibly indicates file is existing depending on the status of the Windows. Then select "Retry" or "Ignore" to continue installation.

## Converting Video Files

 
### 2. Using Video Converter

When the installation finishes, Start -> Programs -> Video Converter -> Video Converter is registered.


- 1 Click [Start]--[Programs]--[Video Converter]--[Video Converter].

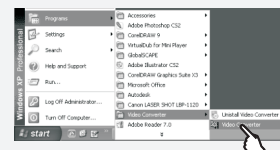

 
- 2 When the program starts, click Input [Add] button and choose the file to convert.

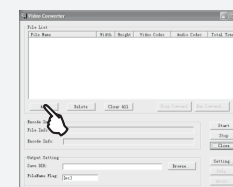

 - 3 Select the converting video file from the pop-up window, click [Open].

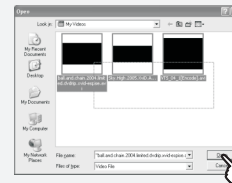


 - 4 It appears the file name and informations on the File List.

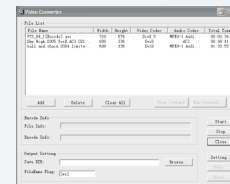


## Converting Video Files

 
- 5** Click Output [Browse] and specify the path and file name.

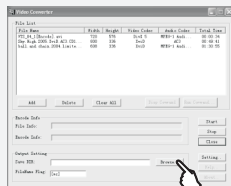

 
- 6** It appears a Pop-up window, click OK and save it.

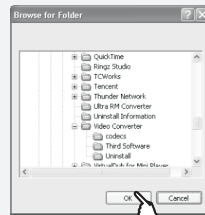

 - 7** Click [Setting] and specify the preferences.

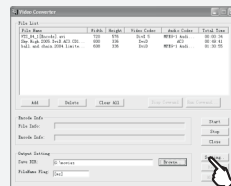

 
- 8** After click it, it appears the settings. Then click [OK] button and apply it.

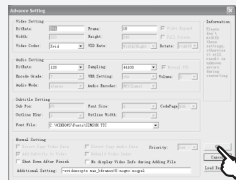

The caption file is the format of .srt as suffix. You may ignore Step 6 to Step 9 during your converting files without caption.

## Converting Video Files

 
- 9** Click [Styles], you can set the styles, click [OK] and apply it.

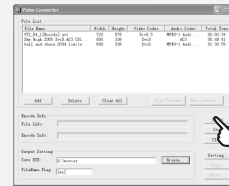

- 10** It will take you some time to convert the file. During this process, only the [Stop] button is valid for you.



 - 11** After finishing converting, click the [Close] button and finish it.

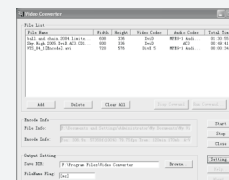


Note:

1. The converted size is 320\*240, the converting time is depended on the size of the original file. The quality is related to your setting values.
2. The BitRate of Video is 200~500, Frame is 15~20.
3. The subtitle file and video file should be saved under the same content. I.e. If a video file named Video.avi, then the subtitle should be Video.srt.
4. They can be converted that the files are in .srt, .smi, .sub, .ssa formats without subtitles.

## Play Video
 
### ■ Play Video

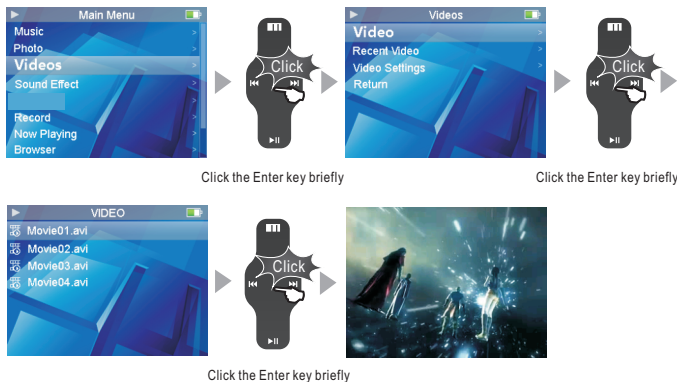

1. Function up and down to select the video to play.
2. Click the Enter key to start playback.
3. During playback, click the Menu key to increase the volume, click the Enter key to decrease the volume.
4. Click the Power ON/OFF button to pause the playback.
5. Long click the Power ON/OFF button to exit.
6. Click the Previous or Next key and move to fast forward or fast rewind.


Note:

Continuous playback time:

About 5 hours (320\*240@15fps, Video: 384kbps, Audio: 128kbps / 44kHz)

## Video Settings
 
### ■ Video Settings

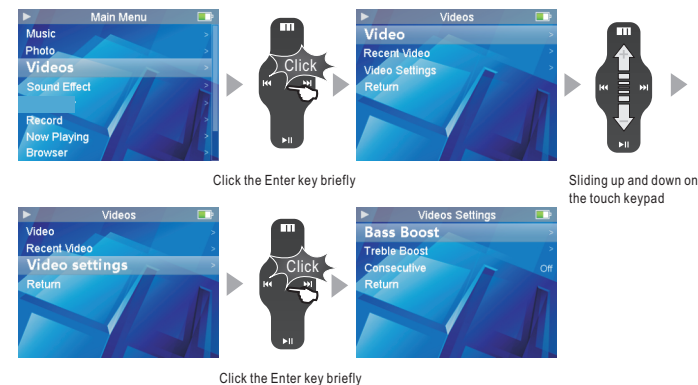

1. Select Video in the main menu.
  2. Function and select Video Settings, click the Enter key.
- There are the following options,
- |              |  |
|--------------|--|
| Bass Boost   | To set bass boost for video playback from value 0~15.    |
| Treble Boost | To set treble boost for video playback from value 0~3.   |
| Consecutive  | Use this item, you may set and play video consecutively. |

This page was intentionnaly left blank

This page was intentionnaly left blank


This page was intentionnaly left blank

This page was intentionnaly left blank

This page was intentionnaly left blank

This page was intentionnaly left blank

## ■ MIC Recording

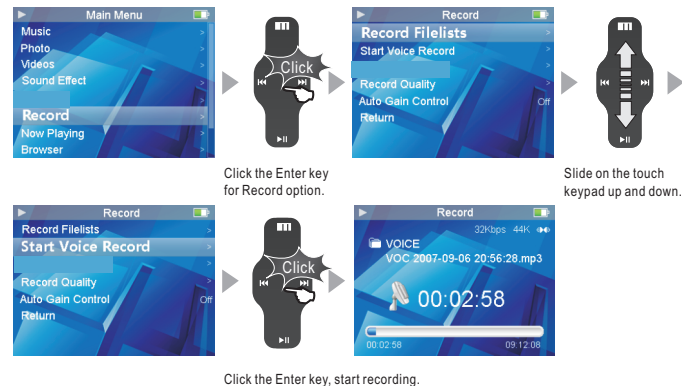 

1. Select Record in the main menu. Click the Enter key.
2. Select Start Voice Record option and click the Enter key to apply it.
3. Click the Enter key, then start voice recording.
4. Click the Enter key again, you can pause it. Long press it to stop.


Note: 1) Please make sure the battery volume is enough during Voice Recording.  
 2) If it displays "The Memory is Full!!" on the LCD, to record, delete files and/or folders on the player in order to make some space available. 3) The recording file will be memorized and saved to RECORD\ directory, filenames are created automatically beginning with "VOC" according to recording time.

This page was intentionnaly left blank

## Play Recorded Files

 
E-book

### ■ Play Recorded Files

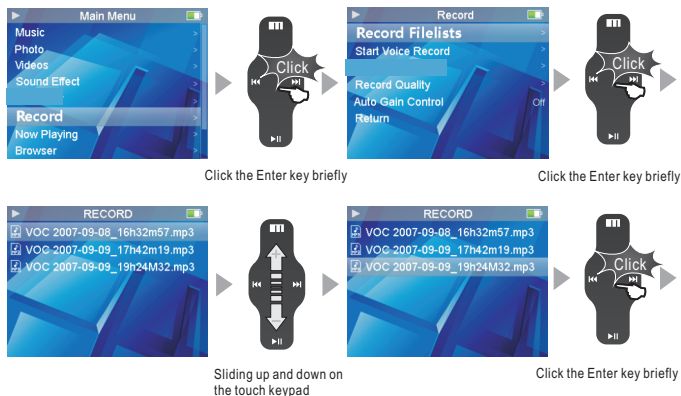

1. When finishes recording, select Record Filelists, and click the Enter key.
2. Slide up and down on the keypad, you can find and play the recorded files.
3. Click the Enter key to start playback.

### ■ View E-book (Text file: .txt)

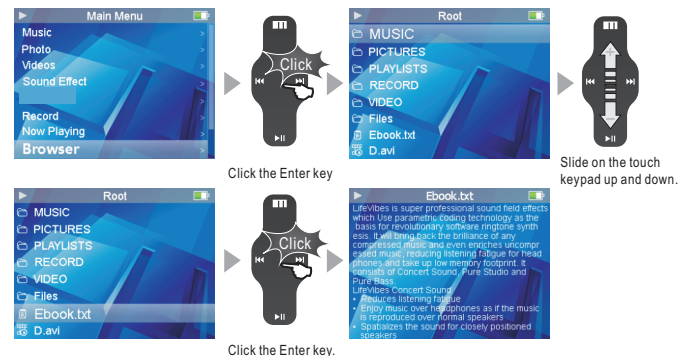 

1. Save the .txt file in your PC. You can either download fom internet or create your own using the Notepad program (standar program come with windows). Simply cut and paste your favourite part of text onto a blank notepad document and save it as .txt file.
2. Connect the player and your PC with the provided USB cable.
3. Save the selected text file into your player from PC. You might also create a new directory in your player disk, namely EBOOK. Then save the text file into that folder.
3. Disconnect the player and your PC. Turn on the player, select Browser option.
4. Press the Enter key, you can view the selected text file on your player. (If you save it under a new directory, go into that folder)
5. Touch the keypad slightly on the Previous/Next key position, you can move the text file page by page.
6. Click the Enter key, it pops up the window, you can select:
  - A. BookMark ( Bookmark 1, Bookmark 2, Bookmark 3, Jump to Bookmark 1, Jump to Bookmark 2, Jump to Bookmark 3 )
  - B. Font Size (16\*16, 20\*20 )
  - C. Automatic (Close, 5 Second, 10 Second, 15 Second, 20 Second, 25 Second )
7. Click the Menu key to exit.



## ■ Games and Tools

### 1. Hua Rong Dao

 


Hua Rong Dao, is an ancient Chinese board game, Caocao is the emperor of one of the three kingdoms in ancient China. He was defeated by other two kingdoms in a war and now trying to escape from them. Your mission is to help Caocao to escape from hunting of the rest guys on the board by shuffling them around. When Caocao is at the center bottom of the board, nobody can be on his way to life, so you will be promoted to be Caocao's next lieutenant. A real winner is the one who find the best path with minimum steps.

- Click the Enter key to start the game.
- Sliding up and down on the keypad to select the object.
- Click the Menu to move it up, Enter key to move it down, Previous key to left and Next to right.

Long click the power ON/OFF button to exit.

### 2. Box Man

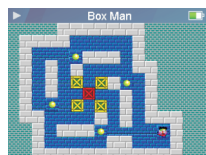

In planar labyrinth, the man can push only one box at a time. When he finishes pushing all boxes into the destination position, you win the game.


- Click the Enter key to start the game.
- Click the Menu to move it up, Enter key to move it down, Previous key to left and Next to right.
- Long click the power ON/OFF button to exit.

### 3. Calendar



 - Select Calendar and click the Enter key to apply it.
- Sliding up and down on the keypad to select the day.
- Click the Previous/Next key to select the month.
- Click the Menu key to exit.

### 4. Stopwatch

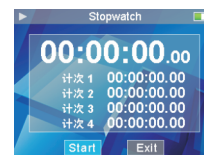

- Select Stopwatch and click the Enter key to apply it.
- Click the Enter key and start.
- Click the Previous/Next key to select the options.
- Click the Enter key to apply it.
- Click the Menu key to exit.

### 5. Calculator

 


- This is the menu to provide the calculator.
- Select Calculator and click the Enter key to apply it.
- Sliding up and down on the keypad to select the option key.
- Click the Enter key to apply it.
- Click the Menu key to exit.

## Detailed Features by Menu

### ■ Settings

#### 1. About

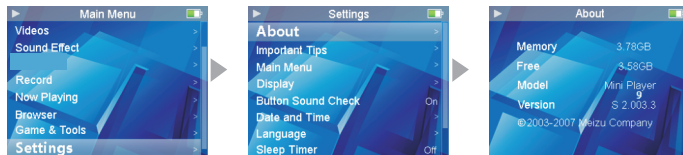

This is feature to display the information:

##### Memory

 
- Information on the flash memory in the Player is displayed.
- You can check usage and remaining memory size.
- Some of the flash memory in the Player is used for system area. Therefore, when we exclude the system area essential for normal operation of the Player, the actual capacity of the flash memory is somewhat reduced.
- For example, with a 256MB product, about 243MB of memory capacity is normal.

##### Free Space

##### Model Number

##### Operating System version

#### 2. Important Tips

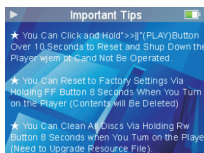


This is to provide the reminding information and operating procedures on the player.

- Select Settings, click the Enter key and apply it.
- Slide up and down on the keypad, select Important Tips and click the Enter key, then you will find the tips.

## Detailed Features by Menu
 
### 3. Main Menu

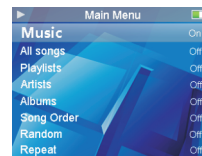

This function is to list the related items in Main Menu when they're set as Open status.

- Select Settings, Click the Enter key.
- Slide up and down on the keypad and select Main Menu, click the Enter key.
- Slide up and down on the keypad, you can find the options, click the Enter key to apply On/Off option.

#### Settings - Main Menu:

##### Music

All Songs, Playlists, Artists, Albums, Song Order, Random, Repeat, SoundEffects, BassBoost, TrebleBoost, EQ

##### Photos

##### Videos

##### Record

Record Files Lists, Start Voice Record

##### Now Playing

##### Game & Tools

HuaRongDao, Boxman, Calendar, Stop Watch, Calculator

##### Backlight Timer

## Detailed Features by Menu

### 4.Display

 
#### A. Backlight Timer



- This menu is for setting the time for which the backlight is turned on.
- Select Backlight Timer and click the Enter key.
- Using your finger by sliding on the keypad, select from: 2sec., 5sec., 10sec., 15sec., 20 sec., 'Always On'

Note: the player backlight goes off automatically in a few seconds when the player is not in operating mode. Click Power on/off Key to resume the backlight.


#### B. Backlight Brightness

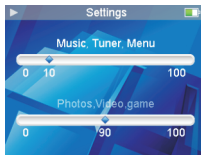

- This is the feature to adjust the brightness of the LCD display.
- Select Backlight Brightness and click the Enter key.
- Using your finger by sliding on the keypad, select from 0 to 100 and apply the value.
- Click the Enter key and move to another option.
- Click the Menu key to exit.

## Detailed Features by Menu
 
### C. Background Blend

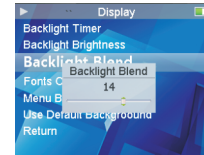


- This is the feature to adjust the blend of background photo.
- Select Background Blend and click the Enter key.
- Using your finger by sliding on the keypad, select from 0 to 20 and apply the value.
- Click the Enter key to exit.

### D. Fonts Color



 - This is the feature to select a color for menu fonts.
- Select Fonts Color and click the Enter key.
- Using your finger by sliding on the keypad to select different colors.
- Click the Enter key and apply the selection.
- Click the Menu key to exit.

### E. Menu Bar Color

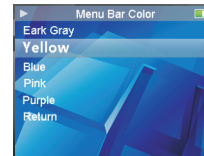

- This is to set the colors of selecting bar.
- You can choose: white, red, dark red, green, dark green, blue, dark blue, teal, dark teal, purple, dark purple, yellow, dark yellow, light gray, black.
- Slide and select your desired color.
- Click the Enter key to apply it.


## Detailed Features by Menu
 
### F. Use Default Background



- Initialize the background to the original factory settings.
- Select Use Default Background and click the Enter key, it pops up the window.
- Slide and select 'Yes' or 'Cancel'.
- Click the Enter key to apply it.



### 5. Button Sound Check

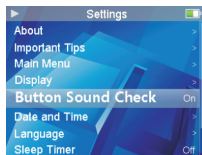

- This function is to set button sound as open or close during operation.
- Select Button Sound Check.
  - Click the Enter key to select On/Off option and apply it.

### 6. Date and Time
  
#### A. Set Date and Time

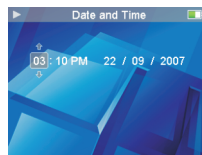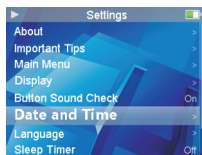

## Detailed Features by Menu

 
- This is the feature to set the date and time.
- Select Set Date and Time option, and click the Enter key.
- Using your finger by sliding on the keypad, select to set the related value.
- Click the Previous/Next keys to select the options.
- Click the Enter key to apply and move to the upper menu.
- Click the Menu key to ignore it, then return back.

### B. Time Format



- The player provides two formats to display the time.
- Select Time Format option.
  - Click the Enter key to select 12 Hours or 24 Hours and apply it.
  - Click the Menu key to exit.

### C. Title Time

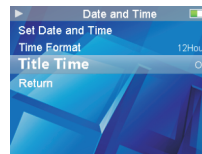

- This is the feature to display the time on the menu title.
- Select Title Time.
- Click the Enter key to On or Off option and apply it.


## Detailed Features by Menu
 
### 7. Language (Menu Language)




- This is the feature to change the menu language.
- You can choose: English, French, German, Dutch, Spanish, Portuguese, Italian and Danish.
- When you select and click the Enter key, the selection is applied, it returns back the upper menu.

### 8. Sleep Timer

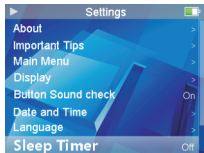

- The player can be set to automatically turn off after a preset time while it is playing.
- You can choose: Off, 30 Minutes, 1 Hour, 1.5 Hours, 2 Hours, 3 Hours.
- Select Sleep Timer and press the Enter key. Then choose a value by sliding your figure on the keypad.

### 9. USB Mode

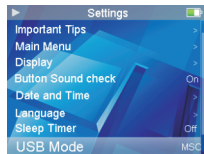 

- This is the feature to set the MSC/ MTP mode.
- Select Settings and click the Enter key.
- Slide and select USB Mode, MSC and MTP optional.

## Detailed Features by Menu

 
### MSC Mode

Select the MSC mode, connect Mini Player to your PC. It will appear "Removable Disk" on your PC. Double click it, you may use the player to copy, delete and etc. After operation, click and run "Savely Remove Hardware", then disconnect it.

### MTP Mode

Media Transfer Protocol (MTP) is a protocol designed for portable media devices and it has been developed by Microsoft based on Windows Media Player 10 (WMP10). It facilitates communication between devices that support WMP 10. With this protocol, it accesses the complete connecting for your Mini Player to Windows XP. Also, you may manage and transfer all datas through WMP 10.

### Use Windows Media Player 10 to manage media datas

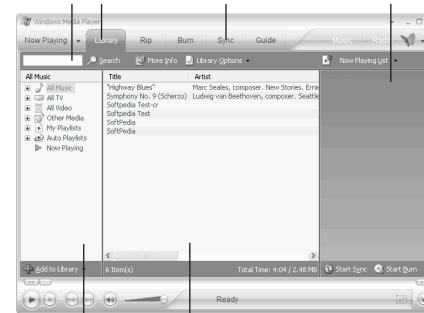

Search Frame  
Library  
Playing List  
Detail Information  
Content  
Sync

Windows Media Player 10 Interface

## Detailed Features by Menu

Use WMP to play songs, it will add the songs to Library automatically.

You may also drag the media files on your PC to Library. It will automatically classify the songs according to the Artists, Albums after adding.

1. Add to Library: Click 'Add to Library' on the bottom left corner of the windows, you also can click the file to add it. 2. Classify files (Detail see to instruction of Media Player.)

a. On the Content section, click the desired folder.

b. On the Detail Information section, click the options (Title, Artist, Album, Rating, Genre or Leighth, etc.), It will be sorted ascendingly and in alphabetically.

 
c. Click the options again, it will be sorted descendingly.

### •Transfer songs to Mini Player with WMP 10

Set MTP to USB mode, connect Mini Player to your PC. It appears "MTP Media Player" on the Taskbar, select 'Using Windows Media Player' on the pop-up window. Then select 'Automatic' and follow the steps to start Sync. It appears 'Synchronization is complete' after finishing it.

Note: There are two methods for you to transfer songs to Miniplayer: Automatic and Manual. During MTP mode, you also can transfer the songs and files directly. Click My Computer, then double click Mini Player, you will find Data and Media folders. Put the desired songs to Media folder, and other files to Data. ( Pictures should be put to the folder Data - PICTURES, Video files to Data-VIDEO)

### 10. Reset All Settings

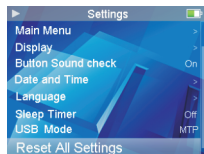


- Initialize all the settings to the original factory settings.
- Select Reset All Settings and click the Enter key, it pops up the window.
- Slide and select 'Yes' or 'Cancel', when you select 'Yes', all the settings will be initialized to the original factory ones.

## Upgrading Product Firmware



 The latest software

Update



### ■ Guide to Firmware Upgrade

#### What is Firmware of the Player?

Firmware of the player is a program embedded in the hardware, which activates various features. By upgrading, you can enhance the features and eliminate the bugs.

Notice for Legal Limitations and Responsibilities Regarding Firmware

- 1/ The performance and menu of Player may change without prior notice through upgrading firmware of regular or beta versions supported by the manufacturer.
- 2/ We recommend that users should personally back up important files and data saved in the player to their PC before upgrading firmware.
- 3/ All upgrades are intended for overall enhancement of performance. The upgrades will be provided when available based on our company's judgment.
- 4/ Some beta versions of the firmware may have minor bugs that will be corrected in the official versions of the firmware. This should be noted by the users before an action.

#### Conditions for Upgrading Firmware

 
- 1/ Upgrading the firmware requires the basic environment where the UMS feature of the Windows OS works properly.
- 2/ You can check the player in 'My Computer' on Windows 98/ME/XP/2000/2003.
- 3/ 'Removable Disk' (which represented your player memory) must be displayed for an upgrade purpose. If it is not displayed, we recommend that you check the menu that asks whether or not to use a USB Device from the main board CMOS, or reinstall Windows, or have the USB port on the main board examined.

## Upgrading Product Firmware

### ■ Downloading and Installing Firmware

When there is a new firmware released, you can download the latest firmware from MEIZU website free of charge to enhance the features and eliminate the bugs. Please refer to the following procedure.

#### 1 Turn on the player.

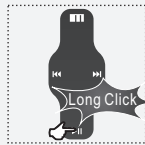


Click the Power ON/OFF button to turn the player on.

#### 3 The player is shown as the Removable Disk on your PC.



 In the normal Windows environment, as soon as the cable is connected, the message "Searching for new device" appears.

#### 2 Connecting the player and your PC with the provided USB cable.

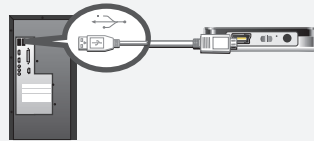

#### 4 Download the firmware package from MEIZU' website.

 


Firmware Package


Please take attention to the model number and software version.

## Upgrading Product Firmware

#### 5 Decompress the downloaded files, drag and drop them onto the "RemovableDisk" window.

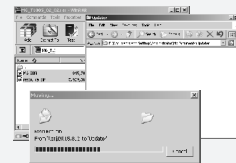

#### 6 Then it displays M6SL.EBN, resource.bin in the Removable Disk.

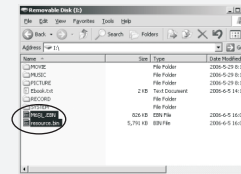 

#### 7 Then run 'Safely Remove Hardware' and disconnect the player to your PC. The upgrading is applied, then disconnect the USB cable on the player.



Draw out the USB cable on the player.

#### 8 After finish upgrading, restart the player, then it pops up and starts running the 'Upgrading Software, Please Wait...' and shut down automatically. Turn it on again, it pops up 'Upgrading Resource, Please Wait...', then the program will be renovated automatically on the player. It will take you some time to finish the upgrading.

## Format

### ■ Formatting the Flash Memory

The flash Memory of the player can be formatted. Please use Windows format tools to format the player, and restore read & write operations of file systems.

If the flash Memory is formatted, all data stored within is lost.

Take notice of this fact, examine the following procedures.

### ■ Before formatting

Finished installation of the player manager program

Connecting the player to your PC

 
Backup all data stored in the player

### Operating procedures

- 1 Press the Power ON/OFF button to start the player.



- 2 Connect the player and your PC via USB connection cable.

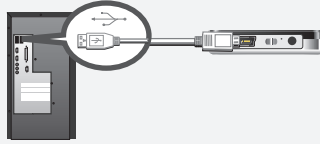


\* Small end to player, large end to PC

## Format

 
- 3 Double click [My Computer] and select the [Removable Disk].




The player is shown as the Removable Disk on your computer.

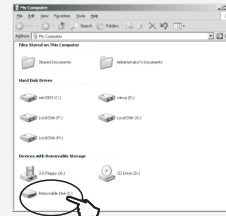

 - 4 Select the [Removable Disk] and right click on it, then click [Format].

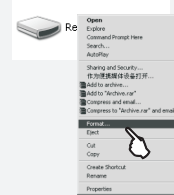


- 5 Click the [Start] key.

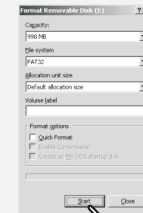 




## Format

 
- 6 It pops up the warning window, select [OK] to continue.

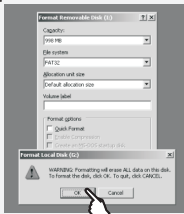


- 7 The formatting is start running.

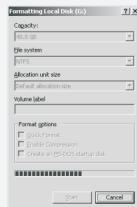 

 - 8 While finishing, click [OK] to finish.

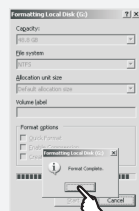

 - 9 Exit the formatting, click [Close] to exit.

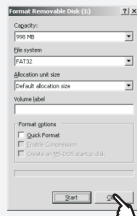

You should take special care when you format it since all the data in the memory will be deleted. The folders named Music, Pictures, Playlists, Record, Video in the player are system directories, they will be deleted after format. Reboot and operate the player, then the directories will be recreated automatically.

## Handling Instructions

- **Do not subject the player to severe impact or jarring.**  
Vibration experienced during walking or exercising will not affect the player. However, dropping a heavy object on the player may result in damage or sound distortion.
- **Be careful when storing the set and do not use or place it at the following places:**
  - Places with high humidity;
  - Places with strong magnetic fields;
  - Places with extreme temperatures;
  - Directly under the sunshine or near the equipment that generates heat;
  - Inside a car with closed windows especially in summer.
- **It is necessary to prevent strong shock when reading files or operating, otherwise files may be damaged or deleted.**
- **Please do not repair or disassemble this product by yourself.**
- **Please do not use this product in the place where forbid to use for electronics products.**
- **Please do not operate this product while driving.**
- **Please backup the important information on your note book, any repair result from electricity shock, static electricity, change of battery or incorrect using may cause change, damage or delete the files stored in the product.**

## Precautions for Using the Product

Do not keep it in high temperatures or in a damp place for a long time or dispo on direct sunlight.



Do not drop player or apply impact. Shock is the major cause of breakdown.



Keep away from places of dust and cigarette ash.



Make sure that the player does not get in contact with chemicals such as benzene or thinner.



Frequently back up important files. All the data stored in the product may be deleted during AS.



If you disassemble or modify the product arbitrarily, you cannot receive free services, and may be excluded from the scope of service.



 
Keep away from impact, do not contact with the static objects.



Please keep the SN of your player for your future's reference.



Please keep the high-performance transparent protection film on the player and do not remove it.

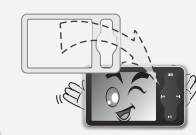

## Trouble Shooting

### ■ Trouble Shooting

The player does not power on.	Check whether the HOLD switch on the player is ON (Switch to OFF position) Check whether it failed upgrading the software, upgrade it again.
There is no sound.	Check that there are audio files in the memory. Check whether VOLUME is set to "0". Connect the earphones/remote plug firmly. Corrupted WMA audio files may make a static noise & the sound may cut off. Check your files on the PC to see if they are corrupted.
Characters in LCD are broken.	Check out Menu - Display - Language and confirm whether the right language has been selected.
Failed download of music audio file	Check the connection between your computer and the player to ensure that the cable is secure. Check the Manager program to make sure it is operating. Check whether the player's Memory is full.

Note: Should any problem persist after you have checked these symptoms, consult the distributors.

## Product Specifications

Memo

### ■ Product Specifications

Dimensions	78mm×46.5mm×7.3mm (H×W×T)	
Weight	48g (Including Battery)	
LCD	TFT LCD QVGA 2.41" 320x240 260000 color	
PC Interface	High speed USB2.0	
Flash Memory	Built-in basic Flash Memory (2GB/4GB/8GB)	
Power Supply	Up to 26 hrs of music playback, 4.5 hrs for video playback	
Audio Playback	APE	Fast, Normal, High mode
	FLAC, WMA Lossless	VBR
	WMA	8~355kbps
	OGG	Quality0 ~ Quality10
	WAV	PCM, MS-ADPCM, IMA-ADPCM
	S/N Ratio	>90dB
	Distortion Rate	<0.3%
	Earphone's Output	690mV@32
Picture Format	BMP, JPG, GIF	1024×1024
Video Playback	AVI	Video: 20 fps, 512kbps
		Audio: 56~256kbps, stereo
Record	Recording Format	Bit Rate: 32kbps ~ 128kbps
	Recording Source	Micr

Note: Design and specifications are subject to change without notice.

Memo

MEIZU

80