

Concept 710 Corded Telephone

USER GUIDE

Unpacking your phone

In the box you will find:

- Base Unit
- Handset
- Coiled Handset cord
- Telephone line cord for Base unit
- User manual

Keep the packing materials in a safe place in case you later need to transport the unit

Keep your sales (till) receipt, which is your guarantee.

If you need help ...

The **Binatone Help Line** is available from 9.00 am to 5.00 pm, Monday to Friday, on

+91-7503011385

Binatone



1. LCD Screen
2. Visual Ringer Indication
3. M1,M2 and M3 Memory buttons
4. Scroll Up & Down buttons
5. Delete button
6. SET/STO button
7. PAUSE button
8. OUT button
9. IN USE Indication
10. Mute button
11. Speakerphone button
12. FLASH button
13. RD/BACK(CALL BACK) button

2. Installation

1. Locating the Base unit

 
The Base unit should be placed on a level surface, in a position where:

- the **telephone line cable** will reach your telephone line socket or extension socket.
- it is **not close to a sink, bath or shower**, or anywhere else where it might get wet.
- it is **not close to other electrical equipment** - fridges, washing machines, microwave ovens, TVs, fluorescent lights, etc.

2. Plug the coiled handset cord into the Handset.

Plug the other end into the jack on the left side of the Base unit.

3. Place the Handset in the Base unit.

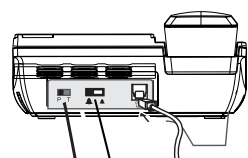

Always use the telephone line cord supplied with your Concept 710 phone. Other telephone line cords may not work.

Make sure the plugs click into place.

→ to Modular wall jack.

pulse/Tone switch

4. Plug the telephone line cord free end into a modular wall jack. Press the cable into the groove so that the Base unit stands level.

5. Lift the Handset and check for Dial tone in the earpiece.

Installing (or Replacing) the Battery

IMPORTANT - Before removing the battery compartment cover, always make sure the base unit is disconnected from the telephone line.

- Install 3 pcs of Alkaline AAA batteries into the battery compartment and place back the cover before use. (Battery is not included the unit).

 
Note: 1) Please do NOT use Rechargeable batteries in this phone.

2) (optional) Fit back-up batteries for the backlight display.

With batteries fitted, your settings and any memos will be retained if there's Telephone line was disconnected.

3) The battery life is typically about 3 months, depending on usage.

When the battery is low, will flash in the middle on the right side of the display screen. if you do not replace the batteries, they will become totally discharged and your backlight display will not work.

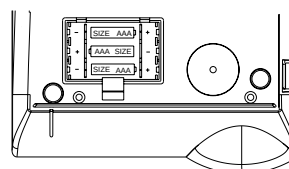

3. Setting up your phone

Press the **SET/STO** button to enter the menu and then use the **UP** or **DOWN** buttons to cycle through the following options:

- SET 1 TIME and DATE
- SET 2 AREA CODE
- SET 3 PABX CODE
- SET 4 LCD
- SET 5 FLASH

Note: The system will time out if you leave more than 8 seconds between key presses.

Set Time/Date


1. In standby mode, press the **SET/STO** button. ⇒ The display shows 'SET 1 DATE'.
2. Press the **SET/STO** button to confirm. ⇒ The 'year' icon will be blinking.
3. Press the **UP** or **DOWN** button to set the year.
4. Press the **SET/STO** button to confirm. ⇒ The 'month' icon will be blinking.
5. Press the **UP** or **DOWN** button to set the month.
6. Press the **SET/STO** button to confirm. ⇒ The 'date' icon will be blinking.
7. Press the **UP** or **DOWN** button to set the date.
8. Press the **SET/STO** button to confirm. ⇒ The 'hour' icon will be blinking.
9. Press the **UP** or **DOWN** button to set the hour.
10. Press the **SET/STO** button to confirm. ⇒ The 'minute' icon will be blinking.
11. Press the **UP** or **DOWN** button to set the minute.
12. Press the **SET/STO** button to confirm the setting. ⇒ The display shows 'SET 2 CODE', you can continue with programming, or press the **DELETE** button to return to standby mode.

Setting up continue . . .

- | | | | |
|-------------------------|---|--|--|
| Set Area Code | 1 | | In standby mode, press the SET/STO button. ⇒ The display shows 'SET 1 DATE'. |
| | 2 | | Press the UP or DOWN button until the display shows 'SET 2 CODE'. |
| | 3 | | Press the SET/STO to confirm. ⇒ The display shows 'CODE - - - '. |
| | 4 | | Press the UP or DOWN button to input your Area code. |
| | 5 | | Press the SET/STO button to confirm the setting. ⇒ The display shows 'SET 3 PCODE', you can continue with programming, or press the DELETE button to return to standby mode. |
| SET Pcode | | | Set this to your Pcode, When you receive a call, your Caller ID Will log the number is not including Prefix number. when call Back from the Caller ID log, the prefix number will be auto added For dialled out. |
| | 1 | | In standby mode, press the SET/STO button. ⇒ The display shows 'SET 1 DATE'. |
| | 2 | | Press the UP or DOWN button until the display shows 'SET 3 PCODE'. |
| | 3 | | Press the SET/STO to confirm. ⇒ The display shows 'PCODE - - '. |
| | 4 | | Press the UP or DOWN button to input your Pcode. |
| | 5 | | Press the SET/STO button to confirm the setting. ⇒ The display shows 'SET 4 LCD', you can continue with programming, or press the DELETE button to return to standby mode. |
| Set LCD Contrast | 1 | | In standby mode, press SET/STO button. ⇒ The display shows 'SET 1 DATE'. |
| | 2 | | Press UP or DOWN button until the display shows 'SET 4 LCD'. |
| | 3 | | Press SET to confirm. |
| | 4 | | Press UP or DOWN button to select your comfortable display viewing level (1~5). The default setting is 3. |
| | 5 | | Press SET/STO button to confirm the setting. ⇒ The display shows 'SET 1 DATE', you can continue with programming, or press DELETE button to return to standby mode. |
| Set Flash Time | | | This telephone gives you the possibility to use the special services of your network provider. When pressing the FLASH button, the phone generates a line interruption and the length depends on your Flash Time setting. The default value is 300ms, which is correct for most India exchanges and should not need changing. |
| | 1 | | In standby mode, press SET/STO button. ⇒ The display shows 'SET 1 DATE'. |
| | 2 | | Press UP or DOWN button until the display shows 'SET 5 FLASH'. |
| | 3 | | Press SET/STO to confirm. |
| | 4 | | Press UP or DOWN button to select 300. (default) 90, 100, 110, 200, 300, 400, 500 or 600ms. |
| | 5 | | Press SET/STO button to confirm the setting. ⇒ The display shows 'SET 1 DATE', you can continue with programming, or press DELETE button to return to standby mode. |

4. Telephone Operations

 Making a call



Lift the Handset, listen for a dial tone.

⇒ The display shows '00-00'.

Dial the telephone number you wish to call.

⇒ The display shows the number as you dial (maximum of 16 digits will be shown).

To end the call, return the Handset to the Base unit.

To answer a call



When the phone rings; the ringer light is flashes.

Lift the handset or press the SPEAKERPHONE button on the Base unit.

⇒ The Call timer starts about 7 seconds after going on line.

To adjust the speakerphone volume



During a call;

Adjust the volume of the speakerphone to your comfortable volume level using the SPEAKERPHONE volume switch located at the right side of the Base unit.

To end a call



Replace the Handset on the Base unit cradle or press the SPEAKERPHONE button on the Base unit.

⇒ The SPEAKERPHONE (SPEAKERPHONE) light indicator will turn OFF.

To switch between the Handset and the Speakerphone



During a phone conversation through the Handset, press the SPEAKERPHONE button to speak hands-free.

⇒ The SPEAKERPHONE (SPEAKERPHONE) light indicator will turn ON of the LCD Display. The conversation remains through the Handset until the Handset is replaced on the Base unit cradle. Then the Speakerphone light will turn on. While in speakerphone mode, lift the Handset to switch off the Speakerphone and talk through the Handset.

Dial out Stored number from OUT button



Concept 710 dynamically stores 10 groups last outgoing numbers

In any mode, press the OUT button to check the outgoing numbers with time. Press OUT again to scroll to the next outgoing record.

Press the RD/BACK button to dial the selected number.

Redial last number



Lift the Handset or press the SPEAKERPHONE button on the Base unit.

Press the RD/BACK button.

⇒ The phone automatically dials the last number you called (maximum of 32 digits).

Mute Function



During a call press the MUTE button.

⇒ The display shows 'MUTE'.

⇒ When the mouthpiece is muted, the person at the other end of the call cannot hear you but you can hear his side.

To get back to the call, To Press the MUTE button again.

Inserting a Pause in the dialing sequence



For some switchboard system, an access number must be dialed (usually an 8 or 9) to get another dial tone and an outside line.

Press the PAUSE button immediately after the access number, a pause of about 3.6 seconds will be entered, and the desired number can be dialed immediately.

Press the PAUSE button to insert a pause when dialing or storing Long Distance Access Codes.

 
Use on PBX



If you are using your Concept 710 phone on a PBX, and the PBX user guide tells you to press the FLASH ;

Press the FLASH button on your Concept 710 phone.

Storing a Number in M1, M2, M3 memories



In standby mode, Key in the telephone number you wish to store.

⇒ Up to a maximum 16 digits.

Press the SET/STO button.

⇒ The display shows 'STORE In'

Press M1, M2 and M3 button to stored.

Dial out Stored number



Lift up Handset or press the SPEAKERPHONE button,

Press the M1, M2 and M3 buttons.

⇒ The number dials automatically.

Ringer volume



The Ringer High-Low switch located at the back of the Base unit allows you to adjust the volume of the ringer.

- High volume

- Low volume

Tone /pulse Mode dial



If you have touch-tone

⇒ If you don't know which type of service you have, check with your local phone company.

- Pulse dial

- Tone dial

LCD screen backlight

Every time press any button was, the LCD screen backlight will illuminate for 8 seconds.

5. Caller Display Operation

VERY IMPORTANT:

To use Caller Display you must first subscribe to your network provider's Caller Display service.

If you subscribe to a Caller Display service, you can see the phone number of the person calling you before you answer. The caller display information includes:

■ The caller's number

■ The date and time of the call

Condition of Incoming Caller Information	LCD Screen will display
It is a duplicate one	REP
It is a Missed one	MISSED
It has exceeded the range of the service	0
It is a secret one	P
It may not be nicety for the reason of outside	E

Caller Display list

Concept 710 dynamically stores up to 30 groups (16 digits) incoming information.

If a call is received when the Call list is full, then the new entry will replace the oldest one.

Viewing the 1 Caller Display list



In standby mode, press the UP or DOWN Button.

⇒ The display shows the most recent record.

If there are no Caller Display records, the display will show '---END---

Press the UP or DOWN again to scroll to the next Caller Display record.

To return a call



When the Caller Display record is displayed.

Lift the handset or press the SPEAKERPHONE button on the Base unit.

⇒ The phone automatically dials out the displayed record.

To delete Caller Display record



When the Caller Display record is displayed.

Press DELETE button will delete the Caller Display record.

⇒ The display shows the next Caller Display record.

Press and hold the DELETE button 3 seconds, all the Caller records will be deleted.

⇒ The display show '---END---

6. Guarantee and service

This product is guaranteed against manufacturing defects for a period of 1 Year.

This does not cover the product where the fault is due to misuse, abuse, use in contravention of the instructions, or where the product has been the subject of unauthorised modifications or alterations, or has been the subject of commercial use. In the event of a problem with the product within the guarantee period please give it to your nearest service centre or call the Helpline for assistance.

If the item is shown to have had an inherent defect present at the time of sale, the company will provide you a replacement.

Your statutory rights remain unaffected.

7. Technical details

Standard	Concept 710 Telephone
Temperature range	Operating 0 °C to 40 °C Storage -20 °C to 60 °C
PBX compatibility	Timed break recall: 300 ms. Pause length: 3.6 seconds. Signalling type: DTMF (dual-tone multifrequency) also called tone dialing.
Network connection	This equipment is intended to be used in the India only. Operation on other countries' PSTN termination points



Waste electrical products must not be disposed of with household waste. This equipment should be taken to your local recycling centre for safe treatment.

Binatone operates a policy of continuous product improvement, and so reserves the right to make changes to the product and functions without notice.

Connection and conditions for use

You can connect your Concept 710 phone to a direct exchange line (DEL) - a line connected to a local exchange, with its own phone number; to an extension socket connected to a DEL; or to an extension on an approved compatible PBX.

Do not connect the Concept 710 phone as an extension to a pay phone.

The **ringer equivalence numbers (RENs)** of all instruments (phones, fax machines, etc.) connected to an exchange line **must not add up to more than 4** - otherwise, one or more of them may not ring and/or answer calls correctly. button, this means that The Concept 710 phone has a REN of 1, and most other telephones have a REN of 1 unless marked otherwise.

Contents of this User Guide

1. Where to find it
2. Installation
3. Setting up your phone
4. Telephone operation
5. Caller display operation
6. Guarantee and service
7. Technical details

If you need help ...

The **Binatone Help Line** is available from 9.00 am to 5.00 pm, Monday to Friday, on **+91-7503011385**

Pressing buttons on your phone

- When the instructions in this user guide tell you simply to 'press' a button, this means that you should **press the button briefly, then release it.**
- When the instructions tell you to 'press and hold' a button, this means you should **keep the button pressed** until the display changes and/or you hear a tone.