






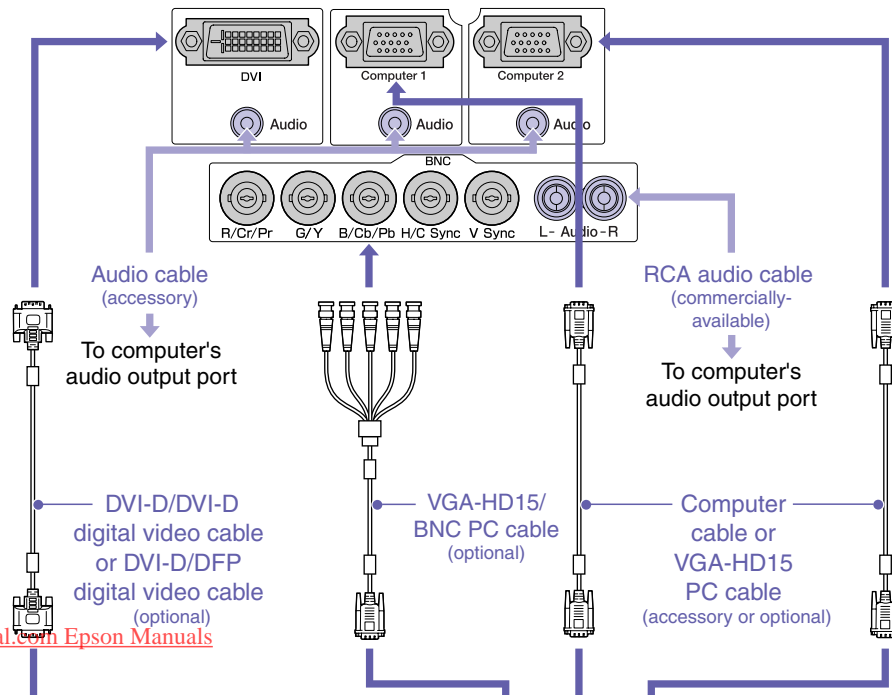
# Connections

Be sure to turn the power for all components off before making any of the following connections.

 **User's Guide**  
"Connecting to a Computer"  
"Connecting to a Video Source"

Connecting to a  
Computer

[ ] port to use is  
that is in the same  
port being used  
the video signals.  
Accessory audio cable  
supplied with the  
. Use a  
commercially-available  
cable instead.






## g the indicators

or is provided with indicators to notify you of  
g status of the projector.  
g tables show what the indicators mean  
remedy the problems that they indicate.

Guide  
g the Indicators"

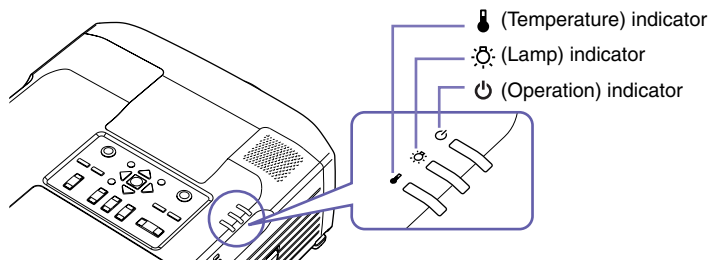

) indicator is flashing or lit red

Problem/Warning

lit flashing off

Red  
Red  
Red

Internal error



**Disconnect the power cable from the electrical outlet.**  
Then contact your dealer or the nearest address provided in the "International Warranty Conditions" section of the *Safety Instructions/World Wide Warranty Terms* booklet.

Red  
Red

Fan related error/  
Sensor error

Red  
Red

Lamp cover is  
open error./  
Lamp timer  
failure/Lamp out




**Check if the lamp is broken.**  
Disconnect the power plug from the electrical outlet and wait for the lamp to cool down sufficiently (takes about one hour) before checking. User's Guide "Replacing the Lamp"



# tion Preparation and Adjustments

 **User's Guide**  
"Turning the Projector On"

the [R/C] switch  
ON".

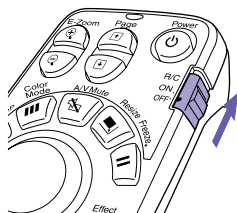

- Check that the power cable is connected to the projector and to the electrical outlet.
- With the EMP-9300, if you change the setting for the "Direct Power ON" command in the "Advanced2" menu to "ON", the projector's power will turn on and projection will start at once when you insert the power plug into the wall outlet. First turn the power on for other components that are connected to the projector.

 **User's Guide "Advanced2 Menu"**


the power on  
all input  
oment.



For a video source, press the [Play] button.

s the  button.

the power is first  
d on after attaching the  
ard lens or wide angle  
lens, continue with the

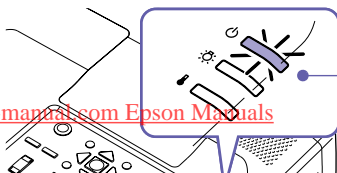

Projection starts after a short period.

 **(Operation) indicator**

Flashes green (warm-up in progress/approx. 40 seconds)

→ Lights green (projection in progress)



# troubleshooting

 User's Guide "Troubleshooting"


## the help function

(Language)


tion in Help doesn't solve the  
power from the wall outlet and contact

 Exit

If a problem occurs with the projector, the Help function uses on-screen displays to assist you in solving the problem. It uses a series of menus in a question and answer format.

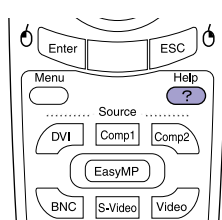

1. Press the  button.

2. Use the  button to select an item to view.

3. Press the  button to view the item.

Press the  button to return to the previous screen.

Press the  button to cancel the Help function.

Items that can be  
adjusted from the Help  
menus

If you select any of the following items that are currently occurring, a setting window will be displayed allowing you to make a direct adjustment.

### ■ Help for the image

The image is disturbed	Auto Setup (The entire image seems to flicker) Sync. (Vertical line noise appears on the screen) Tracking Video Signal
The image is not displayed fully on the screen	Tracking Position

### ■ Help for the sound

There is no sound	Volume
■ Language selection (Language)	
Language	
If the message "No Signal." appears on the screen, you can	



## g projected

### Moving projected images vertically (Lens shift)

LensShift

6 Up

3 Down

### Making fine adjustments to the projection area size (Zoom)

Zoom

5 Increase

2 Decrease

### Adjusting the focus of images (Focus)

Focus

4

1

### Changing the colour mode



The colour mode changes as follows each time this button is pressed



👉 User's Guide "Selecting the Projection Quality (Colour Mode Selection)"

### Retrieving preset settings

(Adjustment is only possible when analogue RGB signals are being input)

Preset  
8

The "Video" menu settings (such as input resolution and tracking) for the respective preset number are retrieved each time this button is pressed.

👉 User's Guide "Preset Function"

## ng the Projector off

👉 User's Guide "Turning the Projector Off"

the power off  
the equipment  
is connected to  
projector.

### ⏻ (Operation) indicator

Flashes orange\* (Cool-down in progress/approx. 30 seconds)  
→ Lights orange

\* Do not disconnect the power cable while the indicator is still flashing orange, otherwise it may result in errors in projector operation.



If the message "The projector is overheated. Clean or replace the



## Useful functions



### Brightness Control

(EMP-8300 only)  
This lets you set the lamp brightness to one of two settings. Select "Low" if the images being projected are too bright such as when projecting images in a dark room or onto a small screen. When used at low brightness, the life of the lamp will be extended.

 **User's Guide**  
**"Advanced2 Menu"**

### Freeze Function




The images are paused and unpaused each time this button is pressed.

 **User's Guide**  
**"Freeze Function"**

### P in P Function




This function lets you display separate images in a smaller screen (sub-screen) over the top of the images that are currently being projected (main screen).

 **User's Guide**  
**"P in P (Picture in Picture) Function"**

### Standby Monitor Out

This function lets you select the input source for projected images while viewing the image contents on an external monitor. Images can be checked on an external monitor while using the "A/V Mute" function and while the projector is not projecting images (while it is in standby mode).

 **User's Guide**  
**"Connecting to an External Monitor"**

### Projector ID/Remote Control ID



If using more than one projector at a time, such as at a show, you can record ID numbers for the projectors and for the remote controls in order to use a remote control to simultaneously operate only projectors with the same ID number.

 **User's Guide**  
**"Projector ID/Remote Control ID"**




g parts of  
e







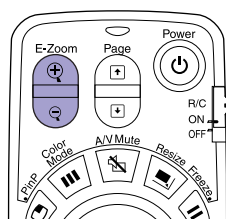

	January sales	February sales
Sapporo	50	48
Tokyo	23	19
Nagoya	11	18
Osaka	13	32
Fukuoka	24	22
NewYork	10	17
Shanghai	33	28
Total	164	184

## ■ E-Zoom Function

 
This function lets you enlarge and reduce parts of images such as graphs and tables that you would like to view in greater detail.



1. Press the  button.  
A cursor (cross) will appear on the screen.
2. Move the cross to the area of the image that is to be enlarged.  
Tilt the  button.
3. To enlarge: Press the  button.  
To reduce the enlarged area size: Press the  button.  
Press the  button to cancel.


 User's Guide "E-Zoom Function"



arily turning off  
and sound



## ■ A/V Mute Function

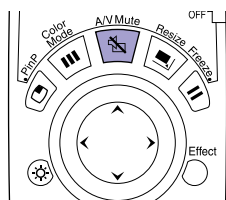You can use this function when you do not wish to show details of operations such as selecting different files.



- Press the  button.  
The images and sound are turned off (A/V Mute active).
- Press the  button once more.  
The A/V Mute is cancelled.

 User's Guide "A/V Mute Function"




g parts of  
e







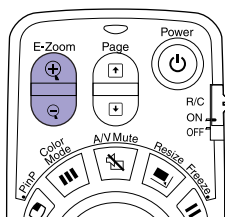

	January sales	February sales
Sapporo	50	48
Tokyo	23	19
Nagoya	11	18
Osaka	13	32
Fukuoka	24	22
New York	10	17
Shanghai	33	28
Total	164	184

## ■ E-Zoom Function


 
This function lets you enlarge and reduce parts of images such as graphs and tables that you would like to view in greater detail.



1. Press the  button.  
A cursor (cross) will appear on the screen.
2. Move the cross to the area of the image that is to be enlarged.  
Tilt the  button.
3. To enlarge: Press the  button.  
To reduce the enlarged area size: Press the  button.  
Press the  button to cancel.


 **User's Guide "E-Zoom Function"**

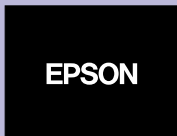

arily turning off  
and sound




## ■ A/V Mute Function

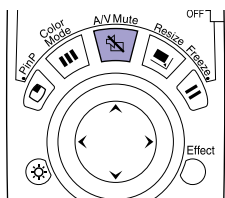You can use this function when you do not wish to show details of operations such as selecting different files.



- Press the  button.  
The images and sound are turned off (A/V Mute active).
- Press the  button once more.  
The A/V Mute is cancelled.

 **User's Guide "A/V Mute Function"**



## Useful functions



### Brightness Control

(EMP-8300 only)

This lets you set the lamp brightness to one of two settings. Select "Low" if the images being projected are too bright such as when projecting images in a dark room or onto a small screen. When used at low brightness, the life of the lamp will be extended.

 **User's Guide**  
"Advanced2 Menu"

### Freeze Function




The images are paused and unpaused each time this button is pressed.

 **User's Guide**  
"Freeze Function"

### P in P Function



This function lets you display separate images in a smaller screen (sub-screen) over the top of the images that are currently being projected (main screen).

 **User's Guide**  
"P in P (Picture in Picture) Function"

### Standby Monitor Out


This function lets you select the input source for projected images while viewing the image contents on an external monitor. Images can be checked on an external monitor while using the "A/V Mute" function and while the projector is not projecting images (while it is in standby mode).

 **User's Guide**  
"Connecting to an External Monitor"

### Projector ID/Remote Control ID



If using more than one projector at a time, such as at a show, you can record ID numbers for the projectors and for the remote controls in order to use a remote control to simultaneously operate only projectors with the same ID number.

 **User's Guide**  
"Projector ID/Remote Control ID"



## g projected



### Moving projected images vertically (Lens shift)

LensShift

-  Up
-  Down

### Making fine adjustments to the projection area size (Zoom)

Zoom

-  Increase
-  Decrease

### Adjusting the focus of images (Focus)

Focus


- 
- 

### Changing the colour mode



The colour mode changes as follows each time this button is pressed



 **User's Guide "Selecting the Projection Quality (Colour Mode Selection)"**

### Retrieving preset settings

(Adjustment is only possible when analogue RGB signals are being input)

Preset



The "Video" menu settings (such as input resolution and tracking) for the respective preset number are retrieved each time this button is pressed.

 **User's Guide "Preset Function"**

## ing the Projector off

 **User's Guide "Turning the Projector Off"**

the power off  
the equipment  
is connected to  
projector.

### (Operation) indicator

Flashes orange\* (Cool-down in progress/approx. 30 seconds)  
→ Lights orange

\* Do not disconnect the power cable while the indicator is still flashing orange, otherwise it may result in errors in projector operation.



If the message "The projector is overheated. Clean or replace the



# eshooting

 User's Guide "Troubleshooting"


## e help function






(Language)

tion in Help doesn't solve the  
power from the wall outlet and contact

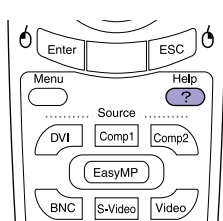[EXIT]: Exit

If a problem occurs with the projector, the Help function uses on-screen displays to assist you in solving the problem. It uses a series of menus in a question and answer format.

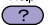

1. Press the  button.
  2. Use the  button to select an item to view.
  3. Press the  button to view the item.
- Press the  button to return to the previous screen.
- Press the  button to cancel the Help function.

Items that can be  
adjusted from the Help  
menus

If you select any of the following items that are currently occurring, a setting window will be displayed allowing you to make a direct adjustment.

### ■ Help for the image

The image is disturbed	Auto Setup (The entire image seems to flicker) Sync. (Vertical line noise appears on the screen) Tracking Video Signal
The image is not displayed fully on the screen	Tracking Position

### ■ Help for the sound

There is no sound	Volume
■ Language selection (Language)	
Language	


If the message "No Signal."  
appears on the screen, you can



# tion Preparation and Adjustments

 **User's Guide**  
"Turning the Projector On"

the [R/C] switch  
ON".

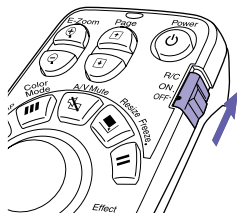

- Check that the power cable is connected to the projector and to the electrical outlet.
- With the EMP-9300, if you change the setting for the "Direct Power ON" command in the "Advanced2" menu to "ON", the projector's power will turn on and projection will start at once when you insert the power plug into the wall outlet. First turn the power on for other components that are connected to the projector.

 **User's Guide "Advanced2 Menu"**

the power on  
all input  
element.



For a video source, press the [Play] button.

s the  button.

the power is first  
d on after attaching the  
ard lens or wide angle  
lens, continue with the



Projection starts after a short period.

 **(Operation) indicator**

Flashes green (warm-up in progress/approx. 40 seconds)


→ Lights green (projection in progress)



## g the indicators

or is provided with indicators to notify you of  
g status of the projector.  
g tables show what the indicators mean  
remedy the problems that they indicate.

Guide  
g the Indicators"

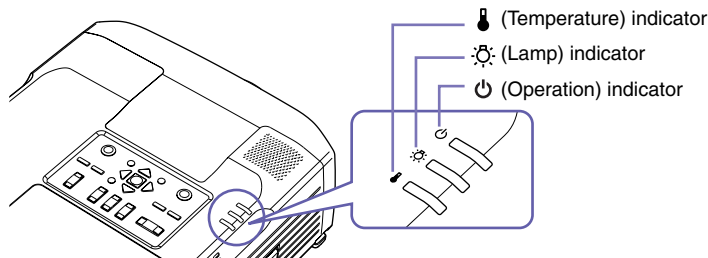

Indicator is flashing or lit red

Problem/Warning

lit flashing off

Red  
Red  
Red

Internal error



**Disconnect the power cable from the electrical outlet.  
Then contact your dealer or the nearest address provided in the "International Warranty  
Conditions" section of the *Safety Instructions/World Wide Warranty Terms* booklet.**


Red  
Red

Fan related error/  
Sensor error

Red  
Red

Lamp cover is  
open error./  
Lamp timer  
failure/Lamp out




**Check if the lamp is broken.  
Disconnect the power plug from the electrical outlet and wait for the lamp to cool down  
sufficiently (takes about one hour) before checking.**  **User's Guide "Replacing the Lamp"**




# Connections

Be sure to turn the power for all components off before making any of the following connections.

 User's Guide  
"Connecting to a Computer"  
"Connecting to a Video Source"

ting to a  
er

] port to use is  
at is in the same  
port being used  
e video signals.  
sory audio cable  
plied with the  
. Use a  
ially-available  
le instead.

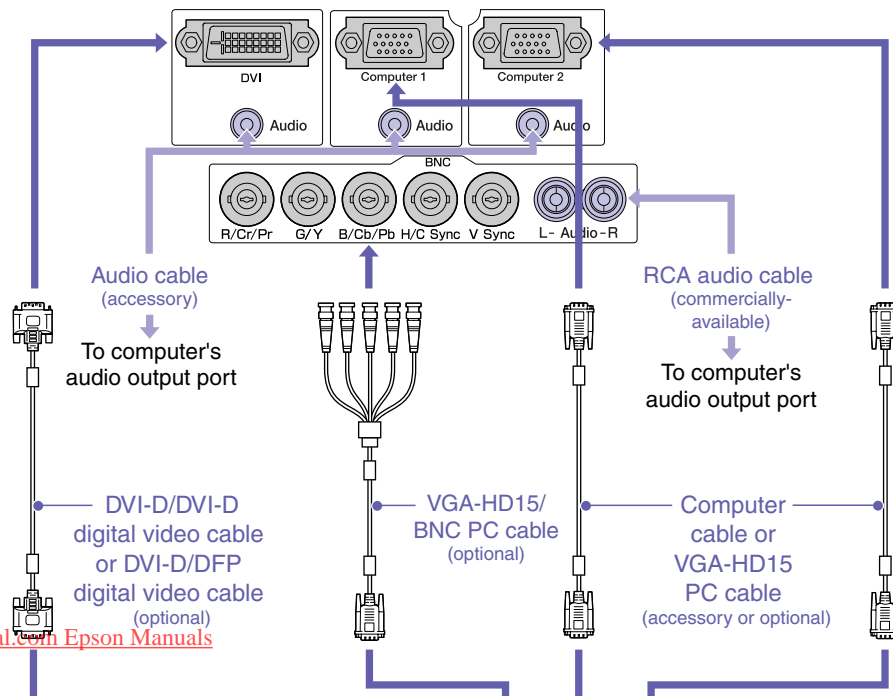



# Quick Reference Guide

tions .....	1
on Preparation and ents .....	3
the Projector off .....	5
ns for Enhancing on .....	6
Configuration Setting .....	10
shooting .....	11
upported Monitor .....	12

Downloaded from project

## Setting up and using this

Downloaded From projector-manual.com Epson Manuals



Printed in Japan  
404696900E  
03.09.06A/C05

# EMD-9300