

User's Manual

EMP100 Media Player
(For built-in with LCD display)



Chapter 1 : General







1-1 Specification :

Video Function	MPEG-1 video playback
	MPEG-2 video playback
	MPEG-4 at full screen D1 video playback
	AVI
	Video Bandwidth - ASF simple profile 320 x 240 video
Photo Function	Motion JPEG playback
	JPEG photo playback
	Progressive JPEG photo playback
	Photo Bandwidth -
	Motion JPEG Maximum 10 fps
Audio Function	JPEG minimum 16x16 pixels, Maximum 5120x3840 pixels
	MP3 music playback
	DIVX
	WMA music playback
	AAC audio decode and playback
Media Card Supported	Audio bandwidth - MP3 minimum 32Kbps, Maximum 256Kbps
	CF / SD / USB
Convenient Features (By Remote Controller)	Auto-Play, Auto-repeat
	Support Timer to programming power on/off
	Support play list to specify files to play
	Support calendar
	Support Disconnection Memory to continuously play where it break
	Support auto copy content from USB disk to CF card with password
	Play/Pause , Stop
	Page up , Page Down
	Photo Zoom In/Out
	Photo Rotation
	Programmable Photo Slide Timing

1-2 Features:

- 1-2-1. Auto-play, Auto-repeat when power on (only when CF, SD, USB drive are installed)
- 1-2-2. File supported : JPG , MP3 , MPG1/2/4 , AVI , DIVX
- 1-2-3. Timer setting function : May set up to 5 different times to broadcast.
- 1-2-4. Support Play List management : May pre-set programs for everyday with selected programs.
- 1-2-5. Support Disconnection Memory Function : Media player will continue where it break
- 1-2-6. Support Calendar Function
- 1-2-7. Support Corner Display Function
(Ex : set up ad_20.bmp under CF card's ROOT file 20 means display corner time, Remark: 1. BMP must be 16 colors 2. Length must not be longer than 140 and brightness not great than 90)
- 1-2-8. Support OTG(On The Go) functions, copy between cards.
- 1-2-9. Support file name change, moved, delete, new folder function
- 1-2-10. Support Text Message Function, only need to save text message in the storage cards.
- 1-2-11. Support Play History Function, Alarm Function
(In CF card create new folder with filename "alarm", put the MP3 file under the folder, set file name as follow ex: 09%20.mp3, means at 9:20 plays this MP3 file, everyday supports up to 5 different alarm.
- 1-2-12. Support Background Music Function
(During playing JPG file, press"10+" button, background MP3 files will play automatically in order)
(Press"0" button to select JPG file play mode, press"1" button to select JPG file play speed)
- 1-2-13. Support Software Upgrade

1-3 Remote Control Buttons Function (photo1)

- 1-3-1. **POWER** Power On/Off
- 1-3-2.  selection key, in menu press up, down, left and right to make your selection.
- 1-3-3.  Forward
- 1-3-4.  Rewind
- 1-3-5.  Stop
- 1-3-6.  Play
- 1-3-7.  Enter/Confirm
- 1-3-8. **VOL-,VOL+** Volume Up / Volume Down

Following function key must be operate under” **STOP MODE**”:


- 1-3-9. **VGA** Output port switch key (VGA mode is standard, others as optional)
- 1-3-10. **DISPLAY** General function setting menu, you may select OSD language (Chinese, English). Video Signal output format(NTSC, PAL), and Sound output parameter setting.
- 1-3-11. **10+** Main functions setting menu
(Time,Timer, Playlist, disconnection memory function setting)
- 1-3-12. **A-B** Storage disk selection between CF, SD, USB
- 1-3-13. **SETUP** File copy, move, rename, delete, new file function key
- 1-3-14. **USB** Firmware Version Information Key
- 1-3-15. **MUTE** Mute Key




(Photo1) Remote Controller Dimension : 85*51mm

Chapter 2 : Operating Instruction


2-1 General Setting

 2-1-1. Press “” to stop play, and then press “**DISPLAY**” to General Parameter setup

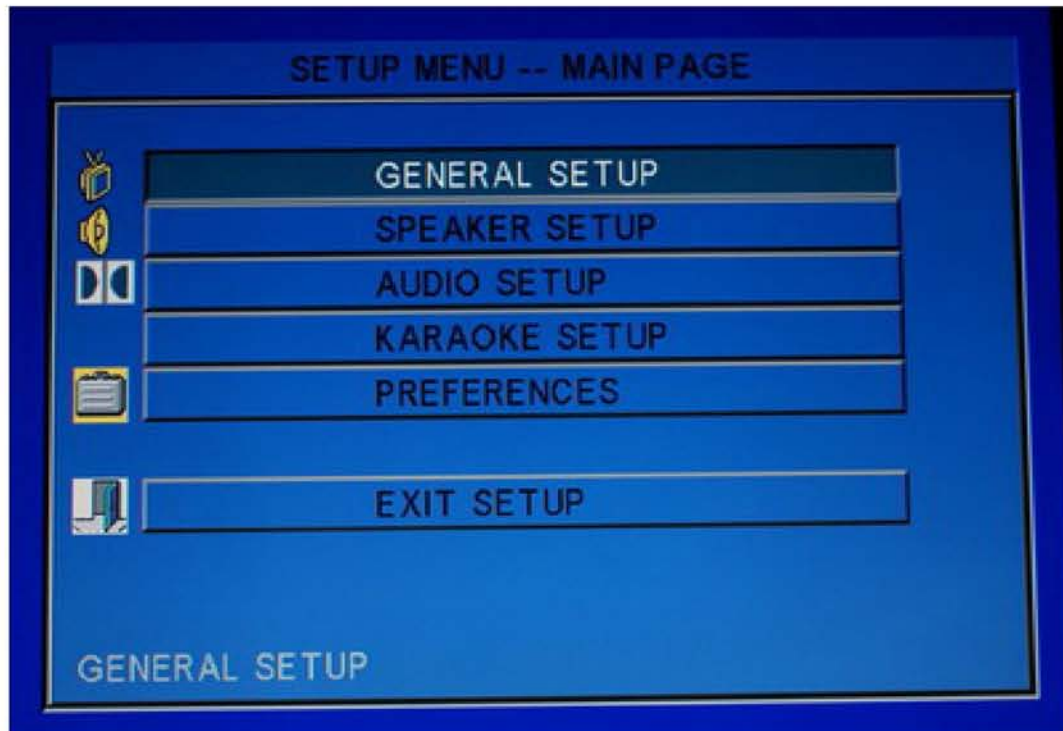

(Photo 2)

 
2-1-2. Picture Mode to display

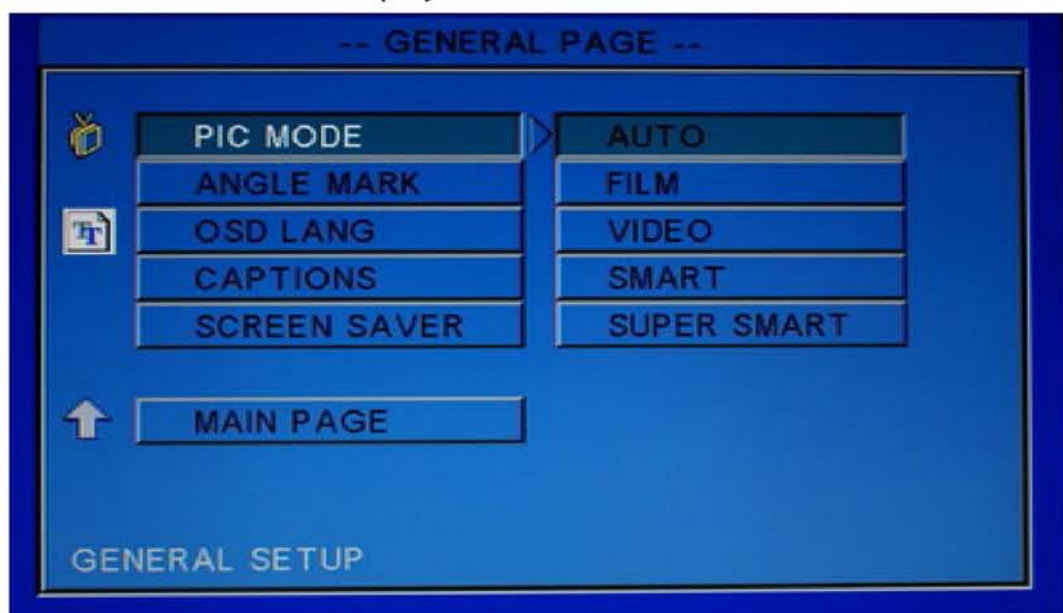

(Photo 3)


2-2 Preferences Setting

2-1-1 You could set the photo size to be display on screen

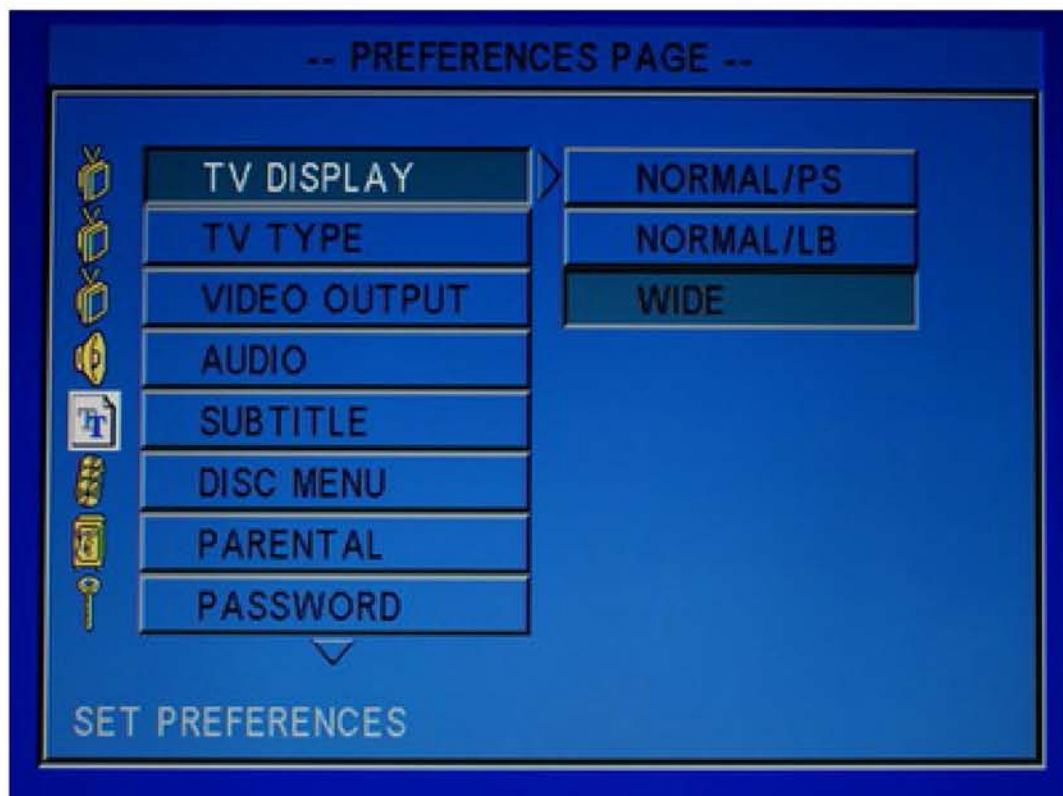 

(Photo 4)

 
2-2-2 Set your display type

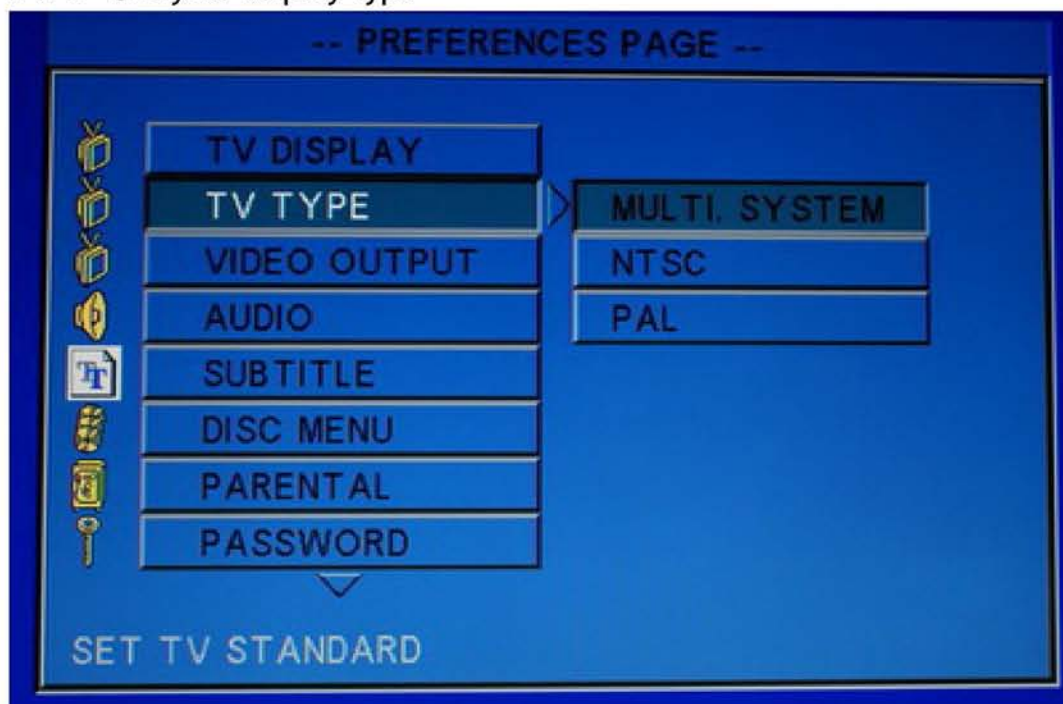

(Photo 5)

2-2-3 Set the video display port (RGB defaulted)

 You could also set the display by remote controller “**VGA**” key

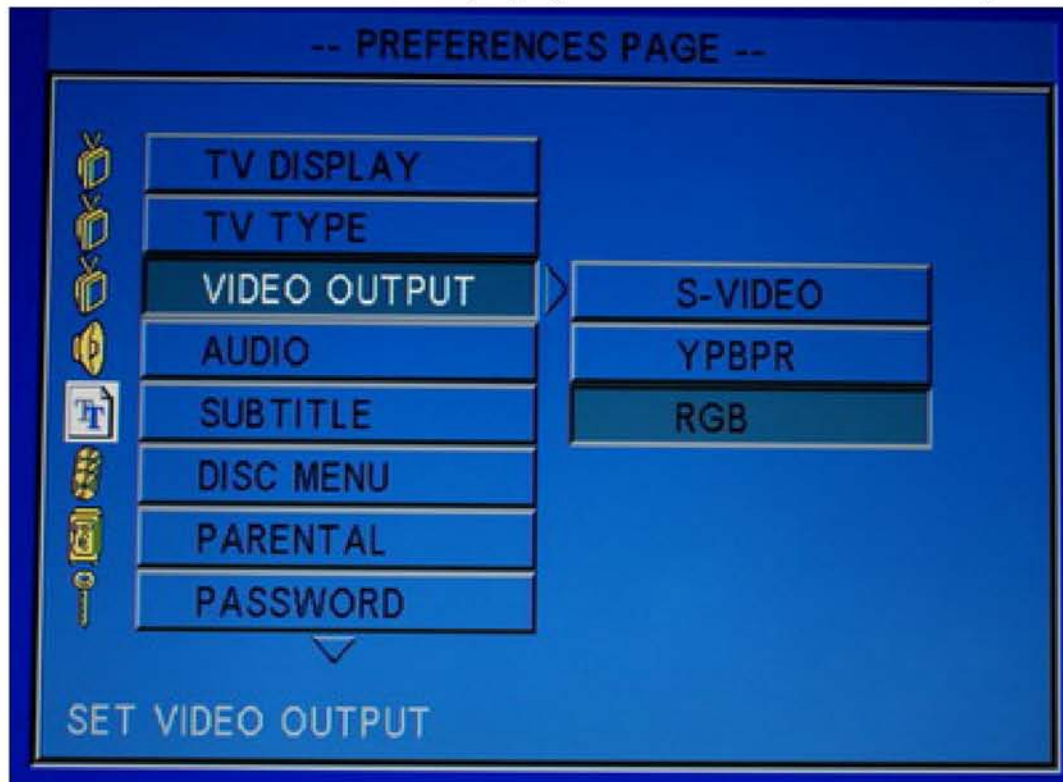


(Photo 6)

Chapter 3 : Special Function Setting


3-1 Time / Date

 Press “” to stop play, and then press “10+” to Special function setting

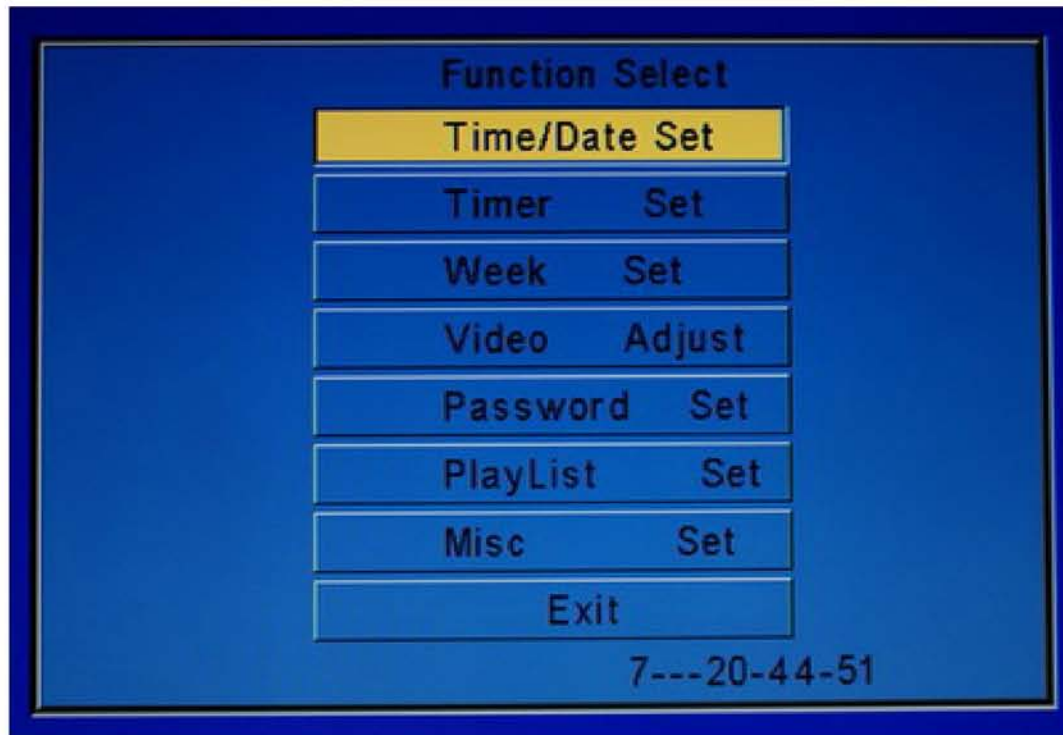

(Photo 7)

 3-1-2. Time Setting

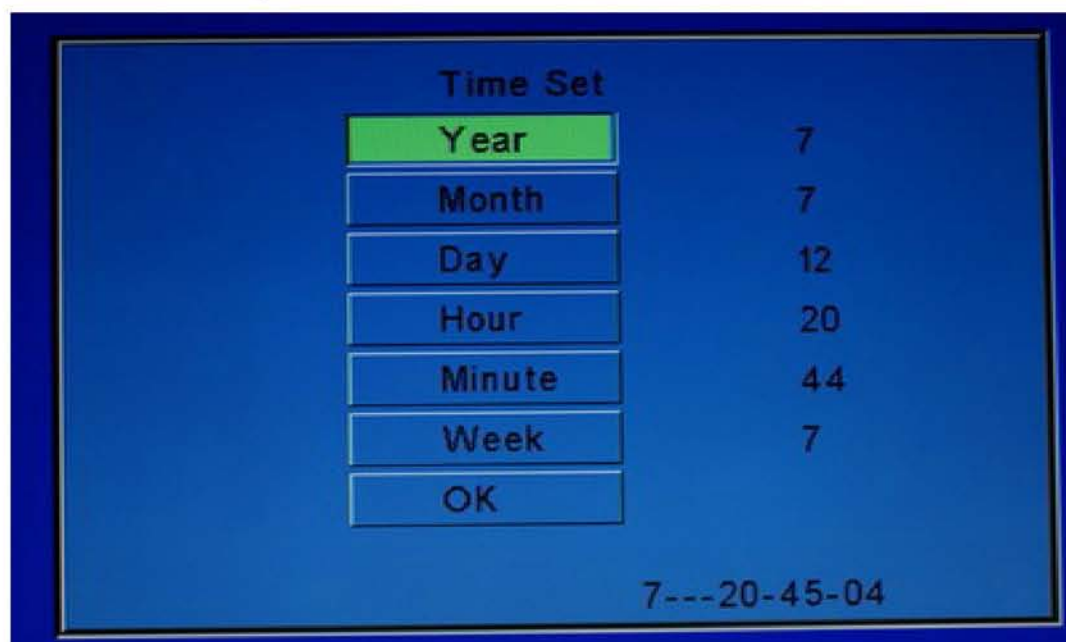

(Photo 8)

3-2 Timer setting to turn on/off power daily

Each day supports 5 different setting, Each line represent period of Time Setting.

First column shows Timer is valid on not, **On** means enable, **Off** means disable.

Second column shows, Turn on time at which hour

Third column shows, Turn on time at which minute

Forth column shows, Turn off time at which hour

Fifth column shows, Turn off tim at which minute


Pls refer photo 9, it shows, every day at 8:30~12:10 is on, 13:00~17:30 is on, all other time will be Off.

	On_H	On_M	Off_H	Off_M
On	8	30	12	10
On	13	0	17	30
Off	0	0	0	0
Off	0	0	0	0
Off	0	0	0	0
Valid				

(Photo 9)

3-3 Timer setting to weekly turn on/off power


Pls refer following photo 10, it shows, Sunday power off, and from Monday~Saturday will play normally.

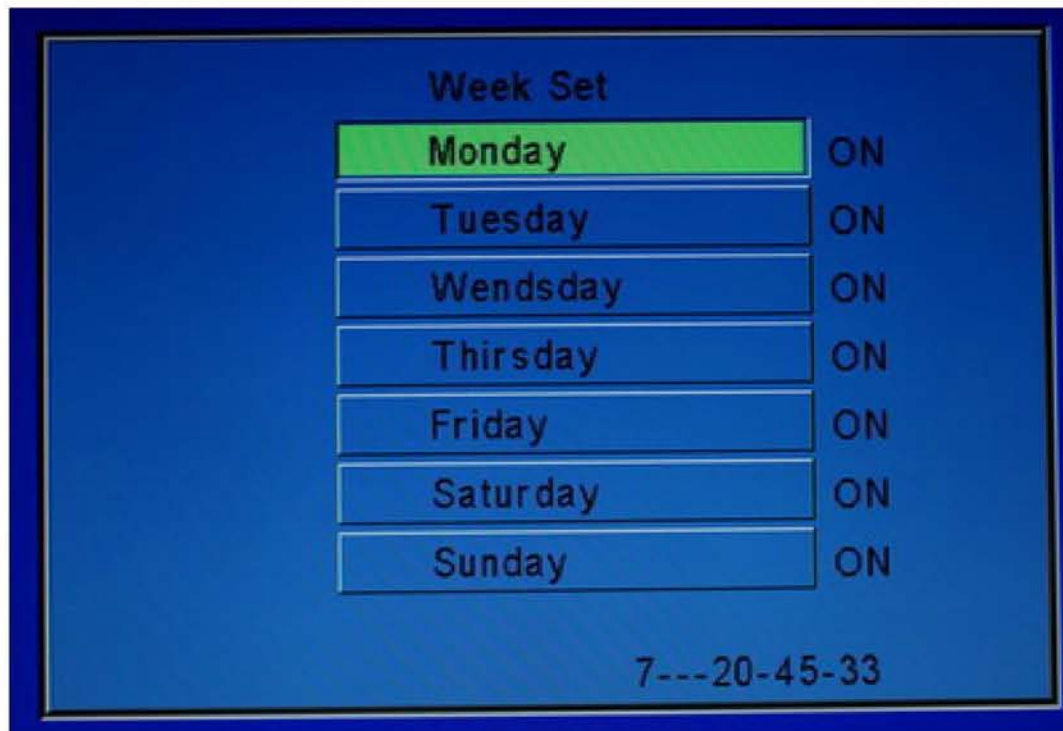 

(Photo 10)

3-4 Screen Adjustment Setting

 
This function is use for setting different color, contrast, brightness ... etc. Photo 11 shows the default value.

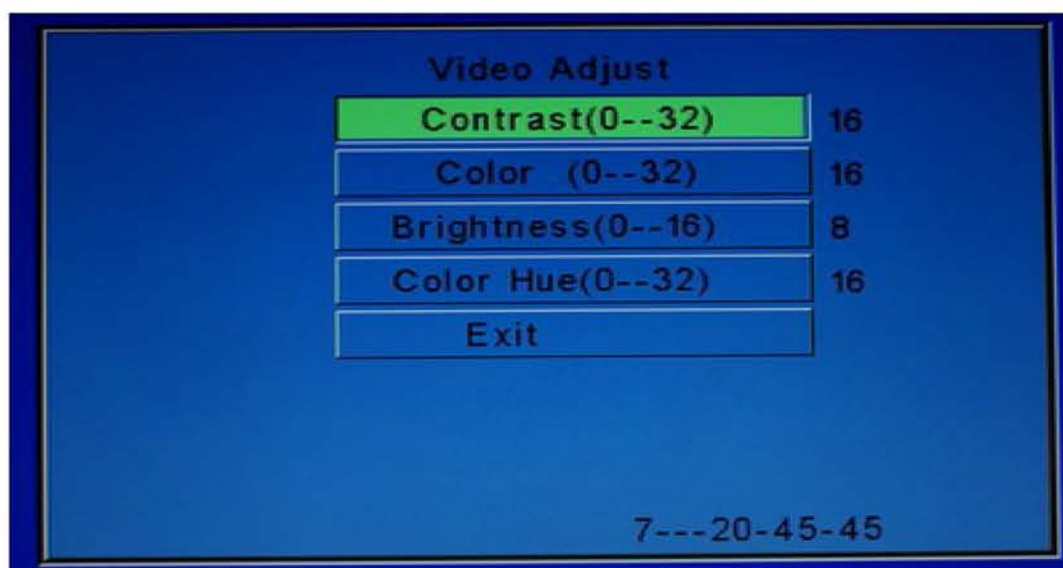

(Photo 11)

3-5 Power on password Setting

 If the setting is on, everytime you change the SD/CF cards
You must enter correct password in order to play.

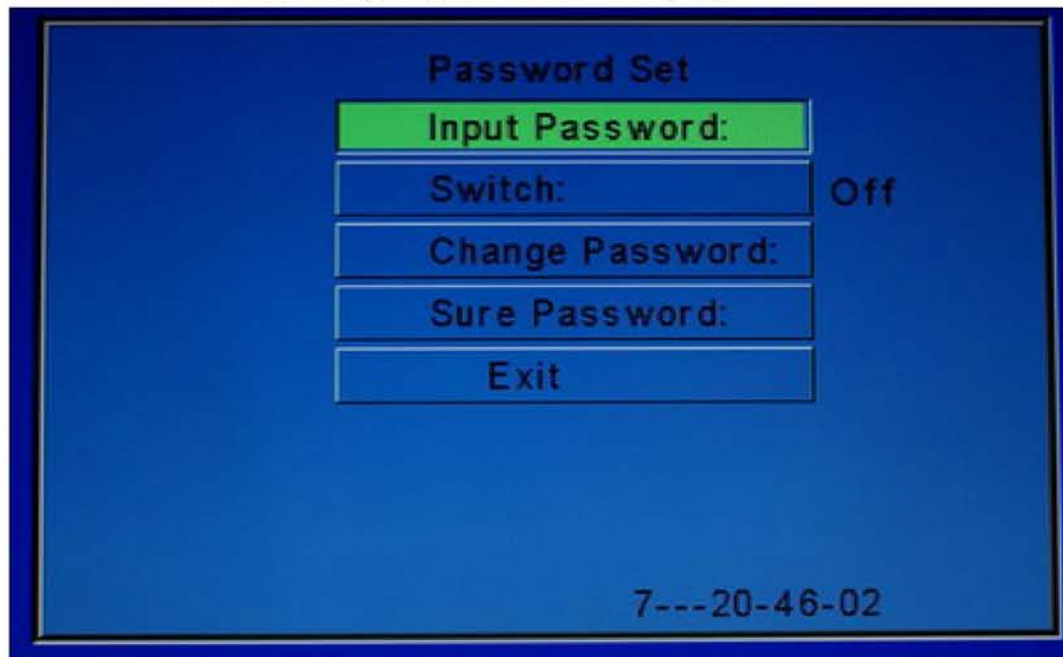


(photo 12)

3-6 Play List Setting

3-6-1 : Use the function built-in OSD, as photo 13 shows the order of play list

on Monday, 01- > 04- > 04- > 01- > 04- > 04.....every day can be set,

 Filename must begin with 2 digits. ex: 01kk..., 02XX..etc

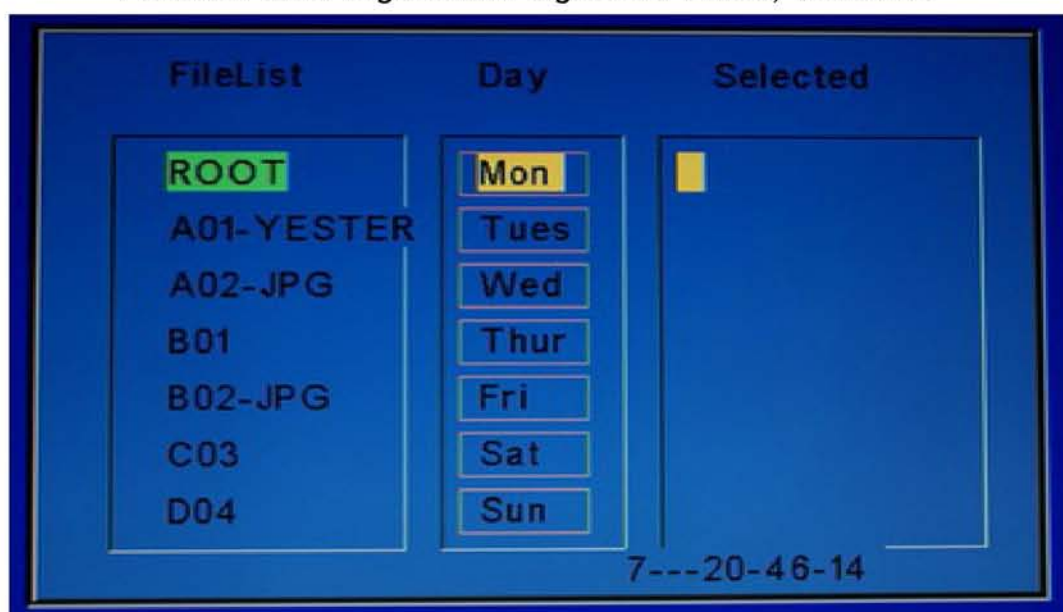

(photo 13)

3-6-2 : Set up the timer file and content file holders at root directory of the flash disk. There is no need to setup the playlist in photo 13 if you use This function.

The timer file name has to be : timer.txt

You could setup max. up to 5 timer schedule.

The timer format is : !6:00-8:30, (! means power on at 6:00 , - means power off at 8:30, ending with ,)

!6:00-8:30,

!8:31-10:00,

!11:00-13:00,

!14:00-16:00,

!16:01-18:00,

8:31 means to continuously play next content file holder right after 8:30 and the previous file holder.

The next, You should setup a / b / c / d / e max. up to 5 content file holders at root directory. 6:30~8:30 play file holder a, 8:31~10:00 play flie holder b, 11:00~13:00 play flie holder c, ...

All the content file name in each content file holder must begin with 2 digits. ex: 01kk..., 02XX..etc

3-7 Misc Setting

Select Automatic Play Mp3+File yes/no, or before use setting on the play list and use connection disconnect function....etc.



(Photo 14)

Chapter 4 : Others Function Setting

4-1 : Regarding OTG, Rename filename ...etc:

- 4-1-1. May only USB or SD card's file and copy to CF card.
- 4-1-2. Includes Copy, Move, Delete, Rename, New Folder...function.
- 4-1-3. OTG Operating Instruction :
 - (a) press "Stop" key, will stop playing.
 - (b) press "A-B", on the monitors left upper corner will shows CF CARD, SD CARD, USB DVE 1, 3 options, Selcect USB DVE 1, files need to be copy to SD CARD or CF CARD file.
 - (c) Press "SETUP" button to login copy option, select copy option and press "Enter".
 - (d) Important Remark:
 - (1) Select rename file, press "SETUP" button to login to Rename function.(Name can only be name in English)
 - (2) Up, Down, Left, Right Select Letter, After finish Naming press "Stop"buttontoexit.



(Photo 15)

4-2 : Text Message Function:

Inside the CF, set a line of Text Contents which is being shown.

Ex: 0ad_10.txt,

0 represent small character of ad advertise sign,

(0) small characters(1)medium character(2) larger character.

Underscore10 means spaces between each characters and time period.