


itho
Advance

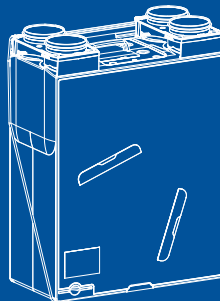

user
manual

 **itho**
Climate for life

Contents

1. Introduction	4	4. Commissioning	14
1.1. Configuration	5	4.1. Manual potentiometers low- and boost speed	14
1.2. Itho conditions	6	4.2. Middle speed	14
1.3. Serial number, date of commissioning and scheduled service intervals	7	5. Trouble shooting	15
2. Safety	8	5.1. FAQ's	15
2.1. General	8	6. Maintenance	18
2.2. Liability of the user	9	6.1. Cleaning	18
3. Description controller functions	10	6.2. Filter replacement	18
3.1. Remote speed control hard wired	10	7. Guarantee	20
3.2. Remote speed control wireless	11	Subject to changes without notice.	
3.3. Frost protection	13	No rights can be derived from this user manual.	

1. Introduction

Indoor air quality and energy efficiency are very important considerations in dwellings today. The Itho **Advance** Heat Recovery Ventilation Unit has been developed to meet these demands and offers controlled and better ventilation for a healthy and comfortable indoor climate in full compliance with current building regulations, while regaining the heat to an efficiency of up to 90%.

For the home owner or occupant:

This document explains the working principle of the ventilation system and how to operate and maintain this unit.

Never switch off the ventilation, by disconnecting the power cord from the mains supply!

(Except for service and maintenance intervals.)

1.1 Configuration

The Advance has been developed for apartments and small houses with approximately 100-125 m³/h balanced exhaust and supply air volumes. It can be fitted as a wall, floor, or ceiling mounted unit for example in the space of a kitchen cupboard.

Dimensions 597 mm width x 280 mm depth x 760 mm height.

Note!

- Read this manual carefully.
- Failure to follow these instructions may cause an adverse effect on your health.
- Leave these instructions in the unit.

1.2. Itho conditions

Itho does not accept any liability for damage caused by non-observance of the installation instructions. Service activities must exclusively be carried out by Itho or by suitably qualified competent persons using original Itho parts.



1.3 Serial number, date of commissioning and scheduled service intervals

Serial number: _____

Date of commissioning: _____

Installers company name: _____

Service call telephone number: _____

Next service / filter replacement interval: _____

1) date _____

6) date _____

2) date _____

7) date _____

3) date _____

8) date _____

4) date _____

9) date _____

5) date _____

10) date _____

2. Safety

2.1. General



Always disconnect the electric power cord from the mains, before you remove the motor part!

- Do not use this appliance for functions other than those described in this booklet.

- Never touch the appliance with wet or damp hands, or when barefoot.
- Do not store inflammable products in the neighbourhood of the unit.
- The unit is only suitable for 230 VAC/ 50Hz electric mains.
- Never modify the fan or electronics by yourself.
- Never plug in the power cord if the motor part is not placed into the unit.

2.2. Liability of the occupant / user

- Cleaning or replacement of the filters in the Advance unit at the correct time. See chapter 6.2 Maintenance.
- Cleaning the grilles in the rooms at regular intervals.



Replace the filters on time

Filter pollution could damage your health!

Note!

- The grilles should always be placed back in their original location and position. If the grilles are changed or placed in a wrong position, the ventilation volumes will no longer be correct and the ventilation system might not work properly!
- Always disconnect the electric power cord when carrying out any maintenance.

3. Description controller functions

Your Advance heat recovery unit has been equipped with a high performance heat recovery exchanger, so there is no need to reduce the air volumes in order to thermal energy. However, reducing noise and saving electricity is also an important issue.

You are able to switch the unit 3-speed:

- Low (continuous).
- Middle (extra comfort – if there are more persons in the dwelling).
- Boost (cooking and bathing).



1.Low (trickle), 2.Middle, 3.Boost.

3.1. Remote speed control hard wired (supplied separately)

The speed selector switch does not require any maintenance.

Manual speed selector:




You are able to select a speed by hand:

3.2. Remote speed control wireless (supplied separately)

The ITHO-RFT remote controller has been equipped with a long life battery type VARTA CR2032 Li-Mn 3V. Under normal circumstances the battery life time will be approximately 10 years.

RFT-wireless remote controller:
You are able to select a speed by pushing button:



-  Low (trickle speed),
-  Middle,
-  Boost,
-  Timer function.

Every time you push the timer function button, the unit will be switched to boost speed for 10/20/30 minutes. After this time, the set speed returns automatically to the former speed.

In case the former speed was 'Boost' then the speed returns to low.

3.3. Frost protection

Note!

In case of very low outside temperatures for more than 24 hours, the fan motor will automatically switch off for several minutes to avoid a frozen heat exchanger! It will restart itself when the temperature has risen.

4. Commissioning

The installer is responsible for commissioning the required air volumes rates for every room, in compliance with the current local regulations (for England and Wales this is the Domestic Ventilation Compliance Guide).

4.1. Manual potentiometers low- and boost speed



Do not change the manual potentiometers on the Advance unit, it has been set by the installer in accordance to the required air volumes.

4.2. Middle speed

Middle speed has been set in the controllers software by the manufacturer and cannot be changed.

5. Trouble shooting

5.1. FAQ's

- a. The fan has been switched off unexpectedly.
 - Mains voltage failure, check the Fuse Spur or in the distribution board cabinet/meter cupboard.
 - Plug in the power cord.
 - Frost protection active, wait for 120 minutes and the fan will be switched on.
- b. The unit makes a lot of noise.
 - I. Gurgling noise coming out the unit.
 - The condensate trap below the unit has a too low water level, fill it up with water.
 - The flexible condensate hose is not completely in the condensate trap, push it deeper.
 - II. Rattling noise coming out the unit.
 - Fan motor fault, please contact your installer or service technician.
 - III. Swishing sound coming out of the grilles.
 - There is too much air pressure drop in the duct and grilles, clean both filters in the Advance unit and the

grilles in the rooms and check if the grilles are in their original position.

c. I want to switch off the unit at night.

- Not possible, you also need fresh air during the night.

d. Unpleasant smell.

I. I smell the cooking in the whole house.

- Air extract rates are too low, switch on boost speed at cooking time.
- The filters are polluted, clean or replace both filters.
- The grilles are dirty, clean all grilles.

II. Near the unit.

- Condensate trap below the unit is empty, fill it up with water.
- The flexible condensate hose is not completely in the condensate trap, push it in deeper.

III. Near the supply air grilles.

- The unpleasant air comes from outside, not a ventilation fault but to be sure, check and clean supply air filter.

- e. Too much condensation in the bathroom.
 - Too low exhaust air volume, switch on boost speed while showering or bathing. Check and clean filters and grille.
- f. Water leakage near the unit.
 - Condensate trap is clogged, clean it.
 - Condensate flexible hose is clogged or twisted, clean it and replace it into the trap.
- g. No speed change after pushing the button on the RFT remote controller.
 - Replace the battery in the remote controller (type CR2032 Li-Mn).
- h. If the problem persists, report the details to your installer or service technician!

6. Maintenance

6.1. Cleaning the Advance unit outside covers

Keep the unit surface free from dust.

6.2. Filter replacement

For the user, maintenance is limited to cleaning and replacing the filters. These will need to be checked annually and either cleaned or replaced. This may differ per situation depending on

environmental pollution from industry or traffic and also the activities in the house.



A) Remove the plastic cover.



B) Remove the filter from the unit.



C) Clean the filter with a vacuum cleaner.

7. Guarantee

Warranty

The Advance warranty is valid for 3 years after the installation date.

Disclaimer

- This warranty does not apply to:
- Disassembly and assembly costs.
- Faults which are caused by incorrect treatment, negligence or accident.
- Faults that have been caused by repairs by third parties without authorisation from ITHO-UK Ltd.

If the appliance does not function correctly or a fault occurs, please contact your installer or service technician immediately. Ensure that only genuine spares are used for repairs.

Notes

Notes

Notes



Itho UK Ltd

Unit 52 Basepoint Business Park

Metcalf Way, Crawley

West Sussex

RH11 7XX

T +44 (0) 845 250 8090

F +44 (0) 845 250 8091

E info@itho.co.uk

I www.itho.co.uk