

Electric Fan: Model EV2072PF

INSTRUCTION MANUAL – IMPORTANT INSTRUCTIONS RETAIN FOR FUTURE USE - READ FULLY BEFORE USE

Pictures or product specifications may vary slightly from those indicated due to ongoing product improvement.



Safety Instructions

Carefully read this manual in full before using this electric fan.

Ensure that you know how the fan functions and how to operate it. Maintain the fan in accordance with the instructions to ensure that it functions properly.

Keep this manual with the fan. If the fan is to be used by a third party, this instruction manual must be supplied with it. The safety instructions do not by themselves eliminate any danger completely and proper accident prevention measures must always be used. No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling.

Package Contents

- 1 x Instruction Manual
- 1 x Pedestal Fan Motor Assembly
- 1 x Remote Control (batteries not supplied)
- 1 x Fan Blade
- 1 x Safety Guard
- 1 x Height Adjusting Tube
- 2 x Base Feet
- 1 x Pack Screw/Bolt/Nut

CAUTION. Confirm all parts before disposing of packaging. Safely dispose of all plastic bags and other packaging components. They may be potentially dangerous to children.

Assembly and Installation

Base Assembly

Place the two base legs in a 'cross' position on the floor.

Place the height adjusting tube (large end with flange) onto the base assembly and fix using 4 bolts supplied.

Extend the height adjusting tube and tighten by tightening the central clamp.

Fan Assembly

Remove the rear guard-fixing locknut and the fan blade-fixing locknut from the motor assembly and spindle.

Fit the rear safety guard to the fan motor assembly and secure with the guard-fixing locknut.

Place the fan blade over the motor spindle and secure with the fan blade-fixing locknut. Do not over tighten.

Attach the front safety guard to the rear safety guard taking care to align the fixing boltholes carefully. Clamp the side securing clips to secure the two sides of the guards. Fit the fixing bolt to secure the two guards together.

Fan - Base Assembly

Slide the fan assembly when completed carefully over the end of the upright height adjusting tubes and clamp securely.

To adjust the angle of the fan loosen the side adjustment knob, adjust angle and tighten

Warning! Ensure that all safety guards are correctly fitted before use.

Warning! Ensure that all fan blades are securely fitted before use.

Warning! Ensure that the fan is switched OFF from the mains supply before removing the guard.

Warning! For fans installed at a high level. Ensure that the fan is installed so that the blades are more than 2.1m above the floor.

Warning! To reduce the risk of electric shock, do not use this fan with any solid state speed control device unless that device has been specifically supplied for this fan.

Warning! Avoid contact with moving parts. Do not insert objects or body parts into the safety grill when the fan is operating.

Warning! Do not cover the safety grill or place near curtains.

Warning! This fan should not be placed in the immediate vicinity of water, such as bathtub, wash bowls, swimming pool or other area where splashing may occur.

Remote Control

Open the rear battery compartment door of the remote control and install two "AAA" size batteries (not supplied) taking care to install as directed. Always use batteries of the same type and make. Used batteries may leak, remove when not in use.

Operation.

Once the electric fan has been assembled correctly connect the supply plug to a suitable 230-240V AC 50 Hz power outlet. When first connected to the mains supply the "Power On" indicator lamp will glow.

The appliance can be operated by either Remote or manual control.

Manual Operation

To turn on manually press the "On/Speed" pad once for LOW, twice for MED or three times for HIGH fan speed. The indicator lamp will glow indicating the speed chosen. Press the OFF pad to stop.

To turn swing function on simply press the "Swing" pad when fan is in the ON position. Fan will start oscillating.

To use timer function set fan to ON as normal and then press TIMER pad to desired time setting. Fan will operate for selected period and then switch off automatically. **Note.** Each press of the pad increase the delay time by 30 minutes, up to a maximum period of 7.5 HRS.

Remote Control Operation

Point the remote control at the appliance. Press the ON/SPEED button to start. Press once for LOW, twice for MED and three times for HIGH fan speed. The indicator lamp will glow indicating the speed chosen. Press the OFF pad to stop.

Press the SWING button to operate swing function

Press TIMER button to activate the delay function as above.



IMPORTANT SAFETY INFORMATION

When using electric appliances always observe safety regulations where applicable to reduce the risk of fire, electric shock and personal injury including the following.

Always check that the power supply corresponds to the voltage on the rating plate.

Supply

This electric appliance must be connected to a suitable 230-240 V ~ 50Hz power supply. If using an extension cord, ensure that the extension cord is of a suitable 10-amp power rating. Fully unwind the supply cord when in use as a coiled cord may overheat. Do not abuse or damage the power cord. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard. **Warning! Always unplug from the mains supply when not in use.**

Children

Caution. Keep out of reach of children. This appliance is not intended for use by young children or infirm persons. Young children must be supervised by a responsible person to ensure that they can operate the appliance safely. Young children should be supervised to ensure that they do not play with the appliance

Use and environment

Do not use outdoors. Do not leave in direct sunlight as this may damage the plastic. This appliance is for household use only, not commercial or industrial use. The power socket must be readily accessible so that the appliance can be unplugged in an emergency.

Damaged or dropped

Always inspect your fan before use. Do not use this fan if it has been damaged, dropped, left outdoors or dropped in water. Return it to an authorised service dealer for examination and repair.

Water

Do not immerse in water or other liquids or use near washbasins or sinks or wet environments. Ensure that the fan does not get wet (water splashes etc.) and do not use it with wet hands.

Danger to children

Safely dispose of plastic bags and other components of the packaging. They may be potentially dangerous to children.

CLEANING

Before cleaning.

When not in use or before cleaning, always disconnect the fan from the mains supply.

Warning! Ensure that the fan is switched OFF from the mains supply before removing any guard.

Carefully wipe the outer surface with a damp cloth, dry with a dry towel. Do not use harsh abrasives, solvents, chemical cleaners, petrol or similar to clean this appliance as these may damage the plastics. Always replace any guard before use.

Store in a safe place

When not in use store your appliance and instruction manual in a safe and dry place.

Pictures or product specifications may vary slightly from those indicated due to ongoing product improvement.

Warranty

This product is for household use only. This product is guaranteed against faulty materials and workmanship for a period of 24 months from the date of purchase. The obligation to the purchaser under this warranty is limited to servicing the unit and replacing defective parts when the product is returned freight prepaid to the retailer. This warranty becomes void if the product has been tampered with, damaged by accident, damaged in any other way by improper use or has been purchased second hand. All production orders have quality inspections. In the unlikely event of a deficiency, please contact the retailer from whom this product was purchased.

Model No.: _____ Purchase date: _____ Product Purchased From: _____

IMPORTANT!

Please retain this warranty card along with your purchase receipt. Please do not post to the retailer or importer. If service is required, both of these documents are to be returned with the appliance to your retailer, otherwise a fee may be charged.