



User Manual

SPBT1032

Portable Indoor/Outdoor Hi-Fi Cylinder 2.1 Speaker with Bluetooth-Compatibility

6639 Valjean Ave Van Nuys CA 91406
Tel: 818-785-4000 • Fax: 818-785-5081 • info@axessusa.com

SPBT1032 Manual

For proper operation, please read this manual carefully before using. Any content revisions of the manual will not be declared, and we are not responsible for any consequences caused by fault or oversight of this manual.



FEATURES:

1. 2.1 Indoor/Outdoor Passive Hi-Fi *Bluetooth* Speaker with 5¼ inch Subwoofer.
2. Output has very clear sound and heavy bass, dynamic sound effect.
3. With A2DP *Bluetooth*, wirelessly stream music from any Bluetooth-enabled device such as your mobile phone, notebook, iPhone or iPad.
4. Secure simple pairing for user-friendly operating.
5. 10 meter operating range.
6. With USB and SD card support.
7. With FM radio.
8. With EQ function (**compatible with USB and SD card only**)*.
9. With LED display - can show the digital number & working status.
10. With Line-in function, suitable for PC, MID, TV and other audio device.
11. Two gear control for volume and bass.
12. Built-in lithium rechargeable battery (1000 mAh).
13. With handle & strap for easy portability.

*The Equalizer (EQ) function is not compatible with external audio devices, such as Bluetooth, FM and Line-in. It is only compatible with internal audio signals from the USB and SD card reader. This is due to chipset coding, so the EQ can be controlled by its internal software. For Bluetooth and Auxiliary Line-in functions, you will need to adjust the EQ via the settings on your external device.

SPECIFICATION:

Horn Size: 3 inches

Horn output: 3W x 2, 4Ω

Battery Capacity: 1000 mAh

Power Supply: DC 3.7V

Subwoofer Size: 5 ¼ inches


Subwoofer output: 12W, 4Ω

Frequency Response: 100-20Khz

Accessories:

USB Charging Cable, Audio Cable, User Manual, Carrying Strap

APPEARANCE AND KEY INSTRUCTIONS:

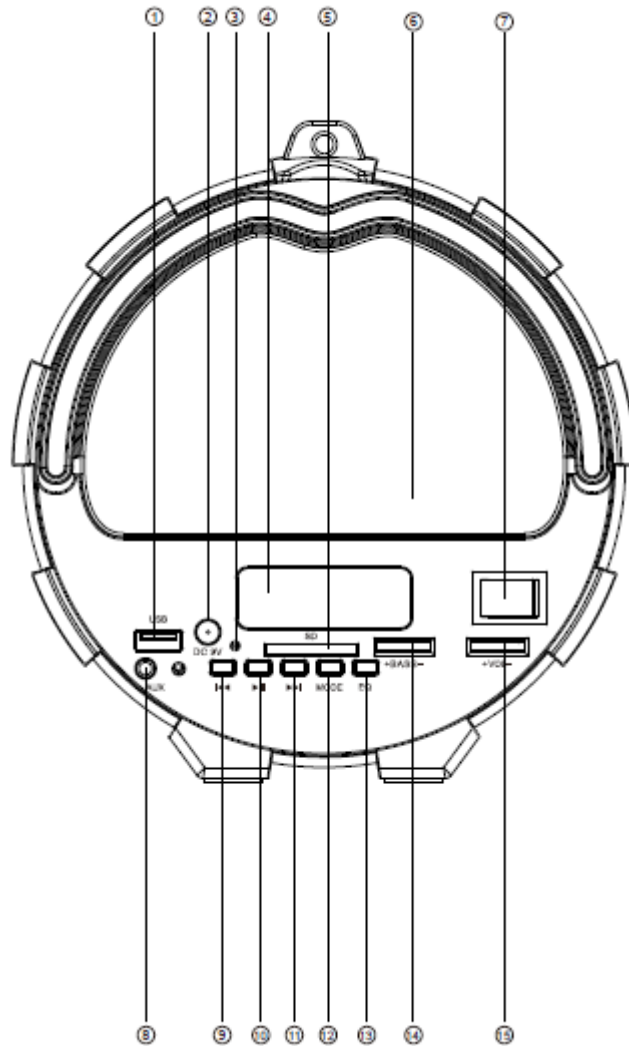

- | | | |
|---|------------------|------------------|
| 1. USB port | 2. Charging jack | 3. LED indicator |
| 4. LED screen | 5. SD slot | 6. Speaker |
| 7. ON/OFF button | 8. Aux-in jack | 9. Forward |
| 10. Play/Pause | 11. Backward | |
| 12. Mode (<i>Bluetooth</i> switch, USB, SD, FM and AUX-IN modes) | | |
| 13. EQ | 14. Bass Gear | 15. Volume Gear |

Bluetooth:

1. Turn the power button to "ON". The LED screen will display "bt" and beep twice, flashing quickly.
2. Activate *Bluetooth* on your mobile phone and search for device name "BT speaker", and then connect it. The "bt" on the screen will stop flashing and beep three times once connected successfully.
3. Play the music from your mobile phone and enjoy.
4. Press LAST or NEXT button on the device or mobile phone to select songs.

5. Press PLAY/PAUSE button on the device or Mobile phones to PLAY/STOP the music.
6. Use the "Volume Gear" to adjust the volume up and down. Or you can adjust the volume from your mobile phone.
7. Use the "Bass Gear" to adjust the bass.

Playing music from USB disk & SD card:

1. Turn the Power button to "ON".
2. Insert SD card or USB flash disk into slot, the music stored will be played automatically and LED screen display the songs playing.
3. Under playing mode, short press Forward or Backward button to select songs you like, long press to fast forward or backward the song.
4. Press PLAY/PAUSE to play or pause.
5. Please turn the Power button to "OFF" while without use.

Note: In Bluetooth PLAY mode, inserting a SD card or USB device will automatically disconnect the Bluetooth and switch to the USB device or SD card. You can press the MODE button to switch back to *Bluetooth* mode.

FM Radio:

1. In FM radio mode, the audio cable provided serves as an antenna.

Please insert the audio cable to get the best FM radio signal before use.

2. Turn the ON/OFF button to "ON" and press the "MODE" button to switch to FM radio mode.
3. In PLAY mode, tap the "PLAY/PAUSE" button to auto-search the FM stations and store them automatically.
4. Press the LAST or NEXT buttons to change the stored FM stations.

AUX-IN:

For all other compatible external music devices or MP3/MP4 players: Please use the supplied audio line cable to connect from your external device's "LINE OUT" jack to the "AUX IN" jack of this device. Then press the "MODE" button to switch to the AUX-IN state. Enjoy!

When using an external device, all functions will be controlled by the external device except for the "PLAY/PAUSE" button.

Notes:

1. Press the MODE button to toggle between different modes: *Bluetooth*, SD, USB, FM radio, and AUX-IN.
2. Turn the ON/OFF button to "OFF", to shut off the power supply while not in use.

Charging Instructions:

1. Power off the unit, and put the provided charge cable into the charge slot of unit. Connect the other end to a PC or other charger with 5V output (not included). Once connected properly, the red charging indicator light should keep flashing.

2. Charge time is approximately 3-5 hours. When fully charged, the red charging indicator light will switch off.
3. In order to prolong the life of the battery, please do not charge more than 8 hours.



- **Dynamic Sound Effect** •
- **Wireless Stream Music** •
- **Bluetooth-Enabled** •

6639 Valjean Ave Van Nuys CA 91406
Tel: 818-785-4000 • Fax: 818-785-5081 • info@axessusa.com