



User manual

www.wishtel.com

For Technical queries
Email: query@wishtel.com
Ring: 022 30010707 / 08

For Support
Email: support@wishtel.com
Ring: 022 30010700

User's manual

Working temperature 40° — -5°, don't put it at the moisture place.
Don't crash or no stack on it
Don't invade it by other article
Keep it away from the chemical or the water drop
Keep it away from the direct sunlight or other heating article
Keep it away from the dust
Backup the files or important information stored in it
Don't refurbish or repair without the authorization

Traffic safety

Don't listen to the music through earphone when driving the motor, or bicycle, or you might break the law in some countries and it's dangerous especially when you set on high volume in the earphone, which cause you fail to hear outside surroundings.
Don't use it on the airplane, at the gas station or at the hospital

Protect your hearing

The study conducted by the doctor indicates that it will damage your hearing if you listen to music for continuous long time through earphone and at the high volume. When you are feeling uncomfortable, stop the music or lower the volume.

①

Battery

The below icons indicate the different power levels left in the battery



No replacement of battery without authorization, or the exploration hazard might happen.

Recharge it for at least half of hour if it has been idle for long time and fails to start itself.

Regularly recharge it at least one time monthly
40°—5° is the optimum temperature for the battery recharging or the battery performance might deteriorate slightly

Disposal

The battery might contain the polluting material, please give it to the official recycling-station before disposing the tablet pc, and don't litter.

②

Menu

1. Brief introduction.....	04
• Feature of tablet pc.....	04
• Start or shut tablet pc.....	05
2. Basic operation.....	05
• Install APK application.....	05
• Uninstall APK application.....	07
• Video playback.....	08
• Music playback.....	09
• Setting.....	10
• TV output.....	13
• OTG.....	14
• Connect with PC.....	14
• Factory data reset.....	15
• Firmware updating.....	16
• Formatting.....	17
3. Other information.....	17
• The frequent questions about android.....	17
• Specification of the tablet pc.....	19
• Accessories.....	20

Brief introduction

Feature of tablet pc

Main feature:

7 inch (800 x 480) capacitive touch panel

Wi-Fi integrated, wireless internet

Support 3G and other external device by OTG

Google Android 2.3 OS

G-Sensor

Buttons: power, volume + , volume - menu, home

Support Video: AVI, MP4, MPEG 1/2/4, MJPG, H263, H264 in addition to H264 which is supported by (720*480) resolution, the other video formats are supported (1280*720) resolution.

Support 3D video & 3D game

Support Music: MP3, WMA, MP2, AAC, WAV etc

Voice record: MP3/WMA format

Support Image: JPG、BMP、PNG、GIF etc.

Support TXT, LRC, PDF, HTML, HTM etc.

Support external micro SD card

Mini USB

Start or shut tablet pc

Start the tablet pc

If power is off, press the  button for 3 seconds

Shut the tablet pc (power off)

At any working status, Press the  button for continual 3 seconds.

 
If the tablet pc “die” while working, press the  button for 8 seconds to restart it.

At the screen-saving (black screen) status, press  button shortly to siren the screen, and move the lock icon to unlock it.


Basic operation

Install APK application

1. Copy the APK software into the tablet pc or the micro-SD card.
2. Press the icon of file manager to select the APK application as illustrate below:

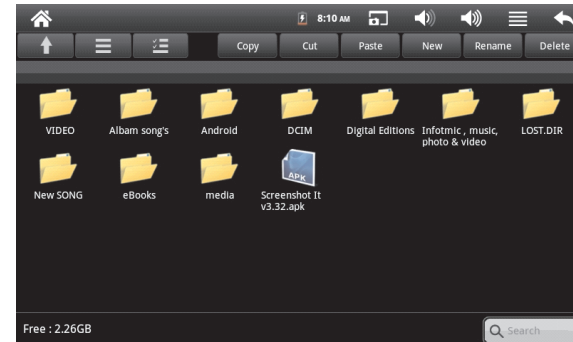

 
3. Press: the routine of application to start installing illustrated as below:

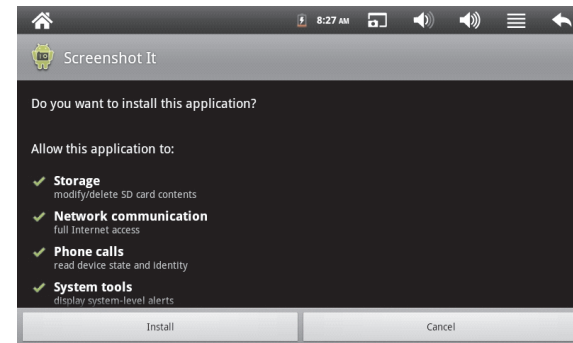


Install then Check APK installing status

Uninstall APK application

 1. Press: setting icon at the main menu, enter setting-- press apps-- press downloaded then all the applications are listed from top to bottom. All these are illustrated as below:

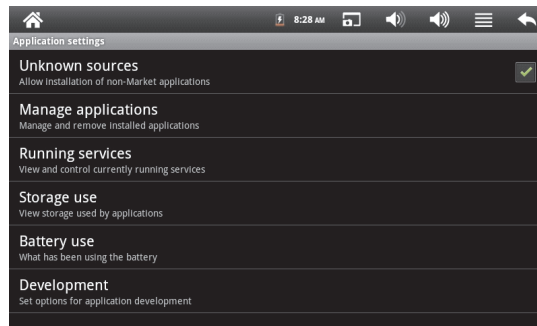

 
2. Press : the application to uninstall as the below illustration shows:

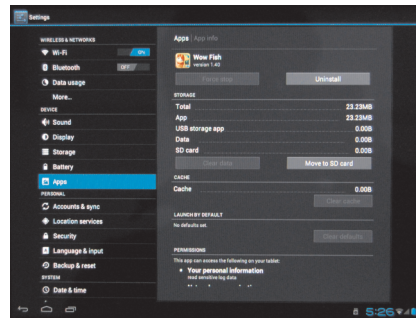


7

Video playback

 1. Press: the icon of super-HD PLAY at the main menu, enter the file list as the below shows

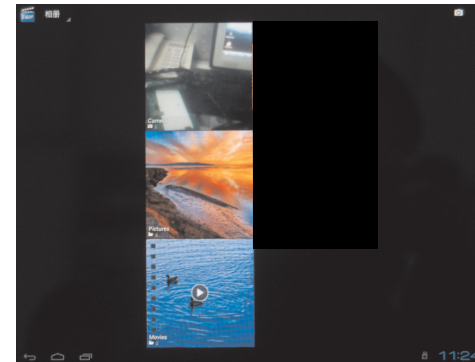

 2. Choose the video file and playback interface as the below shows:

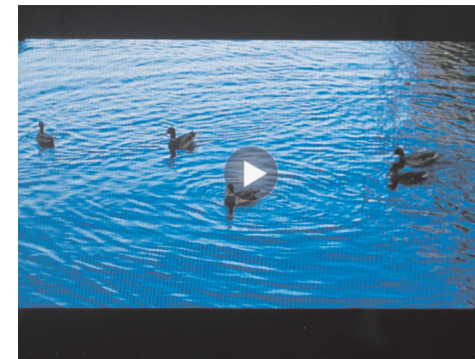


8

Remark: this tablet pc supports video with 4k definition(3840 x 2160 pixel) , 1080P, 720 P, RMVB, AVI, MP4, WMV, H264, and it possibly can not playback all the video originated from the internet, because the video file are processed in the different formats, code, etc.

Music playback

Press the icon of music at the main menu, enter music list as the below illustrates:

 Choose the music:

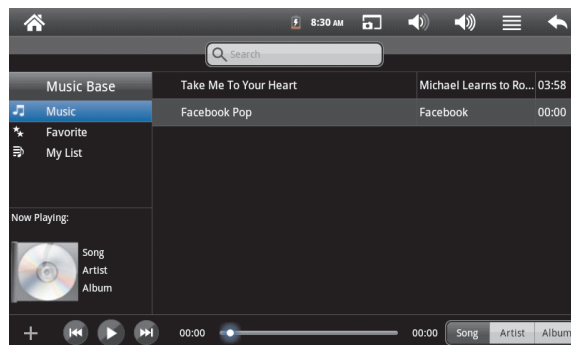


Remark:

This tablet pc supports Lyrics synchronization. The lyrics file must be in *.LRC format and in the same folder with the music file, the names of both files must be same too

Setting

 1. Press setting at the main menu, enter the interface of setting as the below displays:

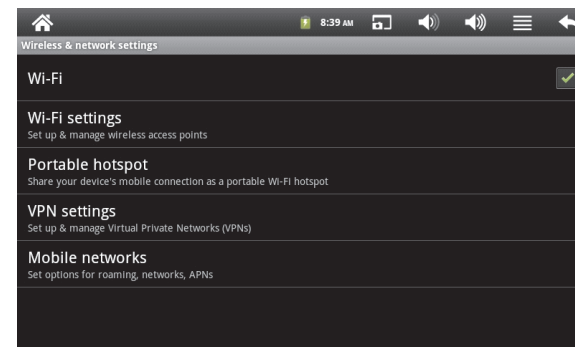

Wireless & networks

WIFI: turn on or off WIFI

WIFI Settings set up & manage wireless access points

Remark: both devices must be within 10 meters when matching or data-transferring.

Data usage

When 3G is working, it shows how much data is used

More...

Airplane mode, Ethernet, VPN, mobile networks.

Sound

Volumes:

Change the volumes for

Music, video, games & other media

Ringtone & notifications

Alarms

Default notification

Choose the sound style when the default is changed.

Also you can choose the silent mode or sound mode for:

Vibrate and ring

Touch sounds

Screen lock sound

Vibrate on touch.

Display

Brightness: change the brightness level

Wallpaper: choose the wallpapers pre-installed

Auto-rotate screen: you can choose or reject by pressing it

Sleep: choose the idle (screen-saving) time model from 15 seconds to 30 minutes including never

Font size 4 modes available: small normal large huge

Accelerometer coordinate system yes or no option, it support some game

Enable screen adaption you can change the display resolution and display mode

Storage

Show the occupied space and the available space both in the internal storage and external storage (microSD card, USB host).

Battery

Battery availability and charging status including charging mode and electricity charged.

Apps

Show the storage size of applications, its location and applications under running.

Accounts & sync**Location services**

Google's location service.

Location & Google search.

Please go to the operation for more details.

Security

Screen security set up screen lock and owner info.

Encryption encrypt tablet, setup and download applications and other files.

Language & input

Language choose the default OS language.

Keyboard & input methods choose the default OS input methods, and android.

keyboard is integrated inside android OS.

Mouse/track pad setup pointer speed.

Backup & reset

Factory data reset, and all the data will be erased.

Date & time

Set up the date, time, time zone, time format, and date format.

Accessibility

It is a screen reader providing spoken feedback to the blind or low-vision user, and available and free at the android market.

Developer options

Debug or connect USB mode
Set screen to sleep while charging
Start or shut the mock locations
Start or shut display of touch operation
Start or shut screen renewal
Start or shut the display of CPU usage status
Start or shut GPU rendering
Set up animation scale.
Set up background process limit
Start or shut display app not responding dialog for background apps.

About tablet

Status status of the battery, network, and other information
Legal information: model number, android OS version, baseband version, kernel version and build number

Connecting with TV set

1. Set on at TV set.
2. Connect the tablet pc with TV set through HDMI cable (1.4 Version is recommended), and then both displays will be synchronized.
3. Remove HDMI cable to disconnecting with TV set.

Remark: you can switch the video display on the TV set, and then the tablet pc will not show the video, but only operation interface.

OTG

It is the abbreviation of on-the-go; it allows the data-transferring and data-sharing between this device and other one without host”.

1. Connect this device with other one for example flash memory storage through OTG converter
2. Press “file manage” after this device display “external devices in”, then press the  icon all the files will be listed.

Remark:

 
The original OTG converter is recommended, if other USB storage is found incompatible, please download the firmware from the authorized homepage.

When OTG being used, make sure the sufficient battery power insides this device, if other USB storage has the independent power supply, please turn on the power.

OTG is compatible with the external keyboard, mouse and other device.


Connecting with the PC

Connect this device with PC by USB cable, then it will work as the mobile storage for PC.(remark: all the files insides the internal storage of this device is read only by PC, it can run other operation like the WIFI internet etc. turn off USB storage, it can read the files insides itself again. Please see the below illustration:

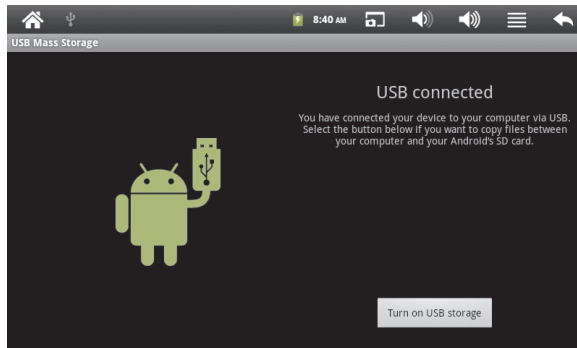


Factory data reset

 If this device is infected with computer virus, or the applications by the third party cause it fail then please turn to “factory data reset” to delete the virus or applications and recover to the factory's setting. Please see the below illustration:

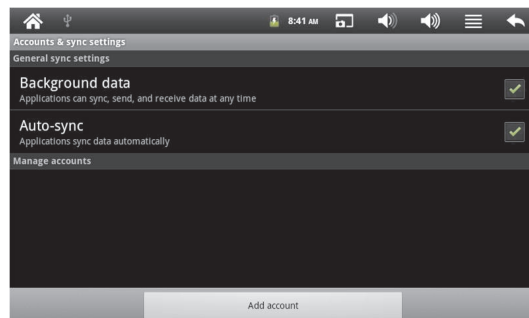

15

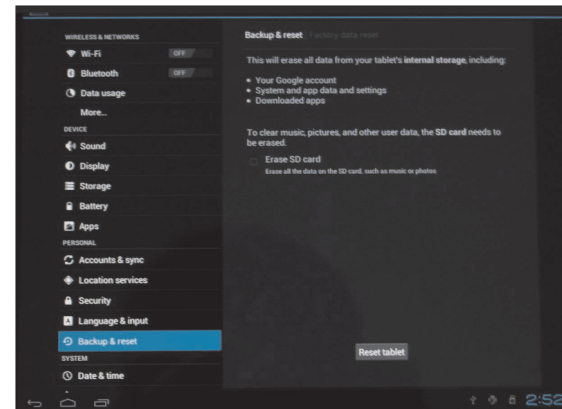 

Firmware updating

The firmware might be available please contact the manufacturer or the authorized local dealer. When you are upgrading your tablet pc, make sure the following points:

1. The tablet pc must remain at least 60% battery electricity insides or the insufficient battery probably because the firmware upgrading fail and eventually this device can not work well.
2. When upgrading, don't turn off or other operations, otherwise the upgrading fails.

16

Remark: before upgrading firmware, please backup all the information stored in this tablet pc, or it will be deleted.

Formatting

1. Connect this device with pc by USB cable
2. Double press the icon of my PC and select "mobile storage"
3. Press the right button of mouse, select "format"
4. Press "start"
5. Press "yes"
6. Press "sure" after formatting
7. Revert from "formatting"

Remark: all the file or information stored insides is not recovered after formatting

Other Information

FAQ's

- Q: what are APK file and its relationship with android MID?
A: APK is the abbreviation of android package; it is run under android OS.
- Q: How to obtain APK applications?
A: Go to android market to download it
- Q: Why some APK applications can not work well on this tablet pc?

- A: Most APK applications online are developed by the individual , probably require the special support by the hardware and android OS, for example some APK game developed under android OS 2.3, and then It can not run itself well under android OS 4.0. It is caused by the android OS not by this tablet pc.

- Q: why WIFI pause automatically?
A: Screen timeout is set on, then WIFI will shut automatically to save the battery power, when this device is resumed, WIFI will revert to connection automatically in 10 seconds.

- Q: what kind of USB3G dongle it supports
A: WCDMA dongle HUAWEI: E261,E160E, E353,E220, E170,E1750, E1820,E172,K176G.
ZET: MF110,MF633
CDMA2000/EVDO dongle HUAWEI: EC167,EC122,EC156, EC1270,
ZET: AC581 , A355,AC2736

- Q: Why the picture distorts after being set as wallpaper?
A: Home menu consists of 5 displays, the system will process the wallpaper into 5 divisions, and then the picture is distorted.
- Q: Why I can not install some APK downloaded online?
A: Please follow these steps: setting safety unknown sources, select unknown sources, and then install the APK.

Specification of the tablet pc

frequency :	1 Ghz
CPU :	ALLWINNER A10
SDRAM :	512MB DDR
Touch mode :	Resistive
Button :	Power、V+ (volume)、V- (volume)
Screen :	7inch 800*480
Internal storage :	4GB
Camera :	Front : 0.3mega pixels
wireless :	Wi-Fi 802.11 a/b/g/n
Battery capacity :	Up to 4 hours
External :	3G dongle、 mouse、 keyboard、 OTG、
TV output :	TV output
OS :	Google Android 2.3
Input mode :	Android keyboard
Internet :	Internet-browsing, online entertainment, office work, game

Accessories

Power Adaptor :	1 PCS
USB cable :	1 PCS
Earphone :	1 PCS
Manual :	1 PCS
Box :	1 PCS

Remark:

We reserve the right to adjust the product without prior notification, and this manual is for your reference, in some case you need to operate the device to get more information. When you take advantage of the third-party's sources, if the copy right or legal issue is involved, please stop or delete the mentioned sources