


SIMADYN D Digital Control System

User Manual

Memory module MM11

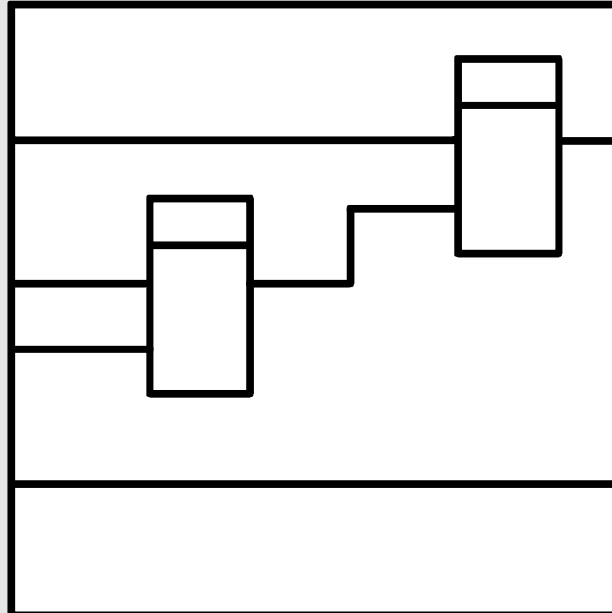

User Manual, Memory module MM11

Edition		Edition status
1	Memory module MM11	03.91
2	Memory module MM11	05.95

Copying of this document and giving it to others and the use or communication of the contents thereof is forbidden without express authority. Offenders are liable to the payment of damages. All rights are reserved in the event of the grant of a patent or the registration of a utility model or design.

We have checked the contents of this Manual to ensure that they coincide with the described hardware and software. However, deviations cannot be completely ruled-out, so we cannot guarantee complete conformance. However, the information in this document is regularly checked and the necessary corrections included in subsequent editions. We are thankful for any recommendations or suggestions.

Contents

Warning information.....	1
1. Description.....	3
2. Module construction.....	3
3. Notes for the user.....	4
4. Technical specification.....	4
5. STRUC L Menu in the master program.....	4
6. Appendices.....	5
6.1. Block diagram.....	5
6.2. Dimension drawing and table of connectors.....	5
6.3. Location diagram.....	5
7. ECB instructions.....	6


NOTE!

The information in this Manual does not purport to cover all details or variations in equipment, nor to provide for every possible contingency to be met in connection with installation, operation or maintenance.

Should further information be desired or should particular problems arise which are not covered sufficiently for the purchaser's purposes, please contact your local Siemens office.

Further, the contents of this Manual shall not become a part of or modify any prior or existing agreement, commitment or relationship. The sales contract contains the entire obligation of Siemens. The warranty contained in the contract between the parties is the sole warranty of Siemens. Any statements contained herein do not create new warranties nor modify the existing warranty.

Warning information

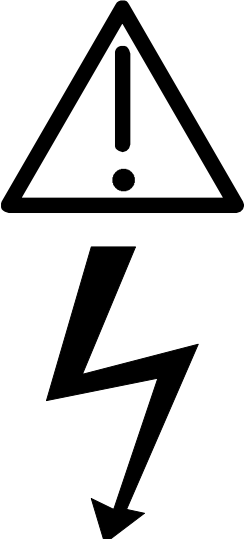	WARNING!
	<p>Electrical equipment has components which are at dangerous voltage levels.</p> <p>If these instructions are not strictly adhered to, severe bodily injury and material damage can result.</p> <p>Only appropriately qualified personnel may work on this equipment or in its vicinity.</p> <p>This personnel must be completely knowledgeable about all the warnings and service measures according to this User Manual.</p> <p>The successful and safe operation of this equipment is dependent on proper handling, installation, operation and maintenance.</p>

Definitions

* **QUALIFIED PERSONNEL**

For the purpose of this User Manual and product labels, a „Qualified person“ is someone who is familiar with the installation, mounting, start-up and operation of the equipment and the hazards involved. He or she must have the following qualifications:

1. Trained and authorized to energize, de-energize, clear, ground and tag circuits and equipment in accordance with established safety procedures.
2. Trained in the proper care and use of protective equipment in accordance with established safety procedures.
3. Trained in rendering first aid.

* **DANGER**

For the purpose of this User Manual and product labels, „Danger“ indicates death, severe personal injury and/or substantial property damage will result if proper precautions are not taken.

* **WARNING**


For the purpose of this User Manual and product labels, „Warning“ indicates death, severe personal injury or property damage can result if proper precautions are not taken.


* **CAUTION**

For the purpose of this User Manual and product labels, „Caution“ indicates that minor personal injury or material damage can result if proper precautions are not taken.

* **NOTE**

For the purpose of this User Manual, „Note“ indicates information about the product or the respective part of the User Manual which is essential to highlight.


	CAUTION!
	This board contains components which can be destroyed by electrostatic discharge. Prior to touching any electronics board, your body must be electrically discharged. This can be simply done by touching a conductive, grounded object immediately beforehand (e.g. bare metal cabinet components, socket protective conductor contact).

	WARNING!
	<p>Hazardous voltages are present in this electrical equipment during operation.</p> <p>Non-observance of the safety instructions can result in severe personal injury or property damage.</p> <p>It is especially important that the warning information in all of the relevant Operating Instructions are strictly observed.</p>

1. Description

The MM11 communications RAM is a SIMADYN D general purpose RAM module which is used for data exchange via the local and communications busses. The MM11 enables the individual processor modules to communicate with each other. Data transfer from one processor module to another takes place in the following way:

One processor module bids for the bus and, after acquiring the bus, writes data into the communications RAM. The node to which the data are addressed, must also bid for the bus and read out the data from the communications RAM. Address management of the communications RAM is automatically carried out by the operating system.

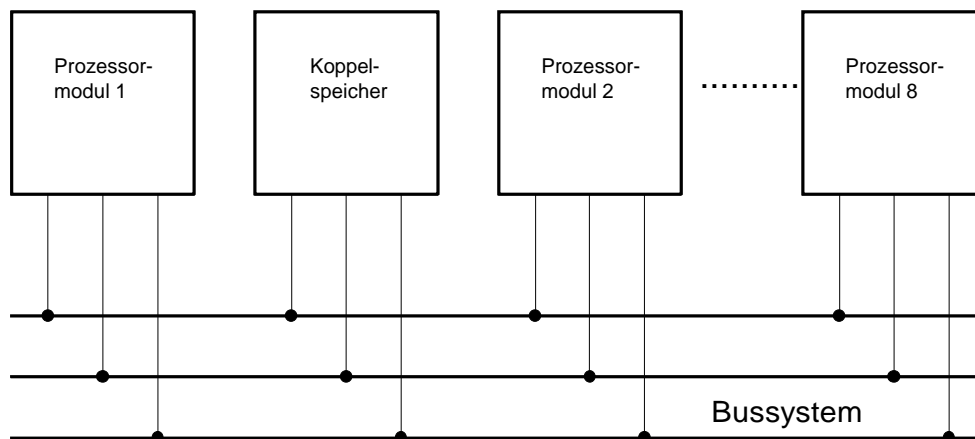

Either byte-wise or word-by-word access is possible. The RAM has a capacity of 64K bytes for each bus. The address range for the local bus starts at 20000 H and for the communications bus at 30000 H.

Two terminating resistors, one for the local bus and one for the communications bus, are integrated to obtain defined voltages on the busses.

2. Module construction

- Connections for local bus (X2) and communications bus (X1)
- 64K-byte RAM for each bus
- RAM access time 150 ns
- Data width 8 or 16 bits
- 3.4 V battery integrated in the subrack for saving data in the event of a power failure
- Module identification with PAD equivalent circuit
- Module code: OAH
- Terminating resistor for communications bus and local bus integrated

3. Notes for the user

The MM11 module already incorporates the necessary bus terminating resistors. A bus section cannot take more than two bus terminators so that for each bus section only one external SR14 bus terminator can be used in addition to the MM11.

The module must be fixed to the subrack using screws (even during commissioning) to ensure trouble-free operation.

If the MM11 communications RAM is configured as an MM21 module (communications RAM for the local bus only), the following changes must be made on the module:

- Remove the following:

R 16 (0 ohms resistance)

D 22 (Pal 16L8)

Note: With these changes, the RAM components are decoupled from the communications bus whereas the integral bus terminator is still active.

When making these changes, make sure that the maximum permissible load for a bus section including two bus terminators is not exceeded.

4. Technical specification

INSULATION GROUP	A to VDE 0110 paragraph 13, group 2 at 5V DC
AMBIENT TEMPERATURE	0 to 55 deg. C
STORAGE TEMPERATURE	-40 to +70 deg. C
HUMIDITY CLASS	F to DIN 40040
ALTITUDE RATING	S to DIN 40040
MECHANICAL STRESS	Installation in stationary equipment, sensitive to vibrations
PACKAGING SYSTEM	ES 902 C
DIMENSIONS	233.4 x 220 mm
MODULE WIDTH	1 1/3 SPS = 1 plug-in station = 20.14 mm
WEIGHT	0.51 kg
CURRENT CONSUMPTION P5	
- IN OPERATION	300 mA (typ.)
- POWER FAILURE	20 uA max. VBatt= 3.4 V

5. STRUC L Menu in the master program

:MM11 "mail box memory module, L+C-bus"

6. Appendices

6.1. Block diagram

Block diagram 3GE 465 611 9003.00 SU

6.2. Dimension drawing and table of connectors

Dimension drawing, front plate and table of connectors used 3GE 465 611 9003.00 MB

6.3. Location diagram

Location diagram 3GE 465 611 9003.00 A0

7. ECB instructions

Components which can be destroyed by electrostatic discharge (ECB)

Generally, electronic boards should only be touched when absolutely necessary.

The human body must be electrically discharged before touching an electronic board. This can be simply done by touching a conductive, grounded object directly beforehand (e.g. bare metal cubicle components, socket outlet protective conductor contact).

Boards must not come into contact with highly-insulating materials - e.g. plastic foils, insulated desktops, articles of clothing manufactured from man-made fibers.

Boards must only be placed on conductive surfaces.

When soldering, the soldering iron tip must be grounded.


Boards and components should only be stored and transported in conductive packaging (e.g. metalized plastic boxes, metal containers).

If the packing material is not conductive, the boards must be wrapped with a conductive packing material, e.g. conductive foam rubber or household aluminum foil.


The necessary ECB protective measures are clearly shown in the following diagram.

a = Conductive floor surface
 b = ECB table
 c = ECB shoes

d = ECB overall
 e = ECB chain
 f = Cubicle ground connection

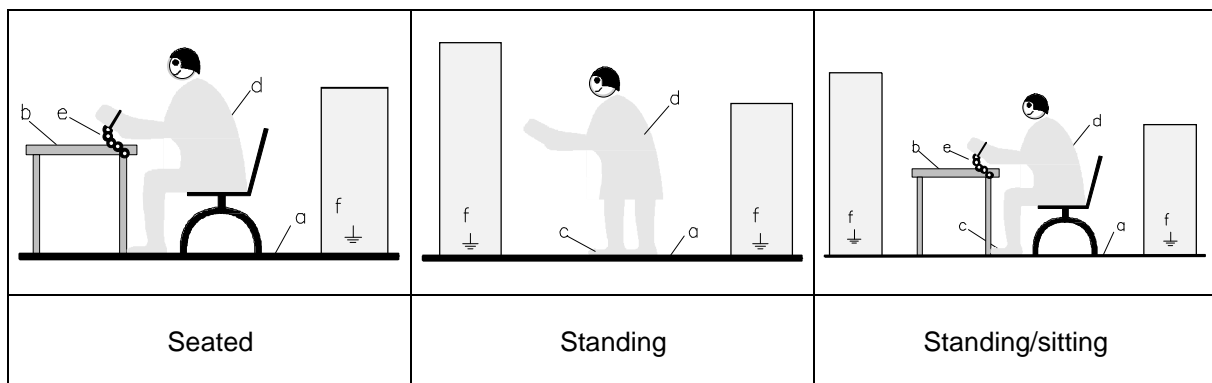

 Drives and Standard Products
Motors and Drives Systems Group
Postfach 3269, D-91050 Erlangen

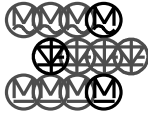

System-Based
Technology