 


YardWorks

RETRACTABLE HOSE REEL

10 METRE HOSE LENGTH

MODEL NO. RHR-100

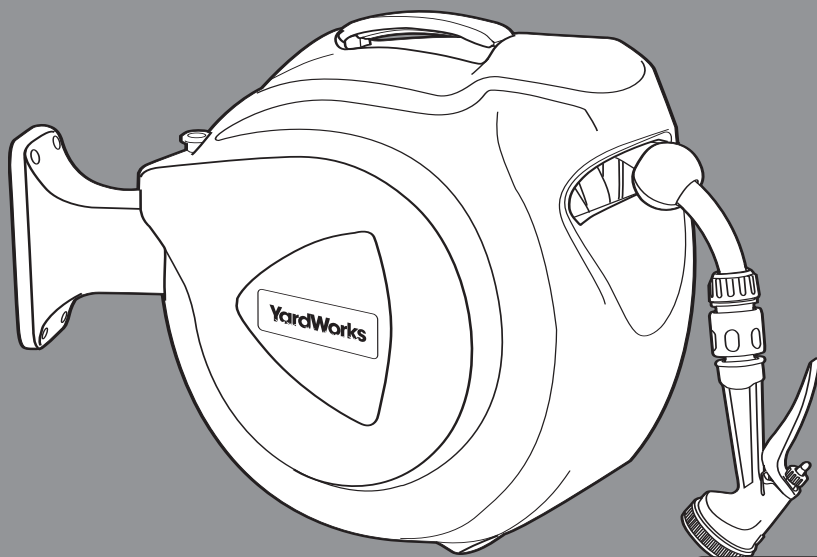

 
 
OPERATING INSTRUCTIONS

INTRODUCTION - MODEL NO. RHR-100

This reel is made of high-quality materials and parts, driven and released by a spring, which can rewind the hose automatically. A self-layering mechanism rewinds the hose clean to the reel.

The reel can be fixed to a wall or ceiling through the mounting bracket enclosed, relieving work space restriction. An aluminium pivot tube on the reel connects the reel and mounting bracket (Fig. 1), allowing the reel to swivel 180°. The length of hose ranges from 0-10m.

1. Mounting Bracket
2. Handle
3. Hose Stop
4. Outlet Hose
5. Inlet Hose (not shown)
6. Trigger Spray Gun

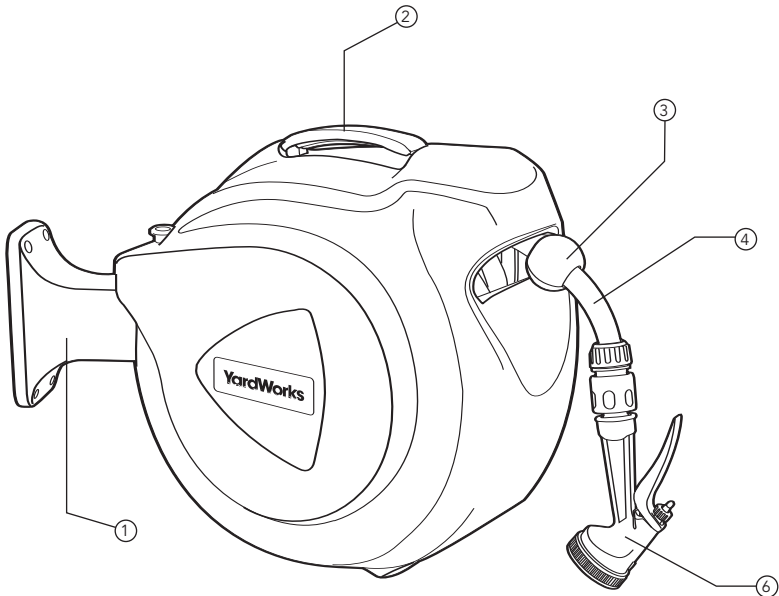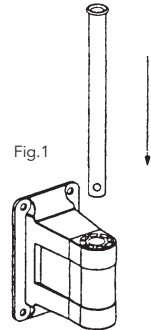

INSTALLATION

- This reel is suitable for installing near a water source.
- For a large area place it in the centre of the yard or work place, enabling you to freely cover the area.
- You can also extend the hose to the most convenient point in this area.
- Connect the inlet hose to a water supply.
- The mounting bracket can be installed on a brick wall (Fig.2). There are many alternative positions in which the unit can be placed. The key point is subject to what is convenient for the user.
- The most appropriate position is to mount it on a wall or post horizontally, approximately 1m above the ground. Otherwise the reel can be used vertically when hung on a suitable overhead beam or rafter.
- When securing the hose reel overhead it is advisable to drill a hole in the pivot tube and place a lock or bolt in the hole. This will prevent the pivot tube from slipping out of the mounting bracket and the hose reel falling from the mounted position.
- The mounting bracket must be secured using four screws or bolts (not included). The four holes in two directions to centre are 114mm and 39mm (Fig.3)

Fig.2


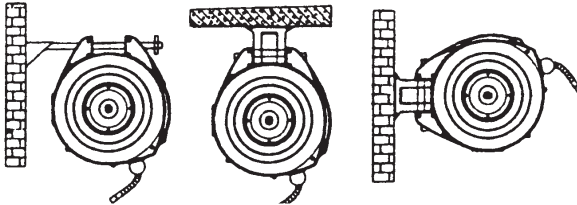 


Fig.3

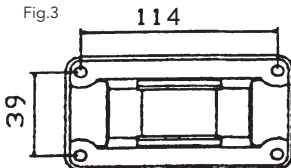 

POINTS TO NOTE

The reel has a high quality kink resistant hose supplied.

1. After use, please turn off the water. In some areas of high temperatures and high water pressure, the sunlight will heat the water and damage the hose, which will cause the hose to be difficult to rewind.

Turn off the water before retracting the hose.

Do not leave the reel outside during very low temperatures, as the hose may be less flexible and difficult to retract.

2. Do not let the hose touch any chemical or substance, such as acetone, white spirits or acid etc.

HOW TO CORRECTLY LATCH AND RETRACT HOSE

The hose will extend when pulled. The automatic lock can be engaged at anytime by allowing the hose to retract back into the reel several centimetres, then extending out again several centimetres and then allowing the hose to retract again. The lock will engage. To retract simply pull the hose out approximately 30cm and then allow the hose to retract.

When retracting the hose it is recommended a minimum of 25% of the hose has been extended and the water has been turned off at the tap. To ensure the hose retracts fully, place the hose into a large loop on the ground, free from anything that will impede the retraction.

IMPORTANT

IT IS IMPORTANT FOR SAFETY REASONS AND OPTIMUM PERFORMANCE THAT THE OPERATOR HOLDS THE NOZZLE END OF THE HOSE DURING RETRACTION.

UNDER NO CIRCUMSTANCES SHOULD THE HOSE BE RELEASED WHILE RETRACTING THE HOSE.

There is a yellow strip on the hose towards the 10m mark, pulling the hose past this point can hinder the retracting mechanism from working. Should the hose be pulled past this point and fails to retract, this is easily solved by removing the reel from the mounting bracket, placing the reel on the ground (on its side) and pulling the hose out with a quick jerking motion. The hose should then proceed to retract. Raise the reel to an upright position and allow the reel to retract the hose then assemble reel back onto mounting bracket.

MAINTENANCE

1. Do not immerse the reel in water to clean. If hose is very dirty, clean it before retraction.
2. Mount the reel in a sheltered position to prolong its life. The metal parts will deteriorate and rust in exposed positions. The polypropylene parts will also be affected when exposed outside, particularly under sunlight, reducing the life of the reel housing and retracting wheel. In areas where temperatures reach freezing point, the hose will also be damaged if it is full of water.
3. When not in use, it is advisable to store your reel.

TECHNICAL PARAMETERS

MODEL	HOSE LENGTH	HOSE MATERIAL	PRESSURE	INNER DIAMETER OF HOSE	SIZE OF INLET FITTING	SIZE OF OUTLET FITTING
RHR-100	33 Ft (10m)	PVC	MAX 0.8 mpa (150 PSI)	1/2" (12mm)	3/4 NPT	3/4 NPT

CONTENTS

- 1 x 10m Retractable Hose Reel (RHR-100)
- 1 x Mounting Bracket
- 1 x Pivot Tube
- 1 x Trigger Spray Gun
- 1 x Operation manual

YARDWORKS

AUSTRALIA (Head Office)

5 Chestnut Crt, Dingley, Victoria, Australia, 3172

Telephone: 03 9558 3999

Facsimile: 03 9558 0583

WARRANTY

THIS WARRANTY FORM SHOULD BE **RETAINED BY THE CUSTOMER** AT ALL TIMES

The warranty is only made available by returning the tool to your nearest Bunnings Warehouse with a **confirmed Bunnings register receipt**.

**YOUR WARRANTY FORM SHOULD BE RETAINED
BY YOU AT ALL TIMES.**

**SHOULD YOU HAVE ANY QUESTIONS PRIOR TO
RETURNING YOUR PRODUCT FOR WARRANTY OR
REPAIR PLEASE TELEPHONE OUR CUSTOMER
SERVICE HELPLINE:**

**Australia 1800 069 486
New Zealand 0508 069 486**

TO ENSURE A SPEEDY RESPONSE PLEASE HAVE THE MODEL NUMBER AND DATE OF PURCHASE AVAILABLE. A YARDWORKS CUSTOMER SERVICE REPRESENTATIVE WILL TAKE YOUR CALL AND ANSWER ANY QUESTIONS YOU MAY HAVE RELATING TO THE WARRANTY POLICY OR PROCEDURE.

PURCHASED FROM: _____

DATE PURCHASED: _____

2 YEAR REPLACEMENT WARRANTY

Your Yardworks tool is guaranteed for a period of **24 months from the original date of purchase** and is intended for DIY (Do it yourself) use only.

WARNING

The following actions will result in the warranty being void.

- Professional, Industrial or high frequency use.
- If the tool has been operated on a supply voltage other than that specified on the tool.
- If the tool shows signs of damage or defects caused by or resulting from abuse, accidents or alterations.
- If the tool is disassembled or tampered with in any way.

Note: Warranty excludes consumable parts such as brushes, batteries, sanding pads, blades, discs, drill bits, collets, router bits and Hose Fittings.