Centurion (Gold, Parks, CC & Field)

Users Guide V1.37

Diamond Traffic Products, Inc. P.O. Box 1455 76433 Alder Street Oakridge, OR 97463

> Phone : (541)-782-3903 Email : <u>support@diamondtraffic.com</u> Web : www.diamondtraffic.com

TABLE OF CONTENTS

Page Section 4 I. Introduction a. Difference between Gold, CC, Parks, & Field Versions 15 16 II. Registration..... 17 III. Counter Communication – Basic 20 IV. Counter Communication – Advanced..... a. Modifying Bin Tables 31 b. Bluetooth Counter Communication 34 c. Using a GPS Device 37 d. Windows vs. Classic Monitor Lanes 38 41 V. Reports a. Saving Reports to a File 45 47 VI. Chart Editor..... 57 VII. Database a. Importing the TrafMan Database 62 d. Merging Sites..... 66 68 VIII. Exporting Data a. Direct Export To Excel..... 69 b. TMG Exporting 70 c. Peek PRN & Monthly File Exporting 70 73 IX. Bin Table Editor 75 X. Preferences a. File Directory Preferences..... 77

Section	Page
XI. Other	79
XII. Telemetry & Polling	81
a. Polling	88
b. Advanced Setup	93
c. Direct Dial Directory	95
d. Peek ADR & 241 Polling	96
XIII. TSDP (Timestamp Data Processor)	98
Appendix A. Database Technical Description	99
Appendix B. Parking Lot System	109
Appendix C. Technical Notes	115
1. USB Driver Updating	115

I. Introduction

This Users Guide will walk you through the basic operation of Centurion. Everything from installation, to traffic counter data downloading, to report generation will be shown.

Before beginning, have a traffic counter with a few unretrieved data files in its memory ready. If possible, have these traffic counter files be Per-Vehicle (Raw) data to best demonstrate all of the features of the program.

You can also use a Datahog and/or a floppy disk to bring any standard binary data file into the software. This Users Guide demonstrates how to do this.

NOTE: For your convenience, Centurion automatically places three "Sample" binary data files in the Download directory. These files can be used by selecting the Manual Import function described in this document.

On-Line Help:

Centurion has a Windows context specific HTML Help system. This can be accessed at any time by pressing the F1 key (or selecting one of the help options from the Help menu). It is also available from the Start Menu.

Please refer to this document for information not covered in the Users Guide.



Version Information:

Version	Explanation
1.00 07/26/02	First commercial release.

Note: Changes to versions from 1.01 to 1.31 are no longer included in this document. Refer to <u>www.detllc.com</u> for historical version information.

V1.32	New version which has the following major new features:
Build	 Completed support for the Omega Traffic Counter programming & monitoring (via BlueTooth and new USB connection ability)
#0001 1/15/08	• Changed the MDI Form Style to better support multiple documents. This is a major change that provides an " Outlook " style bar on the left side of the main window with buttons for every open window. This method makes it much easier to switch between windows when running in Maximized. The "Scanning" window is also on this bar and when switching from a non-maximized window (like a counter programming window) to a maximized window (like a report) the program automatically restores the maximized state.
	 Changed the Dialing Directory window to be a MDI window and to work more seamlessly with the program. Window now includes an Add & Delete button and right clicking on the directory pops-up a variety of options to sync the Dialing Directory with the Map View (Gold only).
	 Added new Open Terminal Window function to the Telemetry menu to allow direct connecting to any port on your computer. You can also link to a counter from this window.
	• USB Drivers for all Diamond & IRD USB Enabled Traffic Counters now included in the install. This includes in addition to the Omega the Phoenix, Pegasus, Unicorn, TCC-540, Unicorn- Limited, & Apollo counters (USB port available on new models). Contact us for specific information on using these drivers.
	 View Calls window now allows clipboard Cut (Control+X), Copy (Control+C), and Select All (Control+A). In addition three new buttons allow you to export any selected records directly to Excel, your Web Browser (HTML), or to a Text File.
	In addition, the following minor changes and bug fixes have been made:
	 Changed the way ActiveSync is detected (must now have an active RAPIMGR.EXE process running for Cent-Lite). Completely changed the COM port setup. New Communication preferences window asks detailed questions about how you want Centurion to communicate to devices including new support for USB based traffic counters. Increased initial program loading speed when BlueTooth is installed.
	 Command line "PORT=" now just selects one COM port (i.e. "PORT=23" tells the program to scan on COM23 only). The Modem Rate setting is kept visible if even Modem Initialization turned off for a counter.
	 Fixed problem with after a Cold Restart counter not always correcting blank on Lane Axle configuration lines. Fixed not syncing clock up when in Reset & Restart with TT-6-BT or TT-8-BT counters.
	 Removed "Number of Record Intervals" from the Counter Setups. Fixed problem with closing counter link from Scanning window causing problems with "Port Not Open". New "Start Communications" and "Stop Communications" buttons on Outlook bar work in any mode.
	 All modem setups can now be named to make reference to them easier. Changed so all length values (Sensor Spacing, Loop Length, etc) settable during counter programming are done with a spin edit box (instead of typing in the value).
	• The "Montana" file naming convention has been modified and now applies to all downloaded files (including those done during a direct counter link).
	 Database editor has three new buttons for exporting selected records to Excel, your web browser (HTML), and to a Text file. You can also select all records by pressing Control+A. Window pow opposer after a Check Database that lists all abapted mode during the records.
	 Window now appears anel a Check Database that is is all changes made during the repair process. Error displays if you try to call a site from a modem configuration that does not have a defined COM port. Eived various issues in polling system with V2.80 and biober EPROM counters (especially with MMC files).
	 Updated support for Omega data files "Extended" Site ID and Info lines. Various corrections to the View Call window have been made.
	 Changed to always use Speed Bin or Length Bin totals instead of Axle Bin totals when importing Classification data and creating a volume table from it. This prevents the problem of some sites being configured in Pres-Pres mode and showing up as all zeros.

Version	Explanation
Build #0002	Build #0002 made the following minor changes and bug fixes:
2/16/08	 Took out the "Don't Build On Open" option. Future version may implement this in a different way. Added support for the UPP5 V3.10 set loop detect, drop-out, and warm-up values (check in Set Hidden Options). Fixed various issues connection to UPP5, Apollo, and Unicorn-Limited counters with new USB Port. Added "Site ID Only" naming convention for file names. This applies to downloading and direct linking. Fixed a variety of issues with the Omega link, downloading, and file directory handling. Now handles converting to text correctly data that has environmental storage enabled. For Unicorn, Phoenix, & Pegasus counters running on the V1.10 or later MDK platform, software will now show various battery charge/discharge information (double click on battery voltage to display this info). Fixed problem loading new Omega file format.
Build #0003	Build #0003 made the following minor changes and bug fixes:
3/26/08	 Changed so initial ID of counter will send 0x01, 0x05, 0x05 quickly if during the initial ID of a counter via telemetry is not working (solved problem with linking to certain sites/modems). Changed the Download Name Based On Site ID function to post review the file for the actual Site ID name and to then rename the file to that name (fixes 10 character vs. 15 character names on older version EPROM's). Added "?CENT" and "?CENTURION" as doing the same thing as "?STAN" on a polling command. Fixed problem with not autopolling Master/Slave sites correctly (would only poll the first one). Created update versions so Auto-Update feature would work from versions less than 1.32. Fixed a bug in handling 2/29 data when importing (incorrectly changed end date of a data to 3/2).
Build	Build #0005 made the following minor changes and bug fixes:
5/2/08	 Initial support for new I-Loop board setting of loop voltage and capacitors contained in the V3.15 and later EPROM's (times, setting/monitoring loops in Test Sensors, and new command under setup). Fixed problem with decoding DOW value (needed to be -1). Fixed multiple problems throughout code handling years 00-99 versus years 1980-2079 (some code thought it was a different way). Now do a "setdisk" and "SetCurrentDir" before doing a web update to insure files go to the correct place.
	 Added a new Toolbar button that allows you to show/hide the Scanning Bar and Quick Bar. Fixed problem on Direct Dial window not being able to type in an upper case Site ID. Added a "Maximum Site Poll Time" value to the Communication Preferences. Polling is automatically disconnected if
	 time exceeds this setting. When opening database from a maximized window it now correctly starts as Maximized. Fixed problem with Daylight savings adjust function when made switchover to Windows Time/Date functions. This was causing the majority of the linking to a counter problem. Fixed problem setting clock on later version EPROM's.
	 Fixed saying letter code 'c' on telemetry regardless of actual version of counter. Fixed version number on TT-6/8-BT (actually a firmware error with V1.00-V1.07 code, fixed with V1.08 and up). Program no longer exits when it can't find the specified COM port on startup.
V1.33	New version which has the following major new features:
	 Improved Lane Renumber feature allows easier changing of lane numbers for imported data. New Time Shift function allows data to be shifted forward or back in time.
Build #0006	 Completely redesigned Find Function in the data editor. It now stays on top and allows you to soarch for first last and next matches. Will also relevant to beginning of data when at and
8/5/08	 Contains multiple changes and features specific to the Ohio DOT (including Ohio TMG exports for Card 3, 4, C, & L for permanent sites, short counts, and monthly data).
	In addition, the following minor changes and bug fixes have been made:
	 Fixed problem with Access Violation on shortcuts from the database view menu (now use Global Hotkey). Made the "Find Next" button on the task bar work correctly with the site data editor.
	 Site data editor now lets you select a range of data to edit (tag the first-last record of site's imports and then click edit). Added button to open TMG Editor from Site Setup.
	 Noted under Site Setup lanes that the direction code here does not apply to TMG. Also made this field a combo box of N. S. F. W.
	 Fixed naming of bin number on site data search and added a note about searching. Added aption to do Wook Tatal instead of Average on Wookly 24 Hour Values Depart
	 Added option to do week rotal instead of Average on weekly 24 hour volume kepon. Added support for new Expanded Site ID (now includes the 15 character serial number) available in Omega counters. Also added support for reading the last study variables.
	 Made multiple changes for IN DOT (including check box on PRN export, four choices for PRN file naming [Standard, SiteID+Standard, Site ID.PRN, and Site ID.x.PRN]).
	When IN DOT Format is selected for PRN files, the following changes are made to the PRN export:

Version	Explanation
	 Record 1, Value 1, is now the Serial # instead of the Site ID. Record 1, Value 2, is now the Site ID instead of lafe Line 1.
	 Record 1, Value 2, is now the site in instead of hind line 1 Record 1, Value 3, is always 01 instead of being an 01 for the first counter of a site or an 02 for the second
	counter of a site.
	 I MG identification no longer appends to County (Record 3, Value 2) Format code is returned as a 410 instead of 400.
	• For all PRN files, Lane Layout (Record 1, value 9) is set to a 0 if Volume mode, otherwise set to a 3. In addition
	Record Number is now correctly reported in columns 71-75 of Record 1.
	to the firmware update feature to insure accuracy and updating of all Omega icons.
	• All system settings are now saved automatically after a call to General, Ports, Organization, or Directory Preferences.
	 Fixed problem with Access Violation on closing out Telemetry link with no other MDI Windows open during linking. Fixed so closing map when call initiated from other place does not disconnect link
	 Added preference option to move the Direct Dial Directory from database to database.
	Fixed bug in changing the Telemetry Station list giving a "Field Not Found" error.
	Changed so all download hie naming uses an _ instead of a . to allow easier viewing of hies when extensions are not visible to user.
	 Fixed problem with not creating two lanes with RoadRunner East/West data.
	 No longer allow user to specify database sub-directories (forced to match by Centurion). Map view new preperty closed and reasoned when database directory has changed.
	 Map view now property closed and reopened when database directory has changed. Warning window displayed if you try to reimport non-existent data files. Warning window also displayed if you try to
	time-shift non-existent data.
	Changes for Ohio DOT: Added "Ohio Short Count" and "Ohio Monthly" check boxes to the export dialog.
	 Changed file naming convention to include support for all three modes (Permanent, Short, & Monthly).
	 Fixed bug causing sites with short ID's (like 892) from not containing the correct name. "Short Coupt" does not break up files. "Monthly" breaks files into monthly sections. "Permanent" does daily.
	 When "Short Count" selected, TMG Lane of Travel is extracted from the first character of each lane info line.
	TMG Direction is extracted from the second character.
	 When "Auto-Export" has been set to "Ohio TMG" for any zone, at the end of any import the data is
	automatically exported (works only if import is also enabled).
	that Ohio Monthly and Ohio Short Count check boxes do apply, so they should be turned off if necessary.
	 Also the export process will be halted if a site has never had it's data exported before, so setting TMG info
	Changed all TMG Exports to use blanks instead of zeros for non-existent data.
	New version which includes the TCDD (Timestamp Date Dressered subsystem. This highly advanced
V1.34	program allows for the analysis of all Timestamp data collected by the new Omega Traffic counter
	TSDP provides the user with the flexibility of collecting and processing timestamp data, which can
Build	increase data accuracy to more than 99% (depending on the lane and site configuration).
#0001	In addition, the following minor changes and bug fixes have been made:
9/24/08	 Multiple changes for Ohio DOT (exporting, importing, and lane shifting changes).
	Removed SnMis totals from TMG Exports.
	 Several changes to processing Omega data files. Includes support for new 0xFC module (Block Text) in addition to
	better handling of the Last Study variables.
	 Fixed problem with access violation on Peek Monthly export. Added new option "Always ask about overlay data". This is to help with multi-file imports and allows the user to specify
	what to do with each file.
	 Changed to allow user to select same lane as existing data for lane shift function during import.
Build	Build #0003 made the following minor changes and bug fixes:
#0003	 Added binary file support for new Titan II data. Fixed variety of problems with linking to and downloading data from Omega counters.
11/03/08	
Build	Build #0004-0009 made the following minor changes and bug fixes:
#0009	Multiple changes for Ohio DOT auto-export functionality.
02/07/09	 Added an Operator and weather field to database imports. Fixed bug exporting to Binary when gap present in data.
	Added ability to firmware upload to Unicorn, Phoenix, Pegasus, and TCC-540 counters with an MDK V1.10
	 motherboard and V3.21 or later firmware. Added support for new Titan II traffic counter (linking, downloading, and TSDP processing)
	- Added support for new main in traine counter (initing, downloading, and robit processing).

Version	Explanation
Build	Build #0010-0013 made the following minor changes and bug fixes:
#0010- #0013 03/01/09	 Added ability to move all setup information to the Windows shared directories. This is asked on startup and the user can choose yes or no without affecting the program functionality (but it does allow for better support of Windows security issues). Made multiple changes to the way serial communication works with dialup and SOIP. Users can now set a timing multiplier for each method in the Telemetry preferences tab (to speed up or slow down connection rates). Added sending logoff characters to counters on SOIP links. Changed to use new EMS QuickExport V4.1 (which fixed a problem with Excel spreadsheet errors). Made multiple changes and improvements to setting/reading loop dropout values and N.C. Frequency with the new I-Loop board. Sped up writing out system options in counters with V2.80 and higher firmware. Added importing and exporting SpeedxLength and SpeedxAxle Peek PRN files. Fixed a problem with ODOT export files when individual files are used and there are even day gaps in data. Changed the way COM ports are identified and used. No longer use the IsPortAvailable command first. Instead all device names are checked continuously to allow connection of a USB->Serial adapter after the program has started.
V1.35	Latest release for supporting the new Intelligent Loop Board (I-Loop) along with many other minor changes and improvements
Build #0001 4/19/09	 Additional changes for Ohio DOT. Now supports importing and exporting PRN files of SpeedxLength and SpeedxAxle formats. Also supports direct copying to database of various PRN fields like City, Location, Serial Number, and County. System now isolates itself to one CPU core by default. This improves timed serial functionality. New command line argument "CORE=x" where "x" is the processor core to use (or an 'A' for all cores, 'F' for first core found). Software now supports the V4.00 UPP5 firmware including the new Compression functionality. Multiple changes for Oregon DOT to better support their particular PRN formatting. New options in the Preferences menu to match up the PRN output and to trim extra catch-all bins. Improved the overall program operation and eliminated cause of lockup when closing counter links. Added ability to set "MMC Auto Erase when MMC is Full" feature of V3.24 and higher UPP5 counters.
Build #0002 6/18/09	 Build #0002 made the following minor changes and bug fixes: Added warning if cannot create the YOURREG.TXT file to warn users of potential fatal operation error. Program also now creates a copy of YOURREG.TXT on the desktop for easier access. Changed to use DCD, CTS, or DSR as a valid connection signal (only DCD was used prior to this). Fixed bug incorrectly using 115,200 baud on UPP5 counter USB links. Added the I-Loop firmware upload command (when linked to V4.xx and higher counters). Improved the counter firmware upload system to work more reliably over modem connections. Added press Ctrl+Alt+C during counter link to reset entire link without hanging up. Added new tab in the directories preferences showing the BDE configuration and automatically running the BDE Administrator when NET DIR is double clicked. Added three new preferences settings for Peek PRN exports: Create sub-directories with station ID's. Auto create Volume when Class is exported and Monthly with volume. Fixed position of Export progress when Scanning Panel is open.
Build #0003 7/27/09	 Build #0003 made the following minor changes and bug fixes: Added additional check for BDE sub-directory at "C:\Program Files\Borland\Common Files\BDE". Changed the PRN exports so that if you enable creating sub-directories then the program overwrites instead of creates a new file for existing PRN files. Fixed some various issues with PRN file exporting across different date ranges. Fixed problem incorrectly trying to print counter setup when Piezo V4 board installed. Made several changes to better support the Titan II: Added CE key function and record interval support for binary files. Added a check so that versions 1.10-1.13 cannot be updated to 1.14 or higher without factory help. Fixed problem with direct serial connection to Titan II switching to 115,200 baud. Added option to not print report headers with black background (Montana DOT request). Enabled in new preferences options "Use Transparent Report Header". Changed the PRN export utility to use the "Create Volume from Class" and "Create Monthly from Volume" check boxes even when doing a manual export.
Build #0004 to	Build #0004 adds some initial loop class functionality (including a Per-Vehicle database update) in addition to these other changes: • Added "Reverse PRN Speed x Columns" function.
#0006	 Fixed problem with processing TSDP created volume files.

Version	Explanation
	Build #0006 makes multiple changes to support V4.04 and later Unicorn/Phoenix/Pegasus counters along with these changes:
	 All data and registration info now kept in the Windows standard AppDataDir automatically (no longer asks if the user wants to make the change. Changed to use HTTP instead of FTP for updating the program. Added LoopXSpace to the System Status window (took the place of the unused XON/OFF). Made check in updating the Loop Firmware to skip over same version updates if any board in the stack is different (only update the different ones). Unicorn/Phoenix/Pegasus V4.04 changes: Added ability to enable/disable Opto-Output on I-Loop boards with V4.04 firmware. Fixed a spin-edit problem that turned 16.4' into 16.3'. Added switchover to 16 bit Loop Length value on lane setup fields (also supports change to binary storage format to allow this change). Added the Per-Vehicle DB Check function to the CheckDB utility. Fixed a problem not updating tables when the # of per-vehicle imports = 0 but the table still exists. Finished the "D" command on the polling system. Users can delete individual files (Dx,), a range of files (Dx-y), userstice and the total of the table the "D" command on the polling system.
	 Changed to use DBVersion.ini file to determine whether or not to update the per-vehicle database sub-files.
	Build #0010 improves the communication system and other program functions as follows:
	 Changed some of the way COM ports are accessed to better prevent AsyncPro lockup issues. Improved program functionality if a different system accesses the COM ports during scanning. Fixed problem with trying to link at 9600 after power cycle (needed to send 0x01 to insure new Get Status worked). Changed the counter link reset key to be the Esc key (instead of Ctrl+Alt+C). Added to the bin table commands the checksum values (and also a couple other places) when this feature is enabled. Added support for V4.05 EPROM's to set the LoopRelay value. Major changes to allow setting and using both the Loop Relay and the Dynamic Sensor Assign values when setting up, viewing, and monitoring lanes with V4.05 and later EPROM's. Fixed CC problem when doing a Site Data Edit looking for a Gold alias. Fixed a problem on Basic Volume 60 Report when interval length > 1 hour. Added warning message when could not find bin table definitions for Reporting or Exporting. Changed so you can't click out of the add new site box on the map unless something is put in site name line. Added putting an , at the end of an SOIP link followed by an F character to enable double 0xFF characters from being converted to single during a download. Fixed problem not remembering the window position for UPP5 counter links.
	Build #0016 adds the ability to Combine (add together) Lanes that overlay in addition to the regular shifting/renaming of a site. This allows users to collect data with multiple counters and directly combine the two datasets at import time (or by using the Merge Sites function).
	It also makes these changes:
	 Created a Texas only version with custom features for Texas DOT. Added a separate Author/Publisher website link on the Help menu. Added the 'OVERRIDEUPLOAD' command line switch to help test out MDK units. Multiple changes to PRN <i>importing</i> to allow for better management of PRN files created by Centurion. Now allow PRN Axle Class only imports that are not 15 classes (uses default name of 241A%02i.AXL for class name). This also applies to Speed and Length bin PRN files that do not match the norm. Fixed volume export PRN starting minute not = 0 when force interval >= 60. Added a SpeedByAxle and SpeedByLength Peek sub-directory to prevent file naming problem when creating simultaneous Speed and SpeedByLength Peek sub-directory to prevent file naming problem when creating simultaneous Speed and SpeedByLength tables. Fixed not re-enabling New Site box for using merge function second time. Also fixed merge function not calling up lane shift window automatically. Eliminated issue with not always recognizing when map was displayed at program close. This caused having to press the Map button twice on some occasions to get map to display. Changed display so that large MMC/SD cards show the amount of memory in KB instead of bytes (to fit screen). Fixed problem not displaying Loop Class values in monitor lanes and when mode is Basic or Advanced Loop Class. Multiple advances to the Loop Class Table create function. Fixed per-vehicle shifting/combining problem when adding two datasets that don't have a partial set start.
	 Build #0020 fixes a problem not connecting to counters with a bad leap year date setting, adds a Leap Year Fix function to the database, and also makes these changes: Changed to identify different releases of 4.04 to deal with HLE releasing various dated copies.

Version	Explanation
	 Fixed problem of label on Lane 1 Sensor Spacing. Fixed problem in direct connect high speed MMC downloading (switching to high speed before result comes in). Added support for "LX=" after tune on new 4.50 firmware for reporting updated frequencies.
Build #0024 04/01/10	 Build #0024 fixes issue with retrieving files from mixed MMC/RAM files and also makes these changes: Fixed problem not adding station name to SpeedxAxle and SpeedxLength sub-directories when Auto Create Station sub-directories is enabled. Changed Omega download to not use ACK to move forward during download if the block number is wrong by - 1 (try)
	 NAK once first). Fixed overlaid text issue when going into Hidden Options menu with UAA. Automatically change 0 Count Modes into '1' during import
V1.36	New release for operation on Windows Vista and Windows 7 (64 or 32 bit version). This includes new
Build #0008	libraries, full support for Loop Only Classification , Signed Installers and Drivers so that USB drivers will install under Windows Vista and Win 7, a fundamental change in the base code to use wide strings, and every component library has been upgraded. <i>This release must be installed onto older versions; it is not available as a web update.</i>
09/08/10	Loop Only Classification related changes:
	 Added support for 0x04 Loop Class Flag Field (including new 64/16 Length values).
	 Fixed some bugs editing Loop Class fields in Raw Database. Update L-Loop Board Firmware option no longer displayed when no L-Loop found in system
	 Major changes implemented to better support loop class table creation and uploading tables to counter. New menu option called "Manage Loop Class Tables" appears when linking to Loop Class enabled counters where you can
	upload and erase tables inside of Loop Boards. A high speed function is available when directly connecting to counter (otherwise it is done at the regular communication rate)
	 New report for printing Loop Only Classification detail graphs.
	Added Loop Class Records to New ASCII Exports.
	In addition, software now supports Direct Polling of Peek 241/ADR Counters to simplify multi- manufacturer systems, Importing/Exporting the Direct Call Directory to Excel , and these changes:
	Fixed problem with access error when remember window size function is selected and all windows are closed.
	Corrected report preview window size when scanning bar is open.
	 Changed Volume Data Dump to only include labels on lanes that are enabled. Changed the default directory to AppDirectory (Application Program Directory, typically C:\Program Files (x86)\Diamond\Centurion [type]). Unless specified by the user, this directory and sub-directories are the only one used
	 New checks and changes to make sure AppDirectory is fully usable by the program at run time. If it isn't, a warning
	 message appears so the user can correct the access violations before losing registration and licensing data. Added a Test Directories button on the Directories Preferences box (allows you to insure access to all the directories).
	 Dumped Sedlan "TRestructure" component. Table restructuring now done by our own interface to the database. Added "Lane Veh #" type setting to IET/SET values (for support of new feature in V3 31-3 99 and V4 50+ counters)
	 Added ability to disable <esc> Key use for counter reset (go into Counter preferences). This can help if running</esc> Centurion with other applications that use the Esc key
	 Added ability to do a counter reset to the UPP5 Versions < 2.80 and also to the Uni-Lim/Apollo links.
	 Now auto-create the AutoExport directory along with other directories. Fixed the "CC10" command not working in the auto-poller.
	 All counter issue handling updating Enabled Lanes when directional is turned on/off.
	 Fixed passing Unicode Strings to TSDP. Fixed problem adding "1" onto LIAA and LIPP5 < 2.80 file names when set to download file based on Site ID.
	 Fixed old bug in APRO not allowing it to work with USB connection to counters (AwWin32.pas modifications, not counters) (AwWin32.pas modifications, not counters)
	 Added Omega/Titan II "EZOTG Program" and "Code Loader" automatic upload utility.
	 Improved the Terminal window by allowing baud changing during the link (right click inside the box), fixed the backspace function, and made the character display work more smoothly
	 Fixed some minor issues with Exporting To Excel (string vs. smallint errors) and added in Loop Only class variables.
	 Changed to use a mixed 4.06/4.07 version of the AsyncProlibrary (to eliminate issues with access violations). Changed to support not ever needing pre-setup database aliases (can all be set from inside of program).
	 Eliminated screen flash on program startup (effect of the TChartEditor component).
	Fixed issue switching from landscape/portrait mode not redrawing screen correctly.
	 Added additional functions to synchronize the Direct Calling Directory to the Map. The database Export directory can now be specified separately from the other database directories.
	Now uses internally held databases aliases to prevent Windows 7 and Vista issues with writing to the BDE configuration file. Also automatically switch to known good directory for PDOXUSRS NET to prevent security lock-down
	keeping the BDE from opening.
	Added button to the BDE directory tab to allow saving the aliases if the user wants. Also explains to the user that this

Version	Explanation
	 Madded mask edit to Posted speed limit (must be up to three digits with optional single decimal point). Fixed problem with database Site Copy not correctly making new files with Source sub-directory dates. Fixed several other Source file errors that could crop up with Site Delete, Site Merge, and Site Setup Report function. Changed the name of the function to add two sites together from the Site Setup Editor from "Merge Sites" to "Combine Sites". This is to help distinguish it from the other Merge Sites function available from the main database view. Also added in some explanatory text to help users understand the difference between the functions. Fixed problem with the Parking Lot monitor not re-displaying the counter monitor bar after closing the window. The "Tuning" message is now cleared correctly after retuning loops. Eliminated the SOIP option on the Open Terminal Window. Instead, a new button allows you to "Call With Terminal" from the Direct Call a Site function. This works with both SOIP and standard sites. Fixed problem with not sending password correctly to old style UPP5 and all UAA counters.
V1.37	Version 1.37 Build #0004 has these major changes:
Build #0004 12/20/10	 Complete update to support 60 Bins instead of 30 across the system (except Report generator). Now supports 120 Definitions for the Axle Class system. Complete update to support 64 Lanes instead of 32. Update to support Ball Hitch Detect functions on each vehicle, and enabled for each lane on a per-import basis. Also contains the foundation for the Special Vehicle Markers system to support future classifying enhancements on new generation counters.
	Also includes these changes:
	 Added update of Release Date/Time when doing a counter firmware update to the Scanning box. Increased the size of the answer from 10,000 to 30,000 to allow for very large response file directories. Fixed problem not saving direct entry delay multipliers on setup screen. Updated bin table editor and report generator for V2 table support. Changed database as follows: Increased size of " Class File Name" from 12 to 30 characters in both the Master tables and auto convert
	the base tables. + Changed "TMG: Directions" and "TMG: Lanes" from 32 to 64 characters to accomodate new database capability. + Increased max number of lanes in Stations to 64. + LANESET: Changed Lane Number and Physical Lane Number to go up to 64. + IMPORTS: Added Ball Hitch Detect (32 bit lane bit map) + PER-VEHICLE: Increased Lane Number to 64, allowed class numbers to 60, added Special Vehicle Markers. + CLASSIFICATION: Added "Bin Total 31-60" at end. + VOLUME: Added "Lane 33-64" at end. + Reset SVM to be before Other record.
	 Fixed some bugs in conversion of database and added text noting to wait while database undergoes conversion. Added Volume Export for Titan II Study (to support up to 64 Lanes) Added combo-box for selecting type of per-vehicle export (Matching, Normal, Enhanced, With Bins, Enhanced+Bins, Loop Class). Added preferences option for splitting all ASCII and Binary exports into daily files. Greatly improved the Binary exporter to fully included all Loop Class values (including signatures) and to support full database exporting. System is now completely import, edit, export, reimport without any loss in the flow. Changed the import rules around the Default Bin Table so that DEFAULTX is used consistently whenever possible on imports, even if user sets the default to blank (now true even on Volume imports). Completed full support for 64 Lanes/60 Bins on Direct to Excel Export and also added BHD to Excel Export. Fixed issue saving file to Text using Unicode instead of Ansi text (improved look of Text Save function). Saved text now also looks improved with edited out MPH/FT/CM labels and the file is automatically opened in the editor at end. Fixed problems displaying Lane Grouping updates on user interface and also corrected display so that "GPS Baud" rate does not overlap the setting box on the Titan II link. Fixed messages that required a setting in the Length Class table when going into the Site Setup dialog. The COM port monitor now separately allows monitoring the detailed log file and the trace file. When enabling the log file, the system does show an hour glass (or spinning loop under Vista/Win 7) during writing out of this file to show it performing calculations when closing. Default for log file is off. Fixed issue with breaking up binned multi-day Binned and ASCII day files showing multiple error message dialogs and blank files when a missing day was found in the set. Can now specify a minimum left
Build #0007 04/11/11	 Corrected multiple issues with uploading Loop Class tables. Added extra 0x01 characters to Master/Slave switch and altered timing to improve switching performance. Completed the Reclassify Data function from the Per-Vehicle database editor. Completed the Loop Class Results Analysis Tool from the Per Vehicle database editor. Multiple changes, bug fixes, and improvements to the Loop Class table generator. Includes ability to make smaller tables, supports smart % matching system, and completes all aspects of table generation not already done.

Version	Explanation
Build #0008 05/20/11	 Added allowing changing the Master/Slave by clicking on the Serial ID value. Fixed not clearing LaneInfos when making Ohio Exports short count format. Added function for importer to auto move characters at end of Info Line 1 to Lane Info 1 and Lane Info 2 when import is coming from an Omega ('h' custom version). Added "Move Decimal on GPS Coords" function (on by default). This also fixes the incorrect formatting of the GPS value returned by the Omega and Titan II counters.
Build #0009 06/15/11	 Added support for importing data that has Lane Grouping enabled inside of the counter. Fixed some issues with importing data for Ohio using the 'h' custom version. You can now disable scanning for Sprite traffic counters in the Preferences dialog box to speed up looking for other traffic counters.
Build #0021 10/26/11	 Update to speed up Omega/Titan II downloading along with misc. other improvements as detailed below: Support for higher baud rates (to 921.6K) on serial devices which support it. Fixed several issues in the Set Hidden Options command (0.0 battery voltage, some other wrong conversions). Added 2K and 3K as settable block download sizes for the Omega and Titan II in the Counter options preferences box. This speeds up downloading files from these counters by reducing overhead. Also changed the XMODEM protocol to use quicker block access selects to immediate request next blocks instead of waiting on a timer. Fixed problem with Study duration for open studies (used to display very large number). Corrected display issues on the Titan II/Omega file directory on the last file (now says "to
	present" instead of "Dec 31"). Supports Firmware Update for the Uni-Lim and Apollo Counters and makes multiple other changes and improvements as follows:
Build #0026 03/22/12	 Made the following changes to the Omega/Titan II counter link: Greatly sped up the firmware Upload function. Increased overall speed of communication in almost all modes. Eliminated the auto-resending of EZOTG/Code Loader. Added support for Code Load V1.11 output of last written address (xxxx>) value and also added support for the V1.31 full CRC values for the Firmware Status function and window display (Cntrl+Alt+U). Fixed a variety of issues which caused potential corruption of the uploaded firmware. This includes a auto-resend if the link locks up or is lost during an upload. Added a customizable USB Delay Time to improve the linking time on some machines. Fixed issue with not making the Settings and Main Link screen clocks match on the Titan and Omega link screens. Added a "Ohio Site ID" setting to the Preferences which makes any Site ID on Omega/Titan II data files, counter screens, or when keying in for a new Start Collecting be zero filled to be at least 6 characters long. Fixed the Time Zone offset values to not have +13 and instead include the missing +4 value. Added support for the V1.32 setting for Auto Setting of Daylight Savings time. Fixed problem handling 'h' version inputs which put the Lane codes into position 28-29 for only a single lane of data. Fixed bug which caused firmware to not resize download file after download (timer multiply error). This caused junk to appear at end of files. Changed so counters do not download ALL FILES as a single file but them as multiple files.
	 Added detection of devices being plugged in or removed to the USB port using the standard windows WM_DEVICECHANGE message handler. This helps speed up various computer systems and makes them more stable. Fixed the width of the Upload [Type] [Ver] Display on the Uni-Lim, Apollo, and V2.80+ screens.
	 Solved an issue with the Volume Import during Lane Overlap which caused missing Lane(s) on the first record only when Lane Shifting was enabled.

Version	Explanation
	 Fixed file naming scheme so that Standard File Naming now adds "_x.bin" to the end to not overwrite existing.
	 Fixed incorrectly seeing two lanes of volume instead of one on RoadRunner CSV import.
	Major updates to the Parking Lot System function including:
	 Signs and Counters can now be connected to either by MAC address or direct COM Port Connection.
	 Added ability to specify the Sign Board Address for shared COM ports.
	 Fixed the linking and polling functions to improve stability of system.
	Also contains these additional changes and bug fixes:
	 Added support for clearing the Retrieved File marker on Unicorn, Phoenix, and Pegasus counters that are firmware version 4.16-4.49, and all V4.56 and higher.
	 Also added the Live Time Adjust function for setting the clock without stopping collection on those same counters and versions of firmware.
	 Fixed a problem reading out the directional info line on V4.04 and higher firmware.
	 Cleaned up the Last Closed Time/Date value (no longer displays junk when not set).
	 Corrected issue with not linking to counters that are set to 9600 baud (such as the parking lot system counters).
	 Updated the Titan II link to match functionality in the Omega link.
	 Changed the Set Counter Time box to use 24 Hour clock format.
	 Modified the Import function to better handle disk files with multiple counter files.
	 Also changed the Importer to record actual data End Time (instead of file end time) on all import records. For example, a Classification file with 15 minute intervals that is stopped at 11:36 used to show an end time of 11:36. Now, it will show an end time of 11:29 (the last interval in the file end time). This makes the Data Overlay window more effective.
	 New option in Preferences-General-Export to "Put Imports on a separate tab for Direct To Excel exporting". This causes a third tab to open up listing the imports, instead of placing them on the main Station Setup sheet.
	 New option in Preferences-Communication-Telemetry to "Use POLLOG.TXT For Polling Log". When enabled, the software no longer writes to the database polling log. Instead, it does the following:
	 Creates a new sub-directory off the main program directory named "Poll Log". Further sub-directories will be created by Year-Month of polling.
	 Inside the real-month poining directory text lifes will be created each time a poining is performed.
	 The text file details out every status and information that used to be placed in the database polling log, but instead is kept here for users who want it as a text file.
Build #0028 07/12/12	Update to complete Loop Class Table Generator with better memory management and new 16-Bit features. Also to address these issues:
	 Fixed problem with reading in new bin table from counter and then writing it to disk. Changed the layout of the Excel Exports so "Imports" are on a new tab and lanes are fixed. Fixed bug in not deleting the correct file when you select individual or range of files and there is 1 or more MMC or TAM files in the counter.
	 Fixed bug in SiteLeapYearFix which did not update the database name of MLaneset and therefore accidentally created a CenturionCC alias when none was needed. Made multiple improvements to progress becaudating during database functions.
	 o invide multiple improvements to progress par updating during database functions. o External file editor used to view Loop Class files > 50MB.
	 Changed the Unlicense function to not allow same code relicense and added unlicensed info to end of YOURREG.TXT file.
	 Fixed issue with "Index Out Of Bounds" error during some old database updates. Added a "Link To Site With Terminal" function to direct dial directory.

Version	Explanation
Build #0030	Supports new V4 Piezo Board with V1.20 or later firmware Negative Filter and Baseline Reset functions. Also makes multiple other changes and improvements as follows:
07/26/12	 Added a Pause button to the Monitor Lanes screen and also a Filter 2-3 checkbox. Fixed problem in Field that kept the Terminal window from opening correctly. Put in a "Mute" button in the Test Sensors screen. Changed the WinXP install to use path specific device driver files (Win7/Vista files are unchanged). Added the "Manifest" files to the installer (Win7/Vista only). Also changed the way the system deletes old "uninstall" shortcuts.

I.a. Difference between Gold, CC, Parks, & Field Versions

Centurion is currently available for your PC in four versions:

Gold:

The most complete package with all functions and features described in this users guide. This includes the complete map based Telemetry, Polling, and Auto-Polling functions as described in section XII of this manual.

CC (City/County):

Identical to the Gold version but without the Telemetry and Polling options (used to call up remote counters by modem).

Parks:

Limited version which only allows access to the Volume (Count) database. All program functions related to Per-Vehicle and Classification data are not accessible.

Field:

Very limited version which disables all database functions (including reports and exporting). This version is intended for field operations where only programming and downloading a counter directly connected to the computer are required, or when just a simple modem call-up is needed.

Please note that this users guide describes the full Gold version of the program. If you are using CC, Parks, or Field, some features will not be available. In all versions, the ability to download, program, and monitor traffic counters and other devices hooked directly to your computer is identical.

II. Registration

When your computer returns from rebooting, double click on it to see the splash screen (either the Diamond Traffic Products screen or the IRD screen will appear depending on the vendor):



Note: This screen can be turned off using the Preferences menu (see section X).

After the splash screen disappears, the main window will appear and an automatic registration dialog window immediately pops up:

Centurion-CC Registration	
Welcome to Centurion-CC registration. To register, please follow these steps: STEP #1: Establish an internet connection. You must be connected to the internet before clicking the Register button below. If you are not on-line, please do so before continuing or use the Manual Registration button. STEP #2: Verify the License Name shown below. It should be in the format of "Company Name (User Name)". If it is incorrect, change it to the legal name of the organization you are registering this software to before continuing. Licensed To: Your Company (Your Name)	Carefully enter in all information and verify that it is correct. When you are ready, click
STEP #3: Fill in the following information about this installation. This will be verified by the sales office and later used to provide you with the final software authorization key, so please make sure it is accurate. Company: Your Company Address: Address Line 1 Address Line 2 Phone : City: City	if you are connected to the internet and the software will automatically
State/Province: State Postal: ZIP Code EMail: your@yourcompany.com STEP #4: Click register to connect to the registration web site and register your copy of Centurion-CC You must register the software in order to use it. If your registration fails or you are not connected to the internet, click the Manual Register button instead and email the registration file created by the software to your Centurion-CC provider. Thank you for choosing Centurion-CC. Latest Version & Contact Information: wwww.detlic.com Image: Register via Email Image: Manual Register	registration for you to send in.

You MUST register the software to use Centurion. If you are unable to register via the internet, please click Manual Register and follow the instructions given.

III. Counter Communication - Basic

After registration, normal program operation begins. The software defaults to searching for a traffic counter on COM port 1 (or the first available COM port) as shown below.

② Centurion-CC (City/County)	
File Edit Counter Reports Window Help	
2 - X	
Scanning COM1 For a Traffic Counter	
When linked: Automatically link and download normally.	
Looking For Connected Help	
Counter or Device	
Stopi	
Import Manual New Database Setup &	
Drive A Import Reports Manitar	

Connect a counter with a few data files in it (such as an Apollo). The software should immediately find it and connect to it.

To stop scanning, click the Stop button or close the window. Note that scanning for counters can go on simultaneously with all other Centurion operations.

NOTE: The <u>When Linked</u> option and the <u>Setup & Monitor</u> button are part of the *Advanced Counter Communications*. See the next section (IV) for more complete details on using this feature.

If the software does not respond when you connect the counter, it could be because it is not connected to COM port 1. You can tell Centurion to scan other COM ports by double clicking the "Looking for connected Counter or Device" label or by selecting "Preferences -> General Options" from the File menu.

If you do either of these, the following window will appear:



The "Ports To Scan" section allows you to select what COM ports you want to scan for connected traffic counters. COM ports that don't exist on your computer are grayed out (in this example, only COM3 is available).

While you can select as many COM ports as you wish, we recommend selecting only the one that you are going to be using. This will greatly speed up all operations of the software because it does not have to switch between multiple COM ports.

In a later section, all of these preferences options will be described. Click Ok to continue.

If you connect a counter (such as the Apollo) that contains data files, the window changes to:



The "Waiting" will change to show the progress of the download. When it is complete, Centurion automatically moves to the next file to download.

Once any data file has been retrieved, it is immediately brought into the database. You will see a small progress bar such as this appear when importing is going on:

Importing File 1 of 1 :	9%

When download is complete, you will be prompted to disconnect the counter:



Note that the "New Reports" button has been enabled. This is because you have brought some new data into the database and a report can be generated. See the Reports section for more information.

After disconnecting, you can immediately connect another device such as the Datahog (shown on next page).

NOTE: When a Datahog, Unicorn-Limited, or Apollo with Flash finishes you will be asked if you want to erase the memory.



The Datahog acts just like a counter to Centurion

All Data that is brought in adds to the "New Reports" list. When you do select it, Centurion will create a report for each piece of new data.

When the download is complete, you are asked if you want to erase the Datahog memory:

Confirm	n 🛛
2	Download completed successfully. Erase Datahog Memory?
	<u>∑yes</u> <u>N</u> o

Select Yes to clear the memory of the Datahog.

COUNTER COMMUNICATIONS NOTES:

- Does not support multi counters on a single serial connection (Master/Slave).
- If there are any unretrieved files in the counter memory, it downloads those files only. If there are no unretrieved files, the software downloads ALL files in the counter memory.
- Files are named <yy-mm-dd download> <site or DATAHOG> <start yy-mm-dd hhmm data>.BIN during download and are immediately copied to the Archive sub-directory of the Download sub-directory where Centurion is installed.
- Centurion either ignores data that already exists in the database or allows you to rename the Site ID of matching data. This allows you to download the same data multiple times without any problem.

IV. Counter Communication – Advanced

In addition to the traffic counter data downloading & processing described in the previous section, Centurion can also completely program and monitor a traffic counter. This feature is only available on the following models and versions of traffic counters:

Model	Versions
Unicorn-Limited & Apollo	1.20 or higher
Unicorn, Phoenix, Pegasus, & TCC-540	2.39, 2.44, 2.45, 2.80 and higher.
Phoenix-WIM & TCC-540-WIM	2.80 and higher.
Sprite (Tube, Loop, or Both)	All versions.
Traffic Tally 2/4/6/8 – Bluetooth	All versions.
Omega Traffic Counter – USB & Bluetooth	All versions.

Connecting any of the above devices will allow the *Advanced Counter Communication* function to operate and you will see the Setup & Monitor button become enabled like this:



Please note that before this button will become enabled, the regular processing of data files (if any) in the counter will occur just as described in the previous section. Since you can also download and process data files in the Advanced section, you may want to override the normal download process. Centurion provides you with some options under the When Linked drop down box to do this:

When linked:	Automatically link and download normally.	~
	Automatically link and download normally.	
	Automatically download, then go to Program/M	lonitor.
	Ask to download, then go to Program/Monitor.	
	Just go to Program/Monitor window.	
Loo	king For Connected	Help!

These options only affect how Centurion handles traffic counters that are supported by the advanced function. All other traffic counters and devices (such as the Datahog) are downloaded & processed normally.

Automatically link and download normally – This option (the default) treats traffic counters that are supported by the advanced function exactly like any other counter and exactly like versions of Centurion prior to 1.20. When downloading is complete, you can either disconnect the counter or click on the *Setup & Program* button to access the advanced functions.

Automatically download, then go to Program/Monitor – Data is first downloaded and processed from the counter (if any), and then the advanced functions for Program & Monitoring are started automatically.

Ask to download, then go to Program/Monitor – If counter contains any data files, you will be asked if you want to download & process them. When download is complete (or if you say no), the advanced functions for Program & Monitoring are started automatically.

Just go to Program/Monitor window – No data downloading will occur automatically. Instead, the advanced functions for Program & Monitoring are started automatically (where you can choose to download and process data if desired). This option most closely resembles the operation of the older TrafMan software.

Whichever option you select, it will be remembered and become the default each time Centurion is run. Note that if you exit the Advanced Counter Communication function you can click the Setup & Monitor button at any time to restart it as long as the counter stays connected.

Once the Setup & Monitor button has been clicked (or the advanced function started automatically), the scanning window changes to say "Setup/Program & Monitoring Window Active" and a new counter link window is displayed as shown below:

Scanning COM3 For a Traf When linked: Just go to Program/Monitor window. Linked To: Uni-Limited Version: 1.30a Release: 09/23/03 Setup/Program & Monitoring Window: A office	🔀 Linked To: Uni-Limited (V1.30a - 09/23/03)	In this case a Unicorn- Limited Version 1.30 has been connected to the computer.
Import Manual New Database Setup Drive A Import Reports Monitor	Password : Send Password	Enter the correct password and press <enter> (or click Send Password).</enter>

For all of the following examples, a Unicorn-Limited with Flash Memory will be used. Note that because Centurion supports different kinds of counters with different capabilities (such as loops, TAM, and piezos) some options will not be shown (such as retuning loops). Please refer to the online help for more complete information on these other features.

Once the password is entered, Centurion will check the counters time versus the computer and, if they differ by more than 30 seconds (or 2 minutes for the Sprite), the following window will display:

Linked To: Uni-Limited (V	(1.30a - 09/23/03)					
WARNING: The Time/ match the Time/Date o	Date of the Counter does not f the computer.					
Counter Time:	00:41 8 01/01/02					
Computer 12: Time: MOL	44:43 8 2/28/03					
Please Select Option:	Set Counter to Computer Time					
Set Computer to Counter Time Cancell						
Enter Time For Just Counter						
Counter/Computer Time Mismatch, please select opt	tion or cancel	Txd	Rxd			

Select one of the options to change the time or click the Cancel button to exit this window.

After the password and time question have been answered, the main counter status screen is

displayed:	Linked To: Uni-L	imited (V1.30a - 09/23/03)	
This is the main option bar. Click on any button to show sub-options. Any option not currently available will be gray).	Show Status Current Counter State System Configuration Site ID & Deta Options Lane Configuration	The Uni-Limited is NOT COLLECTING traffic data. Site & Serial Site Identification : (none) Counter Serial #: (none) Storage Storage Mode: Count Battery Voltage: 5.9V Enabled Lanes: 1-2	This side of the window shows information for the current option (in this case Show Status-Current Counter State).
You can resize the window at any time to make it easier to read by grabbing a corner with the mouse.	Start Collecting Data Retrieve/Delete Files Monitor Sensors & Traffic Set System Configuration Cold Restart Counter Modify Bin Tables	Memory 4,327,624 Memory Used: 0 Memory Left: 4,327,624 # of Files Last Shuldown Total: 0 Image: Counter Time Time: 17total: 0 Image: Counter Time 17,2000 Date: 127,28703	The Txd (Transmit) and Rxd (Receive) lights will blink on and off as Centurion talks to the Traffic Counter.

To see the current configuration in more detail, use the option bar and click on System Configuration.



Click on Site ID & Data Options and/or Lane Configuration to see other current setup information:

Linked To: Uni-L	imited (V1.30a - 09/	23/03)	Linked To: Uni	-Limited (V1.30a - 09/2	3/03) 📃 🗖 🔀
Show Status Current Counter State System Configuration Site ID & Data Options Lane Configuration	Site Info Site ID : Info 1 : Info 2 : Data Modes - Volume N+1 Mode :	Start/Stop Collection Start Time : Now Stop Time : Never Record Intervals # of : 1 Length : 15 minutes.	Show Status Current Counter State System Configuration Site ID & Data Options Lane Configuration	Lane 1 Info Line : Sensor : Tube Info Line : Sensor : Tube Lane 4 Info Line : Sensor : Tube	Lane Mode : Normal Divide by 2 : No Lane Mode : Normal Divide by 2 : No Lane Mode : Normal Divide by 2 : No
Start Collecting Data Retrieve/Delete Files Monitor Sensors & Traffic Set System Configuration Cold Restart Counter Modify Bin Tables	- In-Day, Overlap, & Grouping Lane Groupings : (<u>(disabled)</u> In-Day Times : <mark>(none)</mark>		Start Collecting Data Retrieve/Delete Files Monitor Sensors & Traffic Set System Configuration Cold Restart Counter Modify Bin Tables		
		Txd 📕 Rxd			Txd Rxd

To set the traffic counter system configuration (to set items such as Storage Mode and File Creation options), click on the **Set System Configuration** button. By default the *Data Collection Options* will be displayed like this:



In-Day #1 Start At : 00:00 😤

In-Day #4 Start At : 00:00 🗧

In-Day #2 Start At : 00:00

In-Day #3 Start At : 00:00

Stop At : 00:00

Stop At : 00:00

Stop At : 00:00

Stop At : 00:00

.

📕 Txd 📕 Rxd

You can change the Storage Mode (Raw, Binned, Count, or Sensor) with this option. Other selections on this page allow you to set how files are created, the number formats (U.S. or Metric), plus other options. Please refer to your traffic counter users manual for more information.

You can also use the *General System Options*, Set Hidden Options, and In-Day # & Times to configure the counter:

Linked To: Uni-L	.imited (V1.30a - 09/23/03)	Linked To: Uni-L	imited (V1.30a - 09/23/03)	
Show Status		Show Status		
Start Collecting Data	Passwords Required :	Start Collecting Data	Shmis #3 To Venicle :	
Retrieve/Delete Files	Current Password : PASS	Retrieve/Delete Files	Low Battery Level : 5.5	
Monitor Sensors & Traffic	Doulight Couingo Adi : Na Adiust	Monitor Sensors & Traffic		
Set System Configuration		Set System Configuration		
General System Optio	Fall Back Date : 10/31	General System Options	Counter Serial # :	
Data Collection Options	Spring Forward Date : 04/04 📃	Data Collection Options	· · · · · · · · · · · · · · · · · · ·	
Set Hidden Options	Time of Change : 02:00 AM 芸	Set Hidden Options	Multi-Counter Serial ID : 🛛 💌	
In-Day # and Times	Date Format : MM/DD/YY	In-Day # and Times		
Cold Restart Counter		Cold Restart Counter		
Modify Bin Tables		Modify Bin Tables		
	I ka 🔳 Hæd			Ixd Rxd
Linked To: Uni-L	.imited (V1.30a - 09/23/03)			
Show Status				
Start Collecting Data	Number of In-Day Times			
Retrieve/Delete Files	⊙ Zero O One O Two O Three O Four			
Monitor Sensors & Traffic				

Set System Configuration

In-Day # and Times

Cold Restart Counter Modify Bin Tables Once the system configuration has been set, you may want to connect the road tubes (or other sensors) to the counter and then click the **Monitor Sensors & Traffic** button. Since the counter is not collecting data, the default is to display the Test Sensor Activations window:



Each road tube is displayed here. When one is activated, it will light up briefly and a tone will sound (a different tone for each sensor).

Note that when connecting to a counter that has loops, they will also be displayed in this window and will light up for as long as the loop sees the vehicle. In addition, a Tune Loops button will appear at the bottom of the screen.

Now that the sensors are working, you are ready to click on **Start Collecting Data**. The first window to appear lets you set the Site ID and which lanes are enabled:

	Linked To: Uni-L	imited (V1.30a - 09/23/03)		
You can click any of these options in any order (as long as nothing is set incorrectly).	Show Status Start Collecting Data Site ID & Enabled La Lane Configuration Type of Data To Collect Record Intervals Test Lanes Start & Stop Times Start & Stop Times	Site 1 Inio Lines Site 1D. : HWY 58 & OAK Info Line 1 : Info Line 2 : Enabled Lanes Lane 1 Lane 2		Enter in the correct Site ID and Info Lines. You can also enable or disable individual lanes. You MUST have at least one enabled lane to proceed to any other part of this function.
	Retrieve/Delete Files Monitor Sensors & Traffic Set System Configuration Cold Restart Counter Modify Bin Tables		Next	The Next (and Previous buttons) allow you to quickly skip from screen to screen.

Next

The Lane Configuration window is different for Count mode vs. Raw/Binned modes:

Linked To: Uni-I	.imited (V1.30a - 09/23/03)		Linked To: Uni-Limi	ited (V1.30a - 09/23/03)	
Show Status	Lane 1		Show Status	Lane 1	
Start Collecting Data	Lane Info Line : Mode : Normal	-	Start Collecting Data	Lane Info Line :	Sensor Spacing :
Site ID & Enabled Lanes	Sensor: Tube		Site ID & Enabled Lanes	Sensors : Tube-Tube	~
Lane Configuration			Lane Configuration	Directional :	
Type of Data To Collect	Lane 2		Type of Data To Collect		
Record Intervals	Lane Info Line : Mode : Normal	•	Record Intervals	Lane 2	_
Test Lanes	Sensor: Tube 🗾 Divide By Two : 🗌		lest Lanes	Lane Info Line :	Sensor Spacing :
Start & Stop Times			Start & Stop Times	Sensors : Tube-Tube	¥
Start Collection			Start Collection!	Directional : 🔲	
Retrieve/Delete Files			Retrieve/Delete Files		
Monitor Sensors & Traffic			Monitor Sensors & Traffic		
Set System Configuration			Set System Configuration		
Cold Restart Counter	(→	Cold Restart Counter		
Modify Bin Tables	Prev	Next	Modify Bin Tables	Prev	
		Txd Rxd		,	

The Type of Data To Collect is only available when collecting Binned or Raw data:

Linked To: Uni-L	imited (V1.30a - 09/23/03)		Linked To: Uni-Limi	ited (V1.30a - 09/23/03)	
Show Status Start Collecting Data			Show Status Start Collecting Data		
Site ID & Enabled Lanes Lane Configuration Type of Data To Collect Record Intervals Test Lanes Start & Stop Times	Collect Classification Bins - Axle : Speed : Length : Collect Class Bins - Speed x Axle : Speed x Length :	Gap∶ ■ Headway∶ ■	Site ID & Enabled Lanes Lane Configuration Type of Data To Collect Record Intervals Test Lanes Start & Stop Times	Raw (Per-Vehicle) Mode : Enhanced+Bins	×
Start Collection!	Does Lanes 1 & 2 Overlap : No	_	Start Collection!		
Retrieve/Delete Files			Retrieve/Delete Files		
Monitor Sensors & Traffic			Monitor Sensors & Traffic		
Set System Configuration			Set System Configuration		
Cold Restart Counter			Cold Restart Counter		
Modify Bin Tables	Prev	Next	Modify Bin Tables	Prev	Next
		📕 Txd 📕 Rxd		1	📕 Txd 📕 Rxd

Record Intervals (only available when collecting Binned or Count data) allows you to set the frequency data is written to memory:

Linked To: Uni-L	imited (V1.30a - 09/23/03)	
Show Status		
Start Collecting Data	- # of Different Record Intervals During Day	
Site ID & Enabled Lanes Lane Configuration Type of Data To Collect Record Intervals Test Lanes Start & Stop Times	○ One ○ Two ○ Three ○ Four ○ f Becord Interval Length 15 Minute ▼	īve
Start Collection		
Retrieve/Delete Files		
Monitor Sensors & Traffic		
Set System Configuration		
Cold Restart Counter	E	\rightarrow
Modify Bin Tables	Prev	Next
		📕 Txd 📕 Rxd

Selecting more than one interval will cause the screen to display additional period and start time settings.

The *Test Lanes* function also varies if you are collecting Count data vs. Raw/Binned/Sensor data. The following shows a typical Count Mode screen:

Science Linked To: Uni-Limi	ited (V1.30a -	09/23/03)	
Show Status			
Start Collecting Data	Lane	Count	
Site ID & Enabled Lanes	#1.	0	
Lane Configuration	#2.	0	
Type of Data To Collect			
Record Intervais			
Start & Stop Times			
Start Collection!			
Retrieve/Delete Files			Zan Carat
Monitor Sensors & Traffic			Zero count
Set System Configuration			
Cold Restart Counter			
Modify Bin Tables	Prev		Next
			📕 Txd 📕 Rxd

Note that only the enabled lanes are shown.

The Zero Count button will reset all totals to zero. If a counter with a Piezo Board is connected, a column of piezo values will also be displayed. If a counter with loops is connected, a Retune Loops button is displayed.

When collecting Raw, Binned, or Sensor data, the Test Lanes screen appears as follows:



It is also useful to resize the window so you can see all the data as shown below:

Show Status	View Lan	ae · Million	-																				
Start Collecting Data	VIEW COIL	oo i jataanaa																					
io ID 8 Enabled Lanae	Lane	Time	Speed	Axles	Length	A Bin	5 Bin	L Bin	1-2	2-3	3-4	4-5	5-6	6-7	7-8	8-9	9-10	10-11	11-12	12-13	13-14	14-15	15-1
ne Configuration	* 1.	12:47:59	31.9mph	2	7.1'	2	4	1	7.1'														
pe of Data To Collect	*1.	12:48:00	33.5mph	2	12.3'	3	4	4	12.3'														
	*1.	12:48:02	34.1mph	2	15.2'	5	4	1	15.2'														
st Lanes	*1.	12:48:04	43.0mph	2	25.3'	4	6	1	25.3'														
	*1.	12:48:05	33.9mph	2	12.6'	3	4	1	12.6'														
	*1.	12:48:07	29.1mph	2	9.6'	2	3	1	9.6'														
	*1.	12:48:09.00	SnMis #1																				
	* 1.	12:48:12	44.0mph	2	15.9'	5	6	1	15.9														
	* 1.	12:48:14.00	SnMis #2																				
	*1.	12:48:16.00	SnMis #2																				
	*1.	12:48:17	29.4mph	2	9.1'	2	3	1	9.1'														
	* 1.	12:48:18	47.5mph	2	8.1	2	7	1	8.1														
	* 1.	12:48:20	44.2mph	2	16.2	5	6	-1	16.2						_								
	*1.	12:48:21	56.3mph	2	22.9	5	9	1	22.9						_								
	*1.	12:48:23	52.5mph	2	18.4	5	8	1	18.4														
	212	12:48:24	49.0mph	2	19.6	5	1	- 1	19.6														
	° 1.	12:48:26.00	SnMis #2		0.4				0.4														
	2.12	12:48:27	46.9mph	6	8.4	6	7	1	0.9						_								
	21.	12:48:29	39.9mph	4	13.2	3	5	- 3	13.2														
	*1.	12:49:25	39.2mph	2	15.6	5	5	1	15.6														
	*1.	12:49:27	22 Om-1	2	17.4	2	2	4	17.9										-				
	1.	12.79:29	ee, milph	4	7.5	2	2		7.0														
etneve/Delete Files		-		_			_	_	_	_	_	_	_	_		_	_	_	_		_	1.31	_
itor Sensors & Traffic																						C	iew (
System Configuration																							
old Restart Counter	€ I																						
Modify Bin Tables	Prev																						

Start & Stop Times controls when the counter will actually begin collecting data. The default is to start Now and stop Never. If you select to Start or Stop on a particular Date/Time, Centurion displays additional options as shown in this window:

Linked To: Uni-L	.imited (V1.30a - 09/23/03)	Linked To: Uni-Limited (V1.30a - 09/23/03)	×
Show Status Start Collection Data		Show Status	
Start Collecting Data Site ID & Enabled Lanes Lane Configuration Type of Data To Collect Record Intervals Test Lanes Start & Stop Times	Start Collection When : Now	Start Collecting Data Site ID & Enabled Lanes Lane Configuration Type of Data To Collect Record Intervals Test Lanes Start & Stop Times Start Date : 01/01	
Start Collection!	Stop Collection When : Never	Start Collection When : Never	
Retrieve/Delete Files Monitor Sensors & Traffic		Retrieve/Delete Files Monitor Sensors & Traffic	
Set System Configuration		Set System Configuration	
Cold Restart Counter Modify Bin Tables		Cold Restart Counter	2
initiality officiality	Next	Txd	Next

The last Start Collecting Data option is to actually begin collecting data and is shown in this window:



Click either the *Start Collection!* option or the *Start Button* to begin data collection.

After data collection has been started, the program returns to the main counter status screen like this:



Collecting has started but the counter is waiting for the beginning of a new interval before actually opening a file.

Note that the **Start Collecting Data** button has changed to say **Stop Collecting Data**. You would use this option to stop the data collecting process.

Once data collection has started, you can now *Monitor Traffic Data* to check on counter operation by clicking on the **Monitor Sensors & Traffic** button. This function is identical to the *Test Lanes* function previously described.

In addition, you can also use the Test Sensors Activations. This function operates in a similar fashion to testing sensors when collection has not started, but there are two differences. The first is that only sensors that are actually being used for data collection are displayed and the second is that in Raw and Binned modes the sensors can be displayed by lane configuration. This gives a more realistic view of the actual sensor activations.

The following examples show the various ways *Test Sensor Activations* can display when data collection has begun. You use the "Display By" option to control the way the sensors are displayed.



Binned data, by lane, one sensor active: Binned data, by sensor type:



Count data, by lane:

Count data, by sensor type:



Use the "Display By" option to switch between modes.

You can also View Lane Totals at any time whether collecting data or not:

Linked To: Uni-Li	imited (V1	.30a - 09/23/03)	
Show Status			
Stop Collecting Data	Lane	TOTAL COUNT	
Retrieve/Delete Files	#1.	0	
Monitor Sensors & Traffic	#2.	0	
Test Sensor Activations Monitor Traffic Data			
Set System Configuration			
Cold Restart Counter		6	Zero Total Count
Modify Bin Tables			
			Txd Rxd

Linked To: Uni-Limited (V1.30a - 09/23/03)

Only lanes currently enabled are displayed.

The Zero Total Count button resets all values to 0. This is also done automatically when counter begins data collection.

To stop data collection, click on the **Stop Collecting Data** button. You must then click the Yes, *Stop Now!* button or click the *Stop Collecting Now* option in the function bar to verify you really want to stop.

If the counter contains flash memory, the file will be moved to flash once it is closed as shown here:

Show Status		flash once it is c	losed as shown here:	
Stop Collecting Data				
Stop Collecting Now!		Linked To: Uni-L Show Status	Limited (V1.30a - 09/23/03)	
	ARE YOU SURE YOU WANT TO STOP COLLECTING DATA? NOTE: Counter is waiting for start of an interval. Therefore, stopping collection will not create a file.	Stop Collecting Data	Moved 1K To Flash	
Retrieve/Delete Files				
Monitor Sensors & Traffic				
Set System Configuration		Retrieve/Delete Files		
Cold Restart Counter		Monitor Sensors & Traffic		
Modify Bin Tables		Set System Configuration		
	Txd 🔳 Rxd	Cold Restart Counter		
		Modify Bin Tables		
		PLEASE WAIT, STOPPING COLL	LECTION NOW.	📕 Txd 📕 Rxd

Once data has been collected and files stored in the memory of the counter, click the **Retrieve/Delete Files** button to access a wide variety of data download and processing functions:

Click on any of the options shown here to begin downloading data. You can optionally check the box marked "Sel." to specify individual files to retrieve or delete.

You can also double click on any file to retrieve it.

The column "Ret." Is checked to indicate files that have already been downloaded into the computer.

Note that files with a red background (all of them in this example) are stored on Flash or TAM memory and as such, can only be deleted by erasing the entire Flash or TAM memory.

Linked To: Uni-L	.imited (V1.30a - 09/23/03)
Show Status	There are 6 files using 6144 bytes of Memory (0%).
Start Collecting Data	
Retrieve/Delete Files	
Retrieve Unretrieved Files	File # Sel. Site ID Size Ret. Type Start to Stop Time/Date
Retrieve All Files	1. 🗌 1024 🗹 R2 Dec 15 (15:55) to (15:55)
Retrieve Selected Files	2. 1024 R2 Dec 16 (10:42) to (14:07)
	3. 1024 C2 Dec 16 (14:15) to (14:56)
	4. 1024 C2 Dec 16 (15:00) to (15:08)
Delete Retrieved Files	5. 1024 C2 Dec 21 (15:15) to (16:01)
Delete Selected Files	6. 🗌 1024 🗌 C3 Dec 21 (16:15) to (16:18)
Delete All Files	
Erase Flash Memory	
Monitor Sensors & Traffic	
Set System Configuration	
Cold Restart Counter	
Modify Bin Tables	
	Txd Rxc

When retrieving data, Centurion displays a status window indicating the progress as shown below:



All data downloaded is automatically imported in the Centurion database.

Click the Cancel button to abort this download and all other downloads selected (if any).

If the counter contains Flash memory or TAM memory, you can select the *Erase Flash Memory* or *Erase TAM Memory* function. You must first verify that you want to do this before continuing.



And finally, Centurion allows you to **Cold Restart** the counter to clear its memory and reset the entire counter back to the default state. Click on the Cold Restart button on the option bar to see this screen:

Linked To: Uni-L	imited (V1.30a - 09/23/03)
Show Status	
Start Collecting Data	
Retrieve/Delete Files	
Monitor Sensors & Traffic	ARE YOU SURE YOU WANT
Set System Configuration	TO COL D DESTART THIS
Cold Restart Counter	TO COLD RESTART THIS
Execute Cold Restart	COUNTER?
	This action cannot be undone and it will delete all data and other setup information in counter.
Modify Bin Tables	
	Txd 📕 Rxd

Click Yes, Cold Restart! or click the Execute Cold Restart option to begin. This cannot be undone, so use caution.

If the counter contains flash, it will be erased as shown here:

Show Status	
Start Collecting Data	
Retrieve/Delete Files	
Monitor Sensors & Traffic	
Set System Configuration	
Cold Restart Counter	
Market Dis Tables	

IV.a. Modifying Bin Tables

Centurion will allow you to customize the way a traffic counter classifies vehicles. While many customers do not need this function, it can be a powerful way to setup your traffic counter with the exact bin tables you want to collect data for.



Click on the **Modify Bin Tables** button to display this screen:

Click on the *Read all from Counter* option and the display will change to show something like this:



This shows the name of the bin table definitions currently being used by the counter.

To view or change any of them, click on the "..." button.

For example, click on this button to view/edit the Axle Classification Table. This will open the Bin Table Editor and show the current table that is in the counter.

On the next page the Bin Table Editor is shown when accessed from the advanced counter functions. Please note that section IX – Bin Table Editor describes the actual editor in far more detail, so please refer to that section for more specific information on actually editing and viewing bin tables.

A typical view of the Bin Table editor is shown below:

Show Status		Axle Classifica	tion B	in Tabl			-		
Start Collecting Data	In Traffic Counter:			In Bin Tab	le Editor:				
Retrieve/Delete Files	DEFAULTA AXL	1		DEFAU	LTA.AXL	1			
Monitor Sensors & Traffic		-		5.					
Set System Configuration		Speed Classif 🔥	Bi	n Tab	le Edi	tor			
Cold Restart Counter	In Traffic Counter:								
Modify Bin Tables	DEFAULTX.SPD	2	Axle Bi	ns Speed	Bins Lengt	h Bins Gap I	3ins Headway Bins		- 1
Read all from Counter	L	ength Classif	# of B	ins : 13	Definitions	: 23	File Na	me: DEFAULTA.AXL	
Write/Update Counter	In Traffic Counter:		Def	Bin #	Axles	Bin Name	Spacings (feet)		
	DEFAULTX.LEN	2	1.	1	2 - 3	Cycle	1-5.8, *		
			2.	2	2 - 3	Cars	5.9-10.2, 8.1-18.8		
		Gap Classific	3.	3	2 - 3	2A-4T	10.3-15, 8.1-18.8		
	In Traffic Counter:		4.	5	2	2A-SU	15.1-24		
	DEFAULTX.GAP	2	5.	4	2 - 3	Buses	23.5-99.9, *		
			6.	8	3	4A-ST	*, 18.1-99.9		
	He	eadway Class	7.	6	3	3A-SU	*, 1-8		
	In Traffic Counter:		8.	2	4-5	Cars	1-10.2, *, 1-3.4, 1-3.4		
	DEFAULTX.HED	1	9.	3	4-5	2A-4T	10.3-15, *, 1-3.4, 1-3.4		
			10.	3	4	2A-4T	6-15, 15-35, 6-15		
			11.	2	4	Cars	7-12, 7-35, 7-12		
			12.	8	4	4A-ST	*, 5.1-99.9, 3.5-99.9		
			13.	8	4	4A-ST	*, 1-5, 12-99.9		
			14.	7	4	4A-SU	* * *		
			15.	7	5 - 6	4A-SU	*, 3.5-5, 3.5-5, 3.5-12, 3.5-12		
			16.	11	5	5A-MT	*, 6.1-99.9, *, *		
			17.	9	5	5A-ST	*, 1-6, *, 3.5-11		
			18.	3	5	2A-4T	9.9-15, *, *, 1-3.4		
			19.	5	5	2A-SU	15.1-24, *, *, 1-3.4		
			20.	9	5	5A-ST	* * * *		×

The first time you open the editor, whatever values you read out of the counter are automatically loaded into the editor.

To load a different table from disk, click this button.

When you click the Open new table button, a window like this will appear letting you select the specific file you want to open.

As an example, click on CONN1.AXL and then click the Open button.

Load Axl	e Bin Table				? 🗙
Look in:	🗀 Tables		. +	🗈 💣 🗊 🔻	
My Recent Documents Desktop My Documents My Computer	241 AXL CEMITTRK AXA CONNI AXL CONNI AXL CONNI BAD A DEFAULTIA DEFAULTIA DEFAULTAA DEFAULTXA DEFAULTXA DEFAULTXA NYSF6 AXL BIRD4 AX	I WASHDOT	,AXL		
My Network Places	File name:	Class (".AXL)		•	Open Cancel

The Bin Table editor will then load the CONN1.AXL file definitions as shown below:



counter.

You can also load/view/modify other bin tables definitions by clicking on any tab in the Bin Table Editor. In the following window the Length classification table has been changed to WASHDOT.LEN:

S Linked To: Uni-L	imited (V1.30a - 09/2	3/03)		
Show Status	Axle Classific	ation Bin Table		
Start Collecting Data	In Traffic Counter.	In Bin Table Editor:		
Retrieve/Delete Files	DEFAULTAAXL 📄 <	->> CONN1.AXL 📝		
Monitor Sensors & Traffic				
Set System Configuration	Speed Classif	🛚 Bin Table Editor		
Cold Restart Counter	In Traffic Counter:	un la la lander la pull		
Modify Bin Tables	DEPAOLIX.SPD	Axe Bins Speed Bins Lengin Bins Gap Bins 1	leadway bins	
Read all from Counter	Length Classif	# of Bins : 5	File Name : WASHDOT.LEN	Helpi
Write/Update Counter	In Traffic Counter.	Bin Min Length (US) Max Length (IS) Min Length (Metric) Max Length (Metric)	
	DEFAULTXLEN	1. 0.0 ft 28.9 ft	0 cm 882 cm	
	0	2. 29.0 ft 56.9 ft	883 cm 1735 cm	
	In Traffic Counter	3. 57.011 83.911	1/36 cm 2558 cm	
		4. 84.0π 114.9π	2559 cm 3503 cm	
	Headway Class			
				Cancel

Once the Bin Tables have been set, click back on the advanced counter communication window and then click *Write/Update Counter*. This command will automatically write any table to the counter that is different than what is in the bin table editor:

Linked To: Uni-L	imited (V1.30a - 09/23/03)	
Show Status	Axle Classification Bin Table	
Start Collecting Data	In Traffic Counter: In Bin Table Editor:	
Retrieve/Delete Files	DEFAULTAAXL 🖻 < ->>> CONNI AXL 🖻	
Monitor Sensors & Traffic		Terrora I
Set System Configuration	Speed Classification Bin Table	X
Cold Restart Counter	In rand Courser: In sen lade Editor:	
Modify Bin Tables		
Read all from Counter	Length Classification Bin Table File Name: WASHDOT.LEN 🖬 🖄	
Write/Update Counter	In Traffic Counter: In Bin Table Editor: (S) Min Length (Metric) May Length (Metric)	ap:
	DEFAULTXLEN DO COM 882 cm	
	883 cm 1735 cm	
	Gap Classification Bin Table 1736 cm 2558 cm	
	In Traffic Counter: In Bin Table Editor: 2559 cm 3503 cm	
	Headway Classification Bin Table In Trefic Counter DEFAULTXHED DEFAULTXHED DEFAULTXHED	
Write Length Class Table From Co	unter 🔳 Txd 📲 Rxd	
		 voel k

In this example the Axle Class Table and Length Class table will be written to the counter.

When the update is complete, you can disconnect the counter and update a different counter (if desired). You do not have to close the Bin Table to do this so your current bin table settings are saved.

IV.b. Bluetooth Counter Communication

Centurion allows you to communicate to your Bluetooth enabled traffic counter. Currently, the following counters are supported:

Traffic Tally 2, 4, 6, or 8 - BT	All Versions
Omega Traffic Counter	All Versions

To support Bluetooth, you must first enable it on your computer and set it up to link to a counter. All supported counters use the same <u>Device Name and Bluetooth Address</u> and can be linked to, one at a time, via the same Bluetooth COM port.

There are many available products available to support Bluetooth communications. The best type is one which allows you to setup a link to the traffic counter which is automatically enabled whenever a specific COM port is accessed (for example, COM11).

Other types of software allow you to scan occasionally for devices (such as once a minute) or to manually request a Bluetooth link with a device. While not as easy to use, all of these methods will work with the Centurion software.

A Typical Bluetooth Desktop Setup

The following describes setting up a desktop computer running Windows XP and using an ABE USB Bluetooth adapter with the BlueSoleil software drivers.

- 1. Check the BlueSoleil website and insure you have the latest version of the software.
- 2. Make sure the Bluetooth device is *not* plugged into the computer.
- 3. Run the driver software installation program.
- 4. Restart your computer and plug in the ABE Bluetooth USB adapter.
- 5. Run BlueSoleil (will automatically run after the first install). You should see the following:



- 6. If desired, click on My Services and disable those services you do not need (none are required to connect to the traffic counter).
- 7. If desired, click on My Bluetooth Device Properties and set the Accessibility options. For greater security, make your computer "Non Connectable" and "Non Discoverable".
- 8. Bring your traffic counter to the computer and activate it. For the TT-2/4/6/8, this is done by activating the <u>Display</u> reed switch. For the Omega, any counter collecting data is always active. For non-collecting Omega's, activate either reed switch to turn on the Bluetooth.
- Press <F5> on your computer. This causes the BlueSoleil program to search for new devices.
- 10. Within a short period it should find the counter and display the generic link name like shown here.



- 11. Double click on Diamond Traffic Counter.
- 12. When Service Discovery Finished appears, right click on the Diamond Traffic Counter symbol and select Connect Bluetooth Serial Port Service.
- 13. If a successful connection is made, a line should connect the traffic counter to your computer. You should also be informed of the COM port that has been established to connect to this device. Make sure have the checkbox enabled to automatically connect to this device when this COM port is opened.

Make note of this COM port! You will need this to setup Centurion to talk to the device.

Using Centurion with your Bluetooth Traffic Tally 2/4/6/8 or Omega Traffic Counter

Centurion works with a Bluetooth counter by opening a COM port that has been previously setup for Diamond Traffic Counter devices. When this is done, the Bluetooth system tries to link to the counter and allow Centurion to talk to it. When communication is finished, Centurion closes the link and this disconnects the counter from the computer.

Follow these steps to setup Centurion to use with your Bluetooth Counter:

- 1. Run the program.
- 2. If the traffic counter Scanning window is open, close it (Stop Scanning).
- Go into File Preferences. Click in the counter tab. Change the "Bluetooth Port" value from None to the COM port you previously setup.
 Once this is done, a new Bluetooth icon will appear in the scanning window.
- Once this is done, a new Bidetooth con win appear in the scanning window.
- 4. Open the traffic counter Scanning window. You should see something like this:

When link	ed: Just go t	o Program/Monitor wind	dow.	~
L	ookina i	For Connect	od	Heini
C	ounter	or Device	*	Stapl
c J	ounter (or Device	*	Stop

- 5. Bring your traffic counter next to your computer and wake it up (if asleep).
- 6. Click on the Bluetooth icon. This should automatically link the computer to the counter. If a connection is made, the type of counter connected and other info will appear followed by the program, monitor, and setup window.

7. The following window appears when the Bluetooth connection is made with a TT-2/4/6/8 (see below for information on the Omega):



- 8. Click on the Set button to change the time (if the counter differs by more than 5 minutes from your computer this will happen automatically.
- 9. Click on the Download Memory button to download data to your computer. This is only enabled when you have unretrieved data present in the memory of the counter. The following will appear:

Site ID: (none) Info 1: Info 2: Serial #: 010105-0000 TTS (State Object of at 0005) BIN State At: 00:05 on 01/01/05 Stop Mode: Continuous Private By 2: Yes # Lanes: One Stop Mode: Continuous Record Interval: 5 Minutes	Linked	To: TT-8 (V1.00 - 09/08/05)	
Stops At: (present) Divide By 2 : Yes Stop Mode : Counter Time Stop Mode : Continuous Record Interval : 5 Minutes Memory Used : 17.4 Hours (1%)	()	Downloading 502 Bytes. 384 Bytes To File: 05-09-09 010105-0000 TTB (Start 05-01-01 at 0005) BIN	Site ID : (none) Info 1 : Info 2 : Serial # : 010105-0000 TT8 Starts At: 00:05 on 01/01/05
Record Interval : 5 MINULES Memory Used : 17.4 Hours (1%)	Divide By 2 Stop Mode	: Yes #Lanes: One	Stops At: (present)
	Record Interval	: 5 Minutes Memory Used :	17.4 Hours (1%)

- 10. When downloading is complete it will automatically import the data into the Centurion database.
- 11. Click on the Reset & Restart button to reprogram the counter. Reprogramming automatically deletes any data in memory, so make sure you have downloaded the data you want to keep first. The following window allows you to change programming options:

Reset & Restart 🛛 🔹 🔀
Site & Info Lines Site I.D. : Highway 58
Info Line 2 :
Lane Setup Divide By Two : 🗹 🛛 # of Lanes : Two 🔍 Lane Mode : Directional 🔍
File Setup Stop Mode : 7 Days V Interval : 1 Hour V
Use Armed Mode : 🗹 Start At Next Interval : 🗹
✓ <u>O</u> k, Reset & Restart Collection! X <u>O</u> ancel
- 12. Adjust all settings and Click Ok to begin new collection. The "Armed" mode sets the counter to hold itself inactive until the user activates <u>Display</u> and then <u>Reset</u> in the field. The "Start At Next Interval" programs the unit to wait until the start of a new interval before collection is to begin.
- 13. When done communicating to the counter, close the window. Centurion will close the COM port for the counter and this should normally disconnect the Bluetooth link. If the counter does not disconnect, active <u>Reset</u> on the counter and the link will be terminated from the counter side.

When connecting to an Omega Traffic Counter:

7. This section to be completed in the next release.

IV.c. Using a GPS Device

Centurion has a feature to allow the automatic programming of any counters Info Line 1 & 2 with the current GPS location. To use this function, you must have a GPS device installed or connected to your computer that supports the "NMEA" protocol.

Most GPS devices support this functionality and, once enabled, will provide the current location of your computer to a COM port on your computer. In the case of internal GPS device (or one connected by BlueTooth or USB), this COM port is actually simulated or virtual by the GPS software. Please refer to your GPS device information and follow the steps necessary to enable NMEA output. You will need to know the COM port and Baud rate the GPS information is on to setup Centurion. Any NMEA protocol will work, but we recommend enabling v2.1 with a baud rate of 19200.

Once your GPS device is setup, run Centurion and go into the File – Preferences – General window. The first tab, "General", has the following options:

GPS D	evice				
Port :	COM14	*	Baud Rate :	19200	~

Select the COM Port and Baud Rate your GPS device is configured to. Once this is selected, the GPS functionality is turned on for all counter communications.

Activate the counter scanning window. Immediately Centurion will access your GPS device and scan it continuously for current location information. When it gets a location, the bottom of the main Centurion window will display it like this:



Once the GPS device information is enabled, Centurion automatically fills in the Info Line #1 and Info Line #2 for all new data collection sessions. This data is then stored with the file so that later downloads can be verified for correct location. The user is not allowed to edit the Info Line #1 or #2 values when this function is turned on (to turn it off again, set the GPS Device Port to "None").

IV.d. Windows vs. Classic Monitor Lanes

Centurion V1.31 and later supports a *classic* monitor lanes view. This classic view is similar to TrafMan and supports some additional features not available in the Windows mode.



The classic view will display data identically to the older TrafMan software. You can see in the above example how WIM weights are displayed in the IRD mode. Centurion supports cutting and pasting data from this window, as well as the ability to scroll forward and back as needed.

Right clicking on any part of the classic view brings up the standard editor control as shown below. In particular the bottom two options are specific to the monitor mode:

/W:		
.4	Edit	
2 Ax1	Cut	S#9
/W:	Сору	
.4	Paste	
4 Ax1	Bold	S#10
	Italic	
2.1'	Underline	
	Font	
	Bullet Style	
	Paragraph	
	Tabs	
	Find	
	Replace	
	Start Download	
	Set Weight Warnings	

The Start Download selection allows you to start/stop storing monitored data to a text file. Clicking on the Set Weight Warnings allows you to setup a warning color and tone when certain maximums are reached (as shown below).

WIM Monitor Alert Settings	? 🔀
WIM Alert Class Min :	Max : 9
Maximum Axle Weight : 20000 lb	
Maximum GVW : 90000 lb	
	X Cancel

IV.e. Using the Counter "Live" Time Adjust

Centurion V1.37 Build 23 and higher along with the Unicorn, Phoenix, and Pegasus counter versions 4.16-4.49 and version 4.56 and higher support what is known as the "Live" time adjust function. This function is designed to allow you to modify the counter Date/Time while the counter is collecting data without having to stop and restart. Prior versions of the software and firmware required you to stop collecting before you could change the clock, and this meant you generally lost an interval of data.

The function is turned ON by default. You control it in the **General Preferences**->**Counter** tab inside the <u>Time Options</u> group box. You should check the "Check Counter vs. Computer Time when first link" option so that Centurion will match the counter and computer time when it links to the counter. The next option enables or disables the "Live" Time adjust function. Check the box by "If supported, use 'Live' adjust to set time of counter" to enable the "Live" time adjust function.

Once enabled, Centurion will try to make the counter match the computer time whenever it detects one minute or more in difference between the clocks. There are some limits, however, as follows:

- □ The counter must support this function, of course. Counters that don't support the function are supported in exactly the same way as they always have been.
- Normally, this feature is to make adjustments of just a few minutes at a time. However, it will support bigger changes if it detects them. There is a limit of time differences no more than 4 hours or any difference that would alter the actual date (instead of the time) cannot be changed with this function.
- □ It is also intended to be used when data collection is active, but it works when not collecting data too. As long as the time change is not too great, this function will be used automatically by Centurion to make the times match.

You can alter the behavior of this function using the other settings as follows:

Adjust min only:

If checked, Centurion will look only at the minutes value and not the hours of the computer clock and try to make that value match up. This is useful if you have counters in multiple time zones and don't expect the times to be off more than a few minutes, Centurion can assume hour sized differences are time zone differences and concentrate instead on matching up the minute values.

Block vehicles if subtracting:

When subtracting time from a counter, the unit must wait for the real world to catch up to it. For example, if the counter thinks it is 6:40 in the morning and it is really 6:30, it must wait at 6:40 for 10 minutes doing nothing so its clock will resync to the actual time. If this value is checked, the counter will NOT store vehicles in memory during the time it waits.

Normally, users do not need to check this box. Adding vehicles to Volume or Classification tables during the minor minute adjustments should not affect tables too dramatically. However, if you are collecting Per-Vehicle data of any type, you can get timestamps on vehicle records that are duplicates and/or out of order time wise during the adjustment period. This won't confuse Centurion, but it might another software package.

Store T/D if adding:

If adding time to the counter, you may want to record a special Time/Date record (a T/D) into the file to signify the jump ahead. Checking this box will indicate your desire to do that. Note that even if checked, it will only happen if (a) you are in a Per-Vehicle mode or (b) you are in an interval mode, Volume or Classification, and you cross an interval boundary.

How does the "Live" time adjustment work inside the counter:

If you are not collecting data, the "Live" time adjustment happens instantly. If you are collecting data, then it depends on the data collection storage mode (Raw, Binned, etc) and whether or not you are adding time or subtracting time as follows:

<u>When subtracting minutes from the counter clock</u> – The counter will reset the clock back one minute at the beginning of each new minute for the duration of time specified. For example, if Centurion detects the counter is 10 minutes fast, it will tell the unit to subtract off 10 minutes from its time starting at the beginning of the next minute. So if the clock read 12:46:23 when the command was sent, when it rolled over to 12:47:00 it will reset itself back to 12:46:00. It will repeat that 9 more times to subtract off the 10 minutes you requested, and then move forward normally.

Depending on the mode you are in, this causes different effects. In Volume and Classification the effect is almost non-noticeable because the current interval will simply be longer with each delayed minute. However, in Per-Vehicle and Sensor modes, vehicles can be recorded that have duplicate times and/or are out of order, something that is not normally possible. Centurion can cope with this, but if you plan to process the data with other software that cannot you should check the "Block Vehicles if Subtracting" box to prevent data problems down the line.

<u>When adding minutes to the clock</u> – This is actually more complicated that subtracting time because the user can add time which crosses interval boundaries and make it impossible for the importing software to understand what has occurred. There are two basic scenarios:

A) User adjusts clock just a few minutes (less than a single interval).

B) User adjusts clock a lot of minutes (more than a single interval).

In scenario <u>A</u>, the user just wants to add a few minutes to the clock. Centurion will send the number of minutes to add and, if you are in Volume or Classification modes, the counter will wait until the beginning of the next interval to apply the time jump all at once (the clock will jump forward). No record will be made in the file in this instance. In Per-Vehicle or Sensor mode, the time jump will be made at the next one minute interrupt, and a T/D record will be recorded in memory if you have checked the "Store T/D if adding" box.

In scenario <u>B</u>, the user needs to skip ahead more than a few minutes. In many ways it is probably better to stop collection, reset the clock, and restart collection if you have this much of a correction to do (since you have already lost more than an interval anyway). However, Centurion will support this and will send the number of minutes to adjust. Just like in scenario A, if you are in Volume or Classification, the counter waits until the end of the current interval before making the change, and then skips ahead to the new interval point. Because this was such a large jump, Centurion will also record a T/D record in Binned and Volume modes if you have checked the "Stored T/D if adding box". In Per-Vehicle and Sensor mode, scenario A and B are identically handled.

Both of the above scenarios (<u>A & B</u>) mostly apply to Volume and Classification. In Per-Vehicle and Sensor modes, you are usually ok to add minutes to the clock without too much of a penalty. t should be noted that in heavy traffic flow you could get a vehicle time that was stored with the vehicle prior to the adjustment and thus makes other vehicles out of sync, so software should watch for that. Recording of a new Time/Date stamp (T/D) is optional, although it does alert the system to something having been changed.

"Live" time adjustment and the Autopoller:

Enabling the "Live" time adjust function will also affect the autopoller. During all communication to counters, Centurion will adjust times of units that support this feature (if enabled).

A note will be made in the autopoller log file of counters that receive a "Live" time adjustment.

V. Reports

After you finish with the basic and/or advanced Counter Communication functions, click the New Reports button on the main Scanning window to see a report of the data you just downloaded. Depending on the type of data, a window similar to the following will appear:

🔳 Traffic Data Report (2 of 3): 2	24TH AND UNIV.	
PerVehicle Class Volume Sta	tarting Time & Date : 🕄 16 PM 🛛 1/22/2002 👻 Ending Time & Date : 10:09 AM 1/24/2002 🕑 👔 驒	The report
Report Style Per-Vehicle Data Dump Lanes All (1,3) Print Lanes: O Together O Seperate	Per-Vehicle Data Dump Report: 24TH AND UNIV. Station ID: 24TH AND UNIV. Last Connected Device Type : Apollo Info Line 1: Semple Report Version Number : 1.00 Info Line 2: GP S/Other: Number of Lanes : 2	generator is a WYSIWYG tool. The current report content is shown in the preview window.
Data	DB File: 24TH AND UNIV.DB Posted Speed Limit: 35.0 mph	When you see the
	Mehicle Sensor Lende Office Andormation # Dir. Information Sensors Sensors Lende Mode Sensors Class Class <t< td=""><td>report you want, simply click Print to send it to the printer.</td></t<>	report you want, simply click Print to send it to the printer.
	One Time Lame Sound A the Lemeth A: SpLT GorM 12 2.3 3.4 4.5 5.6 6.7 7.8 8.9 9.10 10.11 11.12 12.12 13.11 01/2202 165163100 #1 20.0 2 8.0 9.0 122' 01/2202 165163400 #1 20.0 2 8.0 9.0 122' 01/2202 165163700 #1 30.3 2 9.7 2.4 2.1 1 9.0 01/2202 165163700 #1 30.3 2 9.7 2.4 2.1 1 9.0 01/2202 165163700 #1 30.3 2 9.7 2.4 2.1 1 9.0 01/2202 165163700 #3 3.8 2 7.8 2.4 2.3 3.7 7.8 01/2202 165175800 #3 3.8 2 7.8 2.4 2.3 8.1 01/2202 165175800 #1 3.9 2.8 1.9 7.9 7.9 9.0 8.7 01/2202	You can instantly switch between types of the same data (from Per- Vehicle to Class or to Volume) clicking on the Class or Volume tab.

IMPORTANT NOTE: Starting with Centurion-CC V1.20 Build #0002, the Report Generator no longer instantly applies any changes you make to the current report (such as enabling certain lanes or switching from Per-Vehicle to Class data). Instead, you must click the **Rebuild** button at the top of the report (which appears whenever options have changed).

This change allows users to more easily select multiple different report options without having to wait for each new report to be generated.



This shows the Volume version of the same data.

Note that the left panel shows options and controls specific to the data type and report selected.

Right click on any part of the page to bring up this window:

- Print All Pages
 Print Grand Total Only
- Include Graphs
 Don't Include Graphs

Select to print all pages or only grand total pages (during print only, not during preview).

Also you can select to include or not include graphs. You must rebuild the report after changing this option before it takes effect..





Print	? 🗙
Printer Name: HP C LaserJet 4550 PCL Status: Ready Type: HP Color LaserJet 4550 P Where: \\Server\HP4550N Comment:	- 6 Properties PCL 6
Print range All Pages from: 1 to: 7 Selection	Copies Number of copies: 1 : 1 2 3 Collate OK Cancel

Click the Print button to send the report to the printer.

You can select the printer to send it to, the number of copies, and what pages to print.

Centurion remembers your printer selection and will default to this printer each time it is run.

Finally, close the report generator and you will see how the New Reports button is now gray (because you viewed the reports for the data you downloaded).



Download more data to generate some more new reports, or click the Database button to access all the data you have collected (see next section).

V.a. Saving Reports to a File

Any report can be saved to disk by clicking on the 🗟 speed button (or by selecting File-Save from the menu). This will present the following dialog box:



Type in the name to save the file to and select the type by clicking the drop down box.

Depending on the format selected a variety of other dialogs will appear allowing you to control the exact format of the saved report. Examples for a few of the save types are shown below:

Save As Rich Text (RTF) Options:

RTF Export Setup	RTF Export Setup	RTF Export Setup
RTF Export Setup Preferences Background Content Page Range: All Pages Pages: Enter page numbers and/or page ranges separated by commas. For example, 1.3,5-12 Image: Image: Image: Image	RTF Export Setup Preferences Background Content Background Image Preview Clear Background Display Type	RTF Export Setup Preferences Background Content Included Items: Included Items: RichText Encoding Type Shape Image RichText RichText Resolution Text As Source JPEG JPEG JPEG Quality 100 Resolution As Source JPEG Quality 100 Resolution As Source Optimization Mode Positional Accuracy Document Information: Title Title Author Russell Kanwarde
QKCancel	<u> </u>	<u></u> ancel

Save As Adobe Acrobat (PDF) Options

<u>0</u>K

<u>C</u>ancel

PDF Export Setup	PDF Export Setup	PDF Export Setup
PDF Export Setup Preferences Background Content Advanced Viewer Prefe Image: Content Page Range: Image: Content Advanced Viewer Prefe Image: Content Image: Content <t< th=""><th>Poferences Background Content Advanced Viewer Prefe</th><th>PDF Export Setup Preferences Background Content Advanced Viewer Prefs V</th></t<>	Poferences Background Content Advanced Viewer Prefe	PDF Export Setup Preferences Background Content Advanced Viewer Prefs V
PDF Export Setup Preferences Background Compress Document Compress Document Compress Document Maximum Compression Level Maximum Where Password Image: Confirm Owner Password Confirm Owner Password Image: Confirm Owner Password User Password Image: Confirm Owner Password User Permissions: Image: Copy Font Encoding WinAnsiEncoding	UK Lanced PDF Export Setup Image: Content Advanced Viewer Preferences Background Content Advanced Viewer Preferences Image: Content Advanced Viewer Preferences Page Layout Page Mode Single Page Use None Hide Viewer Interface Elements: Image: Controls Navigation Controls Page Transition Mode: Page Transition Effect None Page Transition Duration Secs	<u>Un</u> <u>Cances</u>

<u>0</u>K

<u>C</u>ancel

VI. Chart Editor

One of the most powerful features of Centurion is the Chart Editor. With this tool you can customize and modify any chart on any report. You can change *pie charts* into *bar charts*, add advanced analysis to a report, export and print charts separate from the main report, easily save your chart configurations as the default for new data reports, plus many other features.

Please note that a separate user manual is available for the Chart Editor (you can select it from the Start Menu).

To use the chart editor, simply generate a report from any data and scroll to the page the chart is on. For example:



This shows the default "ADT Volume vs. Time" on the summary page of the Basic Volume Report

Suppose you wanted to change this report to not be 3D and to only have a single color. Simply double click on the chart and the following dialog appears:



The left box is a very sophisticated Chart Editor. The right box shows the current chart and is instantly updated with any changes you make. The Chart Editor has literally hundreds of options. However, to make our two changes for a non-3D chart with single colors, you would typically do the following:





Now that the chart shows the format we want, we can either:

- Ok to just use it this one time.
- Save as a custom Chart Configuration to save the current chart configuration to a file that later can be loaded with the Load Previously Saved Chart Configuration.
- □ Click Save Settings as New Chart Default to use this style of chart for all future occurrences of "ADT Volume vs. Time" (you can always change it again of course).

Regardless of the option you choose, when the Chart Editor is closed the program immediately regenerates the report with the new settings. From our example, we would now see:



If you clicked *Save Settings as New Chart Default*, then this new chart style will be used for all future reports as well. This very advanced system allows the user total control over virtually any aspect of report chart presentation.

The Chart Editor has many other abilities. The main page of the Chart Editor shows:



A "Series" is a set of numbers displayed in a certain way on the chart. In this window, it shows a series named "Series2" which is a Bar Chart. You can change the series to another kind of a chart and/or add additional charts directly to the current chart.

See the next page for the typical types of Charts available.

Clicking the "Add" button from the Chart - Series page gives access to these types of charts:

2D:





3D:











TeeChart Gallery	
Series Functions	
Standard Extended 3D Financial Stats Other	
Point & Figure Candle Volume	
le II Tee	
·	









The Functions tab gives access to mathematical and other types of functions that can be added to the chart. Note that depending on the release, there may be additional functions than shown below.



There are far too many features of the chart editor to cover completely in this document. Please refer to the "TeeChart Users Guide" for more information (it can be found in your Centurion start menu folder).

The following pages show some of the main pages and the options available. This is for quick reference only.

Chart – Series:

Chart Series Data Export Print	
Series General Axis Titles Legend Panel Paging	Walls 3D
ull. 💌 Series2	- 4 - J
	<u>A</u> dd
	<u>D</u> elete
	<u>T</u> itle
	Clone
	<u>C</u> hange

Chart – General:

Series General Axis Titles Legend Panel Paging Walls 3D				
Print Preview Zoom Scroll Margins (%) Animated Steps: 0 • • 0 • • 0 • • 0 • • 0 • • 0 • • 0 • • 0 • • 0 • • 0 • • 0 • • 0 • • 0 • • 0 • • 0 • • 0 • • 0 • • 0 • • Direction: Both • Mouse Button: Left •				

Chart – Axis:

Chart Series Data Export Print			
Series General	Series General Axis Titles Legend Panel Paging Walls 3D		
Visible	Scales Title Labels Ticks Minor Position		
<mark>.</mark> <u>B</u> ehind A <u>x</u> es:	I▼ <u>A</u> utomatic I▼ <u>V</u> isible		
Left Axis Right Axis	Change Desired Increment: 0		
Top Axis Bottom Axis	□ Logarithmic Log Base: 10 □ □ e		
Depth Axis	Minimum Maximum		
	🔽 Auto 0		
	Change Offset: 0		
+ ·			

Chart – Titles:



Chart – Legend:

Chart Series Data Export Print				
Series General Axis Titles Legend Panel Paging Walls 3D				
Style Position Symbols Format	Text Gradient Shadow			
l ⊽ ⊻isible Legend <u>S</u> tyle:	Automatic 🗨			
🔲 Inverted 👘 Text Style:	Value 💌			
Check boxes Vert. S	pacing: 0			
Eont Series Color	Dividing Lines			
P				

Chart - Panel:

Chart Series Data Export Print
Series General Axis Titles Legend Panel Paging Walls 3D
Background Borders Gradient Shadow
<u>C</u> olor
Back Image:
Browse Style
C Tile
Transparent C Center

Chart - Paging:

Chart Series Data Export Print
Series General Axis Titles Legend Panel Paging Walls 3D
P <u>o</u> ints per Page: 0 <u>S</u> cale Last Page
Current page Legend
Page 1 of 1
N 4 P N

Chart - Walls:

Chart Series Data Export Print
Series General Axis Titles Legend Panel Paging Walls 3D
✓ ⊻isible Walls
Left Right Bottom Back
<u>C</u> olor □ Visible
Border 🔽 Dark 3D
Pattern Siz <u>e</u> : 0 📩
<u>G</u> radient
Transparency:

Chart – 3D:

Chart Series Data Export Print	
Series General Axis Titles Legend Panel Paging N	Walls 3D
Image: 30 pinensions Image: 200m; 3D %: 15	100% 345 345 0
✓ <u>Clip Points</u> ✓ <u>Vert. Offset:</u>	0
Perspective: □ ↓	15

Series:

Chart Series Data Exp	port Print
Series2	💌 📊 Bar: Series2
Format Stack General	Marks Data Source
Style: Rectangle 💌	Border— Pattern
Color <u>E</u> ach	% Bar <u>W</u> idth: 70
<u>G</u> radient Be <u>v</u> el size: 1	 ☑ Dark Bar 3D Sides ☑ Bar Side Margins ☑ Auto Mark Position

Data:

Chart	Series	Data	Export	Print					
		S	eries2						^
#	Text		Bar						
0	00:00		15						-1
1	01:00		10						
2	02:00		6						
3	03:00		12						
4	04:00		11						
5	05:00		25						
6	06:00		110						
7	07:00		244						
8	08:00		231						
9	09:00		240						
10	10:00		236						
11	11:00		240						
12	12:00		272						
13	13:00		228						
14	14:00		281						
15	15:00		275						
16	16:00		296						
17	17:00		238						
18	18:00		194						
19	19:00		137						*
	K	<		►	M	A	8	3D	х

Export:

Chart Editor:	: Any (default.0.chd)
Chart Series Data Tool	Is Export Print
Picture Native Data	
<u>F</u> ormat	Options Size
as Metafile as Ritman	
as VML (HTM)	🔽 Enhanced
as GIF as JPEG	
as PCX as PNG	
as PostScript	
<u>C</u> opy <u>S</u> ave	S <u>e</u> nd

The final "Print" tab allows you to print the chart out separately from the main report.

Chart Series Data	Export Print	
Printer: HP Cold	or LaserJet 4550 PC 💌 Setup	<u>P</u> rint
Orientation: ○ Portrait ● Landscape Detail: More Normal I Proportional		

VII. Database

The Database holds all of the data you have ever brought into the software.

Per Vehicle/Raw Data Classifica	tion Data Volume Data	1												The three tabs
Imp Sel Station ID	Info Line 1	Info Line 2	Start Time Start Date	End Time End Date	Counter Typ	e Version	Has AxI	Has Spd	Has Len	Has Gap	Has Hed	Has SnMis	•	show each type of
74800000000	740022000000	13XXXXXXX	16:00 08/16/01	23:59 08/08/04	Phoenix	2.45	V	v	Г	Г	Г			data that can
■ 〒 74810000000	740166000000	1133)0000	19:00 08/16/01	23:59 08/08/04	Phoenix	2.45	V	•	Г	Г	Г	2		data that can
	750029000000	13XXXXXXX	00:00 04/02/01	23:59 08/08/04	TCC-540	2.88	2	v	Г	Г	Γ			evist (Per Vehicle
🛛 🖽 🗂 75800000000	750046000000	New Lebenon	12:00 01/28/02	23:59 08/08/04	Unicom	2.45	2	1	Г	Г		Г	Report	
🛛 🖽 🗂 75810000000	750018000000	02XXXXXXX	00:00 04/01/01	23:59 03/31/04	Unicom	2.39	Г	~	Г	Г	Г	- Fi	Generator	Class, and
■ ■ 81310000000	810222000000		00:00 04/01/01	23:59 08/08/04	Phoenix	2.39	Г	V	Г			F		λ (all up a)
■ ■ 81800000000	810174000000	11XXXXXXX	18:00 08/14/01	23:59 08/08/04	TCC-540	2.45	1	~	Г			v		volume).
■ ■ 82320000000	820002000000	33XXXXXX	00:00 04/01/01	23:59 01/15/03	TCC-540	2.45	Г	1	Г			F		
■ ■ 82800000000	820821000000	1133XXXX	00:00 04/01/01	23:59 08/08/04	TCC-540	2.85		~	Г			v		
■ ■ 83800000001	830164000001	02XXXXXX	00:00 04/01/01	23:59 08/08/04	Str-241	0.00	Г	V	Г			Г		
■ 〒 83800000002	830164000002	Westpoint	00:00 04/01/01	23:59 08/08/04	Str-241	0.00		v	Г					
■ ■ 83810000000	830362000000	1133XXXX	00:00 07/24/01	23:59 08/08/04	TCC-540	2.45	V	1	Г			2	A	
■ ■ 83820000000	830038000000	· · · · · · · · · · · · · · · · · · ·	13:00 07/27/01	23:59 08/05/04	TCC-540	2.85		2	Г			2	U.O.	Click on the I
■ ■ 83830000000	830567000000		18:00 07/26/01	23:59 08/08/04	TCC-540	2.45	V	v	Г			v	Eurod	Click on the +
	840008000000	111X00000	00:00 04/01/01	23:59 08/08/04	Str-241	0.00	Г	•	Г				Data	symbol next to
■ ■ 84800000000	840902000000	333XXXXX	16:00 07/26/01	23:59 08/04/04	TCC-540	2.45	V	1	Г	Г		v		oymoor noxt to
	840905000000	000222XX	20:00 07/24/01	23:59 08/08/04	TCC-540	2.45	V	•	Г			~		any site to see a
■ ■ 87110000000	870733000000	000222XX	00:00 04/01/01	23:59 09/02/02	Str-241	0.00		~		Г				list of all data that
■ ■ 87110000002	870733000000	0022XXXX	00:00 04/01/01	23:59 11/11/02	Str-241	0.00	Г	1	Г	Г			-	list of all data that
■ ■ 87430000000	870069000000		00:00 01/16/01	23:59 01/22/01	Str-241	0.00		~						has been found
■ ■ 87800000000	870113000000		00:00 01/18/02	23:59 08/08/04	Str-241	0.00	1	1	Г	Γ				has been lound
912100000000	910108000000	111XXXXX	16:00 05/15/01	23:59 08/08/04	TCC-540	2.45	2	~				2	_	from that site (see
■ □ 91800000000	910081000000	333XXXXX	15:00 07/14/01	23:59 08/08/04	TCC-540	2.45	1	1	Г			2		
■ ■ 91810000000	910060000000	ROUTE 12	19:00 07/13/01	23:59 08/08/04	TCC-540	2.45	V	~				2	9	next page).
	910104000000	13XXXXXXX	11:00 12/31/01	11:03 06/19/03	TCC-540	2.45	V	1	Г			2	Data Edit	
	910104000000	RT 8/10 OVERLA	F 11:00 12/31/01	10:54 06/19/03	TCC-540	2.45	V	~				~		
	920060000000	Roscoe	17:00 07/06/01	23:59 08/08/04	Phoenix	2.45	2	~	Г			2		
	930038000000		15:00 08/20/02	23:59 01/01/03	Phoenix	2.45	1	~						
	930070000000	ROUTE 23	13:00 07/06/01	23:59 08/08/04	TCC-540	2.45	1	1	Г	Г	Ε	v		
	930048000000		00:00 07/27/01	23:59 08/08/04	Phoenix	2.45	1	~		Г		~		See section on
■ □ 94000000000	940069000000		14:00 08/18/01	23:59 09/05/01	TCC-540	2.45	1	~	•			v		See section on
	940001000000		19:00 07/06/01	23:59 08/08/04	Phoenix	2.45	2			Г		~		Exporting for
	950051000000		15:00 07/11/01	23:59 08/08/04	Phoenix	2.85	1	1	Г	Г		5		
	950051000000		12:00 07/18/01	23:59 08/08/04	Phoenix	2.85	1			Г	Г	2	$\mathbf{\nabla}$	more information
⊞ □ 95810000000	950001000000	11X000000	19:00 07/16/01	23:59 08/08/04	TCC-540	2.45	1	1	Г	Г		5	Site Setup	
⊞ □ 95820000000	950145000000	333X0000X	00:00 07/11/01	23:59 08/08/04	TCC-540	2.45	1	~		Г	Г	~		on the Export
													2	Data function.

Basic site information is shown here including:

Date/Time range of data: These values are automatically updated to reflect the actual range of data currently held in the database. You cannot edit these values directly.

Types of data imported: The "Has Axl", "Has Spd", etc indicate which types of classification data are stored in the database for this site. This allows you to quickly determine which sites collect specific types of data. These values (along with the Counter Type & Version) can be directly edited from the Database window.

If you right click on any site, you will see the following pop-up menu:

Edit Site Setup	
Edit Site Data	
Export Data	
Set TMG Export	F7
Tag All Sites	Ctrl+T
Untag All Sites	Ctrl+U
Tag Unexported	

The *Edit Site Setup*, *Edit Site Data*, and *Export Data* do the same function as the buttons of the same name.

The Set TMG Export function (also can be accessed by pressing F7) calls up the special TMG Export settings window for the Site. See VIII.b. for more information.

Tag/Untag All Sites will quickly tag or clear the selected tag on all data. The *Tag Unexported* function is much more sophisticated and will cause the program to scan all the data imported into the database. Any which has not been exported at least once will then be tagged.

Check the title of the database window to see how many sites have been tagged.

Clicking the + symbol expands

Tra	afi	fic	: Database																		
Per Ve	ehic	:le/F	Raw Data Classification	Data Volume Data																	
Imp	s	Sel	Station ID	Info Line 1	Info	Line 2		Start Time	Start	Date	End Time	End Date	Counter Type	Version	Has Axl	Has Spd	Has Len	Has Gap	Has Hed	Has SnMis	•
Đ	1	Г	758000000000	750046000000	Nev	v Leben	on	12:00	01/2	8/02	23:59	08/08/04	Unicorn	2.45	2	1	Г	Г	Г	Γ	
œ		Г	75810000000	750018000000	02X	000000		00:00	04/0	1/01	23:59	03/31/04	Unicorn	2.39	Г	v	Г	Г	Г	Г	
Ð	1	Г	81310000000	810222000000				00:00	04/0	1/01	23:59	08/08/04	Phoenix	2.39	Г	•	Г	Г	Г	Г	
æ		Г	818000000000	810174000000	11X	000000		18:00	08/1	4/01	23:59	08/08/04	TCC-540	2.45	1	1	Г	Г	Г	2	Benort
Đ	1	Г	823200000000	820002000000	33X	000000		00:00	0 04/0	1/01	23:59	01/15/03	TCC-540	2.45	Г	1	Г	Г	Г		Generat
Đ		Г	828000000000	820821000000	113	BXXXX		00:00	04/0	1/01	23:59	08/08/04	TCC-540	2.85	1	1	Г	Г	Г	2	
Đ	1	Г	838000000001	830164000001	02X	XXXXXX		00:00	04/0	1/01	23:59	08/08/04	Str-241	0.00	Г	~	Г	Г	Г	Г	
Đ		Г	838000000002	830164000002	We	stpoint		00:00	04/0	1/01	23:59	08/08/04	Str-241	0.00	Г	V	Г	Г	Г	Г	
Đ	T	Г	83810000000	830362000000	113	BXXXX		00:00	07/2	4/01	23:59	08/08/04	TCC-540	2.45	2	~	Г	Г	Г	1	
Đ	ti	Г	838200000000	830038000000				13:00	07/2	7/01	23:59	08/05/04	TCC-540	2.85	~	1	Г	Г	Г	2	
Đ	Ti	Г	838300000000	830567000000	1			18:00	07/2	6/01	23:59	08/08/04	TCC-540	2.45	7	V	Г	Г	Г	7	
Ξ	ti	Г	841100000000	840008000000	111	XXXXX		00:00	04/0	1/01	23:59	08/08/04	Str-241	0.00	Г	•	Г	Г	Г	Г	0
9.8	I	Is	el Start Time Start Date	End Time End Date		Has Axl	Has Sp	d Has Len	las Gap	Has He	ed SnMis	Exported	/alid	Status	1	DI	Cnt	~	17221	100	20
	1h	Г	00:00 07/15/04	23:59 07/15/	04	Г	~	Г	Г	Г	Г	Г	~			1	-1	-			
		Г	00:00 07/16/04	23:59 07/16/	04	E	V	Г	Г	Г	Г	Г	2				1				Export
		Г	00:00 07/17/04	23:59 07/17/	04	Г	1	Г	Г	Г	Г	Г	v			10	-1				Data
		Г	00:00 07/18/04	23:59 07/18/	04	Г	1	Г	Г	Г	Г	Г	2			1	-1				
		ſ	00:00 07/19/04	20:59 07/19/	04	-	5			Г			v				-1				
		Г	00:00 07/20/04	23:59 07/20/	04	Γ	~	Г		Г	Г	Γ	7				-1				
		Г	00:00 07/21/04	23:59 07/21/	04	Г	~	Г	Г	Г	Г		v			33	-1				
		Г	00:00 07/22/04	23:59 07/22/	04		1	Г		Г			v			13	-1				
		Г	00:00 07/23/04	23:59 07/23/	04		~			Г			V			2	-1				
		Г	00:00 07/24/04	23:59 07/24/	04	5	V	Г		Г	E		v				-1				
		Г	00:00 07/25/04	23:59 07/25/	04		V	Г	Г	Г	1	Г	v				-1				
		Г	00:00 07/26/04	23:59 07/26/	04	Г	~			Г			v			35	-1				Data Ec
		Г	00:00 07/27/04	23:59 07/27/	04	E.	~			Г			v				-1				0.000
		Γ	00:00 07/28/04	23:59 07/28/	04		V	Ē	Ē	Г		Г	~			10	-1				
		- 1	00:00 07/29/04	23:59 07/29/	04		V		<u> </u>			E	V			10	-1				
		_	00:00 07/30/04	23:59 07/30/	04				1	E							-1				
		1	00:00 07/31/04	23:59 07/31/	U4	-	V				-					10	-1				
	-	1	00:00 08/01/04	23:59 08/01/	04	-	~		-		1	-					-1				
	-	-1-	00:00 08/02/04	23:59 08/02/	04	-	V		-		1	-	N I			33	-1				
		-	00:00 08/03/04	23:59 08/03/	04	-			-	-							-1				
		-	00:00 08/04/04	23:59 08/04/	04	- E			-	-		E				55	-1				(i)
	H	-¦-	00:00 08/05/04	23:59 08/05/	04			E	-	-	-		E .				4				
			00:00 08/06/04	23.59 08/06/	04	-		E	-	-						2.0	1				Site Set
	Ib		00.00 08/07/04	23.59 08/07/	04	-			-	-	-	-					1				
0	0	10	00.00 00/00/04	23.33 00/00/			1.						122					-			2

In this case, you see daily files for this site up to 8/8/2004. Use the scroll bars or the navigator buttons to see all the data imported into this site.

All database functions work on either individual imports or all the data depending on if you select it from the sub-list or from the main site name. To edit the data, simply double click on the station name (or sub record to edit just the data for that import):

Date	Time	Lane	Speed	Axles	Length	A Bin	S Bi 🔨		Date	Time	Туре	Lane	Bin 1	Bin 2	Bin 3	Bin 4 🔥
/22/02 💌	3:16:31 PM	1	28.5 mph	3	21.2 ft	2	3		01/22/02	03:15 PM	Ax	le 1	0	41	2	100
1/22/02	3:16:34 PM	1	29.0 mph	2	8.0 ft	2	3		01/22/02	03:15 PM	Ax	le 3	0	48	1	
1/22/02	3:16:36 PM	3	28.7 mph	2	9.3 ft	2	3		01/22/02	03:15 PM	Spee	na 1	2	11	20	1
1/22/02	3:16:37 PM	1	30.3 mph	2	9.7 ft	2	4		01/22/02	03:15 PM	Spee	a 3	2	13	30	
1/22/02	3:16:39 PM	1	30.0 mph	2	8.0 ft	2	4		01/22/02	03:15 PM	Leng	th 1	0	38	4	
1/22/02	3:16:49 PM	3	27.8 mph	2	7.6 ft	2	3		01/22/02	03:15 PM	Leng	th 3	0	48	2	
1/22/02	3:16:52 PM	3	24.7 mph	2	8.0 ft	2	2		01/22/02	03:15 PM	Gé	1p 1	5	17	10	
1/22/02	3:17:07 PM	3	30.8 mph	2	7.8 ft	2	4		01/22/02	03:15 PM	Ga	ар 3	10	23	8	
1/22/02	3:17:13 PM	3	31.7 mph	2	8.1 ft	2	4		01/22/02	03:15 PM	Headwa	ay 1	5	17	10	
1/22/02	3:17:16 PM	3	25.9 mph	2	7.8 ft	2	3	П	01/22/02	03:15 PM	Headwa	ay 3	10	23	8	
1/22/02	3:17:20 PM	3	29.9 mph	2	7.4 ft	2	3		01/22/02	03:15 PM	SnM	is 1	0	0	0	
1/22/02	3:17:30 PM	1	34.1 mph	2	10.0 ft	2	4		01/22/02	03:15 PM	SnM	is 3	0	0	0	-
1/22/02	3:17:45 PM	1	24.9 mph	2	22.8 ft	5	2		1							Y
1/22/02	3:17:58 PM	1	30.9 mph	2	8.1 ft	2	4	1 s						~		2
1/22/02	3:18:01 PM	3	25.7 mph	2	10.9 ft	3	3	\square	Date	Time	Lane 1	ane 2	Lane 3	Lane 4	Lane	5 La 🔨
1/22/02	3:18:05 PM	3	25.3 mph	2	7.5 ft	2	3	F	01/22/02	03:15 PM	50		54			B
1/22/02	3:18:10 PM	1	25.9 mph	7	83.6 ft	13	3	1	01/22/02	03:30 PM	55		53			
1/22/02	3:18:16 PM	1	26.2 mph	2	8.4 ft	2	3	H	01/22/02	03:45 PM	53		56			
1/22/02	3:18:52 PM	1	25.3 mph	5	46.9 ft	11	3	T	01/22/02	04:00 PM	67		69			
1/22/02	3:19:05 PM	1	26.1 mph	2	9.9 ft	2	3		01/22/02	04:15 PM	48		47			_
1/22/02	3:19:11 PM	1	32.6 mph	2	9.2 ft	2	4		01/22/02	04:30 PM	64		74			
1/22/02	3:19:13 PM	3	26.0 mph	2	7.8 ft	2	3	H	01/22/02	04:45 PM	73		57			
1/22/02	3:19:22 PM	1	23.9 mph	2	20.0 ft	5	2	T	01/22/02	05:00 PM	83		67			
1/22/02	3:19:30 PM	3	23.7 mph	2	7.9 ft	2	2	H	01/22/02	05:15 PM	73		80			-
1/22/02	3:19:33 PM	3	24.7 mph	2	9.4 ft	2	2	T	01/22/02	05:30 PM	71		71			
1/22/02	3:19:46 PM	3	23.5 mph	2	8.5 ft	2	2	H	01/22/02	05:45 PM	85		59			
1/22/02	3:20:12 PM	1	27.5 mph	2	8.3 ft	2	3	F	01/22/02	06:00 PM	75		49			-

You can edit, filter, and otherwise manipulate the data in the database from this window.

By default, all three data types are shown at once (if they exist).

To Zoom in and expand to see only one data type, click the Zoom button.

1																		
Date	Time	Туре	Lane	Bin 1	Bin 2	Bin 3	Bin 4	Bin 5	Bin 6	Bin 7	Bin 8	Bin 9	Bin 10	Bin 11	Bin 12	Bin 13	Bin 14	(i
01/22/0	2 03:30 PM	Axle	1	1	44	6	0	0	0	0	2	0	0	0	0	1	1	\sim
01/22/0	2 03:30 PM	Axle	3	0	46	0	0	2	0	0	0	0	0	4	0	1		Site Set
01/22/0	2 03:30 PM	Speed	1	2	8	15	22	6	1	0	0	0	0	0	0	0	.0	0
01/22/0	2 03:30 PM	Speed	3	2	11	28	12	0	0	0	0	0	0	0	0	0	0	\bigcirc
01/22/C	2 03:45 PM	Axle	1	1	42	5	0	1	0	0	3	0	0	1	0	0		-
01/22/0	2 03:45 PM	Axle	3	1	45	1	0	0	1	0	1	1	0	5	0	0		Zoom O
01/22/0	2 03:45 PM	Speed	1	া	6	22	22	0	0	1	0	0	0	0	0	0	.0	
01/22/0	2 03:45 PM	Speed	3	2	7	33	9	1	0	1	0	া	0	0	0	1	0	
01/22/0	2 04:00 PM	Axle	1	2	56	6	0	0	0	0	0	0	0	3	0	0		
01/22/0	2 04:00 PM	Axle	3	0	50	5	0	1	0	0	2	1	0	5	0	1		
01/22/0	2 04:00 PM	Speed	1	3	7	23	31	3	0	0	0	0	0	0	0	0	.0	
01/22/0	2 04:00 PM	Speed	3	0	13	41	9	1	0	0	0	0	0	0	0	0	0	
01/22/0	2 04:15 PM	Axle	1	0	34	2	0	1	0	0	2	1	0	4	0	2		
01/22/0	2 04:15 PM	Axle	3	0	41	1	0	0	1	0	0	0	0	3	0	1		
01/22/0	2 04:15 PM	Speed	1	1	5	16	19	5	.0	0	0	0	0	0	0	0	0	
01/22/0	2 04:15 PM	Speed	3	2	8	31	6	0	0	0	0	0	0	0	0	0	0	
01/22/0	2 04:30 PM	Axle	1	1	50	3	0	0	0	0	3	1	0	3	1	2		
01/22/0	2 04:30 PM	Axle	3	0	66	0	0	1	0	0	1	2	0	2	0	2		
01/22/0	2 04:30 PM	Speed	1	া	8	25	28	1	1	0	0	0	0	0	0	0	.0	
01/22/0	2 04:30 PM	Speed	3	0	20	39	12	3	0	0	0	0	0	0	0	0	0	
01/22/0	2 04:45 PM	Axle	1	1	62	4	0	0	0	0	0	2	0	2	1	0		
01/22/0	2 04:45 PM	Axle	3	1	47	0	0	0	0	0	3	0	1	4	0	1		
01/22/0	2 04:45 PM	Speed	1	2	13	28	27	1	1	0	0	0	0	0	0	0	0	
01/22/0	2 04:45 PM	Speed	3	5	14	24	12	1	1	0	0	0	0	0	0	0	0	
A REAL PROPERTY AND A REAL	2 05:00 PM	Axle	1	1	65	4	0	2	0	0	1	1	0	8	1	0		
01/22/0	-		22	0	54	1	0	0	0	0	1	3	0	7	0	0		
01/22/0	2 05:00 PM	Axle	3	0	2.													

Click Zoom Out to return to the three pane view.

Click Site Setup accesses the station setup editor for the site. This is the same as select Site Setup from the main database window.

See next page for an example of using the Site Setup function.

Site Setup: ES-090 NB	10]		The Site Setup editor controls various site/station specific information.
Site Information Station ID: ES-090 NB Info Line #1: So. Oregon St Info Line #2: SR005 MP162.35 GPS/Other:	Delete Site	Helpi	Each tab is used to control different information for the site. In addition, the Delete, Copy, and
# of Lanes : 3	Copy Site	×	Print Setup buttons will perform useful tasks.
Database Name File : ES-090 NB.DB		Cancel	

The copy site window:

Station ID :	ES-090 NB		2	Help!
Info Line #1 :	So. Oregon St		Dalata Sita	
Info Line #2 :	SR005 MP162.35	Copy Site: ES-090 NB		3
GPS/Other:		New Site Name		F.
# of Lanes :	3 🗘 Posted	New Site Name		
Last Device				1
Type :	Phoenix		\rightarrow	
Version :	2.44	Cancel	Start Copy	X
Serial # :		L		Cance
Detekson News				Carlot

The delete site window:



From the Imports tab, you can also delete individual imports or re-import corrupted data:



Start Date	Start Time	End Date	End Time	Datatype	Counter Type 🛛 🖄	
4/29/2002	12:00 AM	4/29/2002	11:59 PM	PerVeh.	Phoenix	Hel
4/30/2002	12:00 AM	4/30/2002	06:27 AM	PerVeh.	Phoenix	×
4/30/2002	11:00 AM	4/30/2002	11:59 PM	PerVeh.	Phoenix	
5/2/2002	12:00 AM	5/2/2002	11:59 PM	PerVeh.	Phoenix	
5/4/2002	12:00 AM	5/4/2002	11:59 PM	PerVeh.	Phoenix	
5/5/2002	12:00 AM	5/5/2002	11:59 PM	PerVeh.	Phoenix	
5/7/2002	12:00 AM	5/7/2002	08:29 AM	PerVeh.	Phoenix	
	Delete	this record and	d re-import or	iginal datai	×	

The Print Setup button displays a useful report detailing all your site information:

	Site	Setu	p Re	epoi	rt: E	S-09	00 NB			
Station ID: E Info Line 1: So Info Line 2: SF	S-090 NB 0. Oregon St R005 MP162.35				Ľ	ast Coni	nected Device Version N Serial N	e Type : umber : umber :	Phoeni: 2.44	×
GPS/Other : DB File : ES	5-090 NB.DB					F	Number of Posted Speed	Lanes : Limit :	3 65.0 mj	oh
			Da	ta Set	up					
# of Axle i	Bins: 13				#	of Record	Intervals : 1			
# of Speed I	Bins : 16				Int	erval #1 S	Start Time : 12:0	0 AM	Length :	15 min
Speed Class File N	ame : DEFAULTX.SPD				Int	erval #2 S	Start Time :		Length :	
Length Class File N	ame : DEFAULTX.LEN				Int	erval #3 S	Start Time :		Length :	
# of Gap I Gan Class File N	Bins:8 ame:DFFALIITX GAP				ini co	erval #4 S	Start Time :		Length :	
# of Headway Headway Class File N	9ins : 8 ame : DEFAULTX.HED				-		Start Time .		Longin.	
		()	Lane C	Config	uration					
# Dir. Information	Vehicle Senso Sensors Spacing	· Loop ; Length	Volume Mode	Volume Sensors	Axle Spe Class Cla	ed Lengti Iss Class) Gap Hdway s Class Class	Speedx Axle	: Speedx Length	SnMis Divi Store By
1. N MN#1	Pr-Pr 16.0 ft	6.0 ft	Normal	Veh.	>	(х				Х
1. N MN#1 2. N MN#2	Pr-Pr 16.0 ft Pr-Pr 16.0 ft	6.0 ft 6.0 ft	Normal Normal	Veh. Veh.	د د	сх сх				x x
1. N MN#1 2. N MN#2 3. N MN#3	Pr-Pr 16.0 ft Pr-Pr 16.0 ft Pr-Pr 16.0 ft	6.0 ft 6.0 ft 6.0 ft	Normal Normal Normal	Veh. Veh. Veh.	د د ہ	cx cx cx				x x x
1. N MN#1 2. N MN#2 3. N MN#3	Pr-Pr 16.0 ft Pr-Pr 16.0 ft Pr-Pr 16.0 ft	6.0 ft 6.0 ft 6.0 ft	Normal Normal Normal	Veh. Veh. Veh. dual in	> > nports	CX CX CX				x x x
 N MN #1 N MN #2 N MN #3 Start Date & Time 	Pr-Pr 16.0 ft Pr-Pr 16.0 ft Pr-Pr 16.0 ft End Date & Time	6.0 ft 6.0 ft 6.0 ft <i>Datatype</i>	Normal Normal Normal Indivio	Veh. Veh. Veh. dualin)) n ports /ersian C	(X X X X	rial Device	Status		x x x
1. N MN #1 2. N MN #2 3. N MN #3 Start Date & Time 04/29/2002 12:00 AM	Pr-Pr 16.0 ft Pr-Pr 16.0 ft Pr-Pr 16.0 ft End Date & Time 04/29/2002 11:59 PM	6.0 ft 6.0 ft 6.0 ft <i>Datatype</i> PerVen.	Normal Normal Normal Indivio Counter Phoenia	Veh. Veh. Veh. dualin 77ype & L)) nports /ersion_C 2.44 ccr2ate	(X) (X) (X) ounter Se	rial Device	Status	002 75 2354 cm	X X X
1. N MN #1 2. N MN #2 3. N MN #3 Start Date & Time 04/29/2002 12:00 AM 04/30/2002 12:00 AM	Pr-Pr 16.0 ft Pr-Pr 16.0 ft Pr-Pr 16.0 ft End Date & Time 04/29/2002 11:59 PM 04/30/2002 06:27 AM	6.0 ft 6.0 ft 6.0 ft <i>Datatype</i> Per∨eh. ⊲1%.c.9rog Per∨eh.	Normal Normal Normal Indivio Counter Phoenix Phoenix Phoenix	Veh. Veh. Veh. dualin * <i>Type &</i> U mond/Centrio) n ports /ersion C 2.44 e.cc.Detuenica 2.44	< X < X < X counter Se	rial Device 100 NB (Pervet) From	Status 0000 on 042	002 7o 2350 on	X X X 042002
1. N MN #1 2. N MN #2 3. N MN #3 3. N MN #3 5tart Date & Time 04/29/2002 12:00 AM 04/30/2002 12:00 AM 04/30/2002 11:00 AM	Pr-Pr 16.0 ft Pr-Pr 16.0 ft Pr-Pr 16.0 ft Pr-Pr 16.0 ft 04/29/2002 11:59 PM 04/30/2002 06:27 AM 04/30/2002 11:59 PM	6.0 ft 6.0 ft 6.0 ft 0.0 ft Datatype PerVeh. <1%.c?Prog PerVeh.	Normal Normal Normal Indivit Counter Phoenix Phoenix Phoenix Phoenix Phoenix	Veh. Veh. Veh. international in v <i>Type & U</i> mond/Centerlo)))))))))))))))))))	< X < X < X counter Se elsourceES-6	rial Device 100 NB (Pervet) From 100 NB (Pervet) From	Status 0000 on 042 0000 on 043	002 To 2359 on 002 To 0.027 on	X X X 042002 045002
1. N MN #1 2. N MN #2 3. N MN #3 3. N MN #3 44 4450/2002 12:00 AM 04/30/2002 12:00 AM 04/30/2002 12:00 AM 05/02/2002 12:00 AM	Pr-Pr 16.0 ft Pr-Pr 16.0 ft Pr-Pr 16.0 ft Pr-Pr 16.0 ft 04/29/2002 11:59 PM 04/30/2002 06:27 AM 04/30/2002 11:59 PM	6.0 ft 6.0 ft 6.0 ft 9erVeh. <1%.CProg PerVeh. <1%.CProg PerVeh.	Normal Normal Normal Indivie Phoenix Phoenix Phoenix am FilesDia Phoenix Phoenix Phoenix	Veh. Veh. Veh. • <i>Type & L</i> • mond/Centrio • mond/Centrio)))))))))))))))))))	< X X X C X C C C C C C C C C C C C C	rial Device 100 NB (Pervet) From 100 NB (Pervet) From 100 NB (Pervet) From	Status 0000 on 042 0000 on 043 1100 on 043	002 To 2359 on 002 To 2359 on 002 To 2359 on	X X X 042002 042002 045002
1. N MN #1 2. N MN #2 3. N MN #3 3. N MN #3 44 4429/2002 12:00 AM 04/30/2002 12:00 AM 05/02/2002 12:00 AM 05/02/2002 12:00 AM	Pr-Pr 16.0 ft Pr-Pr 16.0 ft Pr-Pr 16.0 ft Pr-Pr 16.0 ft 04/29/2002 11:59 PM 04/30/2002 06:27 AM 04/30/2002 11:59 PM 05/02/2002 11:59 PM	6.0 ft 6.0 ft 6.0 ft 0 <i>atatype</i> РегVен. « <i>Tk.CPmg</i> РегVен. зли. <i>CPmg</i> РегVен. зли. <i>CPmg</i> РегVен. зли. <i>CPmg</i> РегVен.	Normal Normal Normal Indivio Counter Phoenix am FilesDate Phoenix am FilesDate Phoenix am FilesDate Phoenix Phoenix	Veh. Veh. Veh. - <u>Type & L</u> - <u>Type & L</u> - mond/Centrio - mond/Centrio	>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>	< X X X C C C C C C C C C C C C C	rial Device 100 NB (Persen) From 100 NB (Persen) From 100 NB (Persen) From	Status 0000 on 042 0000 on 043 1100 on 043 0000 on 043	902 To 2359 or 002 To 2027 or 002 To 2359 or 2022 To 2359 or	X X X 042002 043002 043002 043002

VII.a. Importing the TrafMan Database

Centurion allows you to bring all of your TrafMan database data directly into the Centurion database. This powerful function will automatically identify and import any data that is not in the Centurion database, and can optionally remove that data from TrafMan once it has been moved to Centurion.

Note that the required disk space for data in Centurion is greater than with TrafMan. For Classification (Binned) data, expect Centurion to use about 3 times the space (1Meg in TrafMan will take 3Meg in Centurion). For Count (Volume) data, it takes about 4 times the space and for Per-Vehicle (Raw) it is roughly the same as TrafMan.

Generally, customers will use this feature in one of two ways:

- 1. Once Centurion is installed, they will run this feature once to bring in all of their old data and from that point on cease to use TrafMan. All new data will be directly imported with Centurion.
- 2. Still use TrafMan for regular importing of data, but run this function whenever they also want to use Centurion with the data collected by TrafMan. In this manner, both Centurion and TrafMan contain the datasets.

To start the function, select "Import TrafMan Database ..." from the File menu. The following window will appear (the "Ok" button only appears once a valid file directory has been selected):

Import the TrafMan Database 🤶 🔀
$\label{eq:select} \textbf{Select the main TrafMan file directory (usually C:\!\!\! \mbox{C:}\!\!\! \textbf{TRAFMAN}) to import from: \\$
The program will automatically find and import data from the Raw, Binned, and Count databases.
✓ Import Data From Raw Database. Skip sites with matching Site ID's.
Import Data From Binned Database.
Import Data From Count Database. Don't include data from current month.
🗸 OK 🕺 🏅 Cancel 🤶 🝸 Help

You can enable or disable importing each of the three types of data (Raw, Binned, and Count). In addition, the following three options are available:

Skip Sites with matching Site ID's – Check this option to prevent importing any data from a site that already exists in the database. This can be useful if you only want to bring in data from sites that have not previously been imported into Centurion.

Delete from TrafMan after imported – This option will update the TrafMan database so that data that is currently in the Centurion database is removed from the TrafMan database. Customers who use TrafMan just for importing data and then moving that data into Centurion for processing can enable this option to show them what data has and has not been moved. Use this option only after making a backup of your TrafMan data!

Don't include data from current month – Checking this box blocks importing any data that occurs during the current month. All data for dates prior to the 1st of the current month will be imported into Centurion (and removed from TrafMan if the delete box is also checked).

After select your options and click Ok, Centurion immediately begins scanning for data as follows:

Importing TrafMan Data										
Importing Data Type :	Binned X Abort									
Import Status :	Checking To Import									
Processing Site 33 of 100 :	54800000000									

If data is found, Centurion parses a copy out of the TrafMan and shows you the current data date it is processing:

Importing TrafMan Data										
Importing Data Type :	Binned X Abort									
Import Status :	Parsing data on 2002-02-12									
Processing Site 90 of 100 :	938100000000									

After all the data for a particular site is parsed, Centurion imports it into the database. A "Waiting" message appears and the bottom right corner of the screen shows the import progress (just as with any other kind of import):

Importing TrafMan Data	a,	
Importing Data Type :	Binned X Abort	
Import Status :	Waiting for Import To Finish	
Processing Site 90 of 100 :	93810000000	
		-
	Importing File 13 of 533 :	100%

Once all data has been imported (or you click the Abort button), Centurion displays a final message indicating the number of sites and data records brought into the database:

Importing TrafMan Data
Imported data from 2 sites containing a total of 79499 new data records.
🗸 ок

VII.b. Spacing Adjust & Tailgating Detect

This powerful function allows you to modify data collected incorrectly by your traffic counter. For example, if a user incorrectly places sensors (such as road tubes) the wrong distance apart Centurion allows you to enter in the actual spacing you used and then retroactively fix all the data as it would have been reported.

In addition, Centurion can automatically detect tailgating vehicle patterns (either as a result of the wrong spacing or just road conditions) and split those vehicles up to improve data accuracy.

To use this function first select the data you need to adjust from the list of Sites & Data. You can select either an individual import or all the data from the site. When the site and dataset you want to adjust has been selected, activate the Data Editor so you get a screen similar to this:

Date	Time	Lane	Speed	Axles	Length	A Bin	S Bi 🔨		Date	Time	Туре	Lane	Bin 1	Bin 2	Bin 3	Bin 4 📩
22/02 💌	3:16:31 PM	1	28.5 mph	3	21.2 ft	2	3		01/22/02	03:15 PM	Ax	le 1	0	41	2	153
1/22/02	3:16:34 PM	1	29.0 mph	2	8.0 ft	2	3		01/22/02	03:15 PM	Ax	le 3	0	48	1	
1/22/02	3:16:36 PM	3	28.7 mph	2	9.3 ft	2	3		01/22/02	03:15 PM	Spec	a 1	2	11	20	1
1/22/02	3:16:37 PM	1	30.3 mph	2	9.7 ft	2	4		01/22/02	03:15 PM	Spec	ea 3	2	13	30	
1/22/02	3:16:39 PM	1	30.0 mph	2	8.0 ft	2	4		01/22/02	03:15 PM	Leng	th 1	0	38	4	
1/22/02	3:16:49 PM	3	27.8 mph	2	7.6 ft	2	3		01/22/02	03:15 PM	Leng	th 3	0	48	2	
1/22/02	3:16:52 PM	3	24.7 mph	2	8.0 ft	2	2		01/22/02	03:15 PM	G	ap 1	5	17	10	
1/22/02	3:17:07 PM	3	30.8 mph	2	7.8 ft	2	4		01/22/02	03:15 PM	Ga	7p 3	10	23	8	
1/22/02	3:17:13 PM	3	31.7 mph	2	8.1 ft	2	4	1	01/22/02	03:15 PM	Headw	ay 1	5	17	10	
1/22/02	3:17:16 PM	3	25.9 mph	2	7.8 ft	2	3		01/22/02	03:15 PM	Headw	ay 3	10	23	8	
1/22/02	3:17:20 PM	3	29.9 mph	2	7.4 ft	2	3		01/22/02	03:15 PM	SnM	is 1	0	0	0	
1/22/02	3:17:30 PM	1	34.1 mph	2	10.0 ft	2	4		01/22/02	03:15 PM	SnM	Vs 3	0	0	0	1000
1/22/02	3:17:45 PM	1	24.9 mph	2	22.8 ft	5	2									M
1/22/02	3:17:58 PM	1	30.9 mph	2	8.1 ft	2	4	1s						~		
1/22/02	3:18:01 PM	3	25.7 mph	2	10.9 ft	3	3		Date	Time	Lane 1	Lane 2	Lane 3	Lane 4	Lane	5 La 🔨
1/22/02	3:18:05 PM	3	25.3 mph	2	7.5 ft	2	3		01/22/02	03:15 PM	50		54		-1	
1/22/02	3:18:10 PM	1	25.9 mph	7	83.6 ft	13	3		01/22/02	03:30 PM	55		53		0	
1/22/02	3:18:16 PM	1	26.2 mph	2	8.4 ft	2	3		01/22/02	03:45 PM	53		56			
1/22/02	3:18:52 PM	1	25.3 mph	5	46.9 ft	11	3		01/22/02	04:00 PM	67		69			
1/22/02	3:19:05 PM	1	26.1 mph	2	9.9 ft	2	3		01/22/02	04:15 PM	48		47			
1/22/02	3:19:11 PM	1	32.6 mph	2	9.2 ft	2	4		01/22/02	04:30 PM	64		74		0	
1/22/02	3:19:13 PM	3	26.0 mph	2	7.8 ft	2	3		01/22/02	04:45 PM	73		57			
1/22/02	3:19:22 PM	1	23.9 mph	2	20.0 ft	5	2		01/22/02	05:00 PM	83		67			
1/22/02	3:19:30 PM	3	23.7 mph	2	7.9 ft	2	2		01/22/02	05:15 PM	73		80			
1/22/02	3:19:33 PM	3	24.7 mph	2	9.4 ft	2	2		01/22/02	05:30 PM	71		71			
1/22/02	3:19:46 PM	3	23.5 mph	2	8.5 ft	2	2	F	01/22/02	05:45 PM	85		59			
1/22/02	3:20:12 PM	1	27.5 mph	2	8.3 ft	2	3	1	01/22/02	06:00 PM	75		49			
							×	P								V

Right click on any vehicle in the Per-Vehicle side to display this menu:

90		or on pri	4	10.2 1	4	10	-		· ·
00	1	57.3 mph	2	10.2 ft	2	9	3	6	6
00	1	Conv			Ctrl	нC	2	2	2
00	1	4			Cui		2	3	3
00	1	Spaci	ngs &	Scan			2	6	6
00	2	52.1 mph	2	10.0 ft	2	8	3	8	8
00	1	49.4 mph	2	12.9 ft	3	7	3	6	6
00	2	60.2 mph	2	8.9 ft	2	10	2	6	6

Select the Spacings & Scan function.

Once this function has been activated, a window similar to this will appear:

Spacing Adjust & Data Scan 🛛 🔹 🔀									
Site ID : XiLinxG1									
Data Start Time & Date : 14:52 🗢 08/18/2004 🗸									
En	d Time & Date :	09:43 🛟	08/23/2004 -						
Check &	Fix Tailgating :	v							
Lane #	Info	Current Spac	ing	New Spacing					
1.		6.0 ft		6.0 ft					
2.		6.0 ft		6.0 ft					
🗶 Ca	ncel		St	art Adjust 📀					

Check that the Start & End Date/Time values are correct (they will default to the same as the data viewed in the database edit window).

Check the box if you want to "Check & Fix Tailgating" vehicles.

Each lane is shown with a Current Spacing and a New Spacing.

The **Current Spacing** is the spacing that was used when data was first imported into the site. This may or may not actually be the current spacing of the data (check with the user to see what they actually placed the sensors).

The **New Spacing** is what the actual spacing should have been set to in the counter. When both the **New Spacing** and **Current Spacing** are correct, press the *Start Adjust...* button.

Adjustment of data is completely automatic. A progress bar will appear as shown below:

Spacing Adjust & Data Scan 🔹 🛛 🔀	
Site ID : XiLinxG1	
Data Start Time & Date : 14:52 08/18/2004 ⋅ End Time & Date : 09:43 08/23/2004 ⋅	When finished, a message box appears indicating what changes were actually done to the data:
Check & Fix Tailgating: 🗹	Spacings Adjust Complete
1004 Please Wait, Scanning To Adjust Data	Adjusted 11770 vehicles for Speed/Spacing and fixed 12

VII.c. Data Factor Adjust

Similar to the Spacings adjust function, Centurion allows you to apply a "Factor" to any lane of data. This factor is a value which is multiplied by each value in the Classification and Volume databases for the specified lane (it has no effect on Per-Vehicle information).

To use this function first select the data you need to adjust from the list of Sites & Data. You can select either an individual import or all the data from the site. When the site and dataset you want to adjust has been selected, activate the Data Editor. After the data is displayed, right click on either the Classification or Volume database display to call up this menu.

18:00	Axle	3	6	1776	92						
9:00	Avle	- 1	16	1585	101						
19:00	Сору		C	trl+C	141						
19:00	Apply Data	Apply Data Eactor									
20:00	Apply Date										
20:00	Axle	2	3	1222	104						

Adjusted 11770 vehicles for Speed/Spacing and fixed 12 tailgating vehicles.

Select the Apply Data Factor function. A window similar to the ones shown below will be displayed:

Site Da	ta Factor Adjust	? 🗙	The window on the left is first shown.	Site Da	ta Factor Adjust	?×
Data Start Time & Date : 00:00 12/30/1999 End Time & Date : 00:00 12/30/1999		By default, all factors are set to 1.000 meaning	Data Sta Er	urt Time & Date : 00:00 🛟	12/30/1999 - 12/30/1999 -	
Lane #	Info	Factor To Apply	no change will	Lane #	Info	Factor To Apply
1.	3	1.000	be made.	1.	3	0.970
2.	3	1.000		2.	3	0.884
3.	3	1.000	The window on	3.	3	1.120
X C4	ancel	Start Adjust 📀	the right shows new factors for all three lanes.	X Ca	ancel	Start Adjust 📀

When the factors you wish to apply for any or all lanes have been entered, click the Start Adjust button. Centurion will apply the factors to the data and return you to the database edit screen. Note that you can also modify the Start and End date and times as desired, it does not have to match the data edit window.

VII.d. Merging Sites & Lane Shifting

Centurion supports merging of two or more sites in the database. This function allows you to create a new site out of existing site data and to optionally lane shift the lane # of the new data as it comes in. To use it, follow these steps:

- 1. Collect data from a site using two or more counters naming each counter with a slightly different Site ID. You can also name them the exact same Site ID, at which time the Lane Shifting process can be selected during the initial import of the data into the database.
- 2. Import the data into the database.
- 3. Once it is in the database, select it as shown in the example below:

	±		BENV/KLO-NB			10:56	06/14/06	14:31	06/20/06	Apollo	1.41
	±	~	BH01322E	WY 30, ML200B	MP 0.27, E. LEG	14:00	05/08/06	09:06	05/11/06	Unic-L	1.41
	±	~	BH01322W	WY 30, ML200B	MP 0.27, E. LEG	16:00	05/08/06	09:10	05/11/06	Unic-L	1.41
	±		Blank (092806)			10:53	09/28/06	10:54	09/28/06	Apollo	1.45
			00015005	001000	15.1	00.04	00/15/00	00-01	DC/LC/DC	Unicom	2.04

4. Right click on any of the sites and select Merge Sites Into New Site:

	٤		APOLLO G	PS				
	۰		BENV/KLC	-NB				
Þ	۰	V	BH01322E		WY 30, ML200B	MP 0.27, B	E. LEG	
	۰	V	BH01322	Edit Site S	ietup		. LEG	
	۰		Blank (O	Edit Site D)ata			
	۲		C061506	Merge Sites Into New Site				
	۰		CE	Export Do	ta			
	۲		MDK Te:	Set TMC F	Evnort	E7		
	۰		MDK1A -	Jet Imai	здроге	17		
	۰		PLATJA	Tag All Si	tes	Ctrl+T		
	۰		STEST	Untag All	Sites	Ctrl+U		
	۲		TEST DE	Tag Unex	ported		0230)	
	۲		Test 1	Set Classi	•			
	۰		XiLinxG1	001 010001	Oniviater			
	۰		XilinxG2		GrnWater			

5. Key in a new site ID for the combined data.



6. Once the data starts importing, an overlay window will appear:

Im	port U	lsin	g Lane Shift					? 🗙
Im	porting	Site	e: BH01322					
	Start	Time	e : 16:00 on 05/08/06	ò	E	End : 00:	00 on 05/09/06	
E	xisting	La	nes:	Ν	ew Lane	es:		
	Lane #	Dir	Lane Info Line		Old Lane	New Lane	Lane Info Line	
	1		EBOL		1	3	WBOL	
	2		EBIL		2	4	WBIL	
	🗶 Ab	ort						/ ОК

- 7. This window shows you the existing lanes and new lanes. Key in the lane numbers you want assigned for the new data and click ok.
- 8. When import is complete, a new site will have been created that is a combination of the selected sites.

Note that this Lane Shift function also is available at import time when two counters have the exact same Site ID. If you select Import Using Lane shift you can bring in new data using this function.

VII.e. Database Check & Repair

To handle any potential database corruptions or other problems, Centurion offers a "Check & Repair DB" utility. This function is designed to scan and correct problems in the database. Use it as often as desired.

To activate, right click on the database window and select "Check & Repair DB".

Checking DB	? 🔀
Checking Imports	
76%	

 Set Volume Color
 0

 001
 0

 002
 Check & Repair DB
 0

 001
 050045000001
 22XXXXXX
 0

 002
 050045000001
 22XXXXXX
 0

The program goes through several steps ... checking various aspects of the Database and the data imported. During this process a progress bar is displayed as shown below:

When scan is completed, the database is automatically corrected and the number of errors found during scan is displayed.

Note that "errors" are most often minor issues with database management, not significant problems in most cases. Major errors detected during this process will be separately reported.

8:59	09/09/05	Str-241	0.00	 Image: A set of the set of the							
8:59	11/06/06	Str-241	0.00	V							
4:00	Check	ing DB		?	×						
3:00											
7:00	Completed:	Completed: 4 errors corrected during scan.									
8:59					- 1						
7:00				🗸 ок							
8:59	11706/06	Str-241	0.00		~						
a-za	11/06/06	Str 241	0.00	X							

VIII. Exporting Data

To export data from the Centurion Database out to another format, please follow these steps:

nn Sel	Station ID	Info Line 1	Infoline 2	Start Time	Start Date	End Time	End Date	Counter Type	Version	Hac Avl	Has Snd	Haslen	Has Gan	Has Hed	Hae SnMie	~
	748000000000	740022000000	1300000	16:00	08/16/01	23.59	08/08/04	Phoenix	2.45	V	IT US OPO	L C	L C	F		-
	748100000000	74016600000	11332002	19.00	08/16/01	23.59	08/08/04	Phoenix	2.45	1		E	F	Ē	2	
	750100000000	750029000000	1300000	00.00	04/02/01	23:59	08/08/04	TCC-540	2.40	1	2	F	Ē	F	F	
	75800000000	75004600000	New Lebenon	12:00	01/28/02	23:59	08/08/04	Unicorn	2.45	2	2	E	Ē	Ē	E	
BE	758100000000	750018000000	02XXXXXXX	00.00	04/01/01	23:59	03/31/04	Unicorn	2 39	Г	1	Г	Г	Г	F	
	813100000000	810222000000		00:00	04/01/01	23:59	08/08/04	Phoenix	2.39	Г	~	Г	Г	Г	Г	
	818000000000	81017400000	11202000	18:00	08/14/01	23:59	08/08/04	TCC-540	2.45	7	~	Г	Г	Г	V	
	823200000000	82000200000	33000000	00.00	04/01/01	23:59	01/15/03	TCC-540	2.45	Г	7	Г	Г	Г	Г	
	B28000000000	820821000000	1133XXXXX	00:00	04/01/01	23:59	08/08/04	TCC-540	2.85	2		Г	Г	Г	1	
⊡ Г(838000000001	830164000001	02XXXXXXX	00:00	04/01/01	23:59	08/08/04	Str-241	0.00	Г	v	Г	Г	Г	Г	
	838000000002	830164000002	Westpoint	00:00	04/01/01	23:59	08/08/04	Str-241	0.00	Г	~	Г	Г	Г	Г	
	83810000000	83036200000	1133XXXX	00:00	07/24/01	23:59	08/08/04	TCC-540	2.45	1	2	Г	Г	Г	2	
	B38200000000	830038000000		13:00	07/27/01	23:59	08/05/04	TCC-540	2.85	1	1	Г	Г	Г	2	
	838300000000	830567000000		18:00	07/26/01	23:59	08/08/04	TCC-540	2.45	1	v	Г	Г	Г	2	
	841100000000	840008000000	111XXXXXX	00:00	04/01/01	23:59	08/08/04	Str-241	0.00	Г	2	Г	Г		Г	
	B48000000000	840902000000	333XXXXX	16:00	07/26/01	23:59	08/04/04	TCC-540	2.45	1	7	Г	Г	Г	1	
	B4810000000	840905000000	000222XX	20:00	07/24/01	23:59	08/08/04	TCC-540	2.45	1	1	Г	Г	Г	1	
⊞ [871100000000	870733000000	000222XX	00:00	04/01/01	23:59	09/02/02	Str-241	0.00	1	~					
⊞ Г	871100000002	870733000000	0022XXXX	00:00	04/01/01	23:59	11/11/02	Str-241	0.00	17	•	Г	Г		П	
	87430000000	870069000000		00:00	01/16/01	23:59	01/22/01	Str-241	0.00		1				Г	
	878000000000	870113000000		00:00	01/18/02	23:59	08/08/04	Str-241	0.00	5	1	Г	Г			
⊞ Г	91210000000	910108000000	111X0000X	16:00	05/15/01	23:59	08/08/04	TCC-540	2.45	~	~	Г	Г	Г	₹	
	918000000000	910081000000	333XXXXXX	15:00	07/14/01	23:59	08/08/04	TCC-540	2.45	2	•	Г	Г	Γ	₹	
⊞ Г	918100000000	91006000000	ROUTE 12	19:00	07/13/01	23:59	08/08/04	TCC-540	2.45	7	1		Г	Г	₹	
• 	91990000000	910104000000	13XXXXXXX	11:00	12/31/01	11:03	06/19/03	TCC-540	2.45	~	1	Г		Г	9	
⊞ Г	919900000002	910104000000	RT 8/10 OVERLA	F 11:00	12/31/01	10:54	06/19/03	TCC-540	2.45	2	~			Г	2	
	928000000000	920060000000	Roscoe	17:00	07/06/01	23:59	08/08/04	Phoenix	2.45	~	1	E			1	
	933100000000	930038000000		15:00	08/20/02	23:59	01/01/03	Phoenix	2.45							
• F	938000000000	930070000000	ROUTE 23	13:00	07/06/01	23:59	08/08/04	TCC-540	2.45	2	~	Г			₹	
	93810000000	930048000000		00:00	07/27/01	23:59	08/08/04	Phoenix	2.45	~	~				₹	
	94000000000	940069000000		14:00	08/18/01	23:59	09/05/01	TCC-540	2.45	1	V	2			9	
	948000000000	940001000000		19:00	07/06/01	23:59	08/08/04	Phoenix	2.45	~	~				₹	
	958000000001	950051000000		15:00	07/11/01	23:59	08/08/04	Phoenix	2.85	2	1	Г			₹	
	958000000002	950051000000		12:00	07/18/01	23:59	08/08/04	Phoenix	2.85	1	~				₹	
	95810000000	950001000000	11X00000X	19:00	07/16/01	23:59	08/08/04	TCC-540	2.45	2	1	F			₹	
	958200000000	950145000000	333XXXXXX	00:00	07/11/01	23:59	08/08/04	TCC-540	2.45	~	~	Г	Г	Г	2	

Step #1 – Click the Volume, Classification, or Per Vehicle Tab to select the type of data you want to export (in this example we would export volume data).

Step #2 – Click on the Site Name of the data you want to export. You can also click the check box for multiple sites to export more than one site at a time.

Step #3 – Click the Export Data button.

If we clicked a site named "ES-090 NB" (not shown in above example) and then clicked Export Data, we would see this window like this:

Export Volume Data									
Site : ES-090 NB									
Format : ASCII No Label Format									
Output To									
Export To Individual Site Name Files : 🔲									
Export To Single File : EXPORT.TXT									
Overwrite Existing Data File(s) : 🔲									
View File(s) When Export Complete : ☑									
Times & Lanes To Export									
Starting At : 12:00 AM On : 12/15/2001 -									
Ending At : 11:59 PM On : 12/18/2001									
Lanes To Export : All Lanes									

You can further refine the export by modifying the exact time & date range and what lanes are to be exported.

The Format line selects the actual output format for the exported file.

You should always check the File name to make sure it is correct. Centurion will overwrite any existing data automatically if the Overwrite box is checked (otherwise it will append).

Check the View File box to automatically display the actual exported data file at the end of the export.

The Direct To Excel button will create a Microsoft Excel spreadsheet file from your data in one quick step. See VIII.a. for more information. To change the lanes that are to be exported, click the "..." box on the Lanes To Export.

Select Lanes				×						
Enable All Lanes 🗌										
☑ Lane #1	🗌 Lane #9	Lane #17	🗌 Lane #25							
🗹 Lane #2	🗹 Lane #10	📃 Lane #18	📃 Lane #26							
🗌 Lane #3	Lane #11	📃 Lane #19	📃 Lane #27							
🗌 Lane #4	🗹 Lane #12	📃 Lane #20	📃 Lane #28							
🗌 Lane #5	📃 Lane #13	📃 Lane #21	📃 Lane #29							
🗹 Lane #6	📃 Lane #14	📃 Lane #22	📃 Lane #30							
🗹 Lane #7	📃 Lane #15	📃 Lane #23	📃 Lane #31							
🗹 Lane #8	📃 Lane #16	📃 Lane #24	📃 Lane #32							
🗙 Cancel			🗸 ок							

Check Enable All Lanes to always export whatever lanes are found in the data file.

If you select more than one site to export, Centurion will apply your export settings to multiple sites and export all of the data to one file automatically:

Export Classification Data	Note that the "Export To Individual Site Name Files" box can be checked to send the output of
Site : 3 Selected Sites and/or Imports	each site to a file named the same as the Site ID. This creates a unique file for each exported site.
Format : Binary Format	
Output To	If the Export To Individual Site Name is not
Export To Individual Site Name Files : 🗹	sequential order).
Export To Single File : (based on site name)	
Overwrite Existing Data File(s) : 🗹	When weight the Direct To Event hotten modeling
View File(s) When Export Complete : ☑	sites are created as multiple Excel files (each one is loaded into Excel)
Times & Lanes To Export	
Starting At : 12:00 AM On : 4/29/2002 - X Cancel	
Ending At : 8:29 AM On : 5/ 7/2002 -	
Lanes To Export: All Lanes	

And finally, when the export is complete Centurion will display the newly created file and allow you to edit and/or verify it. You can also easily save, copy, and otherwise manipulate it in the standard text file editor:

C:\Program Files\Diamond\Centurion CC\Expo	orts\EXPORT.TXT				
<pre>pata For Site: 328000000000 Info 1: rt 11 Info 2: polkville Storage Mode : Count Start Time : 12/17/01 at 00:00 Stop Time : 12/19/01 at 00:00 Data collected by a TCC-540 (ver 2.45)</pre>)				
Time= 00:00:00.00 Date= 12/17/01 (De	ec 17, 2001 Mon)				
Record Interval Length: 01:00					
1: Info: nb drv	Mode: Normal	Sensor: Axle	Divide	By 2:	D:
2: Info: nb pass	Mode: Normal	Sensor: Axle	Divide	By 2:	D:
3: Info: sb drv	Mode: Normal	Sensor: Axle	Divide	By 2:	D:
4: Info: sb pass	Mode: Normal	Sensor: Axle	Divide	By 2:	D:
1: 00:00 Total: 14					
2: 00:00 Total: 3					
3: 00:00 Total: 15					
4: 00:00 Total: 11					
1: 01:00 Total: 16					
2: 01:00 Total: 8					
3: 01:00 Total: 13					
4: 01:00 Total: 5					
1: 02:00 Total: 8					
2: 02:00 Total: 2					
3: 02:00 Total: 6					
4: U2:UU Total: 3					
1: U3:UU TOTAL: 4					122
2: 03:00 10tal: 5				10	N X
			- T	J.	
94			Insert L	.n: 1, Col: 1	1

VIII.a. Direct Export To Excel



Excel

This button activates the direct creation of a Microsoft Excel workbook of your data. The Lanes and the Start & End times are used to output just the desired data. If you select more than one site to export, Centurion creates an Excel file for each site and loads them all into Excel during the export.

The workbook will always contain two sheets. The first sheet is the Station, Lane, and Imports tables used during the export (for reference). The second sheet contains all of the data selected.

In the Database Export directory (default of C:\Program Files\Diamond\Centurion [Gold, CC, or Parks]\DB\Exports) there will be all of the Database files created for the export. In the Excel subdirectory, the actual Excel XLS files are stored). The database files (STATIONS.DB, LANESET.DB, etc) may also be used by programs such as Microsoft Access, Quattro, Lotus, or any program that will read a standard Paradox style table. Please move these files out of the Exports sub-directory if you want to use them somewhere else because Centurion overwrites all data with the next export.

This function has been tested to work on Excel version 97, 2000, and 2002 (XP). Please let us know if you experience any problems with the resulting Excel file.

VIII.b. TMG Exporting

TMG Exporting (either to *Card 3/Volume*, *Card 4/Old Style Class*, or *Card C/New Style Class*) is fully supported by Centurion. Unlike the other exports, each site needs some specific site configuration information to be programmed in before exporting occurs.

This can happen in two ways: (a) if Centurion detects that a site has not been exported to TMG before, or (b) if the user selects a site in the list of sites and presses the F7 key. In either case the following window will appear:

Set TMG Inf	foi	m	at	ior)									?	×	
Current Site ID TMG Station	: 2 : 2	2380 2380	000 00	000	000											These TMG d
State Code :	2	3	*]	Fo	Fı otn	unc ote	tio e/R	nal est	Cla rict	ass ion	; : [; : [13 D	~		site.
Value Lane #	1	2	3	4	5	6	7	8	9	10	11	12	13	14	1.	
Dir. of Travel	1	1	2	2												
Lane of Travel	0	0	0	0												
<															>	
					X	Cano	el)				[•	/ 0)K		

These values are required to properly export TMG data. You can use the scroll bar to select the information for up to 32 lanes per site.

Note that when exporting axle classification data, Centurion exports either *TMG Card 4* or *TMG Card C*. Card C is the new version and is the default format. You can change this to Card 4 by unchecking the "Write TMG Class as Card C instead of Card 4" option in the program preferences window (see section X for more information).

VIII.c. Peek PRN & Monthly File Exporting

Centurion allows you to export any Volume, Axle Classification, or Speed Classification to the old style Peek © Traffic PRN Format. In addition, you can also export data Volume data to the Peek Monthly PRN file format. These are fairly simple texts formats which are used by some agencies to further process data.

When either of these formats are selected, Centurion automatically creates a **PeekPRN** subdirectory off of the main export directory. In addition, a **Monthly** sub-directory is created for the Peek Monthly format files and three sub-directories are created for the PRN files named **Volume**, **Class**, and **Speed**. For example, with a default installation you will find any exported PRN volume data in the following directory:

C:\Program Files\Diamond\Centurion CC\Exports\PeekPRN\Volume

Centurion sets up these separate directories because it can simultaneously create a Volume, Class, and Speed file from a single database export. These separate directories will help you organize your data. Monthly exports are always placed in the Monthly sub-directory.

The file name for any Peek PRN export is always in this format: **Dmmddsss.PRN** ("**mm**" is the month of the data, **dd** is the day of the data, and **sss** is a sequence number from **001** to **999**).

The file name for any Peek Monthly export is always in this format: **Mmyysss.PRN** ("**mm**" is the month of the data, **yy** is the year of the data, and **sss** is a sequence number from **001** to **999**).

Note that these file names are used regardless if the "Export to individual site file names" box is checked or not.

Please make note of the following when setting up a site for export to the Peek PRN format:

Record #1 (first line in data file):

- Value 1. This is the <u>Site ID</u>. It should generally be 12 digits long with trailing zeros.
- Value 2. Taken from the Info Line 1 value. It should also be 12 digits long with trailing zeros.
- Value 3. The twelfth character of the Site ID controls what is placed here. If it is a '2', then a "02" is put into this value. No twelfth character or anything other than a '2' causes a "01" to be put into this value.
- Value 9. Always set to "03"
- Value 11. A 12 character string always set to "100".
- Value 12. A 12 character string always set to "400".

Record #2 (second line in data file):

- Values 1 9. Each always set to "0000".
- Value 10. The last value comes from <u>Info Line 2</u>. It should be eight characters long and indicate the direction code for each lane being output (with an 'X' in unused lanes). For example, if you have two lanes with directions of 1 and 3, put a "13XXXXXX" into Info Line 2 before starting the export.

Record #3 (third line in data file):

- Value 1. First 20 characters of the <u>TMG: City/Town</u> value.
- Value 2. First 20 characters of the combined <u>TMG: County</u> and <u>TMG: Identification</u> values.
- Value 3. First 45 characters of the TMG: Location value.

Records #4-6 (fourth, fifth, and sixth lines in data file):

These values vary depending on the type of file. The first two digit value identifies what the remainder of the line will be. A "01" indicates the volume/lane identifiers. A "02" indicates axle classification information. And a "03" indicates speed classification with the corresponding speed ranges indicated.

Please make note of the following when setting up a site for export to the Peek Monthly format:

- 1. Station Number: This is the <u>Site ID</u>. It should generally be 12 digits long with trailing zeros.
- 2. **ID Number:** Taken from the <u>Info Line 1</u> value. It should also be 12 digits long with trailing zeros.
- 3. **Classifier Address:** The twelfth character of the Site ID controls what is placed here. If it is a '2', then a "02" is put into this value. No twelfth character or anything other than a '2' causes a "01" to be put into this value.
- 4. **City/Town:** First 20 characters of the <u>TMG: City/Town</u> value.
- 5. County: First 20 characters of the combined TMG: County and TMG: Identification values.
- 6. Location: First 40 characters of the <u>TMG: Location</u> value.
- Direction Code: Comes from <u>Info Line 2</u>. It should be eight characters long and indicate the direction code for each lane being output (with an 'X' in unused lanes). For example, if you have two lanes with directions of 1 and 3, put a "13XXXXXX" into Info Line 2 before starting the export.

For more information on the Peek PRN format or the Peek Monthly format, please contact an appropriate agency.
IX. Bin Table Editor

This function allows you to create, edit, and print the Bin Table Definition. These definitions describe what type, speed range, or length range a vehicle is for each "Bin". For example, the standard Speed Bins are 16 speed ranges from 0.0-19.9mph (Bin #1), 20.0-24.9mph (Bin #2), etc.

The five types of bin tables are shown below:

vxle Bir	ns Speed	Bins Length	n Bins Gap B	ins Headway Bins		to the file name to
♯ of Bin	ns : 13	Definitions :	20	File Name : DEFAULT1.AXL	Help!	view other tables and to save vour
Def	Bin #	Axles	Bin Name	Spacings (feet)]	table.
1.	1	2-3	Cycle	1-5.8, *		
2.	2	2-3	Cars	5.9-10.2, 10-18.8		The # of Bins and
З.	3	2-3	2A-4T	10.3-15, 10-18.8		Definitions are
4.	5	2	2A-SU	15.1-24		automatically
5.	4	2-3	Buses	23.5-99.9, *		create the table.
6.	8	3	4A-ST	*, 18.1-99.9		
7.	6	3	3A-SU	*, 3.5-8		You MUST save
8.	2	4-5	Cars	1-10.2, *, 1-3.4, 1-3.4		your table to use it
9.	3	4-5	2A-4T	10.3-15, *, 1-3.4, 1-3.4		with Centurion.
10.	8	4	4A-ST	*, 5.1-99.9, 3.5-99.9		Vou can Brint the
11.	8	4	4A-ST	*, 1-5, 10-99.9		current table by
12.	7	4	4A-SU	***		clicking the Print
13.	11	5	5A-MT	*, 6.1-99.9, *, *		button at the main
14.	9	5	5A-ST	*, 1-6, *, 3.5-11		window speed bar.
15.	3	5	2A-4T	9.9-14.9, *, *, 1-3.4		
16.	5	5	2A-SU	15.1-24, *, *, 1-3.4		
17.	9	5	5A-ST	* * * *	Cancel	
18.	10	6	6A-ST	*, 3.5-8, 3.5-8, *, 8.1-99.9	Cancer	
19.	12	6	6A-MT	*, *, *, *, 8.1-99.9		
20.	10	6-10	6A-ST	*, *, *, *, 3.5-8, 3.5-8, 3.5-8, 3.5-8, 3.5-8		

For more information on Bin Tables and what they do, please refer to your Traffic Counter users manual.

Speed Bin Table Editor:

of Dine	16				
JI DII 15	.[10]				
in #	Min Speed (US)	Max Speed (US)	Min Speed (Metric)	Max Speed (Metric)	
1.	0.0 mph	19.9 mph	0.0 kph	32.1 kph	
2.	20.0 mph	24.9 mph	32.2 kph	40.1 kph	
3.	25.0 mph	29.9 mph	40.2 kph	48.1 kph	
4.	30.0 mph	34.9 mph	48.2 kph	56.2 kph	
5.	35.0 mph	39.9 mph	56.3 kph	64.2 kph	
6.	40.0 mph	44.9 mph	64.3 kph	72.3 kph	
7.	45.0 mph	49.9 mph	72.4 kph	80.3 kph	
8.	50.0 mph	54.9 mph	80.4 kph	88.4 kph	
9.	55.0 mph	59.9 mph	88.5 kph	96.4 kph	
10.	60.0 mph	64.9 mph	96.5 kph	104.5 kph	
11.	65.0 mph	69.9 mph	104.6 kph	112.5 kph	
12.	70.0 mph	74.9 mph	112.6 kph	120.6 kph	
3.	75.0 mph	79.9 mph	120.7 kph	128.6 kph	
4.	80.0 mph	84.9 mph	128.7 kph	136.7 kph	
15.	85.0 mph	89.9 mph	136.8 kph	144.7 kph	

Length Bin Editor:

e Bins	Speed Bins Ler	ngth Bins Gap Bins	Headway Bins	
¢ of Bins : 13			File Name : DEFAUL	TXLEN 📕 🖻
n #	Min Length (US)	Max Length (US)	Min Length (Metric)	Max Length (Metric)
1.	0.0'	5.9'	0 cm	181 cm
2.	6.0'	9.9'	182 cm	303 cm
3.	10.0'	14.9'	304 cm	455 cm
4.	15.0'	19.9'	456 cm	608 cm
5.	20.0'	24.9'	609 cm	760 cm
6.	25.0'	29.9'	761 cm	912 cm
7.	30.0'	39.9'	.913 cm	1217 cm
8.	40.0'	49.9'	1218 cm	1522 cm
9.	50.0'	59.9'	1523 cm	1827 cm
0.	60.0'	69.9'	1828 cm	2132 cm
1.	70.0'	79.9'	2133 cm	2436 cm
2.	80.0'	89.9'	2437 cm	2741 cm

Gap Bin Editor:

<u>N</u>	Bin T	able Editor	
	Axle Bin	s Speed Bins Length Bins Gap Bins Headway Bins	
	# of Bir	s: 8 File Name : DEFAULTX.GAP	Help!
	Bin #	Elapsed Time From End of Previous Vehicle	
	1.	00:03.00 seconds	
	2.	00:10.00 seconds	
	3.	00:15.00 seconds	
	4.	00:20.00 seconds	Canaal
	5.	00:30.00 seconds	Caricei
	6.	01:00.00 seconds	
	7.	02:00.00 seconds	Ok

Headway Bin Editor:

Å	Bin T	able Editor	
	Axle Bin	s Speed Bins Length Bins Gap Bins Headway Bins	
	# of Bir	s : 8 File Name : DEFAULTX.HED 📄 🖻	Help!
	Bin #	Elapsed Time from Start of Previous Vehicle	
	1.	00:03.00 seconds	
	2.	00:10.00 seconds	
	3.	00:15.00 seconds	
	4.	00:20.00 seconds	Cancel
	5.	00:30.00 seconds	Cancer
	6.	01:00.00 seconds	
	7.	02:00.00 seconds	О К
-			

Note that Centurion is 100% compatible with TrafMan bin tables. You can load/save files either way.

A Sample Report of each of the above has been included with the software. Go to the Reports sub-directory of your Centurion software (usually C:\Program Files\Diamond\Centurion [Gold, CC, or Parks]\Reports) and select any of the 5 Bin Table reports (Adobe Acrobat format).

X. Preferences

The preferences function from the File menu (Preferences -> General) control various program operation.

General program options.

🤋 General Preferences 🛛 🔹 🔀							
General Counter Database Import Export	Telemetry	Registered					
Running Show Splash Screen On Startup Play Voices & Sounds Start Searching When First Run Show Database On Startup	Ports To Scan COM Port 1 COM Port 2 COM Port 3 COM Port 4 COM Port 5						
Pocket PC Auto move & import from Centurion-Lite.	COM Port 6						
GP5 Device Port : None Baud Rate : 4800							
Сапсеl <u>? Н</u> ер							

Note: Check the "Auto move & import from Centurion-Lite" to enable automatic connection, data transfer, and importing from any PocketPC running Centurion-Lite.

Database and viewing specific options:

General Preferences ? 🔀
General Preferences General Counter Database Import Export Registered Formats Speed & Spacing: U.S. (Feet & MPH) v Date Values: MM/DD/YY v
✓ OK X Cancel ? Help

Counter linking and downloading options:

🦻 Gen	eral P	referer	nces.	•••		? 🗙	
General	Counter	Database	Import	Export	Telemetry	Registered	
	Oownload & Auto Erase Auto Erase Datahog After Download Auto Erase Flash After Download Auto Erase MMC After Download Out Grase Flash After Download Out Grase MMC After Download On High Speed Downloading Counter Link Options Check Counter vs. Computer Time when first link. Do Retrieve/Delete files when 1st link. Import data files downloaded during reacts lishing				Other Opti Ask Loc Pairing Enable File Sec V Conver 4" for C Bluetooth P COM5	Modes Binary urity t 0.4' to ity Tube. ort:	

Import preferences:

General Preferences ? 🔀
General Counter Database Import Export Registered Class & Volume Default Interval : 15 Minute Bins Types To Create From Per Vehicle Value Class Speed Class Speed Class Speed Class Speed Class Gap Class SnMis Bins Headway Class
Auto Import & Error Display Automatically try to Import Files found in Data Download Directory. Display Import Errors Window at End of Importing New Data. Display the "Data Overlays" option window when overlays found.

Export options and preferences:

General Preferences ? 🔀	General Preferences ? 🔀
General Counter Database Import Export Registered General Create export sub-directories from first date of data being exported. Washington State DOT Autocreate Washington GK Format on all new Imports. TMG Write TMG Class as Card C instead of Card 4. Allow 15 Card C/4 Bins.	General Counter Database Import Export Registered Company : Joe Company Contact : Joe User Address : 123 Street Suite B City : Eugene State : OR Phone : [541]-345-7852 Fax : [541]-345-7853
	EMail: joe@joecompany.com
Cancel ? Help	OK Cancel ? Help

Registered user options:

Centurion-Gold also has an additional preferences tab for Telemetry options as follows (refer to section XII for complete information on the Telemetry system):

🧐 General Preferences 🔹 💽
General Counter Database Import Export Telemetry Registered
Enable Telemetry Options Enable Data Integrity Check
Map File Name : C:\\Maps\Oregon.bmp
Polling Import Data : Disabled (data is imported manually).
Cancel ? Help

X.a. File Directory Preferences

The file directory preferences (File -> Preferences -> File Directory) set the program and database file locations:

File Directory Preferences	2 🗙
Program Database	N C
	3
Main Program : C.(Program Files/Diamond/Centurion CC	
Data <u>D</u> ownload : C:\Program Files\Diamond\Centurion CC\Download	
Tables & <u>Bules</u> : [C:\Program Files\Diamond\Centurion CC\Tables]	
Reports & Lext : C:\Program Files\Diamond\Centurion CC\Reports	
Exports : C:\Program Files\Diamond\Centurion CC\Exports	
OK X Cancel 7 <u>H</u> el	>

Main program location and directories.

File Directory Preferences	? 🗙
Program Database	
Main <u>D</u> atabase : C:\Program Files\Diamond\Centurion CC\DB	
Per Vehicle Data : C\Program Files\Diamond\Centurion CC\DB\Baw	
Class Data : C:\Program Files\Diamond\Centurion CC\DB\Binned	
Volume Data : C:\Program Files\Diamond\Centurion CC\DB\Count	
DB Exports : C:\Program Files\Diamond\Centurion CC\DB\Exports	
OK X Cancel ? He	lp

Database location.

The DB Exports holds the database data and Excel files created with the *Direct To Excel Export* function.

X.b. Organization Preferences

The Organization preferences option (File -> Preferences -> Organization) allows you to enter in a custom name, description, or anything else you want to appear at the bottom of all reports:



It's a "Rich Text" field, so you can change the font and/or colors by selecting the text and right clicking and selecting the "Font" option:

Your Organization	? 🛛	3							
Enter the text you want to appear at the bottom of all reports. Only the text inside the box will actually appear on the report.									
Diamond Edge Technology, LLC (541) 345-7852	Cut	Ctrl+X							
2 Lines	Copy Paste	Ctrl+C Ctrl+V							
Clear the box to select an image file. The image is at centered inside a 96x32 pixel space. Your file exceed this size otherwise it will be clipped.	Select All Undo	Ctrl+A Ctrl+Z							
0 🕞 Offset (moves the image left or right).	Font								

Once entered, Centurion automatically puts the information at the bottom of every printed page (example shown without image):

Centurion-CC Class Data Dump Report	Diamond Edge Technology , LLC (541)-345-7852	Printed: 04/29/03	Page 1
	(

Centurion-CC (City/County)
 File Edit Counter Reports Window Help

XI. Other

Centurion has several other functions and options. These are described briefly below:



Manual Importing: Select this function from File menu (or click Manual Import from the scanning window).

You can select any binary download file from any source on your computer.

You can also select "Import New Data" to have Centurion automatically scan the download directory for any binary data file. This allows quick importing of data in this directory.

Importing From Drive A: This function scans a floppy disk and imports any data files it finds. Note that it only searches the root directory.



You can open any binary counter file for a quick look at its content.

This file is basically a New ASCII format text file that can be saved and used by other programs.

	≥ }		<u>i i i i i i i i i i i i i i i i i i i </u>	0 2,	2	6 E		<u>IF</u>		٢	_			
		Dete For 9	N (ite: 21816	00000	20							Ŀ		
	(01)	Inf	io 1:											
		Inf Storage Mc	to 2: nde : Binne	d (2)	Lanes)									-
		Start Time	: 12/15	/01 a	t 00:00)								
		Stop Time Data Forma	: 12/15 ts : Dates	/01 a	t 23:59 D/YY M) Jumber:	s=ILS.	RTP=N	In					
		Data colle	cted by a	TCC-5	40 (vei	2.45	1	8418 0						
		Record Int	erval = 01	:00										
	(02)	Binning Se	etup: 13 Ax	le (D	EFAULT	L.AXL),	, 16 S]	peed (I	EFAU	LT.SPD),	13 Le	ength	(DEFA	28
	(03)	Counter Se	rial Numbe	r: (b	lanki									
	,,			,~	,									
	(10)	1: Info: N 2: Info: 9	JB1 (B1				Mode	es: SPH	CED S	Sensors:	Axle-	Pres-	Axle	
	(F1)	Record Int	erval Leng	th: 0	1:00								0.001010	
	(92)	1: 00:00	Speed =	0	0	0	0	0	1	8	8	20	7	
	(9F)	1: 00:00	SnMis =	õ	ō	ō	1	a.	10	8	2		×.	
	1025	2: 00:00	SnMis =	0	0	0	0		2	2	а	12	2	
	(94)	2: 01:00	Speed =	0	0	0	0	1	1	2	1	5	1	
	(9F)	1: 01:00	SnMis =	0	0	1	0							
	(92)	1: 02:00	Speed =	0	0	0	0	o	0	1	3	6	1	
		2: 02:00	Speed =	0	0	0	0	0	0	O	1	5	2	
	(9F)	1: 02:00	SnMis = SnMis =	0	0	0	0							
	(92)	1: 03:00	Speed =	ο	0	0	0	O	2	O	4	8	0	~
	<			10		28		5				-	>	
										Modifed	Insert	Ln: 37,	, Col: 42	
-														



The various help menu options of Centurion. You can also request a License file from this menu (although Centurion will download this automatically after 30 days).

The "Software Designer WWW..." takes you to the DET website.

Note: If your software is licensed, a "Unlicense Software" option will appear allowing you to remove the license from this computer and move it to a different machine.

About Box's for Diamond and IRD versions of Centurion:

About Centurion-CC	About Centurion-CC
CENTURION CC • Traffic Data Management Software Windows Standard Edition Centrols is proceed under copyright law. All Rights Reserved 2002 © Diemond Edge Technology, LLC	CENTURION CC • Traffic Data Management Software Windows Standard Edition Centrical is prose:ed/ander copyright law. All Rights Reserved 2002 ® Diamond Edger Technology, LLC
	INTERNATIONAL ROAD DYNAMICS INC. INTELLIGENT TRANSPORTATION SYSTEMS
Version: 1.00 Release: 07/26/2002	Version: 1.00 Release: 07/26/2002
Licensed To: ABC Company Expires: 30 Days Serial Number: CC-V100-100E10B295C-0000 Image: DK	Licensed To: ABC Company (Joe User) Expires: 30 Days Serial Number: CC-V100-10AE10B295C-R110 Image: DK

Note: If you are using Gold, Parks, or Field versions, the word "Gold", "Parks" or "Field" will appear instead of "CC".

The URL on these pages takes you to either the Diamond Traffic Products or the International Road Dynamics web site.

XII. Telemetry & Polling

Centurion-Gold supports a complete telemetry and polling system for linking to and downloading data from traffic counters connected via modem or SOIP (serial over internet protocol). CC, Parks, and Field versions of Centurion do not support these functions.

To use the Telemetry system, follow the steps outlined below:

- 1. Select Files Preferences General and click on the Telemetry tab.
- 2. Check the "Enable Telemetry Options" box and then click the folder icon on the "Map File Name" box. A dialog will open allowing you to select the graphics file for your telemetry station map.
- 3. At this point you should select the map file representing your state, city, or other location. Centurion comes with some samples (including Oregon, New York, and a blank map). You can select any of these or select the blank one if you do not have a map file. Note that Centurion supports virtually any graphics format. Most agencies can get an appropriate map from either their GIS department or an online source. You can use whatever size and resolution you desire for your map, however it is generally best to use a Bitmap image that is at least your screen resolution in size.
- 4. Close the General preferences dialog. You will now see a new main menu option named "Telemetry" appear along with a new map speed button that looks like this:



- Station Map View Richland 182 Pasco Astoria Warrenton Longview Walla All Stations Kennewick 30 Walla 100% 🖌 【 】 82 Seaside O NACO DA Milton 0,0 St. Helens Hermiston NDE Hood Freew at WASHINGTON Vancouver River ast Called 5 205 dletor illshoro. ast Statu Portland The Tillamook A Dalles lewberg Data Through Minn/ille, Oregon City La Grande 39 99E 18 84 Salen 😣 View Calls Lincoln City 26 Dallas . Stayton Kiew Integrity Polk 223 Baker OHFOI Albany City Uiew Data Newport 20 Corvallis 9E Madras Lebanon 22 26 Trouble Sites: 26 Prineville S John Day weet Home Redmond 126 C 395 126 Eugene Springfield Florence Bend Nyssa 84 krida 20 Reedsport Cottage 20 Caldwell Burns 5 Grove North Bend Coos Bily Sutherlin 0 101 Coquille 38 97 Roseburg A 42 Wiston CAPE 31 Grants IDAHO Pass 5 199 Med ford 40 • Ashlar Klamath akeviev Brookin NEVADA CALIFORNIA
- 5. Click on the map speed button. Depending on map selected something like this will appear:

- 6. For example purposes, the Oregon map will be used. However, even if you do not have a map image available, the Blank sheet can be used to make a very useful visual polling system. Later on a map image can be added to Blank setup and the site locations can be moved to the correct location.
- To get a feel for the map display, play around with the zoom function and scrolling functions. These are controlled with these buttons: Select various zoom levels with the + and - buttons or the zoom % box. To fit the whole map on the display, click the button.



8. If the map image is a bitmap, you can control the look of the map with the "Adjust Map View Properties" function. Right click anywhere on the map and select "Adjust Map View Properties". The following window will appear:

Adjust Map Vie	w Properties	? \
Invert Image : 🔲	Use Grayscale : 🔲	Apply Changes
Contrast : 🧻		
Saturation : 🗍		
Lightness : 🗍		
Darkness : 🗍		
Anti-Alias : 🧻		
Add Color Noise : 🧻		
Add Mono Noise : 🧻		
Trace : 🧻	Tile : 🗍	Splitlight : 🧊
Spotlight : 🧻		
Gaussian Blur : 🧻		
Split Blur : 🧻		
Fish Eye : 🧻	Mosaic : 🧻	
T wist : 🧊		
Emboss : 🧊		
Solorize : 🧊		
Posterize : 🧊		
🗶 Cancel	🔁 Restore Original	🗸 ОК

For demonstration purposes, click the *Invert* and *Use Grayscale* box and then click Apply Changes.

The map image will change to show:



- 9. For now leave the map in its original state by clicking Restore Original and then click Ok
- 10. We are now ready to add a site to the map. Right click on the map and select "Add New Station To Map". The following window will appear:

Add Site T	о Мар	? 🔀
Station I.D.	:	~
	Enter a new site or one already existin	ng in the database.
- Telemetry Setti	ngs	
Modern Setup #	: Setup 1 💌 🚥	Baud Rate : 19200 🔽 🥆
Phone or SOIP	:	
Custom Modem	:	
Multi Counter	:	Time Zone Offset : + 00 🗸
Switch Box	:	Link Delay Time : 🛛 sec 📝
Polling Settings		
Polling Zone #	None Veolling Tim	pe: 11:15) Type : Unknown 💌
Command	:	
	Note: 'CCx' means Common Command a edit the common polling commands, or e	x. Click the setup button to view and enter your own command string.
🗶 Cancel		V OK

Type in a Station I.D. for the site. This can be a new site or a site already existing in the database. The Site I.D. should match the Site I.D. that is programmed into the counter in the field.

Next enter the Baud Rate, Phone #, and select the type of counter (Diamond or Peek) of the site. Advanced users will recognize many other functions and settings are available, but the Baud Rate, Phone #, and Type are the critical entries at this point.

See section XII.a. for information on polling settings. See section XII.b. for information on advanced function settings.

The Modem Setup # tells the software what modem to use when calling the site. Since this is the very first site to be setup, click on the modem setup next to this setting to go into the modem setup screen (see next step). 11. If you clicked the ... button next to the Modem Setup #, the following dialog will appear allowing you to setup your modem configuration:

Í	Confirm
	There are no currently enabled modem configurations. Would you like to automatically scan and setup modems?
	Yes No Cancel

AT&FE1Q0S0=0V1&C1&D2M1)M0-J1-K1\N6S7=120Click Yes. Centurion will now try to locate and setup any modems found connected to the computer and configure Centurion to work with them. This window appears during setup:

Searching For Modems	? 🗙
Searching for modern on COM3	
AT OK ATI1 010 ATI3 	
×	Cancel

When completed, a window appears indicating if it found any modems and what COM ports they are on. Finally, the actual Modem Setup dialog is displayed (the following shows a Microcomm Deskporte Fast found on COM3):

Setup Mod	em Configuration)	? 🗙						
#1 #2	#3 #4 #5 #6	#7 #8 #9 #10							
Enable Modem #1 : 💌									
Modem 1 Setup									
Modem Name :	Modem Name : DeskPorte V.FC 1.3								
COM Port :	COM3 🔽 Red	COM3 V Redial Attempts : 3 Ignore CTS:							
Initialize #1 :	AT&FE1Q0S0=0V1&C18	.D2M1)M0-J1-K1\N6S7=120							
Initialize #2 :	ATX4								
Dial Command :	ATDT	Connect Time (secs) : 90							
Response Strin	gs:								
Connect :	CONNECT	No Dialtone : NO DIALTONE							
Busy :	BUSY No Carrier : NO CARRIER								
X Cancel Scan For Modems									

All of the settings needed for Centurion to use the modem are on this screen. You can adjust them as needed for your particular needs.

Note that up to 10 different configurations can be selected. This could be different modems on the same computer, or a single modem configured in different ways for different sites (such as one land line and one cellular setup).

The Auto Scan function can be rerun at any time. Centurion will only overwrite settings that are not marked as enabled, so unmark the setups that you want to be filled in automatically before clicking Auto Scan.

12. Click Ok to close the Modem Configuration window and then click Ok to close the Add Site To Map window. For example purposes, we added a Phoenix site named "171100000000" with a local phone number and a 19200 baud rate.

13. The map will have a new site put on it in the top left corner looking something like this:



The Yellow triangle represents the site. It is yellow because it has an Unknown status. Sites appear in Red if they have failed a polling or Green if they have been successfully polled. This lets you quickly see what sites are problem and what sites are not.

In addition, the Trouble Site bar on the left of the screen will list all Red or Yellow sites (just Red if uncheck the box at the top of the trouble sites list).

Clicking on any site, selecting in from the combo box at the top right of the window, or selecting it in the Trouble Sites list will highlight it and put a yellow box around it.

14. Highlighted sites (those with a yellow box around them) will appear like this: Once a site has been highlighted, the information on the right of the window will show the current site status and other information as follows:

17110000000	The current site is always indicated here. The box below that says "All Stations" is used to select a Zone to work with (see section XII.b for more information on zones).
Last Called : 13:24 on 12/1/2005 Last Status : Ok (Data Download)	 The time the site was last called (this may be blank for your setup since you haven't called the site yet). The last status message for the site.
Data Through : 23:59 on 1/23/2005	The last day of data that has been imported into the database.
View <u>C</u> alls	The View Calls button will call up a display of the calls made to the selected site (or all sites if no site is selected) and the status of the counter. Similarly, the View Integrity displays either the data integrity violations for the selected site or all of the sites. These buttons can be clicked at any time.
Uiew <u>D</u> ata	View Data will bring up the database select window and open up the selected site. This gives you a quick access to the database data for a site.
Trouble Sites:	Any time you select a site from the Trouble Sites list or from the combo box at the top of the window, the yellow select box will highlight the site. In addition, if the site is not currently visible on the map, the map will be automatically scrolled so that the site is centered in the visible section of the map.

15. The following shows an example of the Call Log window for a site:

-	View Call	Log (All	Sites)							
Π	Station ID	Call Start Date	Call Start Time	Call End Date	Call End Time	Seq	, Type of Message	Message		
Þ	018000000002	12/28/05	12:42:47	12/28/05	12:45:11	0	Call Info	Connected! (CONNECT 14400/REL - LAPM)		
	018000000002					1	Counter Info	Linked To: Phoenix (Ver.2.94a 06/17/05)		
	018000000002					2	Counter Info	Files=8 (0 MMC). Batt=6.5V		
	018000000002					3	Counter Error	No unretrieved data available to download!		
	019900000002	12/28/05	12:45:11	12/28/05	12:46:01	0	Call Info	Connected! (CONNECT 14400/REL · LAPM)		
	019900000002					1	Counter Info	Linked To: Phoenix (Ver:2.94a 06/17/05)		
	019900000002					2	Counter Info	Files=8 (0 MMC). Batt=6.5V		
	019900000002					3	Data Message	Downloaded File #1 (252 Bytes) into: ".BIN" (3 seconds, 840bps)		
	029900000001	12/28/05	12:46:01	12/28/05	12:46:47	0	Call Info	Connected! (CONNECT 14400/REL - LAPM)		
	029900000001					1	Counter Info	Linked To: Phoenix (Ver:2.94a 06/17/05)		
	029900000001					2	Counter Info	Files=8 (0 MMC). Batt=6.5V		
	029900000001					3	Counter Error	No unretrieved data available to download!		
	110000000001	12/28/05	12:46:47	12/28/05	12:47:37	0	Call Info	Connected! (CONNECT 9600/REL - LAPM)		
	110000000001					1	Counter Info	Linked To: Phoenix (Ver:2.94a 06/17/05)		
	110000000001					2	Counter Info	Files=8 (0 MMC). Batt=6.5V		
	110000000001					3	Data Message	Downloaded "Test ID 2" File #2 (252 Bytes) into: "05-12-28 Test ID 2 (Start 2005-12-1		
	171100000000	12/28/05	12:47:38	12/28/05	12:48:28	0	Call Info	Connected! (CONNECT 14400/REL - LAPM)		
	171100000000					1	Counter Info	Linked To: Phoenix (Ver:2.94a 06/17/05)		
	171100000000			(2	Counter Info	Files=8 (0 MMC). Batt=6.5V		
	171100000000					3	Data Message	Downloaded File #1 (252 Bytes) into: "DUDLY" (3 seconds, 840bps)		
	202002	12/28/05	12:48:29	12/28/05	12:49:14	0	Call Info	Connected! (CONNECT 14400/REL - LAPM)		
	202002					1	Counter Info	Linked To: Phoenix (Ver:2.94a 06/17/05)		
	202002					2	Counter Info	Files=8 (0 MMC). Batt=6.5V		
	202002					3	Counter Error	No unretrieved data available to download!		
	01800000002	12/28/05	12:49:14	12/28/05	12:49:59	0	Call Info	Connected! (CONNECT 14400/REL - LAPM)		
	01800000002					1	Counter Info	Linked To: Phoenix (Ver:2.94a 06/17/05)		
	018000000002					2	Counter Info	Files=8 (0 MMC). Batt=6.5V		
	01800000002					3	Counter Error	No unretrieved data available to download!		
	029900000001	12/28/05	12:49:59	12/28/05	12:50:44	0	Call Info	Connected! (CONNECT 14400/REL - LAPM)		
<) (um)							×		
0	© © © © © © © © 2 Sort By Site :									

Note: The "Sort By Site" box can be checked to list the data by site instead of by Start Date & Time.

And this is an example of the Data Integrity view window:

	View Data Integrity (All Sites)										
C	Station ID	Start Date	Start Time	End Date	End Time	Seq,	Lane	Data Type	Message		>
1		l		Į		1					
											~
										>	
0	000			0							

16. Now that you have seen how to add a site to the map, setup its parameters, select it and then view the call log, data integrity list, and database data, it is now time to place it in the correct location on the map. To do that, drag the site (by holding down the left mouse button) to the correct location on the map.

Once the site is correctly placed, right click on it to display this menu:



The site has been moved to just west of Bend, Oregon. If it is correctly placed, select the "Position Unlocked" option to Lock it onto the map. This will keep you from inadvertently moving it during normal operations (you can always unlock it and move it later if needed).

At any time you can Edit the station information, remove it from the map, or select one of the View options at the bottom. You can also copy a station if you want to create a similar station setup somewhere else on the map.

To call a site, either double click it or select the "Call" command. See XII.a. and XII.b. for more information on polling and advanced calling options.

17. As mentioned above, calling any site is as simple as double clicking on it. If it is properly setup, Centurion will immediately call the site with the selected parameters. A window appears detailing each step of the calling process:

Calling: 019900000002	? 🗙
Phone # : 345-7853	Rate : 9600 bps
Calling Station	X Cancel

When a link is made, the connection type is displayed:

Calling: 019900000002	? 🗙
Phone # : 345-7853	Rate : 9600 bps
Connected! (CONNECT 9600/REL - LAPM)	X Cancel

Then the type of counter found will be displayed briefly before actually linking to the site:

Connected: 019900000002	? 🔀
Phone # : 345-7853	Rate : 9600 bps
Linked To: Phoenix Version: 2.94a (06/17/05)	X Cancel

Note: At any point a problem is encountered a dialog will appear explaining the problem. This information will also be logged to the Call log file.

18. At this point the normal traffic counter link screen will be displayed and you should see something like this:



19. To hangup, just close the counter link box and you will return to the main map display. Note that while linked to a counter, you cannot access the map display or select any functions (although you are free to use the database).

This concludes the basic setup of the Telemetry system. At this point you will want to add all of your sites to the map and position them. Once this is done, please refer to the Polling and Advanced Telemetry Settings section of the manual for information on these functions.

XII.a. Polling

Centurion contains a complete automatic polling system. This system will call and link to your sites and automatically download data from them entirely without your intervention.

Basic Polling Setup:

1. Each site will need to be configured for polling. This includes setting when it will be called and what happens when a connection is made. Right click on your first site you want to setup and select the Edit Site function. A window similar to the following will appear:

Edit Station Information						
Station I.D. :	019900000002					
Telemetry Setting	ls					
Modern Setup # :	Setup 1 💌 🚥	Baud Rate : 9600 💌				
Phone or SOIP :	345-7853					
Custom Modern :						
Multi Counter :		Time Zone Offset : 🗕 🛛 🗸 🖌				
Switch Box :		Link Delay Time : 🛛 sec 💙				
Polling Settings						
Polling Zone # :	None 🗸 😶 (Polling Tim	e: 11:15) Type : Diamond 🔽				
Command :	CC1					
	Note: 'CCx' means Common Command × edit the common polling commands, or e	:. Click the setup button to view and enter your own command string.				
🗙 Cancel		🗸 ОК				

Polling commands are setup at the bottom of the window. The first, **Polling Zone #**, controls what Zone or Group of sites you want this site to be a member of. By default, all sites are not part of a zone. Refer to the Advance telemetry section for more information on zones.

The **Type** of counter must be set to the kind of equipment installed in the site. Different equipment has different command protocols and Centurion needs to adjust its operation accordingly.

The Command line controls what happens when the site is polled. You can enter a common command (such as CC1 shown here), or your own specific command for this site. In general, similar sites will use the same common command as this makes adjusting the command for similar sites very easy.

2. Click the button next to the **Polling Zone #** option. This will bring up the Polling Time settings and allow to set *when* the site will be called:



The Generic Time is the time for all sites not assigned to a zone (such as our example). However, each zone can have its own polling time.

In addition, the day of the week or of the year can be selected by clicking on the calendar icon to the right of each time. When that is clicked the following window will appear:

Generic Polling Calendar							
Options							
 Polling Frequency Every Day Weekly Schedule Use Year Calendar 	Weekly Days To Poll						
	Saturday						

Select the frequency you want to poll this zone or the generic setting for sites not assigned to a zone.

If you select weekly or year calendar, you can select the days of the week or days of the year you want to poll data on. 3. Next click the 🖻 button next to the Command option on the edit site information. This calls up the Polling Common Commands window as follows:

Set Common Polling Commands								
Enter in common polling commands (CC1 thrrough CC10):								
CC1 :	R-2,?STAN							
CC2:	A R-2,?SITE							
CC3 :								
CC4 :	R-2,?STAN D-1							
CC5 :								
CC6 :								
CC7 :								
CC8 :								
CC9:								
CC10:								
× 0	Cancel Cancel	ОК						

There are 10 common polling commands, CC1 through CC10. If any of these are on the Command option Centurion will substitute the command shown here during actual polling. This allows you to specify a common command for a particular site setup (such as all Diamond counters).

The commands shown here are the most commonly used. For example, "R-2,?STAN" means to retrieve all unretrieved files and store them into a standard named file. See below for more information on polling commands.

If you do not want to use a Common command, you can also enter in a specific command for each site. For example:

Command : RI2,MYFILE	
Command : R23,\DATA\MYFILE	

The first retrieves all unretrieved files and stores it into a file named "MYFILE" in the main data download directory. The second retrieves file #23 and stores it into "\DATA\MYFILE".

There are multiple types of commands that can be entered. All commands are separated by a space and are processed from left to right after the connection to the site has been made.

Command	Format	Description
	R-2, <fname></fname>	Retrieves all data files from the counter that have not been retrieved before. Will not retrieve the open file (if present). This is the most common command used since it downloads all of the collected data except for the current day. <fname> is the file name the data is to be stored into. If it has a path, files will be stored in the specified path (such as C:\data"), otherwise data is stored into the data download directory.</fname>
Retrieve all unretrieved data		The file name part can be either an actual file name (such as "MYDATA.BIN") or one of the following special names:
except the open file		?STAN – Standard mode. The file is stored into a file name that is created based upon the Site ID, type of data, and starting time/date of file.
		?SITE – Site ID based name. The Site ID used to create a file name (such as 18000000.BIN).
		?NEW – A unique name is generated (one that doesn't already exist in the directory).
		Note that by default existing files are overwritten. It is therefore a good idea to turn on file append if you are using either a specific file name or the ?SITE special name.

Command	Format	Description	
Retrieve all unretrieved data including the open file	R-1, <fname></fname>	Same as above, except will retrieve the open file (if present).	
Retrieve all data files	R0, <fname></fname>	Retrieves all data files in counter including the open file.	
Retrieve single file	Rx, <fname></fname>	Retrieves the specific file #x from the counter.	
Retrieve range of files	Rx-y, <fname></fname>	Retrieves a range of files from #x to #y.	
Real Time Poll the open File	RTP, <fname></fname>	Enables Real Time Polling of the open file. This function downloads the currently open file without closing it.	

		Toggles on/off the file append function. File append starts as off, so entering this on the command line will turn it on. For example, a command line of: A R-2,?SITE
Turn on/off file append	A	This turns on file append and then retrieves all unretrieved files in the counter and appends them to a file named the same as the site ID. If file append wasn't turned on, then each subsequent file retrieved would overwrite the previous ones

Delete retrieved files	D-1	Deletes any files in the counter that are marked as retrieved. Note that this command does not affect MMC or TAM based files.
Delete all files in counter	D0	Deletes all files in the RAM memory of the counter (except, of course, the open file if present).
Delete a specific file	Dx	Deletes file #x from the RAM memory of the counter. You cannot delete the open file or a file in the MMC or TAM memory.
Delete a range of files	Dx-y	Deletes a range of files from #x to #y in the RAM memory of the counter. You cannot delete the open file or a file in the MMC or TAM memory.
Erase the TAM Memory	DTAM	Erases the installed TAM memory if no unretrieved files exist on it.
Erase the MMC Memory	DMMC	Erases the installed MMC memory if no unretrieved files exist on it.

4. While all of the above commands may seem complicated, most users will simply go with CC1 and this will work fine. By default, this will retrieve the unretrieved files in the counter and store them in a standard file name convention in the data download directory.

To test out your first site, make sure the Command parameter is set to CC1 and then click ok. Next right click on the site and select **Poll "station" now**. This is the first way any individual site can be polled and the following window should appear:



The software will immediately call the site. Note the yellow box around the site showing which site is being called.

The site itself is also changed to Amber color. This indicates its status is currently unknown. At the end of the poll, it will change to green or red depending on the results.

5. When a connection is made the software will link to the counter and execute the polling commands you specified on the Command line. A series of windows similar to these will appear:

Polling: 01990000002	Polling: 01990000002
Phone #:[345-7853 Rate : 9600 bps	Phone #: 345-7853 Rate : 9600 bps
Device : Phoenix Site ID : Ver. : 2.94c Files : To Retrieve :	Device : Phoenix Site ID : Ver. : 2.94c Files : 8 (0 MMC) To Retrieve :
Getting Counter Status	Getting File Directory
Polling: 01990000002	Polling: 01990000002
Polling: 01990000002	Polling: 01990000002 ? Phone #: 345-7853 Rate : 9600 bps
Polling: 01990000002 ? × Phone # : 345-7853 Rate : 9600 bps Device : Phoenix Site ID : (Blank) Ver. : 2.94c Files : 8 (0 MMC) To Retrieve : 1 128 toytes File #1: 252 Bytes	Polling: 01990000002 ? X Phone # : 345-7853 Rate : 9600 bps Device : Phoenix Site ID : Ver. : 2.94c Files : 8 (0 MMC) To Retrieve : 1 200 types File #1: 252 Bytes File #1: 252 Bytes

- 6. In this example the only file retrieved was file #1 and it was successfully downloaded. At the end of this process the site would be changed to Green and the Call Log will list all the activities of the polling system. In addition, data can also be automatically imported into the database at various points (see the advanced section below for more information).
- 7. Repeat the setup for each of your other sites. This should be simple once the first set is setup, especially if your sites contain similar equipment. When all sites have been configured, review the next section on multi-site polling.

Multi-Site Polling:

There are 5 basic ways to poll data from a site. The first two poll a single site at a time as follows:

- Call the site (by double clicking on it) and then go into the retrieve files function to download data from the site. This is described in detail in section XII.
- Setup the polling system, right click on a site, and select Poll Station Now. This is described in the previous section.

The next three methods allow you to poll data from more than one site automatically. These are selected by right clicking on map (anywhere but on a site) and selecting one of these functions:

112	(395)	2.1
_	Add New Station To Map	2
	Adjust Map View Properties	Ś
	Configure Modems	-
ee.	Set Polling Times	
	Set Polling Commands	
	🍓 Start Normal Autopolling	
	🟓 Poll All Stations Now	1
2	🧾 Poll Trouble Stations Now	2
Ner	Day MA	1

Start Normal Autopolling – This enables the regular autopolling function. The software scans all the sites and determines which sites will be called in which order. Once enabled, the autopolling function is active until you cancel it (or exit the program).

Poll All Stations Now – Starts an immediate poll of every station in the system. If you have currently selected a Zone, then only those stations in the selected zone will be polled.

Poll Trouble Stations Now – Starts an immediate poll of all Amber and Red stations. Like above, if you select a zone then only those stations will be polled.

If you enable the Normal Autopolling system, a panel opens up at the bottom of the map and the screen will look something like the following:



The green panel at the bottom tells you when the next polling will begin and how many sites are in that poll. There is also a time indicated that will count down to the start of the next poll.

The normal autopoller checks all settings and groups sites according to poll times. If two zones have the same poll time, they will be polled together.

This function remains active until you close the map window or click the Cancel button. You can perform all other normal functions while the autopoller is waiting to begin (such as calling other sites, viewing the database, etc).

Once polling begins (either at the specific time or if you have selected Poll All Sites Now or Poll Trouble Sites Now), the panel changes to show the current polling status. A window such as the following will appear:



The yellow highlight box is placed around the site currently being polled.

The poll start time and poll elapsed time is also displayed, along with an indicator of how many sites have been successfully polled vs. how many have failed polling.

When polling is complete, the panel changes to show the results of the poll like this:

 Poll Starting Time :
 08:22.19
 Successful Polls :
 5 (5/0/0)

 Poll Elapsed Time :
 00:05:01
 Failed Polls :
 1 (1/1/1)

In this case, 6 sites were polled. Five polled correctly the first time, one failed each of the three tries made to that site (the "1/1/1" indicates how many failed during each of the three attempts, the "5/0/0" shows that five sites polled correctly the first time and none of the failed sites worked on the second and third attempts).

Click the Cancel button to turn off the results display (and return to the autopoller or the map).

X Close

XII.b. Advance Settings

The Telemetry system supports several advanced functions. Each of these is described below.

Zone Selections:

Each station that is part of the Telemetry system can be assigned to a Zone. By default, all stations are left in the Generic or unassigned category, however you can at any time change that in the Edit Site Setup screen.

Assigning a station to a zone has the following affects:

- The map can be set to display only certain zones. The Zone Select box at the top right of the screen allows you to choose which zones are displayed. When this is changed, only the stations that are part of the selected zone are displayed on the map.
- When the Zone Select has been changed to display a specific zone, the option to Poll Zone #x Stations now and Poll Zone #x Trouble Stations now becomes available. These functions poll all stations when no zone has been selected.
- □ The normal auto polling system allows you to specify a time and day to poll each zone. For example, you could setup Zone #1 to poll Mon, Wed, & Fri and Zone #2 to poll Tue & Thu.

Generally Zones are used by customers with a large number of stations who want to break up their polling so that not all stations are polled at the same time.

SOIP (Serial over Internet Protocol):

Customers are increasingly moving to using an internet link to a traffic data collection device. In most cases a site will have a web address that is used to access the counter. Centurion supports directly linking to these counters without the need of any intervening virtual COM port software.

To use this ability, you must edit the station information as follows:

Edit Statio	n Information	? 🔀
Station I.D. :	11000000001	
Telemetry Setting	38	
Modern Setup # :	SOIP 💌 😶	Baud Rate : SOIP
Phone or SOIP :	12069561134.internet.mycingula	r.com@12345
Custom Modem :		
Multi Counter :		Time Zone Offset : + 00 🗸
Switch Box :		Link Delay Time : 🛛 sec 💌
Polling Settings -		
Polling Zone # :	None Veriling Tim	e: 09:00) Type : Diamond 💌
Command :	R2,?STAN	···
	Note: 'CCx' means Common Command x edit the common polling commands, or e	Click the setup button to view and enter your own command string.
🗙 Cancel		√ 0K

First set both the **Modem Setup #** and the **Baud Rate** settings to SOIP. This tells the program this is a SOIP based device and does not use a normal dialup modem.

Next set the address of the site followed by an @ character followed by the port number. The address can either be a direct IP address (like 192.168.0.1) or a DNS lookup address as shown here.

The port number is the TCPIP port to be used to access the counter. In some installations there will be different ports to access different devices.

Once the site has been setup, call it up to test your link. Normally users should be able to easily connect to a site and access its functions.

Call with Terminal:

The call with Terminal command allows you to connect to a site (either standard modem sites or via SOIP) and immediately display a terminal screen. From the terminal screen you can manually enter commands and see the counter or other device response. A typical screen might look like this:

Telemetry Terminal Mode		? 🗙
PH0#294a_06/17/05* PH0#294a_06/17/05* PH0#294a_06/17/05* PPASS OK		
COM3:9600,N,8,1	TXD RXD	

Note: Version 1.31 Build #0003 and later also have a Link To Counter button on this screen which allows you to directly link to the counter after using the terminal.

XII.c. Direct Dial Directory

.New with Centurion V1.31 (Field & Gold) is a Direct Dial Directory function. This function is reached by selecting it from the Telemetry menu or by simply pressing F7 which will display the following:

ICC ID /	Phone or SOIP	Baud	Modem	Link Delay	Time Zone	Multi-Counter	Switch Box
iy site 1	1-223-226-1112	9600	#1	3 sec	+ 00		
wy 58 test site	1-932-411-2221	9600	#1	3 sec	+ 00		
ackcountry site	1-122-122-0212	9600	#1	3 sec	+ 00		
wy 20	1-122-222-3333	9600	#1	3 sec	+ 00		

From this window you can manually key in any number of sites. The Site ID, Phone Number, and other information is saved in a simple file in the main Centurion directory (named DCD.GRD). Note that if copying this file from one machine to another make sure you exit Centurion completely before copying over this file.

Double clicking on any site will call it. You can insert new sites with the INS key and delete existing sites with the DEL key. The Modern Setup button allows you to configure your various modern parameters.

Note that this list is completely independent of the Centurion-Gold database. Changes in one are not reflected in the other. Because of this it is also available in Centurion-Field.

XII.d. Peek ADR & 241 Polling

Centurion Gold V1.36 Build #0007 and later supports polling data from Peek 241 and ADR counters. This function only works via the map and autopoller, it does not function with a direct connection to a Peek counter. To use it, generally all you must do is put the Peek site on the map just like a Diamond site and then set the *Type* value under the <u>Polling Settings</u> to either **Peek ADR** or **Peek 241**.

Once that is done, you must then setup the Command string for the Peek counter. The available commands are similar, but more limited. You can only retrieve data, not delete it, and the program does not offer as many abilities to determine the status of the counter or the size of files it is downloading.

These are the available commands:

Command	Format	Description
Set to counter ID1 or ID2	AC1 or AC2 ADR1 or ADR2	For sites that have two counters installed (an ID1 and ID2), use this command to indicate the start of the set of commands for the specific ID 1 or 2. You do not need this if only one counter is present (software assumes an ID of 1 when nothing else is specified). Use "ACx" with a 241 site or "ADRx" with an ADR site.
Start binary retrieve of unretrieved data from counter	RBN, <tdpseq></tdpseq>	Starts a binary retrieve of data files into a fixed file name format defined by Peek for binary files. You must specify the TDP sequence # for the site so that you can later post- process the data using Peek software into a PRN file, otherwise Centurion cannot download it (or later import the PRN file).
		This is the same process TDP users normally did with their binary files, but since the download is coming from Centurion it requires this additional step. Files will be stored in the PRN Binary download directory which is setup in the Communications Preferences dialog.
	R-2, <fname> or R-1,<fname></fname></fname>	Retrieves all data files from the Peek counter that have not been retrieved before. Will not retrieve the open file (if present). This is the most common command used since it downloads all of the collected data except for the current day. <fname> is the file name the data is to be stored into. If it has a path, files will be stored in the specified path (such as C:\data"), otherwise data is stored into the data download directory.</fname>
Retrieve all unretrieved data files into a standard Diamond Binary File (auto convert Peek format to Diamond)		 The file name part can be either an actual file name (such as "MYDATA.BIN") or one of the following special names: ?STAN – Standard mode. The file is stored into a file name that is created based upon the Site ID, type of data, and starting time/date of file. This also honors the settings in the setup dialog box. ?SITE – Site ID based name. The Site ID used to create a file name (such as 1800000.BIN). ?NEW – A unique name is generated (one that doesn't already exist in the directory).
		Centurion tries hard to not overwrite existing files. However, if you specify a specific file name (such as "00123.BIN") you will overwrite any existing, so this is not recommended.

Command	Format	Description
Retrieve all data files	R0, <fname></fname>	Retrieves all data files in counter.
Retrieve single file	Rx, <fname></fname>	Retrieves the specific file #x from the counter.
Retrieve range of files	Rx-y, <fname></fname>	Retrieves a range of files from #x to #y.

Note that because two Peek counters can exist on the same connection, you separate out the set of commands for the first counter (ID1) with the command "AC1" for is 241 counter or "ADR1" for an ADR. Then use "AC2" or "ADR2" to signal the start of the commands for the second counter.

Example #1 – Retrieve the unretrieved files from either a 241 or an ADR in the PRN format with auto-convert to Diamond Binary and use file names that match the standard Centurion naming format for downloaded data files (which is a mixture of the date downloaded, site ID, and date of data):

R-1,?STAN

Example #2 – Same as above, except with two counters at the site:

AC1 R-1,?STAN AC2 R-1,?STAN

Example #3 – Same as above, except use Peek Binary Downloading and ADR switching. The first counter is Sequence #16 in the TDP software and the second counter is Sequence #23.

ADR1 RBN,16 ADR2 RBN,23

Example #4 – Download all the files from a site and store them in a specific directory with a site specific file name:

R0,C:\Download\?SITE

IMPORTANT NOTE: Some PRN files, both downloaded and on disk, reverse the placement of the Site ID. By default it is the first 12 characters of the first line of the file. However, Indiana DOT and some others have it in the second 12 character. Some Peek counters put it there and use the first twelve characters as either a serial number or general information number.

In the General Preferences dialog, if the "Make PRN INDOT Compatible" checkbox is marked on the *PRN Export* tab, then Centurion uses the second 12 characters as the Site ID on all downloaded PRN files and the first 12 as the Info Line 1.

2ND IMPORTANT NOTE: Centurion also looks to see if the first 8 characters of the first record are all zeros. If they are, then it assumes this is NOT the Site ID and the software will try to find a valid Site ID from the second block of 12 characters. This is independent of the "Make PRN INDOT Compatible" checkbox.

XIII. TSDP (Timestamp Data Processor)

Starting with V1.34 Centurion contains a separate program called TSDP. This program is automatically executed by Centurion whenever the user tries to import "timestamp" data from a supported counter. When TSPD finishes, Centurion resumes and processes the data.

"Timestamp" data is simply a very accurate record of each activation of a road tube or other sensor. For example, the Omega traffic counter records every time an axle drives over the road tube with a time to the nearest 100,000th of a second.

Using this Timestamp data TSDP converts the recorded activations into total volume or individual vehicle records. This total volume or vehicle records are then imported into Centurion just like data collected by traffic counters who determine this information in the field.

So why collect Timestamp data? Why not just use a traffic counter which is smart enough to determine the total volume or individual vehicles in the field? There are several reasons why Timestamp data has caught on with some segments of the traffic counting industry:

- A PC is generally more powerful than a roadside traffic counter. With this additional power and memory some advanced analysis can be done with the timestamp data that is usually beyond the abilities of the traffic counter itself. You can expect up to a 5% increase in accuracy, especially in cases of urban counts with road tubes stretched across multiple lanes.
- Timestamp data can be easily recalculated. For example, suppose the user accidentally placed the road tubes 5 feet apart instead of 4 feet. With a traditional traffic counter, the data would be highly suspect and contain errors throughout. With Timestamp data it is a simple matter to just recalculate with the new spacing and the data is instantly corrected.
- No setup is required in the field. Simply place the tubes and start recording. This simplifies field operation.

There are a few downsides to Timestamp. It is usually much larger than other data files, which then requires more storage space and download time. It also has to be post-processed by TSDP before it can be used (which is an extra step required in the office).

Perhaps the biggest disadvantage of Timestamp data on older traffic counters was that you could not generally tell that the traffic counter was working until after you collected the data. Blinking lights or other simple methods would often result in not getting a good data set.

The Omega traffic counter by Diamond Traffic Products solves this issue by collecting data in Timestamp format but also contains all the necessary intelligence to display actual vehicles right on it's display (along with analysis information such as ADT, average speed, etc). This gives you the best of both worlds ... the flexibility of Timestamp and the advanced built-in intelligence to display vehicles in real-time thus insuring the data is going to be good before the user leaves the unit collecting data.

NOTE: At this time TSDP is undergoing beta testing. This manual will be updated as TSDP and the Omega traffic counter are released.

Appendix A. Database Technical Description

At the highest level, there are 5 master databases:

Station Setup Database: This is the master database which links to all of the other databases. It contains not just the Site ID, but all of the standard traffic counter setup and TMG setup information used by most State Agencies.

Import List Database: Provides a detailed record of all of the sources for the various kinds of data in the database. It is used to display what is in the database as well as to provide backup file access.

Lane Setup Database: This table provides details about each lane for each site.

Polling & Call Log Database: This database records the polling activity for permanent stations (new in Centurion V1.28).

Data Integrity Check Database: Tracks all data integrity check violations (new in Centurion V1.28).

Each Site in the Station Setup database maintains individual databases for the different types of data that have been collected as follows:

Per Vehicle Database: This contains all Raw Records collected for the site.

Classification Database: This contains all Binned Records collected for the site.

Volume Database: This contains all Count Records collected for the site.

WIM Database: This contains all WIM Records collected for the site.

Environment Database: This is planned for but not implemented in Centurion. Any references to this database should be treated as preliminary in the database descriptions.

#1 – Basic File System Overview:

When the software is first run, it creates the following sub-directories in the directory you specified as the database directory.

DB	DB\VEHICLE DB\VEHICLE\SOURCE	DB\CLASS DB\CLASS\SOURCE
DB\VOLUME DB\VOLUME\SOURCE	DB\WIM DB\WIM\SOURCE	

In the DB directory, the following files are created and used:

STATIONS - Station Setup Database.	DATAINTG - Data Integrity Database
IMPORTS - Import List Database	POLLLOG - Polling & Call Log Database
LANESET - Lane Setup Database	

In each of the other directories the actual data records are kept, each in a file unique to the Site ID. The SOURCE subdirectory contains the original binary (or other format) data that was used to bring in the data to the database. These files are renamed to fully indicate the Site ID and date range of the data.

Note: Starting with Centurion V1.26, the files in the SOURCE directories are organized into Year-Month sub-directories. This makes it easier to locate particular imports for a site.

#2 – The STATIONS Database:

The following fields are present in the STATIONS.DB database file. Fields marked by an asterisk are key fields used for sorting and must be unique. In most cases these fields are filled in the first time by data in the counter (if present), and can then later be updated by the user on the PC.

Туре	Length	Description
		The actual station number. Size is 30 to allow user to
А	30	customize it after import from a traffic counter.
		*This is a required key field.
Α	30	Info Line #1 from counter.
Α	30	Info Line #2 from counter.
Α	30	Last recorded Latitude reading for counter (from GPS unit).
Α	30	Last recorded Longitude reading for counter (from GPS unit).
Α	20	Type of counter used (C-Sprite, Unicorn, etc.)
Α	10	Version number of counter used.
Α	30	Serial number of counter used.
@		Time & Date data last accessed by user print or edit.
S		Group Number for Data Integrity Checks (default = 0).
S		Custom report profile ID number (0=unused, default)
	<i>Type</i> A A A A A A A A A S S S	Type Length A 30 S S S S

Import Information:

DB File Name	A	50	Database File Name. This is the actual disk file name of the database table holding the data for this site. It will be the same as the Station ID (when possible).
RawImports	I		
BinnedImports			Number of Imports for each type of data (used to filter the
CountImports			DBV/jow window). The default is 0
WIMImports			
EnviroImports			

General Data Information:

Number of Lanes	S		From 0 to 64. This is always the highest number ever found,
			even if later imports are fewer. Default is 0.
Posted Speed Limit	S		Posted Speed Limit (in tenths of a KPH)
Number of Axle Bins	S		Number of bins used in classification (default = 13)
Axle Class File Name	Α	30	Name of classification file (default = DEFAULTX.AXL).
Number of Speed Bins	S		Number of bins used in classification (default = 16)
Speed Class File Name	Α	30	Name of classification file (default = DEFAULTX.SPD).
Number of Length Bins	S		Number of bins used in classification (default = 13)
Length Class File Name	Α	30	Name of classification file.(default = DEFAULTX.LEN)
Number of Gap Bins	S		Number of bins used in classification (default = 8)
Gap Class File Name	Α	30	Name of classification file.(default = DEFAULTX.GAP)
Number of Headway Bins	S		Number of bins used in classification (default = 8)
Headway Class File Name	Α	30	Name of classification file (default = DEFAULTX.HED)
Has Axle Class			
Has Speed Class			
Has Lenth Class			Each of those values is get to True if the date imported
Has Gap Class			containe the type of close firstian indicated. Does not early
Has Headway Class	L		contains the type of classification indicated. Does not apply
Has SpeedxAxle Class			to volume only imports.
Has Speedyl ength Class			
Has SnMis Class			
Loop Class Table	۸	30	Name of the Loop Classification Table used (if any)
Ctort Data			Name of the Loop Classification Table used (if any).
			Start Time & Date of the data in the database.
Start Time			
End Date	D		End Time & Date of the data in the database.

Name	Туре	Length	Description
End Time	Т		
Number Of Intervals	S		Number of Record Intervals used. All interval values apply to both Binned and Count data. Default = 1
Interval #1 Start Time	Т		Starting Time Of Interval (Always set to 12:00:00 AM)
Interval #1 Length	S		Length of Interval (Default = 60 minutes)
Interval #2 Start Time	Т		Starting Time Of Interval
Interval #2 Length	S		Length of Interval
Interval #3 Start Time	Т		Starting Time Of Interval
Interval #3 Length	S		Length of Interval
Interval #4 Start Time	Т		Starting Time Of Interval
Interval #4 Length	S		Length of Interval
Interval #5 Start Time	Т		Starting Time Of Interval
Interval #5 Length	S		Length of Interval

Telemetry Information:

Telemetry Site	L		True if site is a telemetry site.
Phone Number	Α	100	Phone number of site (or IP address)
Custom Modem	Α	100	Custom modem configuration for this site.
Baud Rate	I		Baud rate to call site at (0=SOIP).
Polling Group	S		Polling group (or zone) number (0=Disabled/default,1-9=Group or Zone Number)
Time Zone Offset	S		Amount time (in hours) counter should be different from this computer. Default = 0
Multi Counter	Α	20	Multi-Counter Station Description
Switch Box	Α	20	Switch Box Station Description
Link Delay Time	S		Time (in seconds) to delay link after connection is made.
Polling Command	Α	200	Polling command string
Map X Coord	N		Map view coordinates for the site. If these values are blank (or
Map Y Coord	N		-1), then the site has not been placed on the map.
Man Symbol Status	S		Indicates the current status of the site (1-Ok/Green,2-
Map Symbol Status			Problem/Amber, 3-Failed/Red)
Map Symbol Locked	L		Indicates if symbol on map is position locked.
Modem Config To Use	S		Modem configuration to use (0=SOIP, 1-10).
Call Counter Type	S		Type of counter to link to (0=Unknown,1=Diamond/IRD,2=Peek 241,3=Peek ADR). Default =1.

TMG Specific Information:

The openine micrimation.			
TMG: Identification	А	30	
TMG: County	А	10	
TMG: Location	А	50	
TMG: City/Town	А	50	
TMG: Directions	А	64	
TMG: Lanes	А	64	
TMG: FIPS State Code	А	2	
TMG: Functional Class	А	2	
TMG: HPMS Number	А	12	Dor
TMG: HPMS Subdiv	А	1	Par
TMG: Post Route Sign	А	1	
TMG: Post Route #	А	8	
TMG: Logpoint	А	10	
TMG: Sample For Vol	А	1	
TMG: Volume # Lanes	S		
TMG: Method For Vol	А	1	
TMG: Sample For Class	A	1	
TMG: Class # Lanes	S		

Part of the Traffic Monitoring Guide standard exports.

Name	Туре	Length	Des
TMG: Method For Class	A	1	
TMG: Class Algorithm	А	2	
TMG: Class System	А	2	
TMG: Sample For WIM	Α	1	
TMG: WIM # Lanes	S		
TMG: Method For WIM	Α	1	
TMG: WIM Calibration	Α	1	
TMG: Data Retrieval	Α	1	
TMG: Sensor 1	Α	2	
TMG: Sensor 2	Α	2	
TMG: Equipment 1	Α	2	
TMG: Model 1	Α	15	
TMG: Equipment 2	А	2	
TMG: Model 2	Α	15	
TMG: AADT For North	I		
TMG: AADT For South			
TMG: AADT For East			
TMG: AADT For West			
TMG: Year Established	S		
TMG: Year Discontinue	S		
TMG: Footnote	Α	10	

User Available Fields:

User Info Line 1	Α	50	User specific information.
User Info Line 2	А	50	User specific information.
User Info Line 3	А	50	User specific information.
User Info Line 4	А	50	User specific information.
User Info Line 5	А	50	User specific information.
User Info Line 6	Α	50	User specific information.
User Info Line 7	Α	50	User specific information.
User Info Line 8	А	50	User specific information.
User Info Line 9	А	50	User specific information.
User Info Line 10	Α	50	User specific information.
User Memo Field 1	F	1	User memo field for any type of data.
User Memo Field 2	F	1	User memo field for any type of data.

Type Definitions:

- A Alpha (character string)
- L Logical (True or False)
- I Integer (32 bit signed)
- S Short Integer (16 bit signed)
- @ Combined Time/Date
- T Time Value
- D Date Value
- M Memo field (stored external)
- F Formatted Memo field (stored external).

Other Indicators:

Green = Set to Last Value Imported. This will overwrite any other setting. Blue = First value imported. This will not overwrite any non-blank value.

NOTE:

a) When importing Per Vehicle/Raw data, the Classification tables are NOT overwritten by the current file settings. Centurion reclassifies the data as it is imported according to the current settings in the database.

#3 – The LANE SETUP (LANESET) Database:

Name	Туре	Length	Description
			What station this lane setup is for.
*Station ID	Α	30	Referential integrity link to STATIONS.DB
			*This is a required key field.
*Lane Number	9		Lane number (1-64).
	0		*This is a required key field.
*Physical Lane Number	S		Set to a 0 if not grouped, 1-64 if grouped.
	5		*This is a required key field.
Direction	A	1	Single character direction code for this lane.
Information	A	30	Lane Information Line.
Raw Sensors	S		Sensor Configuration for Raw, Binned, & WIM Modes
Count Sensors	S		Sensor Configuration for Count Mode.
Raw Lane Mode	S		Lane Mode used with Raw, Binned, & WIM mode.
Raw Sensor Spacing	S		Sensor spacing (CM) for Raw, Binned, & WIM Modes.
Raw Loop Length	S		Loop Length (CM) for Raw, Binned & WIM Modes.
Axle Class Enabled	L		Axle Classification Enabled.
Speed Class Enabled	L		Speed Classification Enabled.
Length Class Enabled	L		Length Classification Enabled.
Gap Class Enabled	L		Gap Classification Enabled.
Headway Class Enabled	L		Headway Classification Enabled.
SpeedxLength Enabled	L		Speed x Length Classification Enabled.
SpeedxAxle Enabled	L		Speed x Axle Classification Enabled.
SnMis Storage Enabled	L		SnMis Storage Enabled
Count Lane Mode	S		Mode used for count (1-Normal, 2-Subtract, 3-Directional)
Count Divide By 2	L		Divide by 2 enabled or disabled.
Store Class Number	6		For WIM storage, indicates class number (or higher) vehicles
	3		are stored in memory.
Comment	A	50	User comment about this lane.

#4 – The IMPORTS Database:

Name	Туре	Length	Description
*Station ID	۸	30	Site ID this import record is for.
Station ID	7	- 50	*This is a required key field.
*Start Date	D		Start Time & Date of the data in the import.
*Start Time	Т		*These are required key fields.
End Date	D		End Time 8 Date of the date in the import
End Time	Т		
Counter Type	А	20	Type of counter used (C-Sprite, Unicorn, etc.)
Counter Version	А	10	Version number of counter used.
Counter Serial	А	30	Serial number of counter used.
Datatype	s		Kind of data this is: 1-Raw,2-Binned,3-Count,5-WIM,6-
Datatype			WIM+Binned,7-Env.
Device Status	А	30	Status Line (optional, used to record information such as
			battery voltage and other data at time of download)
			Name of the original source file for this data in the SOURCE
Source File Name	Δ	200	subdirectory. Note that this is set to:
	~		":Per Vehicle (name)" If data derived from Raw Import.
			":Class (name)" If data derived from Binned Import.
Data Integrity Check Ont	c		Data Integrity Check Failure Count (-1=Unchecked, 0=Ok,
	5		1-32767=Number of Data Integrity Failures During Import)

Name	Туре	Length	Description
Has Axle Class Has Speed Class Has Lenth Class Has Gap Class Has Headway Class Has SpeedxAxle Class Has SpeedxLength Class Has SnMis Class	L		Each of these values is set to True if the data imported contains the type of classification indicated. Does not apply to Volume only imports.
Data Exported	L		Set to True if the data has been processed by the export function at least once.
Data Is Valid	L		Defaults to True. This can be set to False to indicate the data imported is not valid or suspect.
Operator	Α	30	Operator or User ID
Weather	A	30	Weather at time of collection
Ball Hitch Detect	I		Bitmap of Ball Hitch Detect enabled lanes for this import (Lanes 1-32 only, unsigned).

#5 – Per Vehicle (Raw) Database:

Name	Туре	Length	Description		
*Date	D		Data Timo	and Time Hundredthe	
*Time	Т		required key fields		
*Time Hundredths	S		These are i	equired key helds.	
*Lane Number	S		Lane Numbe	r (1-64)	
	5		* This is a re	quired key field	
Data Integrity Check	S		Data Integrity	y (0=0k,-1=Unchecked,1-32768=Failure Code)	
Bata megny eneok	0		Default is -1.		
SnMis Number	S		SnMis Numb	er (-1=Vehicle,0-4=SnMis). Default=-1	
Speed	S		Speed of veh	nicle (in 0.1 KPH)	
Number of Axles	S		Number of A	xles (0=Loop or 2-16)	
Total Length	S		Length of veh	icle (CM)	
Axle Class Number	S				
Speed Class Number	S		Classification	Number $(0 - 1)$ inclassified 1-60 otherwise)	
Length Class Number	S		(0 = Oficiassified, 1 = Of Official Silied).		
Gap Class Number	S				
Headway Class Number	S				
Spacing 1-2					
	S		Spacing between axles (in CM). Blank if not collected.		
Spacing 15-16					
	S			Class Code (bit 7 set if from 16 bit, bit 6 set if	
2010331 01033	0			from a %, bits 0-5 are class - 0=default)	
LClass1 ID64HI				64 Bit Class ID (High Value, unsigned)	
LClass1 ID64LO			Loop #1	64 Bit Class ID (Low Value, unsigned)	
LClass1 ID16	S			16 Bit Class ID (unsigned)	
LClass1 Samples	S			Samples in Loop Signature (0=None, default).	
LClass1 Change	S			Total change (/256)	
	c			Class Code (bit 7 set if from 16 bit, bit 6 set if	
LCIASSZ CIASS	5			from a %, bits 0-5 are class - 0=default)	
LClass2 ID64HI			1 oon #2	64 Bit Class ID (High Value, unsigned)	
LClass2 ID64LO				64 Bit Class ID (Low Value, unsigned)	
LClass2 ID16	S			16 Bit Class ID (unsigned)	
LClass2 Samples	S			Samples in Loop Signature (0=None, default).	

LClass2 Change	S	Total change (/256)
Special Vehicle Markers	I	Identifying markers picked up by advanced system processing. This is supported by firmware which detects such things as "Ball Hitch Detect" and other special notes as indicated below: .0 - Ball Hitch Detected (Set when either loop sees what it thinks are a ball hitch type signal). See the Imports record to check if this particular function is active for this import. .131 - Unused
Other	M	1 Optional additional information

NOTE : Anything in this color applies to a vehicle only (when "SnMis Number" = -1).

NOTE : Centurion ignores classifications generated by the counter (if any) and reclassifies all vehicles as they are imported into the database according to the current class settings in the Station setup file.

#6 – Classification (Binned) Database:

Name	Туре	Length	Description
*Date	D		Time and Date
*Time	Т		* These are required key fields.
*Data Type	S		Type of data (1-Axle, 2-Speed, 3-Length, 4-Gap, 5- Headway, 6-SnMis, 100-160 Speed Bins for Length Bin xx, 200-260 Speed Bins for Axle Bin xx) * <i>This is a required key field.</i>
*Lane Number	S		Lane Number * This is a required key field.
Data Integrity Check	S		Data Integrity (0=0k,-1=Unchecked,1-32768=Failure Code) Default is -1
Interval Length	S		Length of Interval for this data (in minutes) Default is 15 minutes
Partial	L		Set to True if this interval is only partially accounted for.
Bin Total 1 through			Bin Totals for from 1 to 60 bins. Unused bins are blank
Bin Total 60	I		(which is the default).
Misclassified Total	I		Total number of vehicles misclassified.
Unclassified Total			Total number of vehicles not classified.

NOTE: Centurion V1.37 expands the classification system from 30 to 60 bins adding fields "Bin Total 31", "Bin Total 32", etc. This is automatically done to all databases when accessed, and increases their size.

#7 – Volume (Count) Database:

Name	Туре	Length	Description
*Date	D		Time and Date
*Time	Т		* These are required key fields)
Data Integrity Check	0		Data Integrity (0=0k,-1=Unchecked,1-32767=Failure Code).
Data Integrity Check	5		Default = -1
Interval Length	S		Length of Interval for this data (in minutes)
	5		Default = 15 minutes
Partial	L		Set to True if this interval is only partially accounted for.
Lane 1 through Lane 64	Ι		Lane 1 through Lane 64 Total Count Blank = uncollected (the default)

NOTE: Centurion V1.37 expands the volume system from 32 lanes to 64 lanes adding fields "Lane 33", "Lane 34", etc. This is automatically done to all databases when accessed, and increases their size.

#8 – WIM Vehicle Database:

Name	Туре	Length	Description
*Date	D		Data Time and Time Hundrodths
*Time	Т	* These are required key fields.	
*Time Hundredths	S		
*Lane Number	S		Lane Number * This is a required key field
*SnMis or Datatype	S		SnMis or Datatype Number (-3=Autocal Setting, -2=WIM Channel Setting, -1=Vehicle, 0-4=SnMis). Default=-1 * <i>This is a required key field.</i>
Vehicle Number	I		Sequential vehicle number (Blank = unused, default)
Data Integrity Check	S		Data Integrity (0=0k,-1=Unchecked,1-32768=Failure Code) Default is -1.
Speed	S		Speed of vehicle (in 0.1 KPH)
Number of Axles	S		Number of Axles (0=Loop or 2-16)
Total Length	S		Length of vehicle (CM)
Axle Class Number	S		
Speed Class Number	S		Oleasification Number (0, Unclossificat 4,00 otherwise)
Length Class Number	S		Classification number ($0 = 0$ nclassified, 1-60 otherwise).
Gap Class Number	S		Default = 0.
Headway Class Number	S		
Spacing 1-2			
	S		Spacing between axles (in CM). Blank if not collected.
Spacing 15-16			
Weight 1			
	I		Weights of up to 16 axles (in kg).
Weight 16			
Special Vehicle Markers	I	Identifying markers picked up by advanced system processing. This is supported by firmware which detects such things as "Ball Hitch Detect" and other special notes as indicated below: .0 - Ball Hitch Detected (Set when either loop sees what it thinks are a ball hitch type signal). See the Imports record to check if this particular import is active for this function. .131 - Unused	
Other	М	1	Optional additional information and WIM Channel and Autocal setup strings.

NOTE : Anything in this color applies to a vehicle only (when "SnMis or Datatype" = -1).

NOTE : When "SnMis or Datatype" = -2, then this is a WIM channel setup value. The "Other" field will be written with a string representing the following data: Channel, Sensor Type, Threshold, Gain, Timeout, Baseline Threshold, User Calibration, Inverted

AutoCal Config, Auto Setting 1, Auto Setting 2, Auto Setting 3, Auto Setting 4, Current Autocal Value

NOTE : Centurion ignores classifications generated by the counter (if any) and reclassifies all vehicles as they are imported into the database according to the current class settings in the Station setup file.

#9 – The Data Integrity (DATAINTG) Database:

The Data Integrity database records data violations during the data integrity check functions. These can come either from the original polling records or from the main database software imports.

Name	Туре	Length	Description
*Station ID	A	30	Site ID this data integrity error is for. Referential integrity link to STATIONS.DB *This is a required key field.
*Start Date	D		Start Time & Date of the data in the error.
*Start Time	Т		*These are required key fields.
*End Date	D		End Time & Date of the data in the error.
*End Time	Т		*These are required key fields.
*Lane Number	S		Lane number of the error (or 0 for all lanes). *This is a required key field
*Sequence Number	S		Sequence number of the error (to allow for multiple errors for the same lane(s)/time). *This is a required key field
Datatype	S		Kind of data this is: 1-PerVehicle, 2-Classification, 3- Volume,5-WIM.
Failure Code Number	S		Failure code number of the message.
Message	A	200	Actual data integrity error message.

#10 – The Polling Log (POLLLOG) Database:

This database records the polling activity for permanent stations. This data is collected from the polling software updates posted to the common FTP site.

Name	Туре	Length	Description	
		30	Site ID this polling log entry is for.	
*Station ID	A		Referential integrity link to STATIONS.DB	
			*This is a required key field.	
*Call Start Date	D		Starting Time & Date of the call.	
*Call Start Time	Т		*These are required key fields.	
*Call Start Date	D		Ending Time & Date of the call.	
*Call End Date	Т		*These are required key fields.	
*Sequence Number	S		Sequence number of the call (to allow for multiple messages	
			for the same date & time).	
			*This is a required key field	
Connect By	Α	100	Phone number or SOIP address.	
Data Rate	Α	30	Speed/Type of connection.	
			Type of message (1=Call Info, 2=Call Error, 3=Counter Info,	
Type of Message	S		4=Counter Error, 5=Data Message, 6=Data Warning, 7=Data	
			Error)	
Message	A	200	Poll log message.	

#11 – Borland Database Engine Aliases:

Centurion uses the BDE (Borland Database Engine) to manage all database activity. As part of this process, it creates and maintains 6 "aliases" as follows:

Alias for CC Version	Default	Description
CenturionCC	C:\Program Files\Diamond\Centurion CC\DB	Main database directory. This is the location for all database files except the traffic data itself.
CenturionCC Raw	C:\Program Files\Diamond\Centurion CC\DB\Vehicle	Per Vehicle (Raw) data directory.
CenturionCC Binned	C:\Program Files\Diamond\Centurion CC\DB\Class	Classification (Binned) data directory.
CenturionCC Count	C:\Program Files\Diamond\Centurion CC\DB\Volume	Volume (Count) data directory.
CenturionCC WIM	C:\Program Files\Diamond\Centurion CC\DB\WIM	WIM data directory.
CenturionCC Exports	C:\Program Files\Diamond\Centurion CC\DB\Exports	Export database directory for Direct To Excel and other database output formats (not used for old style Binary, New ASCII, etc).

For the **Parks Version**, the above alias are changed to "CenturionParks", "CenturionParks Raw", etc. For the **Gold Version** the above alias are similarly changed to "CenturionGold", "CenturionGold Raw", etc. In addition, the default directory is "Centurion Parks" or "Centurion Gold" instead of "Centurion CC".

Please make note of the following things:

- The BDE Administrator is installed as part of the Centurion package. This tool can be used to set and modify any of these Aliases.
- During installation, these aliases are created and set automatically to the installation directory of the program.
- Users can change the directory setting of any alias using the "Directories Preferences" dialog box in Centurion. Changes to these preferences are automatically updated to the BDE (and the reverse is true as well).
Appendix B. Parking Lot System

Centurion-CC contains a complete Parking Lot or Structure management system. You can realtime manage up to 16 lots containing up to 32 traffic counters and 32 sign boards. Generally, installation of this system is done by trained Diamond Traffic Products personal.

Basic Step-By-Step Instructions:

1. Aerocomm Modem Setup

- a. Install the CL4490 configuration utility on a computer or laptop.
- b. Connect each Aerocomm modem to the computer and perform these steps:
 - i. Set the baud rate to 57600 and click Read Radio.
 - ii. When the values come back, leave everything at the default except as follows:
 - 1. Change "Client/Server" to Client for all Aerocomms that are to be connected to a sign or traffic counter. Set it to Server for the single Aerocomm that is to be connected to the host computer.
 - 2. Change "Interface Baud Rate" to 9600.
 - 3. Make sure the "Destination Address" is: FF FF FF FF FF FF
 - iii. Click Write Radio.
 - iv. Power the Aerocomm unit off then on.
 - v. Change the baud rate to 9600 and click Read Radio. The new settings should be returned.
 - vi. Note on a label the MAC address for this radio. Stick the label to the top of the Aerocomm so it is in plain sight.
- c. Note that the above instructions apply to any Aerocomm modem (whether it is connected to a sign or a traffic counter).

2. Sign Board Setup

- a. Each sign board is connected to an Aerocomm modem. When connecting, follow these instructions:
 - i. Move all jumpers to the RS232 side.
 - ii. Power for the Aerocomm modem can be fed directly from the second "DC Power" output on the sign.
 - iii. Connect a DB9 Female RS232 connector from the Aerocomm modem to the sign board as follows:
 - Pin 2: "R" Connection (Receive)
 - Pin 3: "T" Connection (Transmit)
 - Pin 5: "G" Connection (Ground)
- b. Sign board should be powered through an 110VAC connection (Green to Ground, White to Neutral, and Red or Black wire to Hot).
- c. Make sure sign board address is set to address #1 (all signs are set to address #1). The current sign board address is displayed by the sign when first powered on.

3. Traffic Counter Setup

- a. System operates with and Unicorn, Phoenix, or Pegasus counter with a "2.39p" version EPROM.
- b. All loop boards in system must use the EPROM which allows vehicles to be over the loops for an extended period of time. This is different from the standard loop EPROM which quickly retunes when a vehicle is over the loop.
- c. Connect the traffic counter to the Aerocomm modem using the provided DB9 Female-Female connector and a standard UPP5 Modem Cable.

4. Software/Host System Setup

- a. Install Centurion-CC V1.24 (or later) on any computer running Windows NT, Windows 2000, or Windows XP.
- b. Connect the Aerocomm modem previously configured as a "Server" to the computer and power it on. You should note that all Aerocomms will quickly light their Red LED (indicating a Link has been made). Any Aerocomm which does not have the Red LED lit after the Server is powered up is not getting a signal.
- c. Run Centurion. When the main screen appears click Counter Parking Lot System. The following screen will appear:

Parking Lot Management System	
Lots Counters Signs	🗹 (Auto Start)
No Lots Enabled!	

d. Make sure the "Auto Start" box is checked. This will make the software automatically start the Parking Lot system when the program is run.

- e. Lot Setup Click the Lot Setup button. This will display the main lot setup screen. Make the following selections:
 - i. Set the "System COM Port" to the serial port the Aerocomm modem is connected to.
 - ii. Set the "Total # of Lots" to how many separate lots or parking structures you want to configure. You can have 1 or more signs and 1 or more counters in each Lot. However, all the signs for a particular lot always display the same thing.
 - iii. For each lot, set the following values:
 - 1. Enter a descriptive name. This will appear everywhere the lot is shown.
 - 2. Enter Total Capacity, Lot Full At, and Current Lot count values.
 - 3. If desired, set the display color for the lot.
 - 4. Check the Lot Active box. You can at anytime temporarily disable a lot by un-checking this box.
 - 5. The following shows an example with 5 lots configured:

L	ot Configuration .	? 🔀
	Total # of Lots :	5 System COM Port : COM1 V
	1: North Lot 2: Sou	th Lot 3: Valet 1 4: Garage Upper 5: Garage Lower
	Lot Active	Name : North Lot
		Display Color : clMoneyGree 🗐
		Total Capacity : 1000
		Lot Full At : 950
		Current Count : 0
		Ok Cancel

iv. Click Ok. You will be returned to the main screen and all the lots will be enabled and displayed (each in a different color).

Note: You can resize the window so that all or most of the lots are displayed without scrolling.

- f. **Counter Setup** Click the Counter Setup button. You can enter settings for up to 32 counters assigned in any way to the lots. Make the following selections:
 - i. Set the "Total # of Counters" value.
 - ii. For each counter, set the following values:
 - 1. Enter a descriptive name. This will appear everywhere the counter is shown.
 - 2. Enter MAC Address of the Aerocomm connected to the counter.
 - 3. Select the Lot the counter is assigned to.
 - 4. Put a check mark in each Lane that is outflow. Unchecked lanes are inflow lanes. Note that only lanes actually enabled by the counter are used regardless of this setting.
 - 5. Check the Counter Active box. You can at anytime temporarily disable a counter by un-checking this box.

6. The following shows an example with 5 counters configured (one for each lot setup above):

Counter Configu	ation 🤶 🏹			
Total # of Coun	ters : 5 💌			
1: North Counter 2: South Counter 3: Valet Counter 4: Garage Upper Cc				
Counter Active	Name : North Counter MAC Address : 00 50 67 11 EC 89 Assigned to Lot : 1: North Lot Put check in lanes that are outflow : Lane 1 Lane 3 Lane 5 Lane 7 Put check 0 Lane 7			
	Ok Cancel			

- iii. Click Ok. You will be returned to the main screen and all counters will appear with each lot. Specific messages and other information from the main screen will be discussed in a later section.
- g. **Sign Setup** Click the Sign Setup button. You can enter settings for up to 32 signs assigned in any way to the lots. Make the following selections:
 - i. Set the "Total # of Signs" value.
 - ii. For each sign, set the following values:
 - 1. Enter a descriptive name. This will appear everywhere the sign is shown.
 - 2. Enter MAC Address of the Aerocomm connected to the sign.
 - 3. Select the Lot the sign is assigned to.
 - 4. Check the Sign Active box. You can at anytime temporarily disable a sign by un-checking this box.
 - 5. The following shows an example with 5 counters configured (one for each lot setup above)

s	Sign Configuration ? 🗙				
	Total # of Signs :	5 V Close Message :			
	1: North Sign 2: Sc	uth Sign 3: Valet Sign 4: Garage Upper Sign 5: Ga 🔷			
	☑ Sign Active	Name : North Sign			
		MAC Address : 00 50 67 11 EC CF			
		Assigned to Lot : 1: North Lot			
		Ok Cancel			

iii. Click Ok. You will be returned to the main screen and all signs will appear with each lot. Specific messages and other information from the main screen will be discussed next.

5. Operating The Parking Lot System

The following describes various aspects of operating the Parking Lot System. For this example, the system shows 5 lots each with a single traffic counter and sign.

1	🥩 Parking Lot Management System					
	Lots <u>C</u> ounters <u>S</u> igr	15				🗹 Auto Start
1: North Lat	Force Force Reset Image: Constraint of the second	Counters: 1. North Counter	GT Error	(Link)	Signs: 1. North Sign	Shows "1000"
2: South Lot	Force Force Reset Image: Constraint of the second seco	Counters: 2. South Counter	GT Error	Link)	Signs: 2. South Sign	Shows "1000"
3: Valet 1	Force Reset Lot Capacity : 1000 Spaces Used 0 (0%) Free Spaces : 1000 (100%)	Counters: 3. Valet Counter	GT Error	(Link)	Signs: 3. Valet Sign	Shows "1000"
4: Garade Upper	Force Force Reset Image: Constraint of the second	Counters: 4. Garage Upper Counter	GT Error	(Link)	Signs: 4. Garage Upper Sign	Shows "1000"
5: Garade Lower	Force Reset LM Cappony Spaces Used Free Spaces	Downless: S - Baregels over Counter	GT Error	Link	Signer: Si Ganoos Leven: Sion :	ACE Error_

The Green LED numbers show the actual Lot status and what is to be displayed on the signs for that lot. The Counters section on Signs section detail the specific activity for each counter and sign assigned to the lot.

You can force any lot to a certain status by clicking the "Force" button. A menu will appear allowing you to select *Normal*, *Opened*, *Closed*, or *Full*. Once a selection has been made, within a few seconds the signs for that lot will be updated and verified by the system.

In the above example, none of the traffic counters are working. The **GT Error** means a Get Totals error occurred, which will happen anytime the system cannot communicate with a particular counter. An **ADR Error** means the system cannot set the destination address of the radio modem, and generally indicates a failure of the Aerocomm modem connected to the host computer. Other error codes are discussed below.

Also with the above example, the first 4 signs are working but the final sign indicates **ACK Error**. This is an Acknowledge Error and happens whenever a sign does not respond. Note that the message "Shows '1000'" means the sign is actually displaying the number 1000 and this has been verified by the system.

Configuring a counter:

If a properly setup and switched on traffic counter is to the Aerocomm modem configured for the North Counter in the above example, the system will eventually poll the counter (within 10 seconds) and change from **GT Error** to show this:

Counters:				
1.	North Counter	0 Lanes/	Link	

This indicates that the counter has been successfully linked to, but no lanes are enabled. To program the counter and setup lane configuration, click the Link button. Note that all Parking Lot system functions are suspended while you talk to the traffic counter.

While linked to the counter please do the following:

- 1. Set the Site ID as desired by the customer. All counters are polled nightly and the data imported into the database using the Site ID you program into the counter. It is important to set a meaningful Site ID.
- 2. Enable the lanes you wish to use.
- 3. Make sure all lanes function.
- 4. Start the data collection process.

When counter programming finished, exit the link function. Within about 10 seconds or so the screen will update and show:

Counters:					
1. North Counter	In=0,0ut=0 (2L)	Link			

The "In" and "Out" values will occasionally update and show you number of vehicles in and out of the lot from this counter. These numbers will often show zero as they are updated every 10 seconds or so, however you should occasionally see numbers appear. The "2L" indicates two lanes are active.

Resetting Lot Count:

Occasionally the actual lot count vs. displayed may be inaccurate. To reset the lot count, follow this procedure:

- 1. When the person doing the manual counting is at the beginning of the lot, click the Reset button. The lot count value will change to an edit box and no further polling of this lot will occur.
- 2. Manually count all vehicles in the lot. Ignore vehicles leaving or entering the lot (these will be picked up on the first poll).
- 3. Type into the Spaces Used value the lot count and press <Enter>. The signs will be updated and the count modified by the next poll.

Appendix C. Technical Notes

1. USB Driver Updating

Centurion is designed to work with a variety of USB enabled traffic counters. This includes the Phoenix, Pegasus, Unicorn, Apollo, Unicorn-Limited, Omega, and Titan-II. Each of these counters requires a device driver to be installed on your computer the <u>first time</u> before communication will work with that type of device (a Phoenix, for example). After the first time, that computer and that type of device know each other and will usually work really well together.

Because there are a variety of Windows types (XP, Vista, Windows 7), different kinds of users (administrative, I.T., novice and experienced), multiple releases of Centurion, and a variety of counters this can all become very complicated. If you have access to it, it is recommended you request someone with extensive computer experience to be on hand to handle setting up the initial communication protocol between the types of equipment you own and your computer. If not, be patient with yourself and you will eventually succeed.

Step 1 – Insure you have the latest drivers.

As of this writing, the current set of Diamond USB drivers is dated 7-16-2010. It can be downloaded from <u>http://www.detllc.com/downloads/Diamond USB Drivers 7-16-2010.zip</u>. It is also included in all releases of Centurion full installs dated after this date.

Once downloaded, we recommend you place it in your C:\WINDOWS\INF sub-directory. This is where Centurion puts it automatically. You can place it elsewhere, and some IT policies may even require it, but this directory will be searched automatically by Windows and makes the whole process easier if you put them there. It you put it somewhere else, you will have to manually tell Windows where the drivers are, which is fine, but time consuming.

NOTE: Do <u>not</u> run Centurion at any time during setting up the drivers. It simply makes things slower and more complicated, something you do not need during driver installation.

Step 2 – If you have never connected a traffic counter to your computer before.

You should actually be in really good shape. Simply say Yes to automatically find the drivers for the device and then say yes to trust Diamond Traffic Products (on a Vista or Win 7 machine). Everything will work fine. There is one issue to address:

Omega & Titan II counters will not function correctly at the end of the first driver installation. This is because the counter times out and thinks your PC has failed to connect to it. To fix it, just unplug and replug it in. From then on everything will work fine.

This problem actually occurs on XP machines too, only there it will say "Driver failed to start". Again, just unplug and reconnect.

If you are asked to insert "Diamond Driver Disk", usually just browse to either the C:\Windows\Inf\Diamondx86 (Intel Processors) or C:\Windows\Inf\Diamondx64 (AMD Processors). This normally won't happen, but sometimes it occurs depending on what Window has been told in the past about driver locations.

Step 2 – If you have connected a traffic counter to your computer before.

Now things get complicated. What you want to do is upgrade all of your drivers to the latest version available, which will be at a minimum a driver release date of 07/16/2010.

If you have Administrative privileges on your computer, try these steps:

- 1. Make sure nothing else is running, including Centurion (this is just to keep things simple).
- 2. Click Start then Run.
- 3. Type in "devmgmt.msc" and click Ok.
- 4. This will open up your Device Manager.
- 5. Plug in the traffic counter. If you have successfully connected it in the past, once it is connected to your computer, it should appear under the "Ports" tab. It may also appear somewhere else on this list even if it has *not successfully installed*. In either case go on to step 6.
- 6. Right click on it and select properties.
- 7. Click the Driver tab.
- 8. You should see the details including the Provider, Date, and Version. Under Windows XP, no driver from us will ever say it is signed even though they actually are. Under Windows Vista and XP, the most current versions of the drivers will say signed by "diamond traffic products, inc".
- 9. If your driver date is less than 7/16/2010, you should try to update it. Click the "update driver" button. If you have placed the files in the "C:\Windows\Inf" folder they may (should) be automatically found. If they are not, you can also try manually placing them in a different folder and installing them from there by specifying that folder during installation.
- 10. One additional note because it takes so long to complete driver installation, the Omega and Titan II counters timeout and shut down their USB parts to save power. This will look like a driver failure to install, but it isn't. Simply unplug and plug back in the Omega or Titan II and all should work as planned from this point forward.

Hopefully this guide will remedy some of the confusion about how device drivers work. The basic idea is that inside the traffic counter is a unique Vendor Identification Number (a VID) which Diamond Traffic Products owns. That number is paired with a Product Identification Number (a PID) for each kind of device we make.

Windows reads those numbers out first whenever anything is connected to your computer. It then searches for a device driver which matches the combined VID/PID and, if not already installed, tries to install it. This is how Windows keeps everyone's individual products separate, although sometimes it is very frustrating to understand the complexities of security and multiple operating system differences.

Please let us know if you continue to experience difficulties. Once installed, we are confident that you will find that the drivers will work very well for you with Centurion.