



Contact SAMSUNG WORLDWIDE
If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care centre.

Country	Customer Care Centre ☎	Web Site
AUSTRALIA	1300 362 603	www.samsung.com/au
CHINA	800-810-5858 400-810-5858 010-6475 1880	www.samsung.com/cn
	HONG KONG:3698 - 4698	www.samsung.com/hk
INDIA	3030 8282 1-800-3000-8282 1800 110011	www.samsung.com/in
INDONESIA	0800-112-8888	www.samsung.com/id
JAPAN	0120-327-527	www.samsung.com/jp
MALAYSIA	1800-88-9999	www.samsung.com/my
NEW ZEALAND	0800 SAMSUNG (0800 726 786)	www.samsung.com/nz
PHILIPPINES	1-800-10-SAMSUNG(726-7864) 1-800-3-SAMSUNG(726-7864) 02-5805777	www.samsung.com/ph
SINGAPORE	1800-SAMSUNG(726-7864)	www.samsung.com/sg
THAILAND	1800-29-3232 02-689-3232	www.samsung.com/th
TAIWAN	0800-329-999	www.samsung.com/tw
VIETNAM	1 800 588 889	www.samsung.com/vn
SOUTH AFRICA	0860-SAMSUNG(726-7864)	www.samsung.com/za
U.A.E	800-SAMSUNG (726-7864) 8000-4726	www.samsung.com/ae



LCD TV

user manual

imagine the possibilities

Thank you for purchasing this Samsung product.
To receive more complete service, please register
your product at

www.samsung.com/register

Model _____ Serial No. _____




BN68-01895D-01



☐ License




TruSurround HD, SRS and  symbol are trademarks of SRS Labs, Inc. TruSurround HD technology is incorporated under license from SRS Labs, Inc.



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

☐ Precautions When Displaying a Still Image

A still image may cause permanent damage to the TV screen

- Do not display still image and partially still on the LCD panel for more than 2 hours as it can cause screen image retention. This image retention is also known as “screen burn”. To avoid such image retention, reduce the degree of brightness and contrast of the screen when displaying a still image.
-  Watching the LCD TV in 4:3 format for a long period of time may leave traces of borders displayed on the left, right and centre of the screen caused by the difference of light emission on the screen. Playing a DVD or a game console may cause a similar effect to the screen. Damages caused by the above effect are not covered by the Warranty.
- Displaying still images from Video games and PC for longer than a certain period of time may produce partial after-images. To prevent this effect, reduce the ‘brightness’ and ‘contrast’ when displaying still images.

CONTENTS

CONNECTING AND PREPARING YOUR TV

■ Viewing the Control Panel	2
■ Accessories	3
■ Viewing the Connection Panel.....	3
■ Viewing the Remote Control	5
■ Installing Batteries in the Remote Control	5

OPERATION

■ Viewing the menus	6
■ Plug & Play Feature.....	7

CHANNEL CONTROL

■ Configuring the Channel Menu	8
■ Managing Channels.....	10

PICTURE CONTROL

■ Configuring the Picture Menu	12
■ Using Your TV as a Computer (PC) Display	15
■ Setting up the TV with your PC.....	16

SOUND CONTROL

■ Configuring the Sound Menu	16
■ Selecting the Sound Mode	17

SETUP

■ Configuring the Setup Menu	18
------------------------------------	----

INPUT / SUPPORT

■ Configuring the Input Menu	21
■ Configuring the Support Menu.....	21

MEDIA PLAY (USB)

■ Connecting a USB Device	23
■ Media Play Function	24
■ Photo List Option Menu	25
■ Viewing a Photo or Slide Show.....	26
■ Slide Show Option Menu	27
■ Music List Option Menu	28
■ Playing a Music	28
■ Music Play option Menu	29
■ Using the Setup Menu	29

ANYNET+

■ Connecting Anynet+ Devices.....	30
■ Setting Up Anynet+	31
■ Switching between Anynet+ Devices.....	31
■ Recording	32
■ Listening through a Receiver (Home theatre).....	32
■ Troubleshooting for Anynet+	33

RECOMMENDATIONS

■ Teletext Feature	34
■ Installing the Stand	35
■ Disconnecting the Stand.....	35
■ Installing the Wall Mount Kit	35
■ Anti-Theft Kensington Lock	36
■ Securing the Installation Space	36
■ Securing the TV to the Wall	37
■ Troubleshooting: Before Contacting Service Personnel	38
■ Specifications	39

□ Symbol



Note



One-Touch Button



TOOL Button




Press

CONNECTING AND PREPARING YOUR TV

Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance. Product design and specifications may be changed without notice in order to enhance product performance.

Viewing the Control Panel

- The product colour and shape may vary depending on the model.
- The front panel buttons can be activated by touching them with your finger.

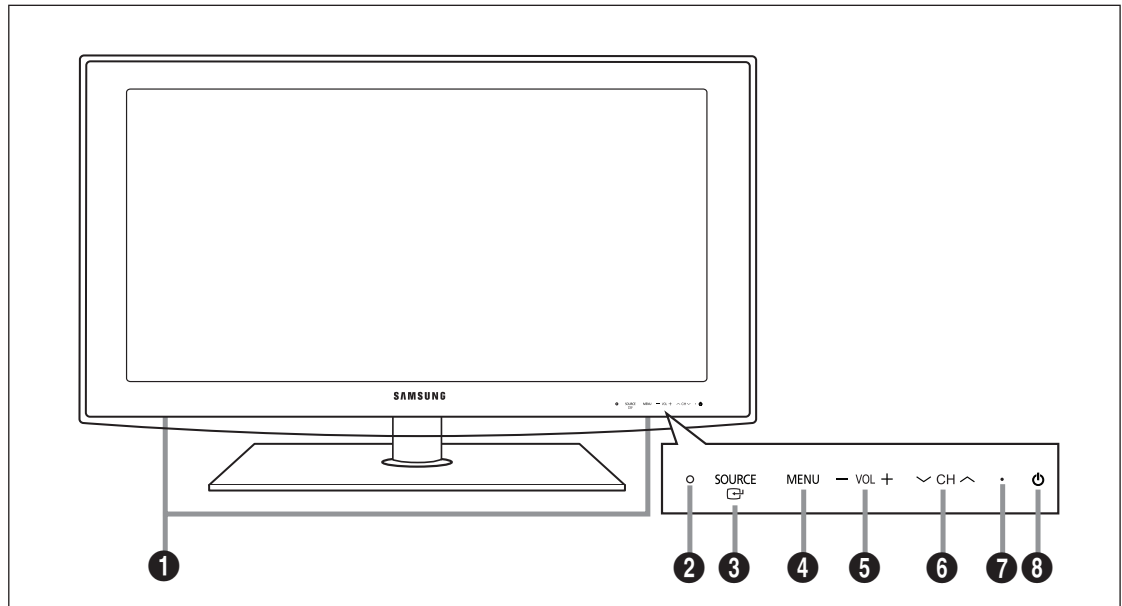


1 SPEAKERS

2 REMOTE CONTROL SENSOR

Aim the remote control towards this spot on the TV.

3 SOURCE

Toggles between all the available input sources. In the on-screen menu, use this button as you would use the **ENTER**  button on the remote control.

4 MENU

Press to see an on-screen menu of your TV's features.

5 - VOL +

Press to increase or decrease the volume.

In the on-screen menu, use the **- VOL +** buttons as you would use the ◀ and ▶ buttons on the remote control.

6 V CH ^

Press to change channels. In the on-screen menu, use the V CH ^ buttons as you would use the ▼ and ▲ buttons on the remote control.

7 POWER INDICATOR

Blinks and turns off when the power is on and lights up in stand-by mode.

8 (POWER)

Press to turn the TV on and off.

Accessories



 
Remote Control & Batteries (AAA x 2)



Power Cord



Cleaning Cloth



Cover-Bottom



(M4 X L16)

Stand Screw




(M4 X L14)

Stand Screw X 3
(32inch model only)

- Owner's Instructions
- Warranty card
- Safety Guide
- Registration Cards

- ☑ Please make sure the following items are included with your LCD TV. If any items are missing, contact your dealer.
- ☑ Warranty card / Safety Guide / Registration Cards (Not available in all locations)
- ☑ The items colour and shape may vary depending on the model.

Viewing the Connection Panel

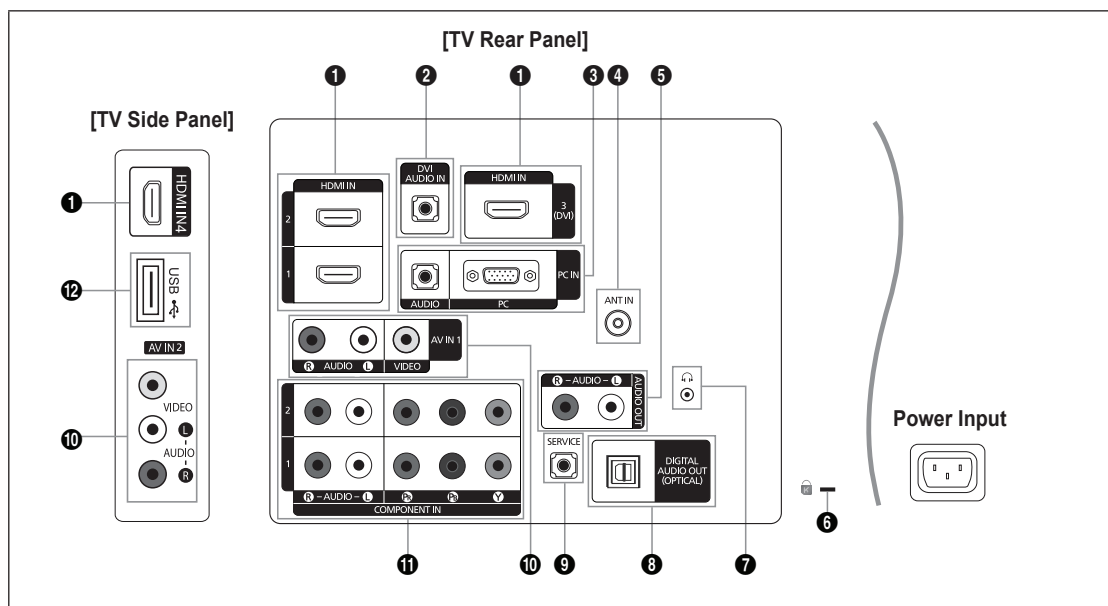

- ☑ The product colour and shape may vary depending on the model.
- ☑ Whenever you connect an external device to your TV, make sure that power on the unit is turned off.
- ☑ When connecting an external device, match the colour of the connection terminal to the cable.

① HDMI IN 1, HDMI IN 2, HDMI IN 3(DVI), HDMI IN 4

- Supports connections between HDMI-connection-enabled AV devices (Set-Top Boxes, DVD players)
- No additional Audio connection is needed for an HDMI to HDMI connection.
- When using an HDMI / DVI cable connection, you must use the **HDMI IN 3(DVI)** jack.

☑ What is HDMI?

'High Definition Multimedia interface' allows the transmission of high definition digital video data and multiple channels of digital audio.

The HDMI / DVI terminal supports DVI connection to an extended device with the appropriate cable (not supplied).

The difference between HDMI and DVI is that the HDMI device is smaller in size, has the HDCP (High Bandwidth Digital Copy Protection) coding feature installed, and supports multi - channel digital audio.

- ☑ The TV may not output sound and pictures may be displayed with abnormal colour when DVD / Blu-ray player / Cable Boxes / Satellite receivers supporting HDMI versions older than 1.3 are connected. When connecting an older HDMI cable and there is no sound, connect the HDMI cable to the **HDMI IN 3(DVI)** jack and the audio cables to the **DVI AUDIO IN** jacks on the back of the TV. If this happens, contact the company that provided the DVD / Blu-ray player / Cable Box / Satellite receiver to confirm the HDMI version, then request a firmware update. HDMI cables that are not 1.3 may cause annoying flicker or no screen display.

- ☑ Supported modes for HDMI / DVI and Component.

	480i	480p	576i	576p	720p	1080i	1080p
HDMI / DVI 50Hz	X	X	X	O	O	O	O
HDMI / DVI 60Hz	X	O	O	X	O	O	O
Component	O	O	O	O	O	O	O

② **DVI AUDIO IN**

- DVI audio outputs for external devices.

③ **PC IN [AUDIO], [PC]**

- Connect to the video and audio output jack on your PC.

④ **ANT IN**

- To view television channels correctly, a signal must be received by the set from one of the following sources: An outdoor aerial / A cable television network

⑤ **AUDIO OUT [R-AUDIO-L]**

- Connect RCA audio cables to **AUDIO OUT [R-AUDIO-L]** on the rear of your set and the other ends to corresponding audio in connectors on the Amplifier or DVD Home Theatre.

⑥ **KENSINGTON LOCK** (depending on the model)

- The Kensington Lock (optional) is a device used to physically fix the system when used in a public place.
- If you want to use a locking device, contact the dealer where you purchased the TV.
- The location of the Kensington Lock may be different depending on its model.

⑦ **🎧 (HEADPHONE)**

- Headphone may be connected to the headphone output on your set. While the head phone is connected, the sound from the built-in speakers will be disabled.

☑ Using the sound function is restricted when connecting headphones to the TV.

☑ Prolonged use of headphones at a high volume may damage your hearing.

☑ You will not hear sound from the speakers when you connect headphones to the TV.

☑ The headphone volume and TV volume are adjusted separately.

⑧ **DIGITAL AUDIO OUT (OPTICAL)**

- Connects to a Digital Audio component.

☑ When a Digital Audio System is connected to the **DIGITAL AUDIO OUT (OPTICAL)** jack: Decrease the volume of the TV and adjust the volume level with the system's volume control.

☑ 5.1CH audio is possible when the TV is connected to an external device supporting 5.1CH.

⑨ **SERVICE**

- Connector for service only.

⑩ **AV IN 1, 2 [VIDEO] / [R-AUDIO-L]**

- Connect RCA cable to an appropriate external A/V device such as VCR, DVD or Camcorder.
- Connect RCA audio cables to **[R-AUDIO-L]** on your set and the other ends to corresponding audio out connectors on the A/V device.

⑪ **COMPONENT IN 1, 2**

- Connect component video cables (optional) to component connector (P_R, P_B, Y) on the rear of your set and the other ends to corresponding component video out connectors on the DVD.
- If you wish to connect both the Set-Top Box and DVD, you should connect the Set-Top Box to the DVD and connect the DVD to component connector (P_R, P_B, Y) on your set.
- The P_R, P_B and Y connectors on your component devices DVD are sometimes labeled Y, B-Y and R-Y or Y, Cb and Cr.
- Connect RCA audio cables (optional) to **[R-AUDIO-L]** on the rear of your set and the other ends to corresponding audio out connectors on the DVD.

⑫ **USB**

- Connector for Media Play, etc.


Viewing the Remote Control

- ☑ You can use the remote control up to a distance of about 23 feet from the TV.
- ☑ The performance of the remote control may be affected by bright light.
- ☑ The product colour and shape may vary depending on the model.

- 1 **POWER** : Turns the TV on and off.
- 2 **NUMERIC BUTTONS** : Press to change the channel.
- 3 **ENTER** : Performs the same function as the **ENTER** button of the directional buttons. When switching channels with the numeric buttons, and you press the channel number and then the **ENTER** button, the channel is immediately switched.
- 4 **— ▲ +** : Press to increase or decrease the volume.
- 5 **SOURCE** : Press to display and select the available video sources.
- 6 **CH LIST** : Used to display Channel Lists on the screen.
- 7 **TOOLS** : Use to quickly select frequently used functions.
- 8 **INFO** : Press to display information on the TV screen.
- 9 **COLOUR BUTTONS** : Use these buttons in the **Channel list**, **Media Play** menu, etc.
- 11 **DUAL** : Sound effect selection
- 12 Use these buttons in the **Media Play** and **Anynet+** modes. (●: This remote can be used to control recording on Samsung recorders with the Anynet+ feature)
- 13 **TV** : Selects the TV mode directly.
- 14 **PRE-CH** : Enables you to return to the previous channel you were watching.
- 15 **MUTE** : Press to temporarily cut off the sound.
- 16 **P ▲/P ▼** : Press to change channels.
- 17 **MENU** : Displays the main on-screen menu.
- 18 **FAV.CH** : Used to display Favourites Channel Lists on the screen.
- 19 **RETURN** : Returns to the previous menu
- 20 **UP ▲ / DOWN ▼ / LEFT ◀ / RIGHT ▶ / ENTER** : Use to select on-screen menu items and change menu values.
- 21 **EXIT** : Press to exit the menu.
- 22 **P.SIZE** : Picture size selection.
- 23 **MEDIA.P** : Allows you to play music files and pictures.
- 24 **SUBT.** : Digital subtitle display
- 25 **GUIDE** : Electronic Programme Guide (EPG) display


Teletext Functions

- 5 **LIST / FLOF** : Teletext mode selection (LIST / FLOF)
- 6 **Teletext store**
- 7 **Teletext size selection**
- 8 **Teletext reveal**
- 9 **Fastext topic selection**
- 10 **Alternately select Teletext, Double, or Mix.**
- 13 **Exit from the Teletext display**
- 14 **Teletext sub page**
- 16 **Teletext next page**
Teletext previous page
- 17 **Teletext index**
- 19 **Teletext hold**
- 21 **Teletext cancel**

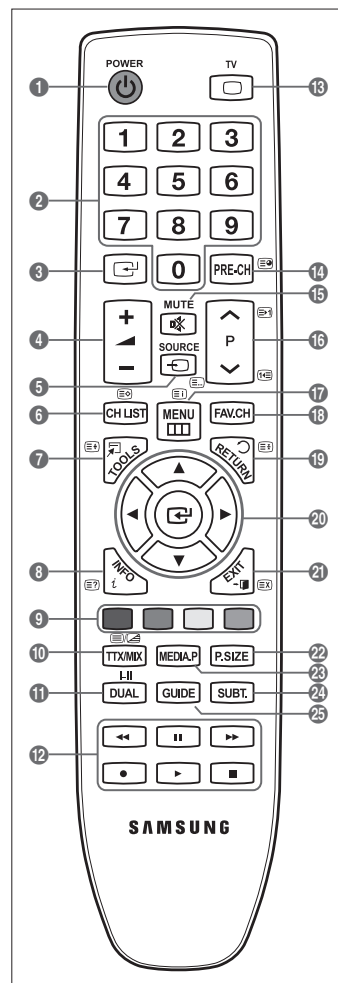

Installing Batteries in the Remote Control


1. Lift the cover at the back of the remote control upward as shown in the figure.
2. Install two AAA size batteries.
 - ☑ Make sure to match the '+' and '-' ends of the batteries with the diagram inside the compartment.
3. Replace the cover.
 - ☑ Remove the batteries and store them in a cool, dry place if you won't be using the remote control for a long time.
- ☑ If the remote control doesn't work, check the following:
 - Is the TV power on?
 - Are the plus and minus ends of the batteries reversed?
 - Are the batteries drained?
 - Is there a power outage or is the power cord unplugged?
 - Is there a special fluorescent light or neon sign nearby?

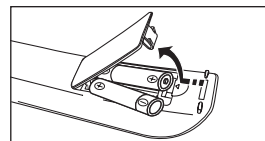

OPERATION

Viewing the menus





Before using the TV, follow the steps below to learn how to navigate the menu in order to select and adjust different functions.

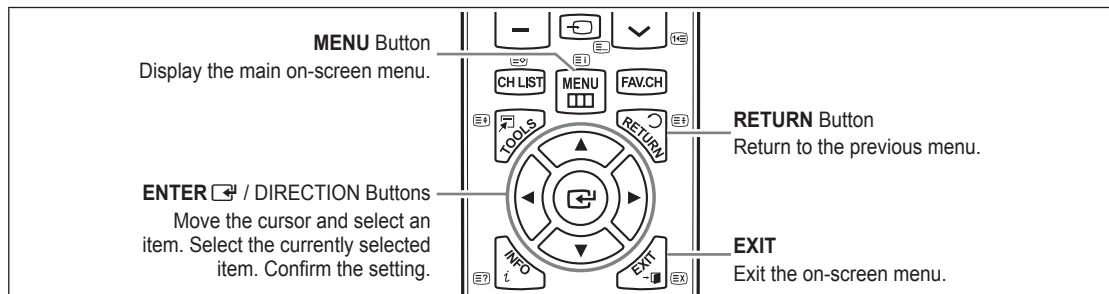

Operation the OSD (On Screen Display)

The access step may differ depending on the selected menu.

 1. Press the **MENU** button.
2. The main menu appears on the screen. The menu's left side has icons : **Picture, Sound, Channel, Setup, Input, Application, Support.**
3. Press the **▲** or **▼** button to select one of the icons.
4. Then press the **ENTER** button to access the icon's sub-menu.
5. Press the **▲** or **▼** button to select the icon's submenu.
6. Press the **◀** or **▶** button to decrease or increase the value of a particular item. The adjustment OSD may differ depending on the selected menu.
7. Press the **ENTER** button to complete the configuration. Press the **EXIT** button to exit.

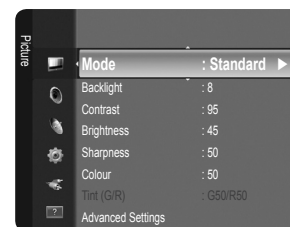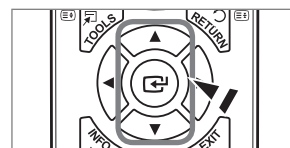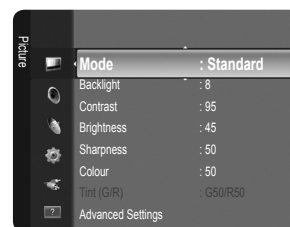


Help icon

Plug & Play Feature

When the TV is initially powered on, basic settings proceed automatically and subsequently.

1. Press the **POWER** button on the remote control.
 - ☑ The message **Select 'Home Use' when installing this TV in your home.** is displayed.
 - ☑ You can also use the **POWER** button on the TV.
2. Press the ◀ or ▶ button to select **Store Demo** or **Home Use**, then the **ENTER** button.
 - ☑ We recommend setting the TV to **Home Use** mode for the best picture in your home environment.
 - ☑ **Store Demo** mode is only intended for use in retail environments.
 - ☑ If the unit is accidentally set to **Store Demo** mode and you want to return to **Home Use (Standard)**: Press the Volume button on the TV. When the volume OSD is displayed, press and hold the **MENU** button on the TV for 5 seconds.
3. Press the **ENTER** button. Select the appropriate country by pressing the ▲ or ▼ button. Press the **ENTER** button to confirm your choice.
4. Press the ▲ or ▼ button to select the channel source to memorize. Press the **ENTER** button to select **Start**.
 - **Digital & Analogue**: Digital and Analogue channels.
 - **Digital**: Digital channels.
 - **Analogue**: Analogue channels.
 - ☑ The channel search will start and end automatically.
 - ☑ Press the **ENTER** button at any time to interrupt the memorization process.
 - ☑ After all the available channels are stored, the message **Set the Clock Mode.** is displayed.
5. Press the **ENTER** button. Press the ▲ or ▼ button to select **Auto**, then Press the **ENTER** button.
 - ☑ If you select **Manual**, Set current date and time is displayed.
 - ☑ If you have received a digital signal, the time will be set automatically. If not, select Manual to set the clock.
6. Press the ▲ or ▼ button to highlight the time zone for your local area. Press the **ENTER** button. (Australia only)
7. The description for the connection method providing the best HD screen quality is displayed. Check the description and press the **ENTER** button.
8. Press the **ENTER** button to confirm your setting. The message **Enjoy your TV.** is displayed. When you have finished, press the **ENTER** button.
 - ☑ Even if the **ENTER** button is not pressed, the message will automatically disappear after several seconds.

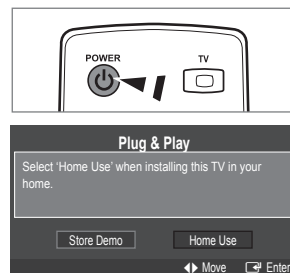

If you want to reset this feature...

1. Press the **MENU** button to display the menu. Press the ▲ or ▼ button to select **Setup**, then press the **ENTER** button.
2. Press the **ENTER** button again to select **Plug & Play**.
3. Enter your 4 digit PIN number. The default PIN number of a new TV set is '0-0-0-0'.
 - ☑ If you want to change PIN number, use the **Change PIN** function. (refer to page 19)
 - ☑ The **Plug & Play** feature is only available in the TV mode.

CHANNEL CONTROL

Configuring the Channel Menu

Country

You can change the country.

- ☑ The PIN number input screen appears. Enter your 4 digit PIN number.
- ☑ The default PIN number of a new TV set is **0-0-0-0**. You can change the PIN by selecting **Change PIN** from the menu.
- ☑ Some functions may not be supported depending on the selected country.



Auto Store

You can scan for the frequency ranges available to you (and availability depends on your country).

Automatically allocated programme numbers may not correspond to actual or desired programme numbers.

- ☑ If a channel is locked using the **Child Lock** function, the PIN input window appears.

Air / Cable

Antenna source to memorize

- **Digital & Analogue:** Digital and Analogue channels.
- **Digital:** Digital channels.
- **Analogue:** Analogue channels.
- ☑ Scans for all channels with active broadcast stations and stores them in the TV's memory.
- ☑ If you want to stop Auto Store, press the **ENTER** button.
The **Stop Auto Store?** message will be displayed.
Select **Yes** by pressing the ◀ or ▶ button, then press the **ENTER** button.

Manual Store

- ☑ Scans for a channel manually and stores it in the TV's memory.
- ☑ If a channel is locked using the **Child Lock** function, the PIN input window appears.

Digital Channel

Manual store for digital channels.

- **Channel:** Set the Channel number using the ▲, ▼ or number (0~9) buttons.
- **Frequency:** Set the frequency using the number buttons.
- **Bandwidth:** Set the bandwidth using the ▲, ▼ or number (0~9) buttons.
- ☑ When it has finished, channels are updated in the channel list.

Analogue Channel

Manual store for analogue channel.

- **Programme** (Programme number to be assigned to a channel): Sets the programme number using the ▲, ▼ or number (0~9) buttons.
- **Colour System** → **Auto / PAL / SECAM / NTSC4.43**: Sets the colour system value using the ▲ or ▼ button.
- **Sound System** → **BG / DK / I / L**: Sets the sound system value using the ▲ or ▼ button.
- **Channel** (When you know the number of the channel to be stored): Press the ▲ or ▼ button to select **C** (Air channel) or **S** (Cable channel). Press the ▶ button, then press the ▲, ▼ or number (0~9) buttons to select the required number.
 - ☑ You can also select the channel number directly by pressing the number (0~9) buttons.
 - ☑ If there is abnormal sound or no sound, reselect the sound standard required.
- **Search** (When you do not know the channel numbers): Press the ▲ or ▼ button to start the search. The tuner scans the frequency range until the first channel or the channel that you selected is received on the screen.
- **Store** (When you store the channel and associated programme number): Set to **OK** by pressing the **ENTER** button.
- ☑ **Channel mode**
 - P (Programme mode): When completing tuning, the broadcasting stations in your area have been assigned to position numbers from P00 to P99. You can select a channel by entering the position number in this mode.
 - C (Air channel mode): You can select a channel by entering the assigned number to each air broadcasting station in this mode.
 - S (Cable channel mode): You can select a channel by entering the assigned number for each cable channel in this mode.

❑ Full Guide / Mini Guide

The EPG (Electronic Programme Guide) information is provided by the broadcasters. Programme entries may appear blank or out of date as a result of the information broadcast on a given channel. The display will dynamically update as soon as new information becomes available.

📖 You can also display the guide menu simply by pressing the **GUIDE** button. (To configure the **Default Guide**, refer to the descriptions.)

📝 In New Zealand, If **Digital Text** is set to **Enable**, the EPG (Electronic Program Guide) will work. (refer to page 20)

■ Full Guide

Displays the programme information as time ordered One hour segments. Two hours of programme information is displayed which may be scrolled forwards or backwards in time.

■ Mini Guide

The information of each programme is displayed by each line on the current channel Mini Guide screen from the current programme onwards according to the programme starting time order.

❑ Default Guide → Mini Guide / Full Guide

You can decide whether to display either the **Mini Guide** or the **Full Guide** when the **GUIDE** button on the remote control is pressed.

❑ Channel List

For the detailed procedures on using the **Channel List**, refer to the page 10.

📖 You can select these options by simply pressing the **CH LIST** button on the remote control.

❑ Channel Mode

When press the **P**  /  button, Channels will be switched within the selected channel list.

■ Added Ch.

Channels will be switched within the memorized channel list.

■ Favourite Ch.

Channels will be switched within the favourite channel list.

❑ Fine Tune

 

If the reception is clear, you do not have to fine tune the channel, as this is done automatically during the search and store operation. If the signal is weak or distorted, you may have to fine tune the channel manually.

📖 Fine tuned channels that have been saved are marked with an asterisk "*" on the right-hand side of the channel number in the channel banner.

📝 To reset the fine-tuning, select **Reset** by pressing the  or  button and then press the **ENTER**  button.

📝 Only Analogue TV channels can be fine tuned.

Using the Full / Mini Guide

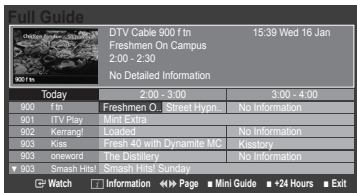

To...	Then...
Watch a programme in the EPG list	Select a programme by pressing the ▲, ▼, ◀, ▶ button.
Exit the guide	Press the blue button
If the next programme is selected, it is scheduled with the clock icon displayed. If the ENTER button is pressed again, press the ◀, ▶ button to select Cancel Schedules, the scheduling is canceled with the clock icon gone.	
View programme information	Select a programme of your choice by pressing the ▲, ▼, ◀, ▶ button. Then press the INFO button when the programme of your choice is highlighted. The programme title is on the upper part of the screen center.
Please click on INFO button for the detailed information. Channel Number, Running Time, Status Bar, Parental Level, Video Quality Information (HD / SD), Sound Modes, Subtitle or Teletext, Languages of Subtitle or Teletext and brief summary of the highlighted programme are included on the detailed information. "... " will be appeared if the summary is long.	
Toggle between the Mini Guide or Full Guide	Press the red button repeatedly.
In Full Guide Scrolls backwards quickly (24 hours). Scrolls forwards quickly (24 hours).	Press the green button repeatedly. Press the yellow button repeatedly.
In Mini Guide Display previous page quickly. Display next page quickly.	Press the green button. Press the yellow button.

Managing Channels

Using this menu, you can add / delete or set favourite channels and use the programme guide for digital broadcasts.

All Channels

Shows all currently available channels.

Added Channels

Shows all added channels.

Favourites

Shows all favourite channels.

To select the favourites channels you have set up, press the **FAV.CH** button on the remote control.


Programmed

Shows all current reserved programmes.





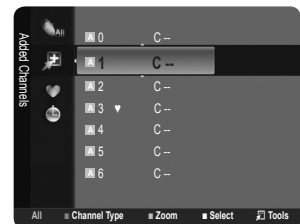

Select a channel in the **All Channels**, **Added Channels** or **Favourites** screen by pressing the ▲ / ▼ buttons, and pressing the **ENTER** button. Then you can watch the selected channel.

Using the Colour buttons with the Channel List



- **Red (Channel Type)**: Toggle between your TV, Radio, Data / Other and All.
- **Green (Zoom)**: Enlarges or shrinks a channel number.
- **Yellow (Select)**: Selects multiple channel lists. You can perform the **Add / Delete**, **Add to Favourite / Delete from Favourite** or **Lock / Unlock** function for multiple channels at the same time. Select the required channels and press the yellow button to set all the selected channels at the same time.
- **TOOLS (Tools)**: Displays the **Delete** (or **Add**), **Add to Favourite** (or **Delete from Favourite**), **Lock** (or **Unlock**), **Timer Viewing**, **Edit Channel Name**, **Edit Channel Number**, **Sort**, **Select All** (or **Deselect All**) or **Auto Store** menu. (The Option menus may differ depending on the situation.)



Channel Status Display Icons





-  : An Analogue channel.
-  : A channel selected by pressing the yellow button.
-  : A channel set as a Favourite.
-  : A programme currently being broadcast.
-  : A locked channel.
-  : A reserved programme


Channel List Option Menu (in All Channels / Added Channels / Favourites)

-  Press the **TOOLS** button to use the option menu.
-  Option menu items may differ depending on the channel status.

■ Add / Delete



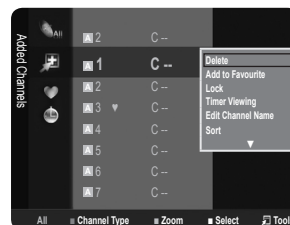

You can delete or add a channel to display the channels you want.

-  All deleted channels will be shown on **All Channels** menu.
-  A gray-coloured channel indicates the channel has been deleted.
-  The **Add** menu only appears for deleted channels.
-  You can also delete a channel to the **Added Channels** or **Favourites** menu in the same manner.







■ Add to Favourite / Delete from Favourite

You can set channels you watch frequently as favourites.

-  The  symbol will be displayed and the channel will be set as a favourite.
-  All favourite channels will be shown on **Favourite** menu.
-  Press the **TOOLS** button to display the **Tools** menu. You can also set the Add to Favourite by selecting **Tools** → **Add to Favourite**.






■ Lock / Unlock

You can lock a channel so that the channel cannot be selected and viewed. This function is available only when the **Child Lock** is set to **On**. (see page 19)

-  The PIN number input screen appears. Enter your 4 digit PIN number.
-  The default PIN number of a new TV set is **0-0-0-0**. You can change the PIN, by selecting **Change PIN** from the menu.
-  The  symbol will be displayed and the channel will be locked.


■ Timer Viewing

If you reserve a programme you want to watch, the channel is automatically switched to the reserved channel in the Channel List; even when you are watching another channel. To reserve a programme, set the current time first. (See page 18)

-  Only memorized channels can be reserved.
-  You can set the channel, day, month, year, hour and minute directly by pressing the number buttons on the remote control.
-  Reserving a programme will be shown on **Programmed** menu.
-  **Digital Programme Guide and Viewing Reservation**
When a digital channel is selected, and you press the  button, the Programme Guide for the channel appears. You can reserve a programme according to the procedures described above.

■ Edit Channel Name (analogue channels only)

Channels can be labeled so that their call letters appear whenever the channel is selected.

-  The names of digital broadcasting channels are automatically assigned and cannot be labeled.





■ Edit Channel Number (digital channels only) (Australia, Singapore only)

-  You can also edit the channel number by pressing the number buttons on the remote control.

■ Sort (analogue channels only)

This operation allows you to change the programme numbers of the stored channels. This operation may be necessary after using the auto store.

■ Select All / Deselect All

- **Select All:** You can select all the channels in the channel list.
- **Deselect All:** You can deselect all the selected channels by pressing the yellow button.
-  You can perform the Add / Delete, Add to Favourites / Delete from Favourites, or Lock / Unlock function for multiple channels at the same time. Select the required channels and press the yellow button to set all the selected channels at the same time.
-  The  mark appears to the left of the selected channels.
-  You can only select **Deselect All** when there is a selected channel.

■ Auto Store

- ✎ For further details on setting up options, refer to page 8.
- ✎ If a channel is locked using the **Child Lock** function, the PIN input window appears.

Channel List Option Menu (in Programmed)

You can view, modify or delete a reservation.

- ✎ Press the **TOOLS** button to use the option menu.

■ Change Info

Select to change a viewing reservation.

■ Cancel Schedules


Select to cancel a viewing reservation.

■ Information

Select to view a viewing reservation. (You can also change the reservation information.)

■ Select All

Select all reserved programmes.

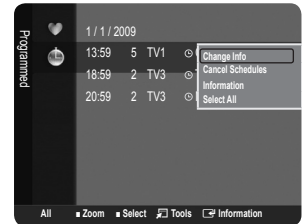

PICTURE CONTROL

Configuring the Picture Menu

□ Mode

You can select the type of picture which best corresponds to your viewing requirements.

- ✎ Press the **TOOLS** button to display the **Tools** menu. You can also set the picture mode by selecting **Tools** → **Picture Mode**.

■ Dynamic

Selects the picture for increased definition in a bright room.

■ Standard

Selects the picture for the optimum display in a normal environment.

■ Natural

Selects the picture for an optimum and eye-comfortable display.

- ✎ This function is not available in PC mode.

■ Movie

Selects the picture for viewing movies in a dark room.

□ Backlight / Contrast / Brightness / Sharpness / Colour / Tint(G/R)

Your television has several setting options that allow you to control the picture quality.

■ Backlight

Adjusts the brightness of LCD back light.

■ Contrast

Adjusts the contrast level of the picture.

■ Brightness


Adjusts the brightness level of the picture

■ Sharpness

Adjusts the edge definition of the picture.

■ Colour

Adjusts colour saturation of the picture.

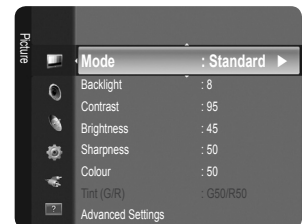

■ Tint(G/R)


Adjusts the colour tint of the picture.

- ☑ Select a picture mode to be adjusted first. The adjusted values are saved for each picture mode.
- ☑ When you make changes to **Backlight, Contrast, Brightness, Sharpness, Colour** or **Tint(G/R)**, the OSD will be adjusted accordingly.
- ☑ In analogue TV, AV1, AV2 modes of the PAL system, you cannot use the **Tint(G/R)** Function.
- ☑ In PC mode, you can only make changes to **Backlight, Contrast** and **Brightness**.
- ☑ Settings can be adjusted and stored for each external device you have connected to an input of the TV.
- ☑ The energy consumed during use can be significantly reduced if the brightness level of the picture is lowered, which will reduce the overall running cost.

□ Advanced Settings

Samsung's new TVs allow you to make even more precise picture settings than previous models.

- ☑ **Advanced Settings** is available in **Standard** or **Movie** mode.
- ☑ In PC mode, you can only make changes to **Dynamic Contrast, Gamma** and **White Balance** from among the **Advanced Settings** items.

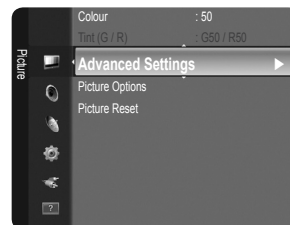

■ Black Tone → Off / Dark / Darker / Darkest

You can select the black level on the screen to adjust the screen depth.

■ Dynamic Contrast → Off / Low / Medium / High

You can adjust the screen contrast so that the optimal contrast is provided.

■ Gamma

You can adjust the Primary Colour (Red, Green, Blue) Intensity.

■ Colour Space

Colour Space is a colour matrix composed of red, green and blue colours. Select your favourite Colour Space to experience the most natural colour.

- **Auto:** Auto Colour Space automatically adjusts to the most natural colour tone based on programme sources.
- **Native:** Native Colour Space offers deep and rich colour tone.

■ White Balance

You can adjust the colour temperature for more natural picture colours.

- **R-Offset / G-Offset / B-Offset / R-Gain / G-Gain / B-Gain:** You can adjust the Colour 'temperature' in the light areas by changing the values of R, G, B, Recommended for advanced users only.
- **Reset:** The previously adjusted white balance will be reset to the factory defaults.

■ Flesh Tone

You can emphasize the pink 'flesh tone' in the picture.

- ☑ Changing the adjustment value will refresh the adjusted screen.

■ Edge Enhancement → Off / On

You can emphasize object boundaries in the picture.

■ xvYCC → Off / On

Setting the xvYCC mode to on increases detail and colour space when watching movies from an external device (ie. DVD player) connected to the HDMI or Component IN jacks.

- ☑ **xvYCC** is available when the picture mode is set to **Movie**, and the external input is set to HDMI or Component mode.
- ☑ This function may not be supported depending on your external device.

□ Picture Options

- ☑ In PC mode, you can only make changes to the **Colour Tone** and **Size** from among the items in **Picture Options**.

■ Colour Tone → Cool / Normal / Warm1 / Warm2 / Warm3

You can select the most comfortable colour tone to your eyes.


- ☑ Settings can be adjusted and stored for each external device you have connected to an input of the TV.
- ☑ **Warm1, Warm2** or **Warm3** is only activated when the picture mode is **Movie**.


■ Size


You can select the picture size which best corresponds to your viewing requirements.

 You can select these options by simply pressing the **P.SIZE** button on the remote control.


- **Auto Wide**: Automatically adjusts the picture size to the **16:9** aspect ratio. (New Zealand, Singapore only)
- **16:9**: Adjusts the picture size to 16:9 appropriate for DVDs or wide broadcasting.
- **Wide Zoom**: Magnify the size of the picture more than 4:3.
- **Zoom**: Magnifies the 16:9 wide picture (in the vertical direction) to fit the screen size.
- **4:3**: This is the default setting for a video movie or normal broadcasting.
- **Screen Fit**: Use the function to see the full image without any cutoff when **HDMI** (720p / 1080i / 1080p) or **Component** (1080i / 1080p) signals are input.




 Depending on the input source, the picture size options may vary.





 
 The items available may differ depending on the selected mode.


 In PC Mode, only **16:9** and **4:3** mode can be adjusted.


 Settings can be adjusted and stored for each external device you have connected to an input of the TV.


 Temporary image retention may occur when viewing a static image on the set for more than two hours.

 **Wide Zoom**: Press the **►** button to Select **Position**, then press the **ENTER**  button. Press the **▲** or **▼** button to move the screen up / down. Then press the **ENTER**  button.

 **Zoom**: Press the **►** button to Select **Position**, then press the **ENTER**  button. Press the **▲** or **▼** button to move the picture up and down. Then press the **ENTER**  button. Press the **►** button to Select **Size**, then press the **ENTER**  button. Press the **▲** or **▼** button to magnify or reduce the picture size in the vertical direction. Then press the **ENTER**  button.



 After selecting **Screen Fit** in HDMI (1080i / 1080p) or Component (1080i / 1080p) mode: Select **Position** by pressing the **◀** or **▶** button. Use the **▲**, **▼**, **◀** or **▶** button to move the picture.

Reset: Press the **◀** or **▶** button to select **Reset**, then press the **ENTER**  button. You can initialize the setting.

 If you use the **Screen Fit** function with HDMI 720p input, 1 line will be cut at the top, bottom, left and right as in the overscan function.


■ Screen Mode → 16:9 / Wide Zoom / Zoom / 4:3 (New Zealand, Singapore only)

When setting the picture size to Auto Wide in a 16:9 wide TV, you can determine the picture size you want to see the 4:3 WSS (Wide Screen Service) image or nothing. Each individual European country requires different picture size so this function is intended for users to select it.

- **16:9**: Sets the picture to 16:9 wide mode.
- **Wide Zoom**: Magnify the size of the picture more than 4:3.
- **Zoom**: Magnify the size of the picture vertically on screen.
- **4:3**: Sets the picture to 4:3 normal mode.
 -  This function is available in **Auto Wide** mode.
 -  This function is not available in PC, Component or HDMI mode.

■ Digital NR → Off / Low / Medium / High / Auto

If the broadcast signal received by your TV is weak, you can activate the Digital Noise Reduction feature to help reduce any static and ghosting that may appear on the screen.

 When the signal is weak, select one of the other options until the best picture is displayed.

■ HDMI Black Level → Normal / Low

You can directly select the black level on the screen to adjust the screen depth.

 This function is active only when the external input connects to HDMI (RGB signals).

■ Film Mode → Off / Auto1 / Auto2

The TV can be set to automatically sense and process film signals from all sources and adjust the picture for optimum quality.

 **Film Mode** is supported in TV, AV1, AV2, COMPONENT(480i / 1080i) and HDMI(480i / 1080i).

 **Film Mode** is not supported in DTV channel with resolution 576p/720p.

■ Blue Only Mode → Off / On

This function is for AV device measurement experts. This function displays the blue signal only by removing the red and green signals from the video signal so as to provide a Blue Filter effect that is used to adjust the Colour and Tint of video equipment such as DVD players, Home Theatres, etc. Using this function, you can adjust the Colour and Tint to preferred values appropriate to the signal level of each video device using the Red / Green / Blue / Cyan / Magenta / Yellow Colour Bar Patterns, without using an additional Blue Filter.

 **Blue Only Mode** is available when the picture mode is set to **Movie** or **Standard**.

□ Picture Reset → Reset Picture Mode / Cancel

Resets all picture settings to the default values.


 **Reset Picture Mode**: Current picture values return to default settings.

Using Your TV as a Computer (PC) Display

Setting Up Your PC Software (Based on Windows XP)

The Windows display-settings for a typical computer are shown below. The actual screens on your PC will probably be different, depending upon your particular version of Windows and your particular video card. However, even if your actual screens look different, the same basic set-up information will apply in almost all cases. (If not, contact your computer manufacturer or Samsung Dealer.)

1. First, click on 'Control Panel' on the Windows start menu.
2. When the control panel window appears, click on 'Appearance and Themes' and a display dialog-box will appear.
3. When the control panel window appears, click on 'Display' and a display dialogbox will appear.
4. Navigate to the 'Settings' tab on the display dialog-box.
 - The correct size setting (resolution): Optimum-1920 X 1080 pixels
 - If a vertical-frequency option exists on your display settings dialog box, the correct value is '60' or '60 Hz'. Otherwise, just click 'OK' and exit the dialog box.

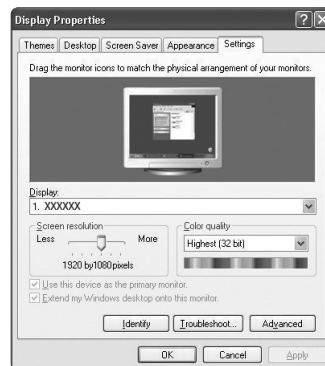

Display Modes

Both screen position and size will vary depending on the type of PC monitor and its resolution. The resolutions in the table are recommended.

D-Sub and HDMI/DVI Input

Mode	Resolution	Horizontal Frequency (KHz)	Vertical Frequency (Hz)	Pixel Clock Frequency (MHz)	Sync Polarity (H / V)
IBM	640 x 350	31.469	70.086	25.175	+/-
	720 x 400	31.469	70.087	28.322	-/+
MAC	640 x 480	35.000	66.667	30.240	-/-
	832 x 624	49.726	74.551	57.284	-/-
	1152 x 870	68.681	75.062	100.000	-/-
VESA CVT	720 x 576	35.910	59.950	32.750	+/-
	1152 x 864	53.783	59.959	81.750	+/-
	1280 x 720	44.772	59.855	74.500	+/-
	1280 x 960	75.231	74.857	130.000	+/-
	1280 x 720	56.456	74.777	95.750	+/-
VESA DMT	640 x 480	31.469	59.940	25.175	-/-
	640 x 480	37.861	72.809	31.500	-/-
	640 x 480	37.500	75.000	31.500	-/-
	800 x 600	37.879	60.317	40.000	+/+
	800 x 600	48.077	72.188	50.000	+/+
	800 x 600	46.875	75.000	49.500	+/+
	1024 x 768	48.363	60.004	65.000	-/-
	1024 x 768	56.476	70.069	75.000	-/-
	1024 x 768	60.023	75.029	78.750	+/+
	1152 x 864	67.500	75.000	108.000	+/+
	1280 x 1024	63.981	60.020	108.000	+/+
	1280 x 1024	79.976	75.025	135.000	+/+
	1280 x 800	49.702	59.810	83.500	-/-
	1280 x 800	62.795	74.934	106.500	-/-
	1280 x 960	60.000	60.000	108.000	+/+
	1360 x 768	47.712	60.015	85.500	+/+
	1440 x 900	55.935	59.887	106.500	-/-
	1440 x 900	70.635	74.984	136.750	-/-
	1680 x 1050	65.290	59.954	146.250	-/-
VESA GTF	1280 x 720	52.500	70.000	89.040	+/-
	1280 x 1024	74.620	70.000	128.943	-/-
VESA DMT / DTV CEA	1920 x 1080p	67.500	60.000	148.500	+/+


- ☑ When using an HDMI / DVI cable connection, you must use the **HDMI IN 3(DVI)** jack.
- ☑ The interlace mode is not supported.
- ☑ The set might operate abnormally if a non-standard video format is selected.
- ☑ Separate and Composite modes are supported. SOG is not supported.
- ☑ Too long or low quality VGA cable can cause picture noise at high resolution modes (1920x1080 or 1600x1200).


Setting up the TV with your PC


 **Preset:** Press the **SOURCE** button to select PC mode.

Auto Adjustment

Auto Adjustment allows the PC screen of set to self-adjust to the incoming PC video signal. The values of fine, coarse and position are adjusted automatically.

 Press the **TOOLS** button to display the **Tools** menu. You can also set the Auto Adjustment by selecting **Tools** → **Auto Adjustment**.

 This function does not work in DVI-HDMI mode.

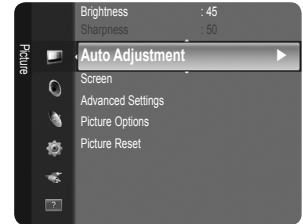

Screen

Coarse / Fine

The purpose of picture quality adjustment is to remove or reduce picture noise. If the noise is not removed by Fine-tuning alone, then adjust the frequency as best as possible (Coarse) and Fine-tune again. After the noise has been reduced, readjust the picture so that it is aligned on the center of screen.

PC Position

Adjust the PC's screen positioning if it does not fit the TV screen. Press the **▲** or **▼** button to adjusting the Vertical-Position. Press the **◀** or **▶** button to adjust the Horizontal-Position.

Image Reset

You can replace all image settings with the factory default values.

SOUND CONTROL

Configuring the Sound Menu

Mode → Standard / Music / Movie / Clear Voice / Custom

You can select a sound mode to suit your personal preferences.

 Press the **TOOLS** button to display the **Tools** menu. You can also configure the sound mode by selecting **Tools** → **Sound Mode**.



Equalizer

The sound settings can be adjusted to suit your personal preferences.

Mode

You can select a sound mode to suit your personal preferences.

Balance

Controls the balance between the right and left speakers.

100Hz / 300Hz / 1KHz / 3KHz / 10KHz (Bandwidth Adjustment)

To adjust the level of different bandwidth frequencies

Reset

Resets the equalizer settings to the default values.

SRS TruSurround HD → Off / On

SRS TruSurround HD is a patented SRS technology that solves the problem of playing 5.1 multichannel content over two speakers. TruSurround delivers a compelling, virtual surround sound experience through any two-speaker playback system, including internal television speakers. It is fully compatible with all multichannel formats.

 Press the SRS button on the remote control to select Off or On.

Audio Language (digital channels only)

You can change the default value for audio languages. Displays the language information for the incoming stream.

 While viewing a digital channel, this function can be selected.

 You can only select the language among the actual languages being broadcast.

❑ **Audio Format → MPEG / Dolby Digital / Advanced (digital channels only)**

When sound is emitted from both the main speaker and the audio receiver, a sound echo may occur due to the decoding speed difference between the main speaker and the audio receiver. In this case, use the TV Speaker function.

- ☑ While viewing a digital channel, this function can be selected.
- ☑ The **Audio Format** appears according to the broadcasting signal.

❑ **Audio Description (digital channels only)**

This is an auxiliary audio function that provides an additional audio track for visually challenged persons. This function handles the Audio Stream for the AD (Audio Description), when it is sent along with the Main audio from the broadcaster. Users can turn the Audio Description On or Off and control the volume.

■ **Audio Description → Off / On**

Turn the audio description function on or off.

■ **Volume**

You can adjust the audio description volume.

- ☑ Volume is active when **Audio Description** is set to **On**.
- ☑ While viewing a Digital channel, this function can be selected.

❑ **Auto Volume → Off / On**

Each broadcasting station has its own signal conditions, and so it is not easy to adjust the volume every time the channel is changed. This feature lets you automatically adjust the volume of the desired channel by lowering the sound output when the modulation signal is high or by raising the sound output when the modulation signal is low.

❑ **Speaker Select → External Speaker / TV Speaker**

If you want to hear the sound through separate speakers, cancel the internal amplifier.

- ☑ The volume and **MUTE** buttons do not operate when the **Speaker Select** is set to **External Speaker**.
- ☑ If you select **External Speaker** in the **Speaker Select** menu, the sound settings will be limited.

	TV's Internal Speakers	Audio Out (Optical, L/R Out) to Sound System
	RF, AV, Component, PC, HDMI	RF, AV, Component, PC, HDMI
TV Speaker	Sound Output	Sound Output
External Speaker	Mute	Sound Output
Video No Signal	Mute	Mute

❑ **Sound Reset → Reset All / Reset Sound Mode / Cancel**

You can restore the Sound settings to the factory defaults.

- ☑ **Reset Sound Mode:** Current sound values return to default settings.

Selecting the Sound Mode

You can set the sound mode by pressing the **DUAL** button. When you press it, the current sound mode is displayed on the screen.

	Audio Type	Dual 1 / 2	Default
A2 Stereo	Mono	MONO	Automatic change
	Stereo	STEREO ↔ MONO	
	Dual	DUAL 1 ↔ DUAL 2	DUAL 1
NICAM Stereo	Mono	MONO	Automatic change
	Stereo	MONO ↔ STEREO	
	Dual	MONO ↔ DUAL 1 DUAL 2 ←	DUAL 1

- ☑ If the stereo signal is weak and an automatic switching occurs, then switch to the mono.
- ☑ This function is only activated in stereo sound signal. It is deactivated in mono sound signal.
- ☑ This function is only available in TV mode.

Configuring the Setup Menu

Time

Clock

Setting the clock is necessary in order to use the various timer features of the TV.

The current time will appear every time you press the **INFO** button.

If you disconnect the power cord, you have to set the clock again.

• Clock Mode

You can set up the current time manually or automatically.

- **Auto:** Set the current time automatically using the time from the digital broadcast.
- **Manual:** Set the current time to a manually specified time.

• Clock Set

You can set the current time manually.

- You can set the day, month, year, hour and minute directly by pressing the number buttons on the remote control.
- Set up this item when you have set **Clock Mode** to **Manual**.

• Time Zone (Australia only)

You can select your time zone.

- Set up this item when you have set **Clock Mode** to **Auto**.

Sleep Timer → Off / 30 / 60 / 90 / 120 / 150 / 180

The sleep timer automatically shuts off the TV after a preset time (30, 60, 90, 120, 150 and 180 minutes).

The TV automatically switches to standby mode when the timer reaches 0.

To cancel the **Sleep Timer** function, select **Off**.


Press the **TOOLS** button to display the **Tools** menu. You can also set the sleep timer by selecting **Tools** → **Sleep Timer**.

Timer 1 / Timer 2 / Timer 3

Three different on / off timer settings can be made. You must set the clock first.

- **On Time:** Set the hour, minute, and activate / inactivate. (To activate timer with the setting you've chosen, set to **Activate**.)
- **Off Time:** Set the hour, minute, and activate / inactivate. (To activate timer with the setting you've chosen, set to **Activate**.)
- **Volume:** Select the desired turn on volume level.
- **Source** → **TV / USB:** You can select the **TV** or **USB** device content to be played when the TV turns on automatically. Select **TV** or **USB**. (Make sure that an USB device is connected to your TV.)
 - When there is only one photo file in the **USB**, the Slide Show will not play.
- **Antenna:** Select **ATV** or **DTV**.
- **Channel:** Select the desired channel.
- **Contents** (when **Source** is set to **USB**): You can select a folder on the USB Device with music or photo files to be played when the TV turns on automatically.
 - If the folder name is too long, the folder can not be selected.
 - If the folder name to be configured by the Contents function is too long, it cannot be selected.
- **Repeat:** Select **Once**, **Everyday**, **Mon~Fri**, **Mon~Sat**, **Sat~Sun** or **Manual**.
 - When **Manual** is selected, press the ► button to select the desired day of the week. Press the **ENTER** button over the desired day and the ✓ mark will appear.
- You can set the hour, minute and channel by pressing the number buttons on the remote control.
- Auto Power Off**

When you set the timer On, the television will eventually turn off, if no controls are operated for 3 hours after the TV was turned on by the timer. This function is only available in timer On mode and prevents overheating, which may occur if a TV is on for too long time.

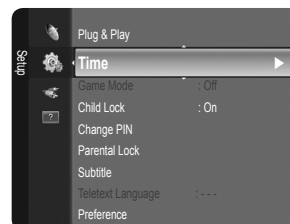

❑ **Game Mode → Off / On**

When connecting to a game console such as PlayStation™ or Xbox™, you can enjoy a more realistic gaming experience by selecting game menu.

- 🔍 Restrictions on game mode (Caution)
 - To disconnect the game console and connect another external device, set **Game Mode** to **Off** in the setup menu.
 - If you display the TV menu in **Game mode**, the screen shakes slightly.
- 🔍 **Game Mode** is not available in TV and PC mode.
- 🔍 If the picture is poor when external device is connected to TV, check if **Game Mode** is **On**. Set **Game Mode** to **Off** and connect external devices.
- 🔍 If **Game Mode** is **On**:
 - Picture Mode changes to **Standard** and Sound Mode changes to **Custom** automatically. The user cannot change these to other modes.
 - Sound Mode in the Sound menu is deactivated. Adjust the sound using the equalizer.
 - The Reset Sound function is activated. Selecting the Reset function after setting the equalizer resets the equalizer setting to the factory defaults.

❑ **Child Lock → Off / On**

This feature allows you to prevent unauthorized users, such as children, from watching unsuitable programme by muting out video and audio.

- 🔍 Before the setup screen appears, the PIN number input screen appears. Enter your 4 digit PIN number.
- 🔍 The default PIN number of a new TV set is **0-0-0-0**. You can change the PIN by selecting **Change PIN** from the menu.
- 🔍 You can lock some channels in **Channel List**. (refer to page 10)
- 🔍 **Child Lock** is available only in TV mode.


❑ **Change PIN**

You can change your personal ID number that is required to set up the TV.

- 🔍 Before the setup screen appears, the PIN number input screen appears. Enter your 4 digit PIN number.
- 🔍 The default PIN number of a new TV set is **0-0-0-0**.
- 🔍 If you forget the PIN code, press the remote control buttons in the following sequence, which resets the PIN to 0-0-0-0:
POWER (Off) → **MUTE** → 8 → 2 → 4 → **POWER** (On).

❑ **Parental Lock**

This feature allows you to prevent unauthorized users, such as children, from watching unsuitable programme by a 4-digit PIN (Personal Identification Number) code that is defined by the user.

- 🔍 The **Parental Rating** item differs depending on the country.
- 🔍 Before the setup screen appears, the PIN number input screen appears. Enter your 4 digit PIN number.
- 🔍 The default PIN number of a new TV set is **0-0-0-0**. You can change the PIN by selecting **Change PIN** from the menu.
- 🔍 When the parental ratings are set, the  symbol is displayed.
- 🔍 **Allow All**: Press to unlock all TV ratings.
Block All: Press to lock all TV ratings.

❑ **Subtitle**

You can activate and deactivate the subtitles. Use this menu to set the Subtitle Mode. **Normal** under the menu is the basic subtitle and **Hard of hearing** is the subtitle for a hearing-impaired person.

■ **Subtitle → Off / On**

Switches subtitles on or off.

■ **Mode → Normal / Hard of hearing**

Sets the subtitle mode.

■ **Subtitle Language**

Set the subtitle language.

- 🔍 If the programme you are watching does not support the **Hard of hearing** function, **Normal** automatically activates even though **Hard of hearing** mode is selected.
- 🔍 English is the default in cases where the selected language is unavailable in the broadcast.
- 🔍 You can select these options simply by pressing the **SUBT.** button on the remote control.

❑ **Teletext Language**

You can set the Teletext language by selecting the language type.

- 🔍 English is the default in cases where the selected language is unavailable in the broadcast.

❑ Preference

■ Primary Audio Language / Secondary Audio Language / Primary Subtitle Language / Secondary Subtitle Language / Primary Teletext Language / Secondary Teletext Language

Using this feature, users can select one of the languages. The language selected here is the default when the user selects a channel.

If you change the language setting, the Subtitle Language, Audio Language, and the Teletext Language of the Language menu are automatically changed to the selected language.

The Subtitle Language, Audio Language, and the Teletext Language of the Language menu show a list of languages supported by the current channel and the selection is highlighted. If you change this language setting, the new selection is only valid for the current channel. The changed setting does not change the setting of the Primary Subtitle Language, Primary Audio Language, or the Primary Teletext Language of the Preference menu.

❑ Digital Text → Disable / Enable (New Zealand only)

If the programme is broadcast with digital text, this feature is enabled.

🔗 MHEG (Multimedia and Hypermedia Information Coding Experts Group)

An International standard for data encoding systems used in multimedia and hypermedia. This is at a higher level than the MPEG system which includes data-linking hypermedia such as still images, character service, animation, graphic and video files as well as multimedia data. MHEG is user runtime interaction technology and is being applied to various fields including VOD (Video-On-Demand), ITV (Interactive TV), EC (Electronic Commerce), tele-education, tele-conferencing, digital libraries and network games.

🔗 At present, the broadcasting station provides EPG content only. Providing more content is scheduled for the future.

🔗 If **Digital Text** is set to **Disable**, the EPG (Electronic Program Guide) will not work.

❑ Melody → Off / Low / Medium / High

A melody sound can be set to come on when the TV is powered On or Off.

🔗 The Melody does not play

- When no sound is output from the TV because the **MUTE** button has been pressed.
- When no sound is output from the TV because the (–) Volume button has been pressed.
- When the TV is turned off by Sleep Timer function.

❑ Energy Saving → Off / Low / Medium / High / Auto

This feature adjusts the brightness of the TV in order to reduce power consumption. When watching TV at night, set the **Energy Saving** mode option to **High** to reduce eye fatigue as well as power consumption.

🔗 Press the **TOOLS** button to display the **Tools** menu. You can also set the Energy Saving option by selecting **Tools** → **Energy Saving**.

Configuring the Input Menu


Source List

Use to select TV or other external input sources such as DVD / Blu-ray players / Satellite receivers (Set-Top Box) connected to the TV. Use to select the input source of your choice.

- Press the **SOURCE** button on the remote control to view an external signal source. TV mode can be selected by pressing the **TV** button.

TV / AV1 / AV2 / Component1 / Component2 / PC / HDMI1 / HDMI2 / HDMI3(DVI) / HDMI4 / USB

- You can choose only those external devices that are connected to the TV. In the **Source List**, connected inputs will be highlighted and sorted to the top. Inputs that are not connected will be sorted to the bottom.
- PC always stays activated.
- Using the Colour buttons on the remote with the Source list**
 - Red (Refresh)**: Refreshes the connecting external devices.
 - TOOLS (Tools)**: Displays the **Edit Name** and **Information** menus.

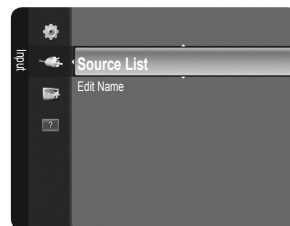

Edit Name

Name the device connected to the input jacks to make your input source selection easier.

VCR / DVD / Cable STB / Satellite STB / PVR STB / AV Receiver / Game / Camcorder / PC / DVI / DVI PC / TV / IPTV / Blu-ray / HD DVD / DMA

- When a PC with a resolution of 1920 x 1080@60Hz is connected to the **HDMI IN 3(DVI)** port, you should set the **HDMI3/DVI** mode to **DVI PC** in the **Edit Name** of the **Input** mode.
- When connecting an HDMI/DVI cable to the **HDMI IN 3(DVI)** port, you should set the **HDMI3/DVI** mode to **DVI** or **DVI PC** in the **Edit Name** of the **Input** mode. In this case, a separate sound connection is required.

Configuring the Support Menu

Self Diagnosis

Picture Test

If you think you have a picture problem, perform the picture test. Check the colour pattern on the screen to see if the problem still exists.

- Yes**: If the test pattern does not appear or there is noise in the test pattern, select **Yes**. There may be a problem with the TV. Contact Samsung's call center for assistance.
- No**: If the test pattern is properly displayed, select **No**. There may be a problem with your external equipment. Please check your connections. If the problem still persists, refer to the external device's user manual.

Sound Test


If you think you have a sound problem, please perform the sound test. You can check the sound by playing a built-in melody sound through the TV.

- If you hear no sound from the TV's speakers, before performing the sound test, make sure **Speaker Select** is set to **TV speaker** in the Sound menu.
- The melody will be heard during the test even if **Speaker Select** is set to **External Speaker** or the sound is muted by pressing the **MUTE** button.
- Yes**: If during the sound test you can hear sound only from one speaker or not at all, select **Yes**. There may be a problem with the TV. Contact Samsung's call center for assistance.
- No**: If you can hear sound from the speakers, select **No**. There may be a problem with your external equipment. Please check your connections. If the problem still persists, refer to the external device's user manual.

Signal Information (digital channels only)

Unlike analogue channels, which can vary in reception quality from 'snowy' to clear, digital (HDTV) channels have either perfect reception quality or you will not receive them at all. So, unlike analogue channels, you cannot fine tune a digital channel. You can, however, adjust your antenna to improve the reception of available digital channels.


- If the signal strength meter indicates that the signal is weak, physically adjust your antenna to increase the signal strength. Continue to adjust the antenna until you find the best position with the strongest signal.

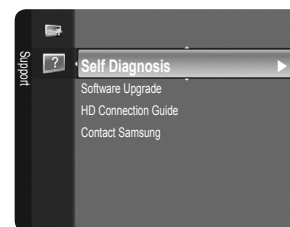

❑ Software Upgrade

To keep your product up-to-date with new Digital Television features then software upgrades are periodically broadcast as part of the normal Television signal. It will automatically detect these signals and display the software upgrade banner. You are given the option to install the upgrade.


- ☑ Current Version shows version of the software being installed in the TV.
- ☑ Alternative Software shows the previous version that can be replaced.
- ☑ Software is represented as 'Year/Month/Day_Version'. The more recent the date, the newer the software version. Installing the latest version is recommended.

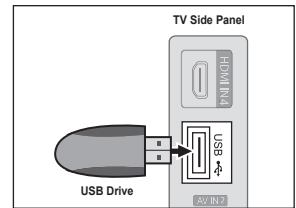

■ By USB

Insert a USB drive containing the firmware upgrade into TV. Please be careful to not disconnect the power or remove the USB drive while upgrades are being applied. The TV will turn off and turn on automatically after completing the firmware upgrade. Please check the firmware version after the upgrades are complete. When software is upgraded, video and audio settings you have made will return to their default (factory) settings.

We recommend you write down your settings so that you can easily reset them after the upgrade.

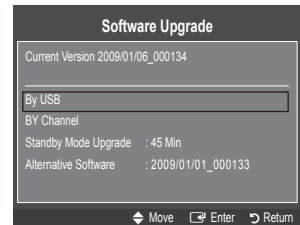

■ By Channel

Upgrades the software using the broadcasting signal.

- ☑ If the function is selected during the software transmission period, this function searches for available software and downloads the software.
- ☑ The time required to download the software is determined by the signal status.

■ Standby Mode Upgrade

To continue software upgrade with master power on, Select On by pressing the ▲ or ▼ button. 45 minutes after entering standby mode, a manual upgrade is automatically conducted. Since the power of the unit is turned on internally, the screen may be on slightly for the LCD product. This phenomenon may continue for more than 1 hour until the software upgrade is completed.

■ Alternative Software

If Alternative Software is existing, this menu will be activated. You can change the software to previous version.

- ☑ If software was changed, existing software is displayed.
- ☑ You can change current software to alternative software by 'Alternative Software'.

❑ HD Connection Guide


This menu presents the connection method that provides the optimal quality for the HD TV. Refer to this information when connecting external devices to the TV.




❑ Contact Samsung

View this information when your TV does not work properly or when you want to upgrade the software. You can view the information regarding the call center, product and software file download method.

MEDIA PLAY (USB)


Connecting a USB Device

1. Press the **POWER** button to turn the TV on.
2. Connect a USB device containing photo and/or music files to the **USB** jack on the side of the TV.
3. When the **Application** selection screen is displayed, press the **ENTER**  button to select **Media Play (USB)**.


-  MTP (Media Transfer Protocol) is not supported.
-  The file system supports FAT16, FAT32 and NTFS.
-  Certain types of USB Digital camera and audio devices may not be compatible with this TV.


-  **Media Play** only supports USB Mass Storage Class devices (MSC). MSC is a Mass Storage Class Bulk-Only Transport device. Examples of MSC are Thumb drives, Flash Card Readers and USB HDD (USB HUB are not supported.).

-  Please connect directly to the USB port of your TV. If you are using a separate cable connection, there may be a USB compatibility problem.


-  Before connecting your device to the TV, please back up your files to prevent them from damage or loss of data. SAMSUNG is not responsible for any data file damage or data loss.


-  Do not disconnect the USB device while it is loading.

-  MSC supports MP3 and JPEG files, while a PTP device supports JPEG files only.


-  The higher the resolution of the image, the longer it takes to display on the screen.


-  The maximum supported JPEG resolution is 15360X8640 pixels.


-  For unsupported or corrupted files, the 'Not Supported File Format' message is displayed.

-  MP3 files with DRM that have been downloaded from a non-free site cannot be played. Digital Rights Management (DRM) is a technology that supports the creation of content, the distribution and management of the content in an integrated and comprehensive way, including the protection of the rights and interests of the content providers, the prevention of the illegal copying of contents, as well as managing billings and settlements.




-  When moving to a photo, loading may take a few seconds. At this point, the loading icon will appear at the screen.

-  If more than one MSC device is connected, some of them may not be recognized. If a device requires high power (more than 500mA or 5V), the USB device may not be supported.

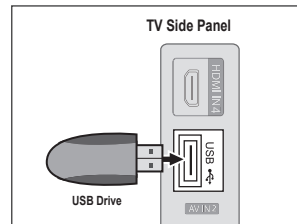-  If an over-power warning message is displayed while you are connecting or using a USB device, the device may not be recognized or may malfunction.



Using the Remote Control Button in Media Play Menu





Button	Operations
▲/▼/◀/▶	Move the cursor and select an item.
ENTER 	Select the currently selected item. While playing a slide show or music file: - Pressing the ENTER  button during play pauses the play. - Pressing the ENTER  button during pause resumes the play.
▶/	Play or pause the Slide Show, music.
RETURN	Return to the previous menu.
TOOLS	Run various functions from the Photo and Music menus.
■	Stop the current slide show or Music file.
◀◀/▶▶	Jump to previous group/Jump to next group.
INFO	Show file information.
MEDIA.P	Exit Media Play mode.
^ P v, EXIT, TV	Stop Media Play mode and Returns to TV mode.




Media Play Function

This function enables you to view and listen to photo and/or music files saved on a USB Mass Storage Class (MSC) device.

✎ It might not work properly with unlicensed multimedia files.

 
Entering the Media Play (USB) Menu

1. Press the **MENU** button. Press the **▲** or **▼** button to select **Application**, then press the **ENTER**  button.
2. Press the **▲** or **▼** button to select **Media Play (USB)**, then press the **ENTER**  button.
 - ✎ The **Media Play (USB)** menu is displayed.
 - ✎ Press the **MEDIA.P** button on the remote control to display the **Media Play** menu.
 - ✎ Press the **SOURCE** button on the remote control to view the source list. Then Press the **▲** or **▼** button to select **USB**.
3. Press the Red button, then press the **▲** or **▼** button to select the USB Memory. Press the **ENTER**  button.
 - ✎ This function differs depending on the USB Memory.
 - ✎ The selected USB device name appears at the bottom left of the screen.
4. Press the **◀** or **▶** button to select an icon (**Photo**, **Music**, **Setup**), then press the **ENTER**  button.
 - ✎ To exit **Media Play** mode, press the **MEDIA.P** button on the remote control.

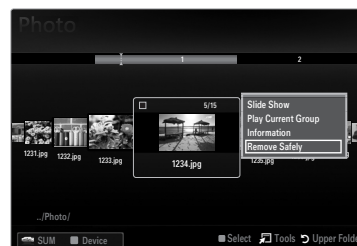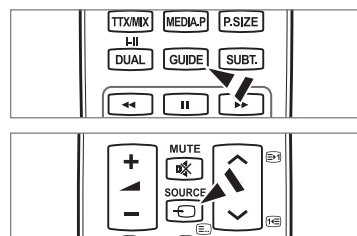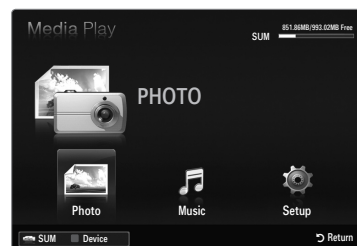


Removing a USB Memory Device Safely

You can remove the device safely from the TV.

1. Press the **TOOLS** button in the Media Play file list screen, or while a Slide Show or music is being played.
2. Press the **▲** or **▼** button to select **Remove Safely**, then press the **ENTER**  button.
3. Remove the USB device from the TV.


Screen Display

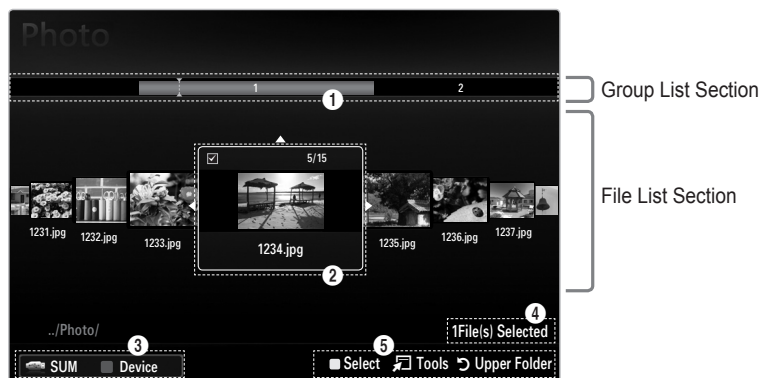

Move to either 'Group List Section' or 'File List Section' using the Up and Down buttons. After selecting a section, press the **◀** or **▶** buttons to select an item.

- ❶ View Groups: The sort group where the currently selected file is contained is highlighted.
- ❷ Currently selected file: The selected file is the file you can now control. Photo file are displayed as thumbnail images.
- ❸ Current Device: Shows the currently selected device name. Press the Red button to select a device.
 - Red (**Device**) button: Selects a connected device.
- ❹ Item Selection Information: Shows the number of files that are selected by pressing the Yellow button.
- ❺ Help Items
 - Yellow (**Select**) button: Selects file from the file list. Selected files are marked with a symbol ✓. Press the Yellow button again to cancel a file selection.
 - **TOOLS (Tools)** button: Displays the option menus. (The option menu changes according to the current status.)

Photo List Option Menu

1. Press the **MEDIA.P** button.
2. Press the ◀ or ▶ button to select **Photo**, then press the **ENTER**  button.
3. Press the ◀ or ▶ button to select the desired photo file.
 - ✎ Selecting Multiple Photos
 - Press the ◀ or ▶ button to select the desired photo file. Then press the Yellow button.
 - Repeat the above operation to select multiple photo files.
 - The mark ✓ appears to the selected photo file.
4. Press the **TOOLS** button.
 - ✎ The option menu changes according to the current status.



☐ Slide Show

Using this menu, you can play a SlideShow using the photo files on the USB memory device.

☐ Play Current Group

Using this menu, you can play a SlideShow using only the photo files in the currently selected sorting group.

☐ Deselect All (When at least one file is selected)

You can deselect all files.

- ✎ The ✓ mark indicating the corresponding file is selected is hidden.

☐ Information

The photo file information including the name, the size, the resolution, the date modified and the path is displayed.

- ✎ You can view the information of photo files during a SlideShow using the same procedures.
- ✎ Press the **INFO** button to viewing the information.


☐ Remove Safely

You can remove the device safely from the TV.





Viewing a Photo or Slide Show







Viewing a Slide Show

 


1. Press the **▼** button to select the **File List Section**.
2. Press the **TOOLS** button.
3. Press the **▲** or **▼** button to select **Slide Show**, then press the **ENTER**  button.
 - ☑ All files in the File List Section will be used for the Slide Show.

- ☑ During the slide show, files are displayed in order from the currently shown file.
- ☑ The Slide Show progresses in the order sorted in the File List Section.
- ☑ Music files can be automatically played during the Slide Show if the **Background Music** is set to **On**.


- ☐ While a photo list is displayed, press the  (Play)/**ENTER**  button on the remote control to start slide show.

SlideShow Control Buttons


 

Button	Operations
ENTER 	Play/Pause the Slide Show.
	Play the Slide Show.
	Pause the Slide Show.
	Exit Slide Show and return to the photo list.
 	Change the SlideShow playing speed.
TOOLS	Run various functions from the Photo menus.

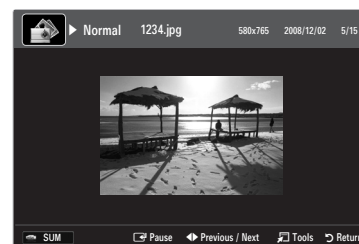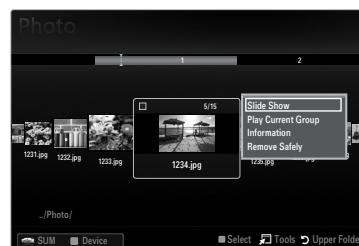

Playing current group




1. Press the **▲** button to move to the Group List Section.
2. Select a group using the **◀** and **▶** buttons.
3. Press the  (Play) button. A slideshow begins with the files of the selected group.

Alternatively



1. Select the files in the Photo List Section, contained the desired group.
 - ☑ To move to the previous/next group, press the  (REW) or  (FF) button.
2. Press the **TOOLS** button.
3. Press the **▲** or **▼** button to select **Play Current Group**, then press the **ENTER**  button.
 - ☑ Only the photos in the sorting group including the selected files will be used for the Slide Show.




To perform a Slide Show with only the selected files


1. Press the **▼** button to select the File List Section.
2. Press the **◀** or **▶** button to select the desired photo in the File List.
3. Press the Yellow button.
4. Repeat the above operation to select multiple photos.
 - ☑ The  mark appears to the left of the selected photo.
 - ☑ If you select one file, the Slide Show will not be performed.
 - ☑ To deselect all selected files, press the **TOOLS** button and select **Deselect All**.
5. Press the  (Play)/**ENTER**  button.
 - ☑ The selected files will be used for the Slide Show.

- **Alternatively**

1. In the File List Section, press the Yellow buttons to select the desired photos.
 2. Press the **TOOLS** button.
 3. Press the ▲ or ▼ button to select **Slide Show**, then press the **ENTER**  button.
-  The selected files will be used for the Slide Show.

Slide Show Option Menu

1. During a slide show (or when viewing a photo), press the **TOOLS** button to set the option.
2. Press the ▲ or ▼ button to select the desired option, then press the **ENTER**  button.

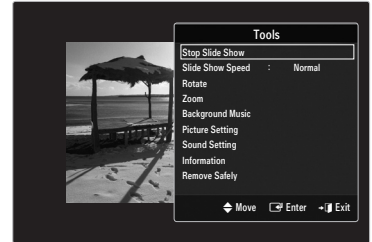

☐ **Stop Slide Show / Start Slide Show**

You can start or stop a SlideShow.




☐ **Slide Show Speed → Slow / Normal / Fast**

You can select the slide show speed.

-  This function is available only during a slide show.
-  You can also change the speed of the Slide Show by pressing the  (REW) or  (FF) button during the Slide Show.




☐ **Rotate**

You can rotate photos saved on a USB memory device.

-  Whenever you press the ◀ button, it rotates by 270°, 180°, 90°, and 0°.
-  Whenever you press the ▶ button, it rotates by 90°, 180°, 270°, and 0°.
-  The rotated file is not saved.


☐ **Zoom**

You can magnify photos saved on a USB memory device. (x1 → x2 → x4)

-  To move the enlarged photo image, press the **ENTER**  button, then press the ▲/▼/◀/▶ buttons. Note that when the enlarged picture is smaller than the original screen size, the location change function doesn't work.
-  The enlarged file is not saved.

☐ **Background Music**

You can select background music when watching a Slide Show.

-  To use this feature, there must be music and photo files stored on the USB device.

■ **Background Music → Off / On**

- **Off:** Background music is not played.
- **On:** When the background music is available, if you select **On**, the music is played back.

■ **Select Music File (0 File(s) Selected)**

Only the selected music file is set as the background music.

☐ **Picture Setting / Sound Setting**

You can select the picture and sound settings.

☐ **Information**

The photo file information is displayed.

☐ **Remove Safely**

You can remove the device safely from the TV.

Music List Option Menu

1. Press the **MEDIA.P** button.
2. Press the ◀ or ▶ button to select **Music**, then press the **ENTER** button.
3. Press the ◀ or ▶ button to select the desired Music file.
 - ☑ **Selecting Multiple Music Files**
 - Press the ◀ or ▶ button to select the desired music file. Then press the Yellow button.
 - Repeat the above operation to select multiple music files.
 - The mark ✓ appears to the selected music file.
4. Press the **TOOLS** button.
 - ☑ The option menu changes according to the current status.



☐ Play Current Group

Using this menu, you can only play music files in the currently selected sorting group.

☐ Deselect All (When at least one file is selected)

You can deselect all files.

- ☑ The ✓ mark indicating the corresponding file is selected is hidden.

☐ Information

The music file information including the name, the size, the date modified and the path is displayed.

- ☑ You can view the music file information during **Play Current Group** using the same procedures.
- ☑ Press the **INFO** button to viewing the information.

☐ Remove Safely


You can remove the device safely from the TV.



Playing Music

Playing a music file

1. Press the ▼ button to select the File List Section.
2. Press the ◀ or ▶ button to select a music file to be played.
3. Press the ▶ (Play)/ENTER button.
 - ☑ This menu only shows files with the MP3 file extension. Files with other file extensions are not displayed, even if they are saved on the same USB device.
 - ☑ The selected file is displayed at the top with its playing time.
 - ☑ To adjust the music volume, press the volume button on the remote control. To mute the sound, press the **MUTE** button on the remote control.
 - ☑ If the sound is odd when playing MP3 files, adjust the **Equalizer** and **SRS TruSurround HD** in the Sound menu. (An over-modulated MP3 file may cause a sound problem.)
 - ☑ The playing duration of a music file may be displayed as '00:00:00' if its playing time information is not found at the start of the file.
 - ☑ ◀◀ (REW) or ▶▶ (FF) buttons do not function during play.

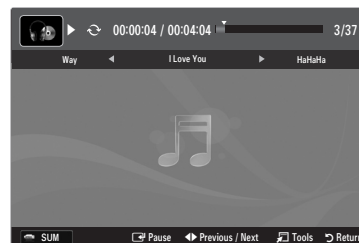

☑ Music Play Control Buttons

Button	Operations
ENTER button	Play/Pause the music file.
▶ button	Play the music file
⏸ button	Pause the music file
■ button	Exit play mode and return to the music list.
TOOLS	Run various functions from the Music menus.

☑ Music function information icon

🔄 icon	When all music files in the folder (or the selected file) are repeated. Repeat Mode is On.
🔄 icon	When all music files in the folder (or the selected file) are played once. Repeat Mode is Off.

Playing the music group

1. Press the **▲** button to move to the Group List Section.
 2. Select a group using the **◀** and **▶** buttons.
 3. Press the **▶** (Play) button. The files of the selected group will start playing.
- **Alternatively**
 1. Select the files in the File List Section, contained the desired group.
 - ☞ To move to the previous/next group, press the **◀** (REW) or **▶** (FF) button.
 2. Press the **TOOLS** button.
 3. Press the **▲** or **▼** button to select **Play Current Group**, then press the **ENTER** **↵** button.
 - ☞ The music files in the sorting group including the selected file are played.

Playing the selected music files

1. Press the **▼** button to select the File List Section.
2. Press the **◀** or **▶** button to select the desired music file.
3. Press the Yellow button.
4. Repeat the above operation to select multiple music files.
 - ☞ The **✓** appears to the left of the selected music file.
 - ☞ To deselect all selected files, press the **TOOLS** button and select **Deselect All**.
5. Press the **▶** (Play)/**ENTER** **↵** button.
 - ☞ The selected files will be played.

Music Play option Menu

Music Play Option Menu


- ☐ **Repeat Mode → On / Off**
You can play music files repeatedly.
- ☐ **Picture Setting / Sound Setting**
You can configure the picture and sound settings.
- ☐ **Information**
The music file information is displayed.
- ☐ **Remove Safely**
You can remove the device safely from the TV.



Using the Setup Menu

Setup displays the user settings of the **Media Play** menu.

1. Press the **MEDIA.P** button.
 2. Press the **◀** or **▶** button to select **Setup**, then press the **ENTER** **↵** button.
 3. Press the **▲** or **▼** button to select the desired option.
 4. Press the **◀** or **▶** button to select the desired option.
 - ☞ To exit **Media Play** mode, press the **MEDIA.P** button on the remote control.
- **Music Repeat Mode → On / Off**
Select to repeatedly play music files.
 - **Screen Saver Run Time → 2 hours / 4 hours / 8 hours**
Select to set the waiting time before the screen saver appears.
 - **Information**
Select to view the information of the connected device.
 - **Remove Safely**
You can remove the device safely from the TV.

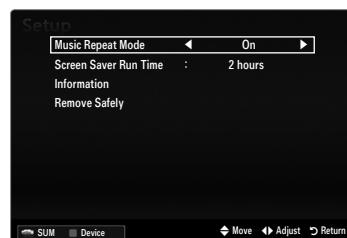


Connecting Anynet+ Devices

What is Anynet+?


Anynet+ is a function that enables you to control all connected Samsung devices that support Anynet+ with your Samsung TV's remote. The Anynet+ system can be used only with Samsung devices that have the Anynet+ feature. To be sure your Samsung device has this feature, check if there is an Anynet+ logo on it.

To connect to a TV

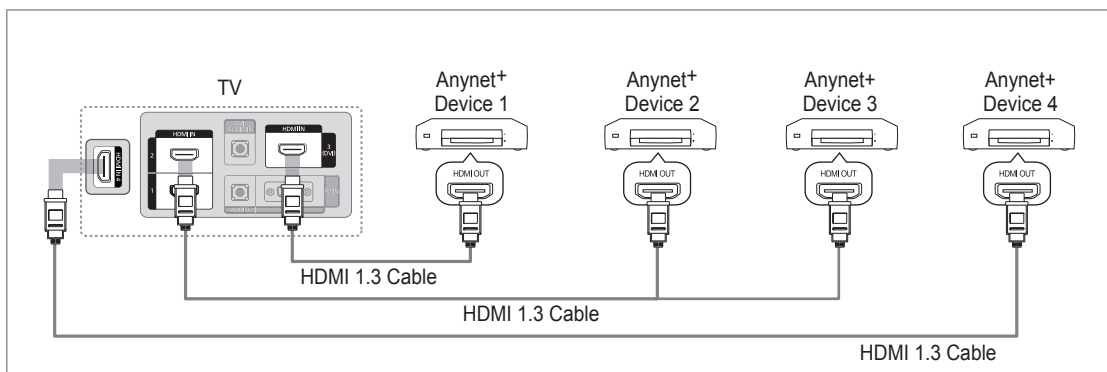

1. Connect the **HDMI IN (1, 2, 3 (DVI) or 4)** jack on the TV and the **HDMI OUT** jack of the corresponding Anynet+ device using an HDMI cable.


To connect to Home Theatre

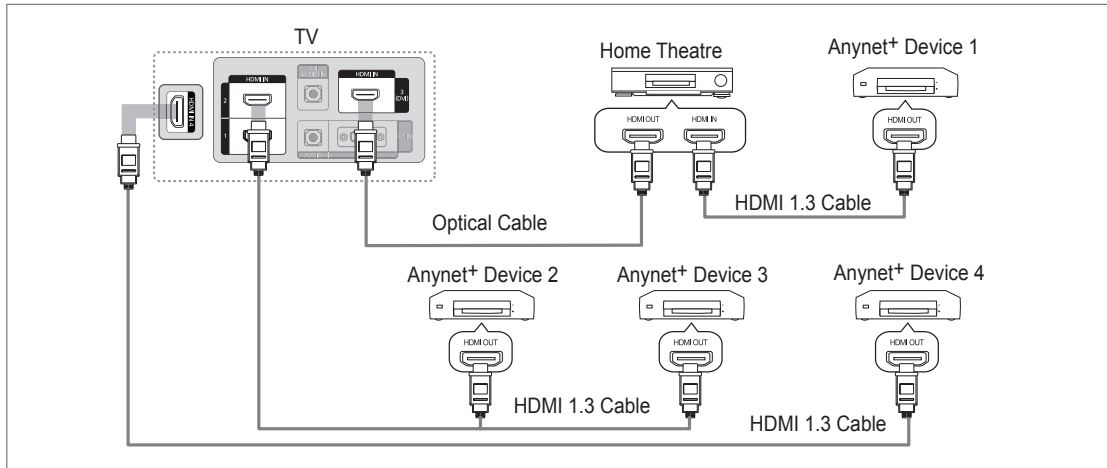

1. Connect the **HDMI IN (1, 2, 3 (DVI) or 4)** jack on the TV and the **HDMI OUT** jack of the corresponding Anynet+ device using an HDMI cable.
2. Connect the **HDMI IN** jack of the home theatre and the **HDMI OUT** jack of the corresponding Anynet+ device using an HDMI cable.
 - ☑ Connect the Optical cable between the **DIGITAL AUDIO OUT (OPTICAL)** jack on your TV and the Digital Audio Input on the Home Theatre.
 - ☑ When following the connection above, the Optical jack only outputs 2 channel audio. You will only hear sound from the Home Theatre's Front Left and Right speakers and the subwoofer. If you want to hear 5.1 channel audio, connect the **DIGITAL AUDIO OUT (OPTICAL)** jack on the DVD / Satellite Box (ie Anynet Device 1 or 2) directly to the Amplifier or Home Theatre, not the TV.
 - ☑ Connect only one Home Theatre.
 - ☑ You can connect an Anynet+ device using the HDMI 1.3 cable. Some HDMI cables may not support Anynet+ functions.
 - ☑ Anynet+ works when the AV device supporting Anynet+ is in the Standby or On status.
 - ☑ Anynet+ supports up to 12 AV devices in total. Note that you can connect up to 3 devices of the same type.

Setting Up Anynet+

- Press the **TOOLS** button to display the **Tools** menu. You can also display Anynet+ menu by selecting **Tools** → **Anynet+ (HDMI-CEC)**.

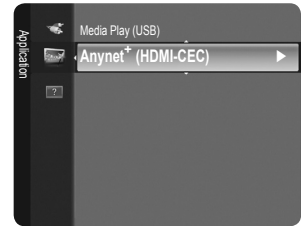

Setup

Anynet+ (HDMI-CEC) → Off / On


To use the Anynet+ Function, **Anynet+ (HDMI-CEC)** must be set to **On**.

- When the **Anynet+ (HDMI-CEC)** function is disabled, all the Anynet+ related operations are deactivated.

Auto Turn Off → No / Yes

Setting an Anynet+ Device to turn Off automatically when the TV is Turned Off and setting a TV to turn off automatically when a HDMI-CEC device requests tv to turn off.

- The active source on the TV remote must be set to TV to use the Anynet+ function.
- If you set **Auto Turn Off** to **Yes**, connected external devices are also turned off when the TV is turned off. If an external device is still recording, it may or may not turn off.

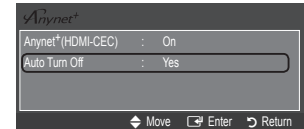

Switching between Anynet+ Devices

- Press the **TOOLS** button. Press the **ENTER** button to select **Anynet+ (HDMI-CEC)**.
 - Press the **▲** or **▼** button to select **Device List**, then press the **ENTER** button.
 - Anynet+ devices connected to the TV are listed.
 - If you cannot find a device you want, press the red button to scan for devices.
 - Press the **▲** or **▼** button to select a particular device and press the **ENTER** button. It is switched to the selected device.
 - Only when you set **Anynet+ (HDMI-CEC)** to **On** in the **Application** menu, the **Device List** menu appears.
- Switching to the selected devices may take up to 2 minutes. You cannot cancel the operation during the switching operation.
 - The time required to scan for devices is determined by the number of connected devices.
 - When the device scan is complete, the number of devices found are not displayed.
 - Although the TV automatically searches the device list when the TV is turned on via the power button, devices connected to the TV may not always be automatically displayed in the device list. Press the red button to search for the connected device.
 - If you have selected external input mode by pressing the **SOURCE** button, you cannot use the Anynet+ function. Make sure to switch to an Anynet+ device by using the **Device List**.



Anynet+ Menu

The Anynet+ menu changes depending on the type and status of the Anynet+ devices connected to the TV.

Anynet+ Menu	Description
View TV	Anynet+ mode changes to TV broadcast mode.
Device List	Shows the Anynet+ device list.
(device_name) MENU	Shows the connected device menus. E.g. If a DVD recorder is connected, the disc menu of the DVD recorder will appear.
(device_name) INFO	Shows the play menu of the connected device. E.g. If a DVD recorder is connected, the play menu of the DVD recorder will appear.
Recording: (*recorder)	Starts recording immediately using the recorder. (This is only available for devices that support the recording function.)
Stop Recording: (*recorder)	Stops recording.
Receiver	Sound is played through the receiver.

- If more than one recording device is connected, they are displayed as (*recorder) and if only one recording device is connected, it will be represented as (*device_name).

TV Remote Control Buttons Available in Anynet+ Mode

Device Type	Operating Status	Available Buttons
Anynet+ Device	After switching to the device, when the menu of the corresponding device is displayed on the screen.	Numeric buttons ▲/▼/◀/▶/ ENTER buttons Colour buttons / EXIT button
	After switching to the device, while playing a file	◀◀(Backward search) / ▶▶(Forward search) / ■(Stop) / ▶(Play) / (Pause)
Device with built-in Tuner	After switching to the device, when you are watching a TV programme	P ▼ / P ▲ button
Audio Device	When Receiver is activated	Volume / MUTE button

- ✎ The Anynet+ function only works when the active source on the TV remote control is set to TV.
- ✎ The button works only while in the recordable state.
- ✎ You cannot control Anynet+ devices using the buttons on the TV. You can control Anynet+ devices only using the TV remote control.
- ✎ The TV remote control may not work under certain conditions. If this occurs, reselect the Anynet+ device.
- ✎ The Anynet+ functions do not operate with other manufacturers' products.
- ✎ The ◀◀, ▶▶ operations may differ depending on the device.

Recording

You can make a recording of a TV programme using a Samsung recorder.

- Press the **TOOLS** button. Press the **ENTER** button to select **Anynet+ (HDMI-CEC)**.
- Press the ▲ or ▼ button to select **Recording Immediately** and press the **ENTER** button. Recording begins.

- ✎ When there is more than one recording device
When multiple recording devices are connected, the recording devices are listed. Press the ▲ or ▼ button to select a recording device and press the **ENTER** button. Recording begins.
- ✎ When the recording device is not displayed select **Device List** and press the red button to search devices

- Press the **EXIT** button to exit.

- ✎ You can record the source streams by selecting **Recording**: (device_name).
- ✎ Pressing the button will record whatever you are currently watching. If you are watching video from another device, the video from the device is recorded.
- ✎ Before recording, check whether the antenna jack is properly connected to the recording device. To properly connect an antenna to a recording device, refer to the recording device's users manual.



Listening through a Receiver (Home theatre)

You can listen to sound through a receiver instead of the TV speaker.

- Press the **TOOLS** button. Press the **ENTER** button to select **Anynet+ (HDMI-CEC)**.
- Press the ▲ or ▼ button to select **Receiver**. Press the ◀ or ▶ button to select **On** or **Off**.
- Press the **EXIT** button to exit.

- ✎ If your receiver supports audio only, it may not appear in the device list.
- ✎ The receiver will work when you have properly connected the optical in jack of the receiver to the **DIGITAL AUDIO OUT (OPTICAL)** jack of the TV.
- ✎ When the receiver (home theatre) is set to On, you can hear sound output from the TV's Optical jack. When the TV is displaying a DTV(air) signal, the TV will send out 5.1 channel sound to the Home theatre receiver. When the source is a digital component such as a DVD and is connected to the TV via HDMI, only 2 channel sound will be heard from the Home Theatre receiver.
- ✎ If there is a power interruption to the TV when the **Receiver** is set to **On** (by disconnecting the power cord or a power failure), the **Speaker Select** may be set to **External Speaker** when you turn the TV on again.



Troubleshooting for Anynet+

Problem	Possible Solution
Anynet+ does not work.	<ul style="list-style-type: none"> ● Check if the device is an Anynet+ device. The Anynet+ system supports Anynet+ devices only. ● Connect only one receiver (home theatre). ● Check if the Anynet+ device power cord is properly connected. ● Check the Anynet+ device's Video/Audio/HDMI 1.3 cable connections. ● Check whether Anynet+ (HDMI-CEC) is set to On in the Anynet+ setup menu. ● Check whether the TV remote control is in TV mode. ● Check whether it is Anynet+ exclusive remote control. ● Anynet+ doesn't work in certain situations. (Searching channels, Operating Plug & Play, etc.) ● When connecting or removing the HDMI 1.3 cable, please make sure to search devices again or turn your TV off and on again. ● Check if the Anynet+ Function of Anynet+ device is set on.
I want to start Anynet+.	<ul style="list-style-type: none"> ● Check if the Anynet+ device is properly connected to the TV and check if the Anynet+ (HDMI-CEC) is set to On in the Anynet+ Setup menu. ● Press the TV button on the TV remote control to switch to TV. Then press the TOOLS button to show the Anynet+ menu and select a menu you want.
I want to exit Anynet+.	<ul style="list-style-type: none"> ● Select View TV in the Anynet+ menu. ● Press the SOURCE button on the TV remote control and select a device other than Anynet+ devices. ● Press P ∨/∧, CH LIST, PRE-CH, and FAV.CH to change the TV mode. (Note that the channel button operates only when a tuner-embedded Anynet+ device is not connected.)
The message 'Connecting to Anynet+ device...' appears on the screen.	<ul style="list-style-type: none"> ● You cannot use the remote control when you are configuring Anynet+ or switching to a view mode. ● Use the remote control when the Anynet+ setting or switching to view mode is complete.
The Anynet+ device does not play.	<ul style="list-style-type: none"> ● You cannot use the play function when Plug & Play is in progress.
The connected device is not displayed.	<ul style="list-style-type: none"> ● Check whether or not the device supports Anynet+ functions. ● Check whether or not the HDMI 1.3 cable is properly connected. ● Check whether Anynet+ (HDMI-CEC) is set to On in the Anynet+ setup menu. ● Search Anynet+ devices again. ● You can connect an Anynet+ device using the HDMI 1.3 cable only. Some HDMI cables may not support Anynet+ functions. ● If it is terminated by an abnormal situation such as disconnecting the HDMI cable or power cord or a power failure, please repeat the device scan.
The TV programme cannot be recorded.	<ul style="list-style-type: none"> ● Check whether the antenna jack on the recording device is properly connected.
The TV sound is not output through the receiver.	<ul style="list-style-type: none"> ● Connect the optical cable between TV and the receiver.

RECOMMENDATIONS

Teletext Feature

Most television stations provide written information services via Teletext. The index page of the teletext service gives you information on how to use the service. In addition, you can select various options to suit your requirements by using the remote control buttons.

- ☑ For teletext information to be displayed correctly, channel reception must be stable. Otherwise, information may be missing or some pages may not be displayed.
- ☑ You can change teletext pages by pressing the numeric buttons on the remote control.

1 (mode)

Press to select the teletext mode (LIST/FLOF). If you press it in the LIST mode, it switches into the List save mode. In the List save mode, you can save teletext page into list using the 8(store) button.

2 (store)

Used to store the teletext pages.

3 (size)

Press to display the double-size letters in the upper half of the screen. For lower half of the screen, press it again. To display normal screen, press it once again.

4 (reveal)

Used to display the hidden text (answers to quiz games, for example). To display normal screen, press it again.

5 **Colour buttons**

(red/green/yellow/blue)

If the FASTEXT system is used by a broadcasting company, the different topics covered on a teletext page are colour-coded and can be selected by pressing the coloured buttons. Press one of them corresponding to the required. The page is displayed with other coloured information that can be selected in the same way. To display the previous or next page, press the corresponding coloured button.

- ☑ You can change Teletext pages by pressing the numeric buttons on the remote control.

6 (teletext on/mix)

Press to activate teletext mode after selecting the channel providing the teletext service. Press it twice to overlap the teletext with the current broadcasting screen.

7 (exit)

Exit from the teletext display.

8 (sub-page)

Used to display the available sub-page.

9 (page up)

Used to display the next teletext page.

10 (page down)

Used to display the previous teletext page.

11 (hold)


Used to hold the display on a given page if the selected page is linked with several secondary pages which follow on automatically. To resume, press it again.

12 (index)

Used to display the index (contents) page at any time while you are viewing teletext.


13 (cancel)

Used to display the broadcast when searching for a page.

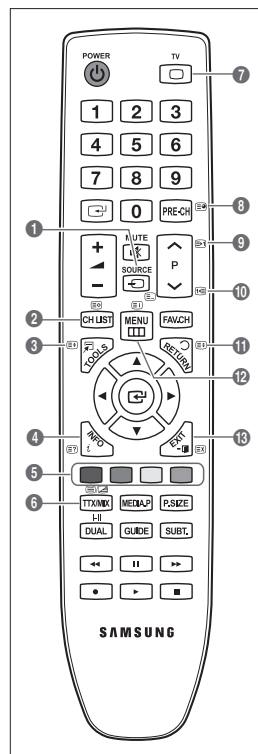

The Teletext pages are organized according to six categories:


Part	Contents
A	Selected page number.
B	Broadcasting channel identity.
C	Current page number or search indications.
D	Date and time.
E	Text.
F	Status information. FASTEXT information.

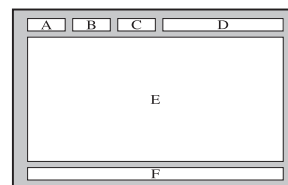


- ☑ Teletext information is often divided between several pages displayed in sequence, which can be accessed by:
 - Entering the page number
 - Selecting a title in a list
 - Selecting a coloured heading (FASTEXT system)
- ☑ Teletext level supported by the TV is version 2.5 which is capable of displaying additional graphics or text.
- ☑ Depending upon the transmission, blank side panels can occur when displaying Teletext.
- ☑ In these cases, additional graphics or text is not transmitted.
- ☑ Older TV's which do not support version 2.5 are not capable of displaying any additional graphics or text, regardless of the Teletext transmission.
- ☑ Press the **TV** button to exit from the Teletext display.

Installing the Stand


- ✎ **Preset:** Place the Guide Stand and Cover Neck onto the stand and fasten it using the screws. Applicable to 32inch models only.

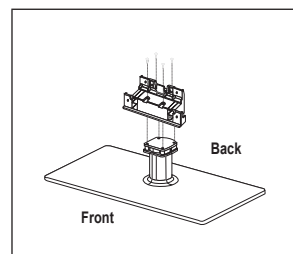

1. Attach your LCD TV to the stand.
 - ✎ Two or more people should carry the TV.
 - ✎ Make sure to distinguish between the front and back of the stand when assembling them.
 - ✎ To make sure the TV is installed on the stand at a proper level, do not apply excess downward pressure to the upper left or right sides of the TV.
2. Fasten two screws at position ❶ and then fasten two screw at position ❷.
 - ✎ Stand the product up and fasten the screws. If you fasten the screws with the LCD TV placed down, it may lean to one side.
 - ✎ The stand is installed for models with the screen size of 37 inch and above.

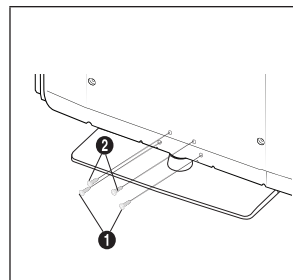

Disconnecting the Stand

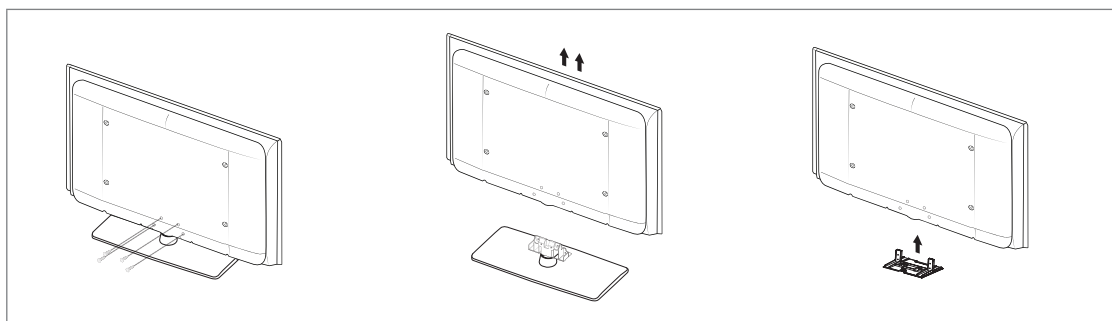

1. Remove screws from the back of the TV.
2. Separate the stand from the TV.
 - ✎ Two or more people should carry the TV.
3. Cover the bottom hole with the cover.

Installing the Wall Mount Kit


Wall mount items (sold separately) allow you to mount the TV on the wall.

For detailed information on installing the wall mount, see the instructions provided with the Wall Mount items. Contact a technician for assistance when installing the wall mounted bracket.

Samsung Electronics is not responsible for any damage to the product or injury to yourself or others if you elect to install the TV on your own.



Do not install your Wall Mount Kit while your TV is turned on. It may result in personal injury due to electric shock.

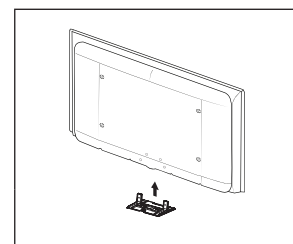


Anti-Theft Kensington Lock

The Kensington Lock is a device used to physically fix the system when using it in a public place. The appearance and locking method may differ from the illustration depending on the manufacturer.

Refer to the manual provided with the Kensington Lock for proper use.

- ☑ The locking device has to be purchased separately.
- ☑ The location of the Kensington Lock may be different depending on its model.

1. Insert the locking device into the Kensington slot on the LCD TV ❶ and turn it in the locking direction ❷.
2. Connect the Kensington Lock cable ❸.
3. Fix the Kensington Lock to a desk or a heavy stationary object.

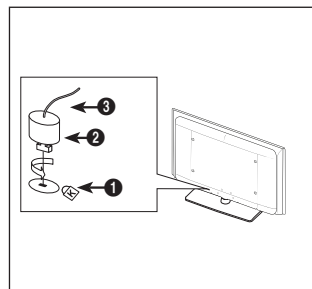

Securing the Installation Space


Keep the required distances between the product and other objects (e.g. walls) to ensure proper ventilation.

Failing to do so may result in fire or a problem with the product due to an increase in the internal temperature of the product.


Install the product so the required distances shown in the figure are kept.

- ☑ When using a stand or wall-mount, use parts provided by Samsung Electronics only.
 - If you use parts provided by another manufacturer, it may result in a problem with the product or an injury due to the product falling.
 - If you use parts provided by another manufacturer, it may result in a problem with the product or fire due to an increase in the internal temperature of the product due to poor ventilation.
- ☑ The appearance may differ depending on the product.

■ When installing the product with a stand

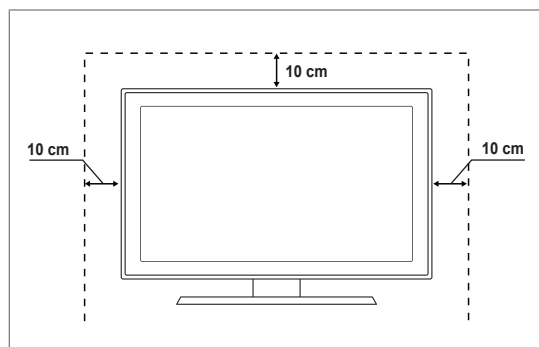

■ When installing the product with a wall-mount

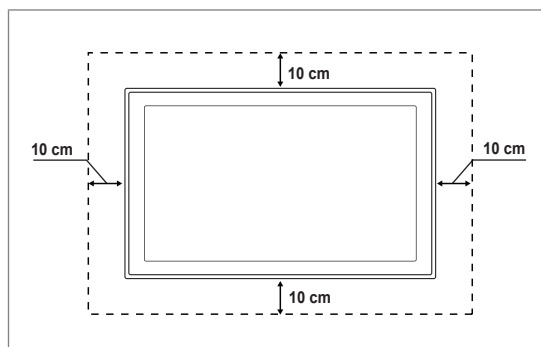




Securing the TV to the Wall



Caution: Pulling, pushing, or climbing on the TV may cause the TV to fall. In particular, ensure your children do not hang over or destabilize the TV; doing so may cause the TV to tip over, causing serious injuries or death. Follow all safety precautions provided on the included Safety Flyer. For added stability, install the anti-fall device for safety purposes, as follows.


To secure the TV:

1. Put the screws into the clamps and firmly fasten them onto the wall. Confirm that the screws have been firmly installed onto the wall.
 - ☑ You may need additional material such as an anchor depending on the type of wall.
 - ☑ Since the necessary clamps, screws, and string are not supplied, please purchase them separately.
2. Remove the screws from the centre back of the TV, put the screws into the clamps, and then fasten the screws onto the TV again.
 - ☑ Screws may not be supplied with the product. In this case, please purchase the screws of the following specifications.
 - ☑ Screw Specifications
For a 17 ~ 29 Inch LCD TV: M4 X L15 / For a 32 ~ 40 Inch LCD TV: M6 X L15
3. Connect the clamps fixed onto the TV and the clamps fixed onto the wall with a strong cable.
 - ☑ Install the TV near to the wall so that it does not fall backwards.
 - ☑ It is safe to connect the string so that the clamps fixed on the wall are equal to or lower than the clamps fixed on the TV.
 - ☑ Remove the cable before moving the TV.
4. Verify all connections are properly secured. Periodically check connections for any sign of fatigue for failure. If you have any doubt about the security of your connections, contact a professional installer.

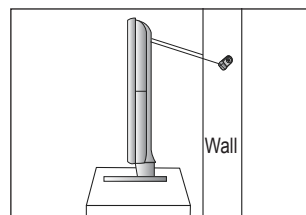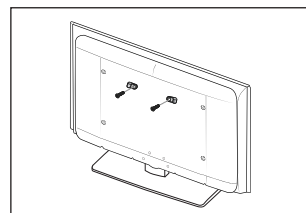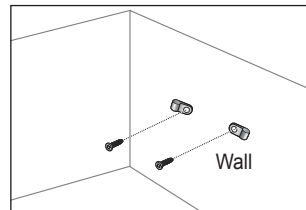

Troubleshooting: Before Contacting Service Personnel

Problem	Possible Solution
No sound or picture	Check that the mains lead has been connected to a wall socket. Check that you have pressed the button on your set. Check the picture contrast and brightness settings. Check the volume.
Normal picture but no sound	Check the volume. Check whether the MUTE button has been pressed on the remote control. Check the Speaker Select settings.
Screen is black and power indicator light blinks steadily	On your computer check; Power, Signal Cable. The TV is using its power management system. Move the computer's mouse or press any key on the keyboard.
No picture or black and white picture	Adjust the colour settings. Check that the broadcast system selected is correct.
Sound and picture interference	Try to identify the electrical appliance that is affecting the set and move it further away. Plug your set into a different mains socket.
Blurred or snowy picture, distorted sound	Check the direction, location and connections of your aerial. This interference is often due to the use of an indoor aerial.
Remote control malfunctions	Replace the remote control batteries. Clean the upper edge of the remote control (transmission window). Check the battery terminals.
'Check signal cable.' message is displayed	Check that the signal cable is firmly connected to the PC or video sources. Check that the PC or video sources are turned on.
On PC mode, 'Not Supported Mode.' message is displayed	Check the maximum resolution and the frequency of the video adaptor. Compare these values with the data in the Display Modes.
The damaged picture appears in the corner of the screen	If Screen Fit is selected in some external devices, the damaged picture may appear in the corner of the screen. This symptom is caused by external devices, not TV.
The 'Resets all settings to the default values.' message appears.	This appears when you press and hold the EXIT button for a while. The product settings are reset to the factory defaults.
You may see small particles if you look closely at the edge of the bezel surrounding the TV screen.	This is part of the product's design and is not a defect.

-  The TFT LCD panel uses a panel consisting of sub pixels (6 220 800) which require sophisticated technology to produce. However, there may be few bright or dark pixels on the screen. These pixels will have no impact on the performance of the product.

Specifications

Model Name	LA32B550	LA40B550
Screen Size (Diagonal)	32 inch	40 inch
PC Resolution (Optimum)	1920 X 1080 @ 60 Hz	1920 X 1080 @ 60 Hz
Sound Output	10W x 2	10W x 2
Dimension (WxDxH) Without Stand With stand	794 x 77 x 524 mm 794 x 240 x 570 mm	982 x 77 x 626 mm 982 x 255 x 676 mm
Weight With Stand	13 kg	18 kg
Environmental Considerations Operating Temperature Operating Humidity Storage Temperature Storage Humidity	10°C to 40°C (50°F to 104°F) 10% to 80%, non-condensing -20°C to 45°C (-4°F to 113°F) 5% to 95%, non-condensing	
Stand Swivel (Left / Right)	-20° ~ 20°	
Model Name	LA46B550	LA52B550
Screen Size (Diagonal)	46 inch	52 inch
PC Resolution (Optimum)	1920 X 1080 @ 60 Hz	1920 X 1080 @ 60 Hz
Sound Output	10W x 2	10W x 2
Dimension (WxDxH) Without Stand With stand	1116 x 77 x 706 mm 1116 x 275 x 770 mm	1258 x 80 x 798 mm 1258 x 305 x 852 mm
Weight With Stand	23 kg	29 kg
Environmental Considerations Operating Temperature Operating Humidity Storage Temperature Storage Humidity	10°C to 40°C (50°F to 104°F) 10% to 80%, non-condensing -20°C to 45°C (-4°F to 113°F) 5% to 95%, non-condensing	
Stand Swivel (Left / Right)	-20° ~ 20°	

- ☑ Design and specifications are subject to change without prior notice.
- ☑ This device is a Class B digital apparatus.
- ☑ For the power supply and Power Consumption, refer to the label attached to the product.