


CXM544 User's Manual

Revision A, March 2005
Document 7430-0117-01

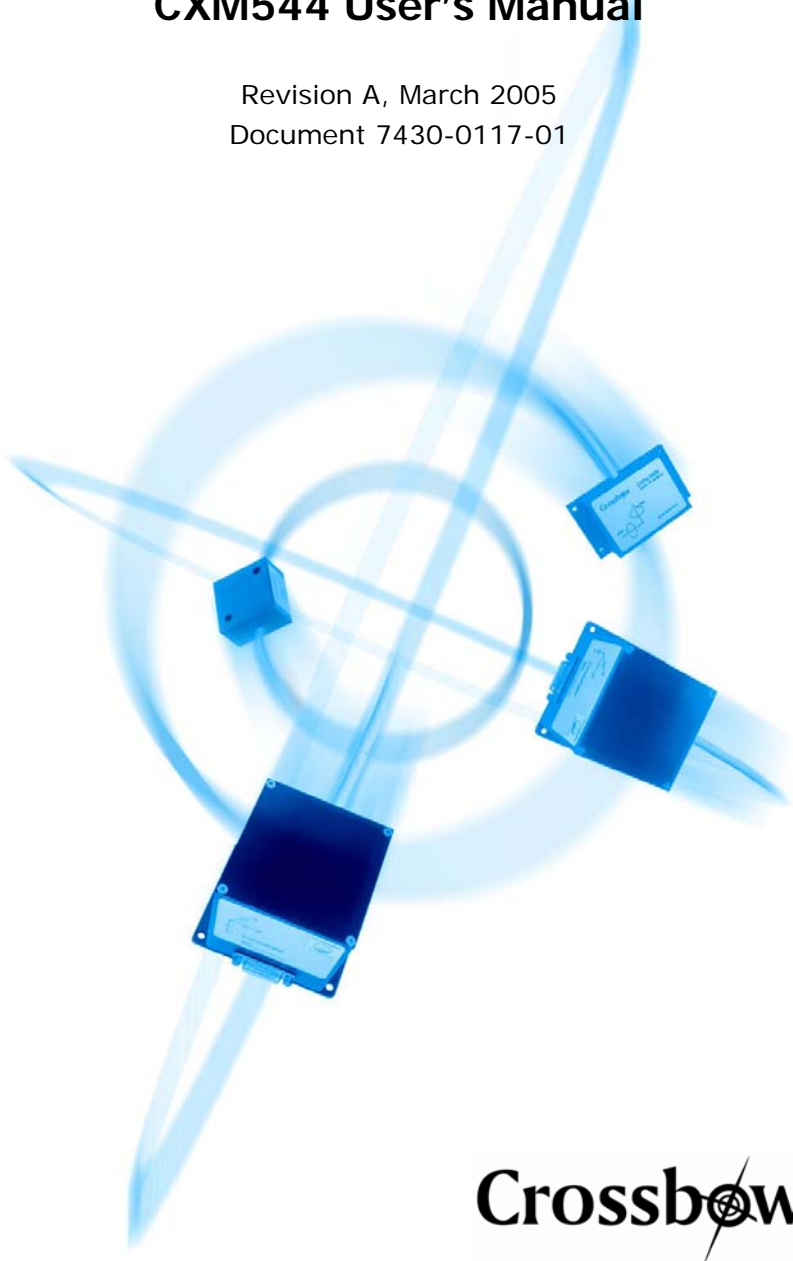

Crossbow

Crossbow Technology, Inc., 4145 N. First Street, San Jose, CA 95134
Tel: 408-965-3300, Fax: 408-324-4840
email: info@xbow.com, website: www.xbow.com

©1999-2005 Crossbow Technology, Inc. All rights reserved. Information in this document is subject to change without notice.

Crossbow and SoftSensor are registered trademarks and DMU is a trademark of Crossbow Technology, Inc. Other product and trade names are trademarks or registered trademarks of their respective holders.

Table of Contents

1	Description of the System	1
1.1	Package Contents	2
2	Electrical and Mechanical Interface.....	3
2.1	Electrical Interface	3
2.2	Mechanical Features	3
2.3	Communication Interface.....	4
3	Quick Start.....	5
3.1	MagView Software	5
3.2	Connections	5
3.3	Setup MagView	6
3.4	Take Measurements	6
4	System Startup and Checkout.....	7
4.1	Initial Setup of the System.....	7
4.2	Operation of the System.....	8
4.3	Binary Mode Operation	10
4.4	Descriptions of the System Internal Constants	12
4.5	Common Command Examples	13
4.6	Verifying Proper Operation of the System.....	14
5	Description of the CXM544 Orientation Angles	17
5.1	Sensor Based Coordinate System	17
5.2	Definition of Orientation Angles	17
5.3	Definitions	18
5.4	Calculation of Roll and Magnetic Roll	19
5.5	Calculation of Inclination	19
5.6	Magnetic Heading (Azimuth, Yaw).....	20
6	Appendix A. Mechanical Specifications	21
6.1	CXM544 Outline Drawing	21
7	Appendix B. CXM544 Command and Output Interface....	22
7.1	CXM544 Heading Sensor Command Set	22

8 Appendix C. Warranty and Support Information..... 28

8.1 Customer Service 28

8.2 Contact Directory 28

8.3 Return Procedure 28

8.4 Warranty 29

About this Manual

The following annotations have been used to provide additional information.

◀ **NOTE**

Note provides additional information about the topic.

☑ **EXAMPLE**

Examples are given throughout the manual to help the reader understand the terminology.

℞ **IMPORTANT**

This symbol defines items that have significant meaning to the user

💣* **WARNING**

The user should pay particular attention to this symbol. It means there is a chance that physical harm could happen to either the person or the equipment.

The following paragraph heading formatting is used in this manual:

1 Heading 1

1.1 Heading 2

1.1.1 Heading 3

Normal

1 Description of the System

The CXM544 Orientation Sensor system contains both a 3-axis fluxgate magnetometer and a 3-axis accelerometer. The combination of these two sensor systems enables the roll, pitch and azimuth angles of the CXM544 reference frame with respect to the local gravity and magnetic field vectors to be determined. Roll and pitch angles are determined from the accelerometer subsystem which measures the orientation of the system with respect to the gravity vector. After roll and pitch are known, the magnetometer subsystem is used to determine the azimuth angle of the system. Knowledge of the roll and pitch angles enable determination of the horizontal components of the earth's local magnetic field; this information defines the azimuth angle.

The CXM544 system also contains a microprocessor and 7-channel 16-bit analog to digital converter. Six channels are assigned to the magnetometer and accelerometer outputs. One channel provides temperature data from an internal thermometer. The functions performed by the system microprocessor and A to D subsystem are:

- 1) Conversion of the sensor analog outputs to digital form;
- 2) Calibration of the sensor scale, offset and alignment factors for a temperature variation and
- 3) Implementation of serial communications between the system and an external computer.

The CXM544 communicates with the outside world over one of two serial bi-directional interfaces, which can be selected from either TTL or RS232 voltage levels. An ASCII character command language has been created to facilitate communication with the CXM544. For in-stance, if the ASCII characters for 0, S and D are sent in sequence, the CXM544 interprets this as a "send data" command and responds by sending over the serial interface an ASCII string representing the value of all magnetometer, accelerometer and temperature outputs. The leading zero in this sequence denotes the system serial number. The CXM544 can also be configured to send angle data (roll, pitch and azimuth) instead of the accelerometer and magnetometer sensor data.

An auto send data mode is included in the MagView software. When this mode is active, data is repeatedly sent after power is applied to the system at a rate of two transmissions per second in angular output mode and three times per second in magnetometer/accelerometer out-put mode.

The CXM544 system accelerometers are calibrated by placing the system in a precision rotation fixture and systematically changing the system orientation in the earth's gravitational field. The CXM544 system magnetometers are calibrated by placing the system in a precision 3-axis Helmholtz coil system, which enables the application of known magnetic fields to the system. Both the rotation fixture and Helmholtz coil have alignment pins and reference surfaces, which mate to the CXM544 reference surface. System calibration can be performed at a base temperature (usually 25°C) or over a temperature range (for example 15-90°C).

When the system is calibrated over a temperature range, data is read from the system at temperature intervals between the minimum and maximum temperature specification. For instance, for calibration over the interval of 15-90°C, data is usually read at 25°C temperature intervals between 15° and 90°C. The data taken at each temperature includes scale, offset and sensor alignment data. The recorded data is then used to create a look up table for scale offset and alignment corrections. This table is then downloaded into the CXM544 internal EEROM memory where it can be accessed by the system internal microprocessor. Corrections to the read sensor data can then be made by the internal microprocessor system before data is transmitted.

1.1 Package Contents

In addition to your CXM544 product you should have:

- **1 CD with MagView Software**

MagView will allow you to immediately view the outputs of the Sensor on a PC running Microsoft® Windows™.

- **1 User's Manual**

This contains helpful hints on programming, installation, valuable digital interface information including data packet formats and conversion factors.

2 Electrical and Mechanical Interface

2.1 Electrical Interface

The electrical interface to the CXM544 system is shown in Table 1. Seven flying leads (#26 gauge Teflon insulated) are used to make connection to the system. The functions of the out-put wires are shown in Table 1. The CXM544 system can be powered either through an internal voltage regulator, which converts the input voltage to the +5 volts for internal use, or from +5 VDC. When the input regulator is used, the input voltage can range from +7 to +12V. An ideal input voltage which both provides adequate regulation margin and low power consumption is +7.5V. The serial communications interface to the CXM544 is provided by the serial in and serial out lines shown in Table 1. An external computer talks to the CXM544 on the serial in line and replies from the CXM544 are transmitted out on the serial out line. The serial in and serial out lines operate at TTL or RS232 levels and are normally set to operate at 9600 baud with one stop bit and no parity. The user however can change the baud rate by setting bits in the system EEROM. (See Section 4.5.5)

Table 1. Electrical Interface for CXM544

Wire Color	Function
Red	+7 to +12 VDC
Black	Ground
Red/White	+5 VDC
Orange	RS232 serial in
Yellow	RS232 serial out
White/Orange	TTL serial in
White/Yellow	TTL serial out

2.2 Mechanical Features

An outline drawing of the CXM544 system is shown in Appendix A. The system dimensions are 0.75" x 0.80" x 4.60" (1.90 cm x 2.03 cm x 11.68 cm). The system is normally mounted by using 4 2-56 x 0.250 long screws to secure the CXM544 reference surface to a flat mating surface. Two 0.062" diameter x 0.125" long pins protruding from the external mating surface can be used to orient the CXM544 on the external mounting surface. The orientation of the X, Y and Z-axes is shown in 5.2. The output polarity sense of the axes is such that a field pointing in the direction of the arrows will produce a positive output voltage. For example, if the X magnetometer is oriented so the x-axis arrow points north, then the x-axis output voltage

will be positive. If the x-axis accelerometer arrow is pointed down, the x-axis accelerometer output will be positive.

2.3 Communication Interface

Two communication protocols are available:

1. ASCII
2. BINARY

The ASCII protocol is based upon sending ASCII characters to the CXM544 to obtain data. The CXM544 responds by sending out an ASCII data stream complete with carriage returns and line feeds so that it can be easily displayed on a computer terminal. The binary protocol is used for high speed computer to computer interchange. In this case, one byte is sent to request data (e.g. ASCII 128). The CXM544 then responds with a data packet containing the desired data plus header and checksum.

The currently supported binary commands and their definitions follow in Table 2:

Table 2. Binary Commands for CXM544

Command	Command Definition
128	send sensor data in binary format
129	send sensor data in IEEE 32 bit format
131	send angle data in binary format
132	send angle data in IEEE 32 bit format

The CXM544 response to these commands is of the following form:

<number of data bytes> <MX> <AX> <MY> <AY> <MZ> <AZ>
<MT> <AT> <0> <data check sum><end>

Refer to the Section 7.1 of this manual (Heading Sensor Command Set) for a more detailed discussion of the data format for binary transmissions.

3 Quick Start

3.1 MagView Software

The purpose of the Sensor interface program is to provide a graphical output interface to the CXM544 Orientation Sensor and allow the user to configure and operate the sensor.

The MagView interface program allows the sensor to be monitored in every mode that the sensor can be programmed. The sensor can be programmed to allow for ASCII or BINARY transfer mode and corrected or non-corrected data. Log files of sensor data can be created. A scrolling graph of the digital data and graphical indicators of the angular data are displayed to the operator. Minimum and maximum values are maintained for the magnetometer and the accelerometers.

3.1.1 *MagView Computer Requirements*

The following are the minimum capabilities that your computer should have in order to run MagView successfully:

- CPU: Pentium Class
- RAM: 32MB minimum, 64MB recommended
- Operating System: Windows 98, NT4, 2000, XP

3.1.2 *Install MagView*

To install MagView software on to your computer:

1. Insert the CD "Support Tools" in the CD-ROM drive.
2. Find the MagView folder and copy it over to your desktop and the software ready to use.

If you have any problems or questions, you may contact Crossbow directly.

3.2 Connections

The CXM544 is shipped with a ribbon cable to connect the sensor to a PC COM port.

1. Connect the 9-pin end of the digital signal cable to the port on the CXM544.
2. Connect the other 9-pin end of the cable (with backshell) to the serial port of your computer.
3. The additional black and red wires on the cable supply power to the Sensor. Match red to (+) power and black to (-) ground. The input voltage can range from 7.5-15 VDC. See the specifications for your unit.



WARNING

Do not reverse the power leads! Applying the wrong power to the Sensor can damage the unit; Crossbow is not responsible for resulting damage to the unit.

3.3 Setup MagView

With the Sensor connected to your PC serial port and powered, open the MagView software.

1. From the MagView main display, click on “Configure” button and select the correct COM port, Baud Rate (default is 9600) and Sensor model.
2. You can log data to a file by entering a data file name.
3. You can also administer various Sensor Settings and Special Settings via this Configure screen and save settings.
4. The main screen provides the graphical visualization of various sensor parameters that can be checked from “Graph” menu.
5. The “Monitor” window allows the user to view the data being sent from the sensor and allows the operator to send commands to the sensor.

3.4 Take Measurements

Once you have configured MagView to work with your sensor, pick what kind of measurement you wish to see. “AutoData” will show you the output you choose as a strip-chart type graph of value vs. time. “DataOnce” issues the command to send the data one time. “Monitor” window allows the user to view the data being sent from the sensor and allows the operator to send commands to the sensor.

4 System Startup and Checkout

4.1 Initial Setup of the System

In order to operate the CXM544, power must be applied to it and an interface with an external computer must be set up. Powering will depend upon whether the unit is using a +5V supply or the internal regulators and powers from +7VDC to +12VDC. To ensure system accuracy, the +5V powered system must be within $\pm 0.05V$ of +5V.

Connect the correct power lead to the selected supply voltage. (See Table 1)

After powering, the system should consume about 71 mA of input current.

In order to set up a computer interface with the system, select the output protocol of the CXM544. This can be either TTL or RS232. The TTL protocol is usually used in microprocessor to microprocessor communications. For this mode, the voltage levels for a 0 and 1 are approximately ground and 5V. In the idle or marking state, the output level is +5V.

The RS232 protocol is used by using serial com ports. RS232 voltage levels for a 0 and a 1 are approximately -5V and +5V. In the idle or marking state, the -5V level is output.

About 1 second after power up, the CXM544 will send out a sign on message. This can be observed with an oscilloscope as a series of transitions from +5 to 0V (TTL) or -5V to +5V (RS232).

Since PC's use RS232 protocol, they can be directly connected to a CXM544 employing this protocol. PC's use either a 25 pin or a 9 pin D connector to implement their serial ports. This connector is always a bulkhead male connector on the PC. chassis. The serial in, serial out and ground connections for these connectors are as follows:

Table 3. Serial Port Connections

Function	25 pin	9 pin
Serial out	2	3
Serial in	3	2
Ground	7	5

Connect the CXM544 serial output line to the computer in line and the CXM544 serial input line to the computer serial out line.

To communicate with the CXM544, a terminal program will have to be run on the P.C. The Windows HyperTerminal program will suffice for this. Other suitable terminal programs are ProComm and ASCII Pro. These programs turn the computer into a dumb terminal. In this mode, whatever you type on the keyboard goes out the selected serial port (e.g. Com 1) and whatever comes in the serial port is displayed on the computer video display.

If you use HyperTerminal, you must select the proper Com port (e.g. COM 1, COM 2, etc.) and set the baud rate to be 9600 with one stop bit and no parity. Set the port up for direct connect and turn off any handshaking.

The easiest method of determining if a working communications link with the CXM544 has been established is to observe the PC display when the CXM544 is powered up. The CXM544 transmits a power up sign on message, which should appear in readable form on the PC display. The appearance of an unreadable message at power up may indicate incorrect protocol (i.e. TTL instead of RS232) or an incorrect baud rate.

4.2 Operation of the System

After establishing communication with the CXM544, data can be obtained from the system by sending (typing) the command **0SD<CR>** (0 Send Data). The 0 in this sequence is the de-fault serial number of the unit. After sending this command, the CXM544 will respond with an output that appears as follows:

```
MX: 0.5432 AX: 0.9456  
MY: 0.1234 AY: 0.4510  
MZ: 1.0145 AZ: 0.0112  
t: 45.0
```

The numbers following the MX, MY and MZ headers represent the sensor magnetometer output in Gauss. The numbers following the AX, AY and AZ headers represent the accelerometer output in gees. The temperature (°C) follows the t header.

The above outputs represent data sent when the CXM544 is in sensor mode. If angular data is required, the system mode will need to be changed. In general, the CXM544 operating characteristics are controlled by the values of internal byte constants. These constants are stored in the system EEROM and can be changed by a two-step process. The two-step process is used for

security reasons to ensure that these constants are not inadvertently changed.

To change the CXM544 to angle mode, byte 02 must be changed from 02 (sensor mode) to 03 (angle mode).

To accomplish this, type: **0L<CR>**

The unit will respond with the message: **enabled!**

Next, type the sequence: **0WC02b03<CR>** (0 Write Constant 02 byte 03)

The unit will respond by sending the message: **done**

Now request data by sending the sequence: **0SD<CR>**

The response will look something like this:

MX: 180.0 AX: .6451
MY: 90.3 AY: .4056
MZ: 185.6 AZ: 1.0001
t: 24.3

The numbers following MX, MY and MZ represent the system roll, inclination and azimuth. The numbers following the AX, AY and AZ represent the system magnetic roll angle, total magnetic field and total gravitational field.

The total field numbers are of interest because they are the same for all orientations of the sensor since

$$\sqrt{AX^2 + AY^2 + AZ^2} = 1G$$

$$\sqrt{MX^2 + MY^2 + MZ^2} = 1Gauss$$

The degree to which these field magnitudes are constant for different orientations is a measure of the accuracy of the sensor. The actual magnetic field amplitude reported will vary somewhat depending on location. This value ranges from 0.4 to 0.6 Gauss over the earth's surface.

It is also possible to configure the system mode to output raw A to D counts. This can be accomplished by setting byte 02=0.

In order to observe the value of any internal system constant send the commands

OSC02b <CR>
*OSC*b <CR>*

The first command results in the value of byte constant 02 being transmitted. The second command evokes a response containing the values of all byte constants.

The CXM544 can transmit data in two formats: 1) text and 2) binary. Text transmissions are formatted to display correctly when the CXM544 is connected to a PC running a terminal emulator program (e.g. PC PLUS, HyperTerminal, etc.). Binary transmissions are faster than text transmissions and are more suited to interfacing the CXM544 to a microprocessor system. In command mode, binary transmissions are initiated by sending a single byte to the CXM544, e.g. ASCII 128 or ASCII 129.

The CXM544 has an autosend mode, which enables data to automatically be sent repeatedly upon power up. Byte 01 must be set equal to 5A for autosend mode to be active. The format of the data sent in autosend mode is determined by the value of byte 08. For repetitive text transmissions, set byte 08=10. For repetitive binary transmissions, set byte 08=11.

4.3 Binary Mode Operation

In command mode, binary transmissions are initiated by sending a single byte to the CXM544, e.g. ASCII 128 or ASCII 129.

Consider the following data transmissions from a CHS Sensor, in Binary mode:

SOT MX AX MY AY MZ AZ TEMP ANA1 ST CS EOT
 10 00EE 0AB4 F646 FC1C 0E0E 255D 087E 7D01 80 A2 7FFF

The binary data packets will always start with a header byte 0x10 and end with two bytes 0x7FFF. The data is always sent most significant byte (MSB) first, then least significant byte (LSB). Angle, sensor and temperature data is sent as 16-bit signed integers. The binary data packet is a much more efficient method of sending data. In addition, binary data is often much easier to parse than ASCII data.

Table 4 shows the definition of the binary data packet for sensor mode and angle mode.

Table 4. CXM544 Binary Data Packet

Byte	Sensor mode	Angle Mode
01	SOT (0x10)	SOT (0x10)
02	MX (MSB)	Roll Angle (MSB)
03	MX (LSB)	Roll Angle (LSB)
04	MY (MSB)	Pitch Angle (MSB)
05	MY (LSB)	Pitch Angle (LSB)
06	MZ (MSB)	Azimuth (MSB)
07	MZ (LSB)	Azimuth (LSB)
08	AX (MSB)	Magnetic Roll (MSB)
09	AX (LSB)	Magnetic Roll (LSB)
10	AY (MSB)	Total Mag. Field (MSB)
11	AY (LSB)	Total Mag. Field (LSB)
12	AZ (MSB)	Total Accel (MSB)
13	AZ (LSB)	Total Accel (LSB)
14	Temperature (MSB)	Temperature MSB
15	Temperature (LSB)	Temperature (LSB)
16	ANA1 (MSB)	ANA1 (MSB)
17	ANA1 (LSB)	ANA1 (LSB)
18	ST	ST
19	Checksum	Checksum
20	EOT MSB = 0x7F	EOT MSB = 0x7F
21	EOT LSB = 0xFF	EOT LSB = 0xFF

Magnetometer and accelerometer sensor values can be decoded by first converting to decimal and then dividing by 10,000. For instance, in the above transmission:

$$MX = 0E0E = 3598/10,000 = 0.3598 \text{ Gauss}$$

$$MY = F646 = -2490/10,000 = -0.2490 \text{ Gauss}$$

$$AX = 0AB4 = 2740/10,000 = 0.2740 \text{ Gee}$$

Angles are decoded by converting to a decimal value and then dividing by 100. If the above data packet was data sent in angle mode, you would have:

$$MX = 0E0E = 3598/100 = 35.98^\circ \text{ Roll}$$

$$MY = F646 = -2490/100 = -24.90^\circ \text{ Inclination}$$

$$AX = 0AB4 = 2740/100 = 27.40^\circ \text{ Magnetic Roll}$$

Total magnetic field and total acceleration are decoded using the same conversion as the normal sensor values (divide by 10,000.)

Temperature is decoded by converting to decimal and dividing by 100

$$TEMP = 087E = 2174/100 = 21.74^\circ\text{C}$$

The ANA1 (transmission voltage) and ST (Status) bytes are not typically used in the CHS Sensor. The value of these bytes will have no meaning.

The CS byte is a checksum. The checksum is calculated by summing all of the bytes in the transmission before the CS byte excluding the SOT and status (ST) characters. For the above transmission the checksum is calculated as follows:

$$\begin{aligned} CS &= 00+EE+0A+B4+F6+46+FC+1C+0E+0E+25+5D+08+7E+7D+01 \\ &= 05A2 \end{aligned}$$

The checksum is the lower byte of the sum, or A2.

4.4 Descriptions of the System Internal Constants

The CXM544 employs two types of internal constants: 1) byte and 2) floating. There are approximately 43 byte constants, which are used to configure the operating characteristics of the CXM544. The most important of these constants and their functions are provided in Table 5. Detailed descriptions of all the internal byte constants can be found in the Appendix B of this manual.

Table 5. Byte Description

Byte	Function
00	enables echoing when non zero
01	enables autosend when = 5A
02	enables sensor A/D count output when =0, sensor output when =02 and angle output when =03
08	Sets power on mode (e.g., =10 enables autosend in ASCII mode on power on)
09	Baud rate lock (=5A if any baud rate other than 9600 is to be used)
10	Sets baud rate

☑ EXAMPLE

4.5 Common Command Examples

All commands should start with the character “0” (zero) and end with a <CR> (carriage return) You need to send the command “0L” before *each* command to change a byte constant.

Refer to the Appendix B for a detailed description of the 544 command set.

4.5.1 *Get a data packet*

To receive a single data packet, use the “send data” command.

```
0SD<CR>
```

The CHS Sensor will respond with a single data packet.

4.5.2 *Read the byte constants*

The configuration of the CXMS44 is controlled by the values of its internal byte constants. To read out the current values of the byte constants, use one of the following commands. The CXMS44 will respond with the current value in hex.

To read a single, specific constant, use the following:

```
0SC<number>B<CR>,
```

where <number> refers to the address of the constant you want to read. The number should be typed in the format “00” - “99”.

To read all constants, use the following:

```
0SC*B<CR>
```

4.5.3 *Make the CXMS44 Echo*

You may want the CXMS44 to echo the characters sent to it, so that you can verify your communication. To do this, you need to set the value of the byte constant 00 to be non-zero.

```
0L<CR>
```

```
0WC00B01<CR>
```

4.5.4 *Change Data Output Mode*

The CXMS44 can be configured to output in raw ADC counts, sensor values, or angles. The following example shows how to change the sensor configuration to use angle mode. See Table 5 for a description of other possible values.

```
0L<CR>
```

```
0WC02B03<CR>
```

4.5.5 Changing the Baud Rate

The communications baud rate can be changed by using the following sequence:

1. Set byte constant 10 according to Table 6. More values can be found in Appendix B
2. Set byte constant 09 to 0x5A
3. Cycle power to the CXM544 to activate the new baud.

Table 6. Baud rate changing commands for CXM544

Constant 10 value	Baud rate
35	300
33	1200
32	2400
31	4800

The following commands illustrate setting the baud rate to 2400.

```
0L<CR>  
0WC10B32<CR>  
0L<CR>  
0WC09B5A<CR>
```

◀ NOTE

When byte constant 09 is set to any value other than 0x5A, the system baud rate is 9600.

4.5.6 Request Binary Data

To request a binary data packet, the user sends a single byte command. However, the total command must still start with the address “0” and <CR> end.

To request a binary data packet in sensor mode, send the following command:

0<128><CR>, where <128> is the single byte 0x80.

To request a binary data packet in angle mode, send the following command:

0<131><CR>, where <131> is the single byte 0x83.

See Section 4.3 for a description of how to decode the binary data packets.

4.6 Verifying Proper Operation of the System

Proper operation of the CXM544 can be verified when the system is in either angle mode (byte 02=03) or sensor mode (byte 02=02).

In angle mode, proper operation is verified by placing the CXM544 in known orientations and comparing the CXM544 measured data with the known orientation data.

To check roll and inclination outputs, place the CXM544 on a known flat surface with the z axis pointed down. A flat surface can be set up and verified by using a bubble level. Request data from the CXM544 and verify that the roll and inclination outputs are as follows:

roll	$0^\circ \pm 0.5^\circ$
inclination	$90^\circ \pm 0.5^\circ$

Next, roll the CXM544 about the x axis in increments of 90° and verify that for each position the roll angle increments in succession to 90° , 180° and 270° while the inclination angle remains $90^\circ \pm 0.5^\circ$.

To verify inclination at 0° and 90° , position the CXM544 so that the x axis is pointed down (0° inclination) and up (180°). Because the CXM544 leads exit the bottom of the unit when the x axis is up, it may be awkward to verify this orientation without additional support blocks.

To verify azimuth accuracy, a good compass and an area free from magnetic materials must be located. Usually areas inside buildings contain some magnetic material (e.g. metal desks, rebar in concrete floors, etc.). In this case, verifying azimuth accuracy to 1° is difficult.

Use a compass to orient the CXM544 approximately horizontal and East (inclination 90° , azimuth 90°). Carefully align the CXM544 along x axis so that it is pointed East and verify that the azimuth reading is $90^\circ \pm 1.0^\circ$. Use the same procedure to verify azimuth accuracy for 180° , 270° and 0° readings.

In sensor mode (byte 02=02) the CXM544 accelerometer sensors should read +1.00 and -1.00 when pointed down and up respectively. Therefore when lying flat on a horizontal surface with the z axis pointed down, the x and y accelerometers should read 0 ± 0.01 and the Z accelerometer should read 1.00 ± 0.01 .

The CXM544 magnetometers are calibrated to read directly in Gauss. Proper operation of these sensors is difficult to verify without elaborate calibration equipment. However, verification of operation can be accomplished by pointing each magnetometer sensor into and out of the earth's magnetic field. For these orientations, the magnetometer should read about +0.5G and -0.5G. In the Northern hemisphere, the direction of the

earth's magnetic field is North with an inclination of about 60° . For instance, if the system x axis is pointed to magnetic North and inclined about 60° into the earth, (30° from vertical) the x magnetometer output should read +0.5 Gauss.

5 Description of the CXM544 Orientation Angles

This application note describes how to calculate the roll, pitch and azimuth angles for the CXM544 orientation sensor from accelerometer and magnetometer output data.

5.1 Sensor Based Coordinate System

The coordinate system of the CXM544 system is defined in Figure 1. The accelerometer and magnetometer coordinate systems are both aligned with the physical package coordinate systems shown. For the magnetometer sensors, a positive output voltage will result if the sensor is pointed north. For the accelerometers, a positive voltage will result if the sensors are pointed down.

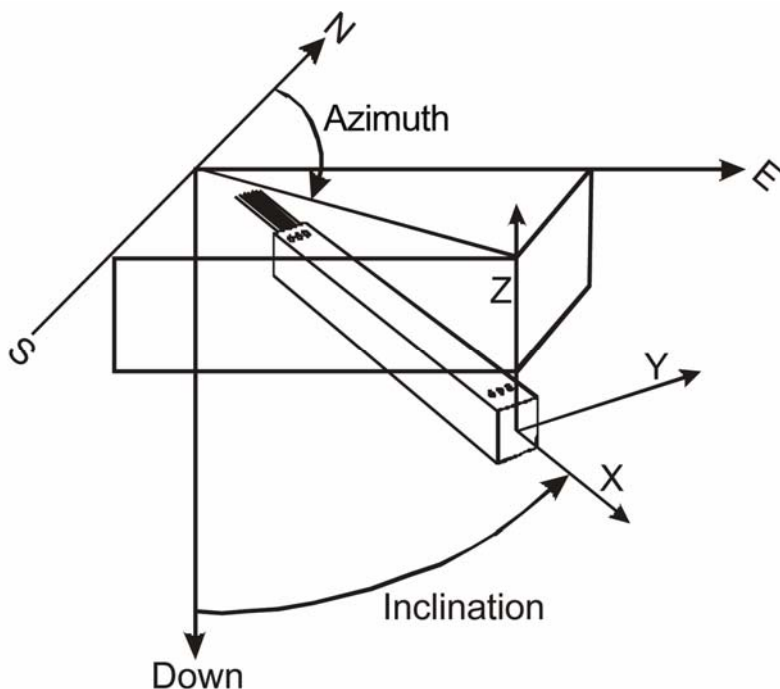


Figure 1. CXM544 Coordinate System

5.2 Definition of Orientation Angles

The orientation angles are defined in Figure 2. Azimuth or yaw is defined as the angle measured from magnetic north (clockwise from above) to the projection of the x axis on the horizontal plane.

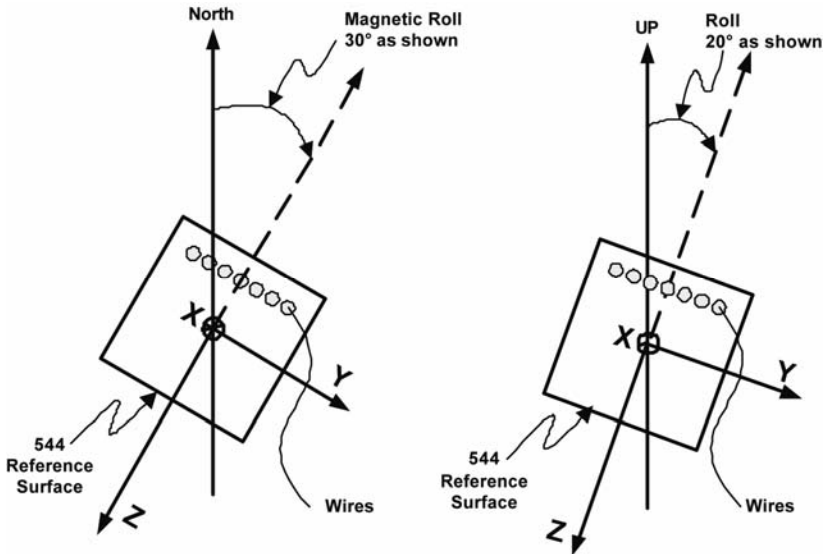


Figure 2. CXM544 Orientation Angles

Inclination is the angle that the x-axis makes with the down direction and is 0° when the x-axis is down and 90° when the x-axis is horizontal.

Roll or gravity tool face is defined as the angle of counterclockwise rotation about the x-axis (looking in the positive x-axis direction) required to zero the y-axis accelerometer output and position the z-axis accelerometer so that its output polarity is positive.

Magnetic roll is defined as the angle of counterclockwise rotation about the x-axis (looking in the positive x-axis direction) required to zero the y-axis magnetometer output and position the z-axis magnetometer so that its output polarity is negative.

Magnetic roll is useful in defining the CXM544 orientation when inclination is near vertical. In this situation, g_y and g_z are near zero and roll and azimuth calculations become less accurate.

5.3 Definitions

Figure 1 and Figure 2 the orientation angles referred to in the following sections for the CXM544.

These equations make use of the following definitions:

g_x accelerometer x axis output

g_y accelerometer y axis output

g_z	accelerometer z axis output
H_x	magnetometer x axis output
H_y	magnetometer y axis output
H_z	magnetometer z axis output

5.4 Calculation of Roll and Magnetic Roll

The roll angle, θ , is determined by using the following equations

($0 \leq \theta \leq 2\pi$):

$$\cos \theta = \frac{g_z}{\sqrt{g_y^2 + g_z^2}}$$

$$\sin \theta = \frac{g_y}{\sqrt{g_y^2 + g_z^2}}$$

$$\tan \theta = \frac{g_y}{g_z}$$

Roll is 0° when $g_y = 0$ and $g_z > 0$. Roll is 2π radians when $g_y = 0$ and $g_z < 0$. When the x-axis is near vertical (pitch $< 5^\circ$), the quantities g_y and g_z become very small and the above expressions yield a less accurate value of θ . In this situation, magnetic roll is often used to determine the angular orientation of the CXM544 about the longitudinal (X) axis. Magnetic roll, θ_m , is given by the following

($0 \leq \theta_m \leq 2\pi$):

$$\sin \theta_m = \frac{-H_y}{\sqrt{H_y^2 + H_z^2}}$$

$$\cos \theta_m = \frac{-H_z}{\sqrt{H_y^2 + H_z^2}}$$

$$\tan \theta_m = \frac{H_y}{H_z}$$

5.5 Calculation of Inclination

Inclination, ϵ , is determined from the following equations

($0 \leq \epsilon \leq \pi$):

$$\cos \varepsilon = \frac{g_x}{g}$$

$$\sin \varepsilon = \frac{\sqrt{g_y^2 + g_z^2}}{g}$$

$$\tan \varepsilon = \frac{\sqrt{g_y^2 + g_z^2}}{g_x}$$

where, $g = \sqrt{g_x^2 + g_y^2 + g_z^2}$

Inclination is 0 when the CXM544 x axis is pointed down and $\pi/2$ radians when horizontal.

5.6 Magnetic Heading (Azimuth, Yaw)

We first give expressions for the magnetic field in a horizontal reference defined by x_1, y_1, z_1 where x_1 is aligned with the projection of the CXM544 x axis in the horizontal plane and z_1 is down.

$$H_{x1} = \frac{H_x(g_y^2 + g_z^2) - H_y g_y g_x - H_z g_x g_z}{g \sqrt{g_y^2 + g_z^2}}$$

$$H_{y1} = \frac{H_y g_z - H_z g_y}{\sqrt{g_y^2 + g_z^2}}$$

$$H_{z1} = \frac{H_x g_x + H_y g_y + H_z g_z}{g}$$

Magnetic heading, ϕ , is then given by ($0 \leq \phi \leq 2\pi$)

$$\cos \phi = \frac{H_{x1}}{\sqrt{H_{x1}^2 + H_{y1}^2}}$$


$$\sin \phi = \frac{-H_{y1}}{\sqrt{H_{x1}^2 + H_{y1}^2}}$$

$$\tan \phi = \frac{-H_{y1}}{H_{x1}} = \frac{(H_z g_y - H_y g_z)g}{H_x(g_y^2 + g_z^2) - H_y g_x g_y - H_z g_x g_z}$$

Magnetic heading is 0 when the CXM544 x-axis points North and $\pi/2$ radians when it points East.

6 Appendix A. Mechanical Specifications

6.1 CXM544 Outline Drawing

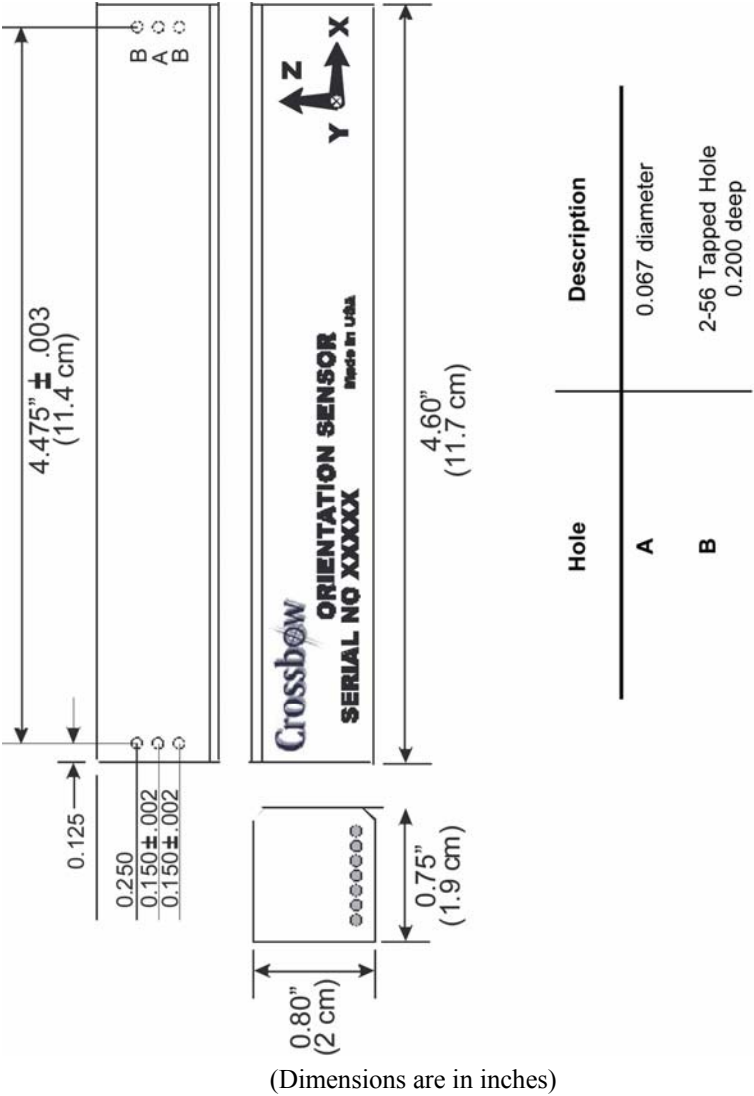

7 Appendix B. CXM544 Command and Output Interface

7.1 CXM544 Heading Sensor Command Set

Addressed Command is : <Address><Command><CR>

An Address is <0-9 | A-Z>

CR is a Carriage Return

Axis is <X - Z | T>

Constant Number is <00 - 99>

Constant Value is <[-]<number>[<number>]>

Constant String is <A-Z | 0-9><Constant String>

A number is <<0-9>[number]>

A command consists of one of the following:

Send All Data :

SD All Data is sent	MX: ±#.##### AX:±#.#####<CR><LF>
as requested,	MY: ±#.##### AY:±#.#####<CR><LF>
raw, vectors or	MZ: ±#.##### AZ:±#.#####<CR><LF>
angles as set by	MT: ±###.####<CR><LF>
byte constant 2	AT: ±###.####<CR><LF><EOT>

Send Anal Input :	SA ANA: #.#####<CR><LF><EOT>
-------------------	------------------------------

Read Float Constant :	SC<Constant Number>F
	±#####±E##<CR><LF><EOT>

Read All Float Constants : SC*F	00: ±#####±E##<CR><LF>
	01: ±#####±E##<CR><LF>
	...
	##: ±#####±E##<CR><LF><EOT>

Read Byte Constant:	SC<Constant Number>B ##<CR><LF><EOT>
	(In Hex)

Read All Byte Constants: SC*B	00: ##<CR><LF> (In Hex)
	01: ##<CR><LF><EOT>

	...
	##: ##<CR><LF><EOT>
Read int Constant : SC<Constant Number>I	#####<CR><LF><EOT>

Read all int Constants : SC*I	00: #####<CR><LF>
-------------------------------	-------------------

01: #####<CR><LF><EOT>

...
##. ##<CR><LF><EOT>

Reset A/D : RA Done<CR><LF><EOT>

Test ROM Checksum(*) : TC if low level writes are enabled, the output is: STORED
HHHH<CR><LF><EOT>
If low level writes are not enabled and the Checksum of the ROM is the same as the one stored: HHHH<CR><LF><EOT>
else the Output is:
ERR HHHH<CR><LF><EOT>

Test EEROM Checksum(*) : TE if low level writes are enabled, the output is: STORED
HHHH<CR><LF><EOT>
If low level writes are not enabled and the Checksum of the ROM is the same as the one stored: HHHH<CR><LF><EOT>
else the Output is:
ERR HHHH<CR><LF><EOT>

Test RAM: TR Either an OK or an error
OK<CR><LF><EOT>
The Error Addr. is in Hex
ERR AT: HHHH<CR><LF><EOT>

Test EEROM Read/Write*: TW (This takes up to 10 Seconds)
Either an OK or an error OK<CR><LF><EOT>
The Error Addr. is in Hex
ERR AT: HHHH<CR><LF><EOT>

Test Serial Port: TS Always Echoes OK<CR><LF><EOT>

Return Software Version: TV Ver: #.###<CR><LF><EOT>

Enable Low Level Writes: L Enabled!<CR><LF><EOT>
Write Float To Constant*: WC<Constant Number>F<Value>
Done<CR><LF><EOT>

Write Int To Constant*: WC<Constant Number>B<number>
Done<CR><LF><EOT>

----- Binary Commands -----

If The Command is 131:

<NUM DATA
BYTES><Roll><MRoll><Pitch><Mag><Head><Grav><MT><AT><0><
DATA CHK SUM><END>

size 8b 16b 16b 16b 16b 16b 16b 16b 16b 16b 8b 8b 16b in bits

<END> = 0x7FFF (is unique in the data stream)

<NUM DATA BYTES> = 16

<0> = a constant 0 (to allow END to be unique)

<DATA CHECK SUM> = The lower 8 bits of the sum of all the bytes in
the data area.

<Roll> = The Roll data encoded as below.

<Pitch> = The Pitch data encoded as below.

<Head> = The Heading data encoded as below.

<MRoll> = The Magnetic Roll data encoded as below.

<Mag>	= The Total Magnetic Field data encoded as below.
<Grav>	= The Total Gravitational Field data encoded as below.
<MX>,<MY>,<MZ>	= The Magnetometer data encoded as below.
<AX>,<AY>,<AZ>	= The Accelerometer data encoded as below.
<MT>,<AT>	= The Temp data encoded as below.

All data is sent most significant byte first.

If the correction mode is 0, the Magnetometer and Accelerometer data is in a two byte signed integer format in counts.

If the correction mode is 1 or 2, the Magnetometer and Accelerometer data is in a two byte signed integer format encoded as the float value times 10000. (1.2345 = 12345)

If the correction mode is 3 the data is angles and is represented in a two byte signed integer format encoded as the float value times 10. (123.45 = 1234)

The Temp data is in a two byte signed integer format encoded as the float value times 100. (123.45 = 12345)

<129>and <132> Sends All Data in IEEE Floating point format in the current format as selected by Byte constant #2.

If the correction mode is 0, 1 or 2 the data is returned as:

[illegible]

If The Command is 129:

<NUM DATA

```

BYTES><MX><AX><MY><AY><MZ><AZ><MT><AT><0><DATA
CHECK SUM>

```

size 8b 32b 32b 32b 32b 32b 32b 32b 32b 8b 8b in bits

If The Command is 132:

<NUM DATA

```

BYTES<<Roll><MRoll><Pitch><Mag><Head><Grav><MT><AT><0><
DATA CHECKSUM>

```

size 8b 32b 32b 32b 32b 32b 32b 32b 32b 8b 8b in bits

<END> = 0x7FFF (is unique in the data stream)

$$\langle \text{NUM DATA BYTES} \rangle = 16$$

$\langle 0 \rangle$ = a constant 0 (to allow END to be unique)

<DATA CHECK SUM> = The lower 8 bits of the sum of all the bytes in the data area.
 <Roll> = The Roll data.
 <Pitch> = The Pitch data.
 <Head> = The Heading data.
 <MRoll> = The Magnetic Roll data.
 <Mag> = The Total Magnetic Field data.
 <Grav> = The Total Gravitational Field data.
 <MX>,<MY>,<MZ> = The Magnetometer data.
 <AX>,<AY>,<AZ> = The Accelerometer data.
 <MT>,<AT> = The Temp data.
 All data is sent most significant byte first.

----- Byte Constant Numbers and Their Meanings -----

- 00 - Command Echo Flag. 0 is no command echo; anything else, echo commands
- 01 - Autostart Flag. If 0x5A executes the selected autostart option on powerup.
- 02 - Correction Level 0- Raw / 2- Vectors / 3- Angles
 In Angles mode, Roll is labeled MX, Pitch is labeled MY, Heading is Labeled MZ, Magnetic. Roll is labeled AX, Total Magnetic Field is labeled AY,
 Total Grav. Field is labeled AZ.
- 03 - Months since 1/90 when device was calibrated
- 04 - Version of the Calibration Software used
- 05 - Power on self test flag. If zero, a self test will be done on power up.
- 06 - Enable extended error messages
- 07 - This Sensor's Address Number 0-36 => 0-9,A-Z
- 08 - Auto Start Mode, on powerup start accepting commands then:
 0x00: Send all data in text mode once.
 0x01: Send all data In Binary mode once.
 0x02: Send all data In IEEE mode once.
 0x10: Send all data in text mode a loop until AutoStart is not 0x5A.
 0x11: Send all data In Bin. mode in a loop until AutoStart is not 0x5A.
 0x12: Send All Data In IEEE mode in a loop until AutoStart is not 0x5A.
- 09 - User power on baud rate lock (if not 0x5A sensor will use 9600 Baud).
- 10 - User power on baud rate. --Use With Caution—

Baud	#10	Baud	#10
75	37	1200	33
150	36	2400	32
300	35	4800	31
600	34	9600	30

- 11 - Not Used
- 12 - Lowest Calibration Temp. in counts. LSB
- 13 - Lowest Calibration Temp. in counts. MSB
- 14 - Distance in counts between Calibration Points LSB
- 15 - Distance in counts between Calibration Points MSB
- 16 - Number of Temp. Points in the SEEROM.
- 17 - The Table Magnetometer Offset Scale Value.
(Offset = TableOffset / $2^{<\text{Byte\#18}>}$)
- 18 - The Table Accelerometer Offset Scale Value.
(Offset = TableOffset / $2^{<\text{Byte\#19}>}$)
- 19 - The Table Mag Scale Scale Value. (Scale = TableScale / $2^{<\text{Byte\#20}>}$)
- 20 - The Table Acc Scale Scale Value. (Scale = TableScale / $2^{<\text{Byte\#21}>}$)
- 21 - The Table Mag Ortho Scale Value. (Ortho = TableOrtho/ $2^{<\text{Byte\#22}>}$)
- 22 - The Table Acc Ortho Scale Value. (Ortho = TableOrtho/ $2^{<\text{Byte\#23}>}$)
- 23 - Not Used
- 24 - Product I.D. String char #1
- 25 - Product I.D. String char #2
- 26 - Product I.D. String char #3
- 27 - Product I.D. String char #4
- 28 - Product I.D. String char #5
- 29 - Product I.D. String char #6
- 30 - Product I.D. String char #7
- 31 - Product I.D. String char #8
- 32 - Product I.D. String char #9
- 33 - Product I.D. String char #10
- 34 - Constant 0
- 35 - RTS Delay is the time in ~2 millisecond units that the RTS line is high before data is sent. Any value but 0 will slow the data rate by the same amount.

8 Appendix C. Warranty and Support Information

8.1 Customer Service

As a Crossbow Technology customer you have access to product support services, which include:

- Single-point return service
- Web-based support service
- Same day troubleshooting assistance
- Worldwide Crossbow representation
- Onsite and factory training available
- Preventative maintenance and repair programs
- Installation assistance available

8.2 Contact Directory

United States: Phone: 1-408-965-3300 (8 AM to 5 PM PST)
 Fax: 1-408-324-4840 (24 hours)
 Email: techsupport@xbow.com

Non-U.S.: refer to website www.xbow.com

8.3 Return Procedure

8.3.1 Authorization

Before returning any equipment, please contact Crossbow to obtain a Returned Material Authorization number (RMA).

Be ready to provide the following information when requesting a RMA:

- Name
- Address
- Telephone, Fax, Email
- Equipment Model Number
- Equipment Serial Number
- Installation Date
- Failure Date
- Fault Description

8.3.2 Identification and Protection

If the equipment is to be shipped to Crossbow for service or repair, please attach a tag TO THE EQUIPMENT, as well as the shipping container(s), identifying the owner. Also indicate the service or repair required, the problems encountered, and other information considered valuable to the service facility such as the list of information provided to request the RMA number.

Place the equipment in the original shipping container(s), making sure there is adequate packing around all sides of the equipment. If the original shipping containers were discarded, use heavy boxes with adequate padding and protection.

8.3.3 Sealing the Container

Seal the shipping container(s) with heavy tape or metal bands strong enough to handle the weight of the equipment and the container.

8.3.4 Marking

Please write the words, “**FRAGILE, DELICATE INSTRUMENT**” in several places on the outside of the shipping container(s). In all correspondence, please refer to the equipment by the model number, the serial number, and the RMA number.

8.3.5 Return Shipping Address

Use the following address for all returned products:

Crossbow Technology, Inc.
4145 N. First Street
San Jose, CA 95134
Attn: RMA Number (XXXXXX)

8.4 Warranty

The Crossbow product warranty is one year from date of shipment.



Crossbow Technology, Inc.
4145 N. First Street
San Jose, CA 95134
Phone: 408.965.3300
Fax: 408.324.4840
Email: info@xbow.com
Website: www.xbow.com