


# MotoFino

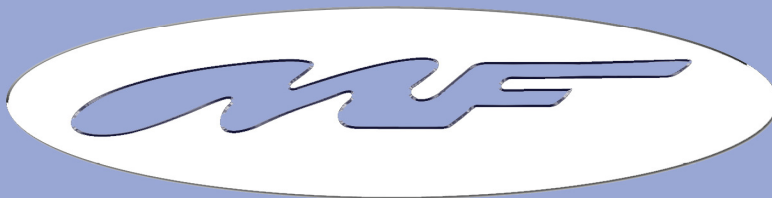

MF150QT-21  
[www.motofino.com](http://www.motofino.com)

Phone : (706) 733-1355  
Fax : (706) 733-1357



[www.motofino.com](http://www.motofino.com)

Distribution Center  
2167 Gordon Highway  
Augusta, GA 30909

# PREFACE

Thanks for purchasing a MF150QT-21. We sincerely hope you will be another happy MotoFino customer. To enjoy safe and pleasurable driving, please familiarize yourself with the manual before driving. Your personal safety depends not only on your vigilance and operation skills, but also relates to whether you are familiar with the mechanical capabilities of the scooter. Before driving, checkups and periodical maintenance are the basic requirements. If maintenance and repairs are needed, go to a service center for help.

This manual explains the correct operation and maintenance, together with the requirements for your long-time use. Modifications in specifications could cause discrepancies with some pictures and content in the manual. Happy scootering and thanks again for your purchase!

## Safety considerations

- Driver and passenger  
This motorcycle is limited to one driver and one passenger (never children younger than 12 years old). Never exceed the Max load capacity of motorcycle.
- For your safety, avoid driving the motorcycle in poor weather or cold weather.
- Be aware of road conditions  
Only drive on the high points and dry points of the road.  
Make sure all lights are visible. Wear a helmet.
- Modifications in specifications could cause discrepancy with some pictures and content in the manual, make sure you understand fully before operation of scooter
- Please carefully read the user manual  
Pay close attention to the warnings printed in the user manual.

### \*\*\*WARNING\*\*\*

Not following the operation instructions in this manual may cause injury or even death to both you and others. Not following the instructions may cause sever damage to the vehicle.

Regard this manual as a permanent part of the vehicle. When transferring the vehicle to a new owner remember to transfer the manual at the same time.

# Catalog

## I. Notice items for safely driving

The rules for riding safely.....	1
Load.....	2

## II. VARIOUS PARTS NAMES AND INSTRUCTIONS

VARIOUS PARTS NAMES.....	3
Instrument and indicator.....	5
Ignition switch.....	5
Fuel indicator.....	6
Emergency cut-off Switch.....	6
Starting switch.....	6
Floodlight switch.....	6
Front head switch.....	6
Turn signal light.....	7
Horn.....	7
Steering lock.....	7
Seat lock.....	8
Storage box.....	8

## III. OPERATION INSTRUCTION

Check before riding.....	9
Starting engine.....	13
Riding motorcycle.....	14

Riding operation.....	15
Brake operation.....	15
Turning off the engine.....	16
Stop operation.....	16

## VI. MAINTENANCE AND SERVICE

Maintenance periodic table.....	18
Troubleshooting guide.....	20
Cleaning the air filter.....	22
Maintenance battery.....	22
Idle speed adjust.....	23
Changing oil and cleaning the strainer.....	24
Changing the gear oil.....	25
Spark plug.....	26
Fuse replacement.....	26

## V. Storage of the vehicle.....

Vehicle.....	28
Tool set.....	28
Main technique Parameter.....	29
Circuit diagram.....	31
After Service.....	32

## General Rules for Riding Safely

Rules for driving safely:

1. Many traffic accidents are caused by the inability of a car to see a motorcyclist; the motorcyclist should try his best to be seen by other drivers.
  - Wear bright easy to see colors.
  - Drive with caution in places with dazzling light or in blind spots.
2. Special caution should be exercised at intersections, entrances and exits of parking lots or on the road.
3. Be cautious when passing slower vehicles.
4. Get a drivers license and familiarize yourself with your motorcycle. Take a motorcycle safe driving course. Never lend your motorcycle to others without a driver's license or who is unfamiliar with your motorcycle.
5. Avoid driving on rough roads. This can easily result in operation failure and structural damage to the vehicle frame.
6. Safety inspect your bike before driving. (Refer to page 9)

7. When driving, keep both hands on the handlebars and place feet on the footrest.

## Payload

a) WARNING

Only put light goods in luggage box or other compartments.

The maximum weight to conform to the following table 1:

Table: 1

Luggage Box	Weight (Lbs.) 10 lbs.
Under seat Box	Weight(Lbs.) 15lbs.

b) Max payload ( Max load: 350 lbs), remember to count in the weight of driver, passenger and goods.

c) If over-loaded, stability and operation of the motorcycle can be affected.

d) Secure all the goods to the motorcycle.

e) NEVER ride children under age 12 and never ride on the rear shelf.

- 2 -

# Subassembly and use instruction

## Parts & subassemblies (Fig:1, Fig:2)

Instrument cluster and Speedometer

Front brake handle

Ignition switch

Luggage box

Glove box

Battery

Main stand



Fig.1

Fig.2



Side stand


BROKEN LINE (.....) INDICATES THE HIDDEN PARTS.

- 4 -

Speedometer and indicator light (Fig 3)

- (1)Speedometer
- (2)Left turn signal light
- (3)Right turn signal light
- (4)Clock
- (5)Fuel gage
- (6)High beam indicator
- (7)Brake light indicator
- (8)Read out of speedometer
- (9)Odometer


Fig.3

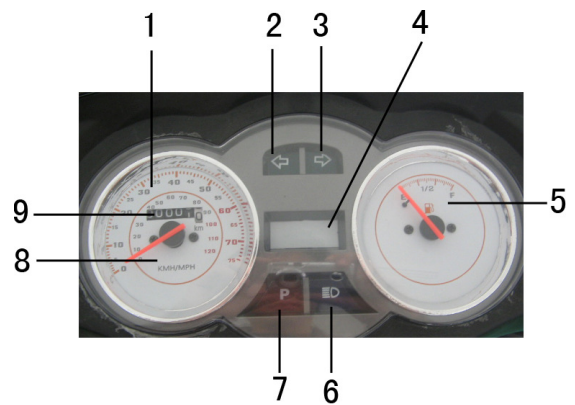

Ignition switch(Fig.4)

- (1)on(⊙)  
Engine starts and you cannot take out the key.
- (2) off (⊗)  
Engine turns off and you can take out the key.
- (3) lock (🔒)  
The steering handing is locked, and you can take out the key.

Fig.4

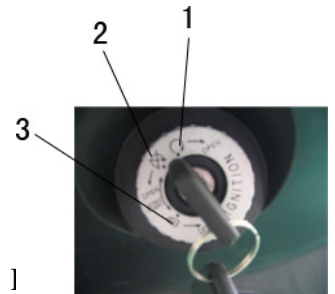

Notice:

When engine runs at idle speed for a long time on hot days, stop the engine to avoid over-heating and wasting

- 5 -


gas.

### Fuel Gage (Fig.5)



Fuel gauge (4) indicates the approximate remainder of fuel. When the pointer points to (F), it indicates full fuel volume 1.5 Gal.

When the pointer gets close to the red section, it indicates that the remainder volume is 0.3 Gal (about enough to go 10 miles or less).

Fig.5

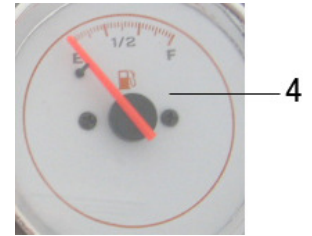



### Emergency cut off switch (Fig6)

 Press “” and the engine turns off, to restart the engine, please press “”。


### Starter switch button (1) (Fig 6)

 Press this button, and the engine starter engages (See p13)

### Head Light switch (Fig. 7)

Three positions of light switch: “”, “” and “•”

: Headlight, running lights tail lights and instrument lights all turn on.

: Running lights, taillights and instrument lights turn on.

 

•: Headlight, running lights, tail lights and instrument lights all extinguish.

Fig:6





- 6 -

### Dimmer switch (1) (Fig.7)

 “” High beam. “” Low beam.

### Turn signal light switch (2) (Fig. 7)

“” means turn left

“” mean turn right

Press it down and signal light turns off

### Horn switch (3) (Fig 7)

Press the button and the horn sounds.

### Steering lock (Fig. 8, 9)


Turn handle left to end, press down ignition key1 to () , the steering device is locked do the above in opposite order to open.

Fig: 7

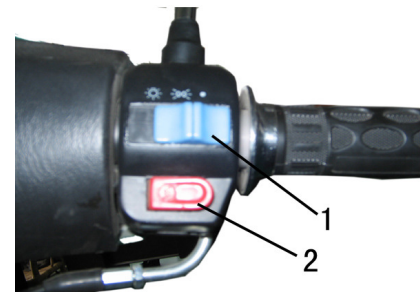


Fig: 8



Fig: 9



- 7 -

### Seat Lock (Fig.10)

Put the key into the seat lock and turn clock-wise to open. Press down the seat until it makes a clicking sound, then pull the back of seat to confirm it has been locked and remove the key.



Fig.10

### Glove box (Fig.11)

Put the key into glove box and then turn clock-wise 90° to open it. Put the key into glove box and turn counter clock-wise 90° then push the door of the glove box to confirm it has been locked and remove the key.



Fig.11

- 8 -

## Pre-Operation Check list

### Check before driving

Make a routine check-up before riding to insure the vehicle will perform well and be safe to drive. A minimum inspection should include checking brakes, lights, tires, and tire pressure.

### Gasoline volume

Turn on the ignition switch and check the fuel gage, refill gasoline tank when the pointer is close to the red section, moreover, check the fuel tank and oil filter for leakage.

Gasoline tank: 1.5 Gal.

Turn the tank cap 1 turn counter clockwise to open.

Required gasoline: unleaded gas, with minimum octane rating of 90.

DO NOT fill gas tank from a fuel can from your garage, your fuel container may contain dirt, water or other contamination.

### Warning:

Refill gas in a well-ventilated place. DO NOT SMOKE! Pay attention to safety rules posted at fuel station.

Do not over-fill gas tank, and remember to replace the cap of fuel tank immediately after filling gas tank.

- 9 -

### **Check the oil level of the engine (Fig 11, Fig 12)**

Use the center stand to support the vehicle on smooth level ground, unscrew the dipstick from engine block (1) clean the oil dipstick with a clean cloth, then, reinsert the dipstick back into the engine block ( do not screw it in) remove and check the oil level. If the oil level is near to the lower limit mark (2), you should add recommended oil. NEVER exceed the mark of upper limit(3) . Reinsert the dipstick into the engine block, screw it down and check it for leakage.

**USE ONLY CASTROL 10W-40 SEMISENTHETIC OIL  
FAILURE TO DO SO MAY VOID YOUR WARRANTY!!**



Fig12

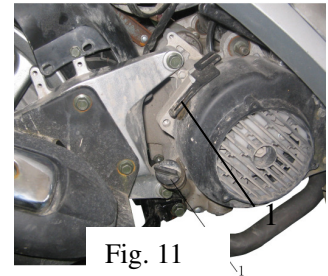


Fig. 11

- 10 -

**When the Disc Brake fluid is low refill with DOT 4 fluid. Check fluid level at the observation orifice.  
(Fig.16、 Fig.17)**



Fig.15



Fig.16



Fig. 17

- 11 -



## Tires

Check the tire pressure regularly and adjust as needed.

- Check while the tire are cool.
- Inspect to see if there is any metal, trash, or gravel in the groove of the tires.
- Inspect to see if there is a nick, embed nail or any other foreign objects on the tread. Inspect whether there is an impression, dent or distortion on the rim. Repair any damage found before operation, have regular inspections by a qualified service department.
- When the tire tread wears to the wear tread mark replace tire immediately.

### WARNING:

- If the tire pressure does not meet the required standards, it may cause loss of vehicle control, cause injury, and possibly life. If the tire pressure is too low, the tire may blow off rim. It is dangerous to use worn tires; it can make the vehicle difficult to drive and cause accidents.

- 12 -

## Engine Starting (Fig 18)

**Preparation:** remove vehicle from main stand.

Put the key into ignition switch and turn to “O” position. Make sure emergency shut off is to “O” position.

**Electric-start:** press start button (1), in burst less than 5 seconds.



**Notice:** You must hold brake handle for starter to engage. If electric starter fails, try again after 15 seconds.

**Kick-start:** Turn ignition switch on, push kick-starter pedal down quickly with force.

**Notice:** After starting the engine, do pull the pedal back to original position.

- For first start, it is better to kick the kick starter several times with ignition switch off, so the engine will start easier. In cold weather start the engine and warm up engine for 3-5 minutes before driving.

- 13 -

## Riding Scooter:

### WARNING:

**Wear trousers to avoid touching the exhaust pipe and getting burned.**

**Always wear a helmet. All riding apparel must be worn according to all requirements of the traffic laws.**

**Take a safety riding course.**

### NOTICE:

**Control the speed and load during the first 500 miles of break in period.**

**Load should be within 350lbs(including driver).**

### Speed according to Break in Chart:

Log Miles	0-100	100-300	300-500
Speed (mph)	<30	<45	<55

- 14 -

## Riding operation

- Release rear brake lever, accelerate slowly with throttle grip, motorcycle will move forward smoothly.
- Accelerate slowly with your left leg in a balanced position right leg should be on floorboard obtain a good speed, close the throttle to cut down on speed.

### Warning:

- Do not accelerate suddenly with throttle grip to prevent the motorcycle from rushing out and losing control.
- Before driving remove bike from center stand. NEVER rock the bike off center stand while accelerating.

### Brake operation:

#### 1. Throttle grip control:

If you want to reduce speed, you must control the throttle grip. Use both brakes to slow down, this point is very important.

**Notice: When driving on damp or loose roads or poor weather conditions, that caution when adding brakes or accelerating.**

#### 2. Operate front and rear brake:

**Notice: When driving on a decent use both brakes to reduce speed. Never use brakes continuously, or overheating will destroy the ability of the brakes to stop the bike.**

**Warning: Never use a single brake when driving at high speed, especially on crooked and slippery roads. Always use both brakes to avoid accidents.**

**Close engine (Fig.19, Fig.20)**

- 15 -

- Release throttle to stop acceleration.



Fig.19



Fig.20

### **Stop operation:**

To turn motorcycle off, put the key to “~~ON~~” position put down stand and lock handle. (Page 7)

### **Warning points:**

- 1 Lock the handle and do not leave the key in the switch.
- 2 Keep your scooter in a safe place.
- 3 Use good quality locks and protection against theft.

- 16 -

## **Maintenance and service**

### **Periodic maintenance**

Maintenance is important to the safe operation of your scooter. If you drive at high speeds and in bad or harsh conditions, maintenance must be done more frequently. If your motorcycle has a big repair or an accident, take care to check the repaired parts closely before operation. Repair or change worn parts routinely. Always inspect your bike closely. Ever 1000 miles have a professional inspection.

#### **Notice:**

Don't modify your scooter. Use good quality spare parts if replacement parts are needed. Use of bad quality spare parts could compromise the safety of motorcycle.—Motofino OEM Parts 706 733 1355

**Warning:** Turn off engine when doing maintenance or making repairs. Always place scooter on center stand on level ground.

**Notice:** For long periods of storage or little use, remove the battery and stabilize the gas with Stabil (purchase Wal-Mart)

- 17 -

## Maintenance table (do all at set up and at 150 miles)

I: check and adjust when necessary

C: clean

R: change

Item	Cycle	speedometer ( x 500 miles )						Ref page
		Every month		1	4	8	12	
					6	12	18	
*	Fuel pipe line			I	I	I	I	
*	Throttle operation			I	I	I	I	15
*	Air filter		Note1	C/500 miles, if need: R				22
*	Spark Plug			C/1000 miles, If need: R				26
*	Adjust Valves			I	I	I	I	
*	Gear oil		(300km) R	R	C/1000 miles,			24
*	engine oil fliter				C/ Change oil,			24
*	Idle speed			I	I	I	I	23

- 18 -

Item	Cycle	speedometer (x500 miles)						Ref page
		Every month		1	4	8	12	
					6	12	18	
*	Drive belt			C/500 miles, if need: R				
*	Gear oil	Note 3	(300 miles) R			I		25
*	Brake system			I	I	I	I	11
*	Brake handles				I	I	I	
*	High-low light				I	I	I	
*	Suspension				I	I	I	
*	Tighten bolts and screws	Note2		I		I		
*	Rim, tire				I	I	I	12
*	Steering Wheel			I			I	

DO NOT ATTEMPT TO DO SERVICE OR REPAIRS UNLESS YOU ARE A QUALIFIED MECHANIC WITH ALL NECESSARY TOOLS. FOR YOUR SAFETY, SERVICE AND REPAIRS ARE BEST LEFT TO THE PROFESSIONAL.

\*For your safety we require all of the items must be done by a professional mechanic.

**Note:** 1. In damp or dusty conditions, increase maintenance.

- 19 -

2. If the bike is used often perform this check more often.
3. Change seasonally.

### Simple trouble shooting

Trouble	primary reason		Solution
THE ENGINE CAN NOT START	Spark plug no spark	Spark plug wear	Change/check
		Ignition coil wire	Change/check
		CDI	Change/check
		Blown fuse	Change/check
		Emergency switch on	Switch to off
	The spark is weak	Spark plug gap too small or big	Adjust
		Spark plug burned	Change
		Spark plug is corroded	Clean off
		Weak ground	Clean connections
	No fuel mixed air in cylinder	No fuel	Refuel
		Air gap on gas cap stopped up	clean
		fuel pump worn	Change
		Gas line or filter clogged	Change or clean
		air filter stop up	Clean or change
Intake manifold broken		Check and replace	

- 20 -

	The cylinder compression strength low	Spark plug seat leak	Tighten plug
		Cylinder cover leak	Change head gasket
		Valves out of adjustment	adjust
		The piston-rings or the cylinder	change them
		The piston-ring is broken	change piston-ring

Trouble	Trouble reason	Solution
The vehicle is unable to accelerate well performance is bad	The octane value of the fuel is too low	Change fuel (premium only!!)
	Gas line pinched or stopped up	Clean and check fuel line
	Ignition time is too early or too late	Check wires and change CDI
	Spark too weak	Check ignition and plug
	Mixed air too dense or rich	Clean adjust carburetor
	Engine leak	Check
	Muffler stop up	Replace
	Belt worn	Change
	The automatic clutch rollers wearing	Change
The electricity	clutch worn	Change
	Starter relay wear	Change

- 21 -

	Lack of Electric power	Change battery
Riding unsteady	Turning radius too wide	Adjust
	Lack of tire pressure	Keep tires inflated to correct pressure
	Front and rear shock	Replace or adjust shocks

### HOW TO CLEAN THE AIR FLITER (Fig21)

- Take off the rear protecting bar and left protecting bar.
- Take apart air filter cap.
- Take out filter element..
- Use compressed air or dry brush to clean filter element.
- Replace if too dirty. Reinstall the air filter.
- Reassemble the filter following the reverse operation.



Fig.21

- 22 -

### Danger!!

- Do not take apart the airtight battery upper cover

### Battery: (fig: 22)

If the motorcycle will not be used for a prolonged time take off the battery and put it into a dry place.

If the head or terminals of the battery are corroded, clean with a professional cleaner. DANGER BE Careful You can burn yourself or others.

**NOTICE:** Turn off the ignition switch, when removing battery, take apart negative pole ⊖ first. Install positive pole ⊕ first when you are installing.



Fig.22



1

### Adjusting idle (Fig23、 Fig24)

- 23 -

The carburetor adjusted perfectly from the factory, if the carburetor comes out of adjustment; have it adjusted by a professional.

Warm up engine very well before starting.

Idle adjust screw (1) turn to right to speed up turn to left to slow down.

After adjusting the idle, adjust throttle handle cable to free path for 2-4mm, use adjustor (2) to adjust, screw down nut, then tighten set nut (3).

Adjust idle to 1200 rpm

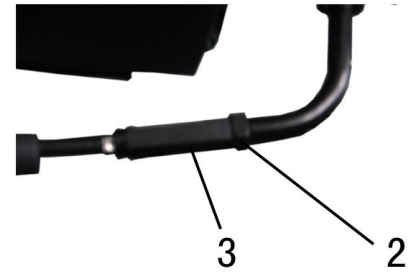


Fig.23

### **Change engine oil and clean strainer of oil filter**

- **Change engine oil (Fig25).**
- Change the engine oil while engine is warm.

#### **Clean the strainer.**

- Take out oil plug cover and oil filter 1 take strainer 2 and spring 3!
- Using carburetor cleaner/or air clean and dry the strainer.
- Reinstall oil filter, strainer and spring!

Fig.24



- 24 -

- Refill the engine with Castrol 10w-40 semi synthetic oil.
- Check dipstick for proper level and reinstall
- Start engine and idle for a few minutes then turn off.
- Check the level of engine oil again, makes sure there are no leaks.
- Keep records of your oil Change and receipts for oil these must be available for warranty claims.

- 25 -

## Change gear oil (Fig26)

Suggestion engine oil No:

SAE 80W/90

Oil Capable

Resolving capacity: .10 quart

Changing capacity : .10 Quart

Park the bikes with the main stand

- Take out the gearbox drain bolt (2), and the refill bolt (1).
- Drain oil into a small pan for proper disposal.

**NOTICE:** THE TRANSMISSION MUST BE WARM. WHEN DRAINING, AND THE VEHICLE MUST BE STEADY ON THE MAIN STAND!

- Reinstall the drain bolt after draining oil.
- Inject 100ml or .10 quarts to engine through refill bolt
- Using an injection tool, inject the oil into the bolt, till full.
- Install refill bolt and tighten snugly.

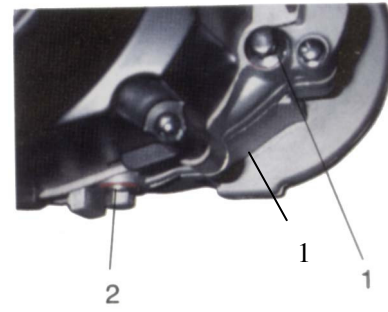


Fig26

- 26 -

## Spark plug(Fig 27)

Specifications of spark plug

Standard:: C7HSA (NGK)

- Take spark plugs, clean them of any build up set the gap and install. If unsure about spark plug condition install new.
- Examine if there is dirt on poles and the porcelain head in center .If it has corroded, change it .Use wire brush if needed.
- Normally the gap between side electrode (1) and Center electrode (2) is 0.6-0.7.
- Don't use off brand spare plug

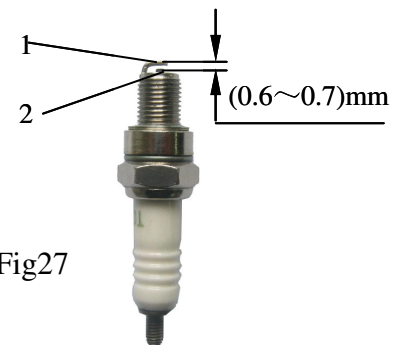


Fig27

## Fuse replacement

The specified electric current of the total fuse is 15 A

If the connection is not good, the fuse will overheat and meltdown.

Do not use any fuse which specifications are different from assigned. To do so could cause wires to melt, burn or catch fire.

- 27 -



## Vehicle Storage

### Storage

For a motorcycle not to be used for a long period of time, for example, in winter or fall, some steps should be taken to prevent malfunction of and damage to components, which might be caused by long storage. Maintenance must be performed before the long storage, for fear that it might be forgotten when vehicle is put back into use after storage.

- Change engine oil and oil filter.
- Drain off fuel from the fuel tank and carburetor, spray atomized anti-rust oil onto the inside wall of the tank and then close the tank.

### Warning: DANGER DANGER DANGER

Gasoline is very flammable and can cause fire and even explosion under certain conditions. Therefore, do not smoke, make sparks or be careless when working with GAS!

- Take out the spark plug, pour about 15~20ml clean engine oil into the cylinder, turn over engine and finally reinstall spark plug.
- Store vehicle in a shady and cool place free from humidity and direct sunshine.
- After washing and drying, Coat all screws or metal pieces with a light coat of oil.
- Wash the motor, wipe it dry and apply an even coat of wax to all painted surfaces.

- 28 -

### Using the bike after removal from storage

- When storing time is more than 4 months, you should change the oil.
- Recharge and replace the battery.

Please check and perform pre use inspection like a new scooter.

### Vehicle identify Number

Your bike has assigned a VIN (Vehicle Identification Number) (Fig28)

You should know your VIN and engine number to allow you easy access to parts and technical information

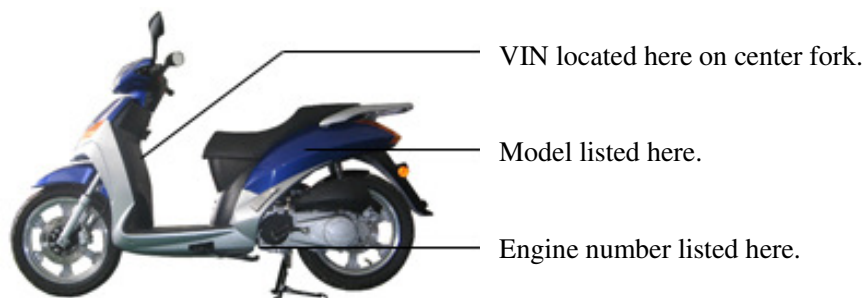


Fig28

### Your tool set

The tool bag in the seat trunk (Fig29) contains the following:

- |             |                   |
|-------------|-------------------|
| 8*10 wrench | 12*14 wrench      |
| Screwdriver | Spark plug wrench |



Fig29

- 29 -

Wrench bar

18.5\*17 wrench

Main Specifications		Program5	
Item	Specifications	Item	Parameter
L×W×H (mm)m	2101×684×1168	Front Tire	100/80-16
Wheel Base mm	1418	Rear Tire	110/80-16
Ground Clearance mm	70	Pressure Of Front Tire	34PSI
Dry Weight kg	120	Pressure Of Rear Tire	36PSI
Max Load kg	150	Transmission	CVT
Turning Angle of	≤48	Speed Ratio of	8.56~ 24.17
Brake Distance m	≤7m(30km/h)	Engine Type	157QMJ Single Cylinder, four stroke、 Air cooled
Max Speed km/h	≥85	Bore/stroke mm	57.4×57.8
Gas mileage est.	≤68 MPG	Displacement ml	149.6
Climbing Performance	≥16'	Clutch Type	Auto centrifugal
Starter Model	Electric/kick	Bore/stroke mm	6.8
		Battery	12V 7Ah

- 30 -


Program5

Items	specifications	Items	Parameter
Lubrication	Oil pump	Fuse	15 A
Rated Power kW/r/min	5.9kW/7000 (r/min)	Headlight	12V18W/18W×2
Max Torque N.m/r/min	8.3N.m/6000r/min)	Tail light/Braking light	12V 21W/5W
Compression Ratio	9.2: 1	License Plate Light	12V 3W
Specification of Spark Plug	NGK-CR7 HSA	Turning light	12V 10W×4
Spark Plug Gap mm	0.6~0.7	Fuel Brand	Premium 90 OCT or above
Idling Speed	(1700±170)r/min	Trans oil capacity	0.10qT
Oil capacity	0.9L	Gear Oil Brand	SAE 80W/90
Ignition	CDI	Gap of valves	.004~.005
USE CASTROL OIL ONLY Syntec blend	SAE 10w/40		

- 31 -

# Wiring harness

- 32 -

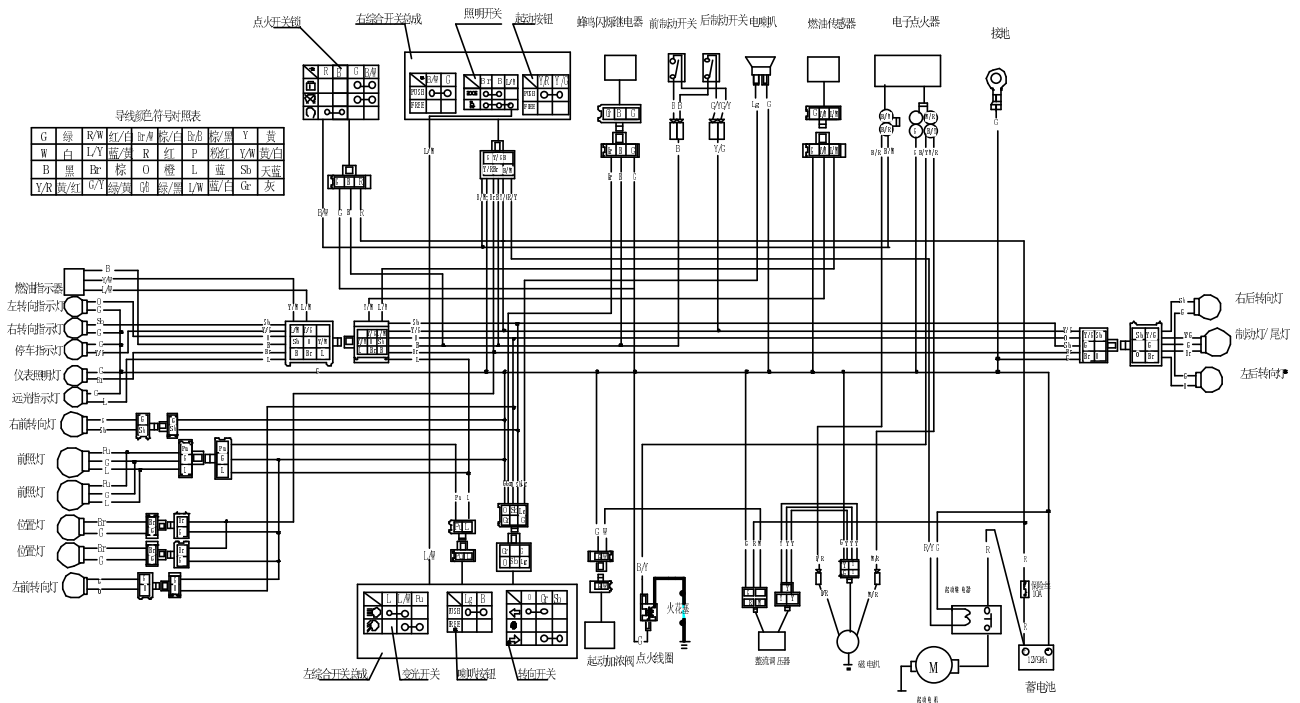

Motofino USA, Inc.

- 33 -

2167 Gordon Hwy.  
Augusta, GA 30909

### Reporting Safety Defects

If you believe that your vehicle has a defect which could cause a wreck, injury, or death; you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to Motofino USA, Inc.

If NHTSA receives similar complaints it may open an investigation. If it finds that a safety defect exists in a group of vehicles it may order a recall and remedy campaign. However, NHTSA can not become involved in any individual problems between you, your dealer, or Motofino USA, Inc.

To contact NHTSA you may either call the Auto Safety Hotline toll-free at 1-800-424-9393 (366-0123 in Washington DC area) or write to:

NHTSA	U.S.
Department of Transport	400 7 <sup>th</sup> Street
SW, (NSA-11)	Washington, D.C. 20590

You can also obtain other information about motor vehicle safety from the Hotline.

### **Motofino USA Inc.**

- 34 -

### **Limited Warranty**

#### Limited Warranty

Motofino USA Inc. (hereinafter referred to as " Motofino" hereby warrants to the original purchaser that the frame and components of the new Motofino vehicle will be free from defects in materials and workmanship. The period of the warranty is 12 months or 6000 miles from the date of purchase for the engine; 90 days from the date of purchase for the frame and thirty (30) days from the date of purchase for the component parts (except as noted below). Motofino, if notified of a defect in material or workmanship during the period of the warranty, will repair or replace, at its option, the defective part at no charge, other than the reasonable charges for labor and shipping, if necessary to perform a warranty repair. The original purchaser must operate the vehicle and maintain the vehicle in accordance with the instructions provided in the Motofino user manual, the supplements thereto and the labels affixed to the vehicle. Additionally within ten (10) days of the discovery of the alleged defect, the original purchaser must provide written notification to Motofino Customer Service at 2803 WYLDs ROAD Augusta GA 30909

#### General Exclusions:

This limited warranty does not cover component failure or damage caused by any of the following: collision; abnormal strain or stress; neglect; abuse; improper assembly of components which were provided in the factory sealed carton; after the vehicle left Motofino; improper maintenance; improper use of the vehicle, including, but not limited to racing, jumping, stunt driving, off road use or any other use other than normal, prudent, safe usage. Additionally, this warranty does not cover component failure or damage to vehicles leased or rented, or vehicles used for any commercial uses, dirt tracks or hard track purpose.

#### Specific Exclusions:

**This Warranty does not cover off road Vehicles of any type.** This limited warranty does not cover components that are subject to normal wear and tear. These items include but are not limited to the tires, clutch, brakes, brake shoes,

- 35 -

throttle cable, drive belts, torque converter, chains, seat, lights, fasteners, padding, decals, cosmetic body panels, spark plugs, wires. Additionally, this warranty does not apply to components, which are warranted by the component manufacturer.

Motofino makes no other warranty of any kind, express or implied. All warranties of merchantability and fitness for a particular purpose which exceed the obligations and time limitations specified in the warranty above are hereby disclaimed by Motofino and excluded from this warranty. Additionally, this warranty excludes any incidental or consequential damages, including but not limited to loss of use. Some States do not allow a manufacturer to exclude or limit incidental or consequential damages, and therefore, the above exclusion may not apply to you. Some States don't allow a manufacturer to limit how long; an implied warranty will last. Therefore, the above limitation may not apply to you. This warranty provides specific legal rights. You may also have other legal rights that vary from State to State.

#### Warranty Registration Card

- 36 -

Motofino USA, Inc

**\*\*All fields must be filled completely to validate warranty\*\***

Warranty must be activated with in **15 days** of purchase.

Date of Purchase \_\_\_\_/\_\_\_\_/\_\_\_\_

VIN: \_\_\_\_\_ Engine # \_\_\_\_\_

Model: \_\_\_\_\_ Year: \_\_\_\_\_ Color: \_\_\_\_\_

Dealer Name: \_\_\_\_\_

Dealer Address: \_\_\_\_\_

City: \_\_\_\_\_ State: \_\_\_\_\_ Zip Code: \_\_\_\_\_

Customer Name: \_\_\_\_\_ Phone #(\_\_\_\_) \_\_\_\_\_ - \_\_\_\_\_

Customer Address: \_\_\_\_\_

City: \_\_\_\_\_ State: \_\_\_\_\_ Zip Code: \_\_\_\_\_

Email: \_\_\_\_\_

In order to activate the warranty for your vehicle, please read the following instructions:

- 1) Please mail your warranty card with a copy of the sales receipt.
- 2) Please submit a receipt to show a professional inspection and/or set up of your scooter or motorcycle.

Warranty coverage will be valid for 12 months following the date of purchase.

For more information, please request a Warranty Policy from your dealer, or contact us at:

Tel: (706) 733-1355 Fax: (706) 733-1357 Email: info@motofino.com

I understand the above instructions and I verify that all the information provided is correct to the best of my knowledge.

Signature \_\_\_\_\_

\*\*\*Tear out, place in envelope and mail to: Motofino USA, Inc.

2167 Gordon Hwy.

Augusta, Georgia 30909

PRE-OPERATION CHECKLIST

For your safety and to ensure your warranty, please have a certified technician perform these checks before you

- 37 -

operate your vehicle.

- \_\_\_ HYDRAULIC BRAKE FLUID AT CORRECT LEVEL
  - \_\_\_ FRONT AND REAR BRAKES ADJUSTED AND FUNCTIONING
  - \_\_\_ FRONT AND REAR TIRES SET TO PROPER AIR PRESSURE
  - \_\_\_ ALL CABLES ROUTED CORRECTLY AND FUNCTIONING
  - \_\_\_ FUEL SYSTEM FLUSHED OUT
  - \_\_\_ OIL IN CRANKCASE AND TRANSMISSION AT PROPER LEVEL
  - \_\_\_ INTAKE AND EXHAUST VALVES ADJUSTED IF NEEDED
  - \_\_\_ ELECTROLYTE IN BATTERY AT PROPER LEVEL
  - \_\_\_ AIR FILTER CHECKED AND INSTALLED
  - \_\_\_ IDLE SPEED ADJUSTED TO PROPER RPM
  - \_\_\_ AIR FUEL MIXTURE ADJUSTED FOR BEST PERFORMANCE
  - \_\_\_ HEADLIGHTS LOW AND HIGH BEAM OPERATING
  - \_\_\_ REAR BRAKE LIGHT AND TAIL LIGHT OPERATING
  - \_\_\_ ALL BLINKERS FUNCTIONING
  - \_\_\_ EMERGENCY KILL SWITCH OPERATING
  - \_\_\_ HORN FUNCTIONING PROPERLY
  - \_\_\_ SPEEDOMETER, LIGHTS, AND GAUGES ON DASH WORKING
  - \_\_\_ ALL FASTENERS- (nuts, bolts, screws)-TIGHTENED-(thread locker applied on high vibration areas ex:-exhaust manifold bolts)
  - \_\_\_ CHAIN TENSION ADJUSTED
  - \_\_\_ COOLANT LEVEL CHECKED-(water cooled engine)
  - \_\_\_ TEST RIDE PERFORMED BY INSPECTOR
- INSPECTION PERFORMED BY: \_\_\_\_\_ DATE: \_\_\_\_\_
- MAKE AND MODEL OF VEHICLE: \_\_\_\_\_ VIN# \_\_\_\_\_

- 38 -

I UNDERSTAND THAT ALTHOUGH THIS VEHICLE HAS BEEN INSPECTED FOR SAFETY AND PROPER OPERATION, IT IS MY RESPONSIBILITY TO PERFORM THESE CHECKS EACH TIME BEFORE OPERATION BY OTHERS OR MYSELF.

CUSTOMER SIGNATURE: \_\_\_\_\_ PRINT: \_\_\_\_\_ DATE: \_\_\_\_\_

**PLEASE RETURN THIS WITH YOUR WARRANTY CARD**



- 39 -

