Series 700 Laser Diode Mounts User's Manual



Warranty

Newport Corporation warrants this product to be free from defects in material and workmanship for a period of 1 year from the date of shipment. If found to be defective during the warranty period, the product will either be repaired or replaced at Newport's option.

To exercise this warranty, write or call your local Newport representative, or contact Newport headquarters in Irvine, California. You will be given prompt assistance and return instructions. Send the instrument, transportation prepaid, to the indicated service facility. Repairs will be made and the instrument returned, transportation prepaid. Repaired products are warranted for the balance of the original warranty period, or at least 90 days.

Limitation of Warranty

This warranty does not apply to defects resulting form modification or misuse of any product or part. This warranty also does not apply to fuses.

This warranty is in lieu of all other warranties, expressed or implied, including any implied warranty of merchantability or fitness for a particular use. Newport Corporation shall not be liable for any indirect, special, or consequential damages.



Newport Corporation, Irvine, California, has been certified compliant with ISO 9002 by the British Standards Institution.



Corporate Headquarters Newport Corporation 1791 Deere Avenue Irvine, CA 92714 Telephone: 949-863-3144 Facsimile: 949-253-1800

Belgium Telephone: 016-402927 Facsimile: 016-402227

Canada

Telephone: 905-567-0390 Facsimile: 905-567-0392 France

Telephone: 1-60 91 68 68 Facsimile: 1-60 91 68 69 Telephone: 06151-36 21-0

mile: 06151-36 21-52

Telephone: 02-924-5518 Facsimile: 02-923-2448

Italy

Telephone: 03-5379-0261 Facsimile: 03-5379-0155

Netherlands Telephone: 030-6592111 Facsimile: 030-6570242 Switzerland

Telephone: 01-740-2283 Facsimile: 01-740-2503

Taiwan R O C Telephone: 2-2769-9796 Facsimile: 2-2769-9638 United Kingdom Telephone: 01635-521757 Facsimile: 01635-521348

Safety Precautions

Caution

Never look directly into the output aperture of a laser diode package or mount at any time. Laser diodes emit invisible radiation that can cause damage to the eyes.

Observe electro-static discharge avoidance procedures when handling laser diodes. Check that all equipment is disconnected from the mount before connecting a laser diode.

Model 700 Series Mounts

The Model 700 Series Temperature Controlled Mount is a research quality mount that provides precise temperature control of laser diodes. Thermoelectric modules and an efficient thermal design permit cooling or heating. A dry nitrogen purge nipple allows the laser diode to be surrounded in a nitrogen environment preventing condensation at below ambient temperatures.

Connectors on each side of the Model 700 Series mount provides a convenient manner to connect a Model 300 Series Temperature Controller and a Model 500 Series Laser Diode Driver. The mount comes assembled with a 1.5" riser and slotted baseplate that allows for adjustment on one by one inch grid as well as on metric tables.

Temperature Control

The Model 700 Series Temperature Controlled Mount has been designed to handle high power laser diodes such as Spectra Diode Labs model SDL-2460 series and Sony's model SLD304. Two 12.5 watt thermo-electric modules actively cool and heat the laser diode. These modules are series connected and handle a maximum of 6.0 Amps at 7.5 volts.

Laser Diode Mounting

Two laser diode mounting plates are available for use with the Model 700 Series Temperature Controlled Mount. All mounting plates may be rotated 901's that the polarization plane may be changed.

A combination 9mm/5.6mm mounting plate handles packages such as Sharp's C&D types, Spectra Diode Labs' G1 & V1, and NEC & Toshiba's visible laser diodes. The second mounting plate is for TO-3 laser diode packages.

A blank mounting plate having a predrilled pilot hole is also offered and can be custom milled by the customer to accept open air or non-standard laser diode packages.

Collimating Lens Housing (Model 700C)

The housing provides a versatile assembly for collimating the output of a laser diode. Recessed, precision screws provide an adjustment of the op-

tics in the X and Y directions while a especially designed lens cartridge focuses the lens. The range of adjustment is 4mm in the X and Y directions and 10mm along the focal axis.

All screws have 80 threads per inch and use non-outgassing grease for smooth and accurate adjustments. Safety covers on all adjustment screws prevent inadvertent misalignment of the optics.

The lens cartridge can be easily removed permitting different sets of optics to be inserted without disassembling the collimating lens housing.

Laser Diode Collimation

Precision collimating optics having a 5mm clear aperture and optimized for wavelengths between 600nm to 1020nm is available (part# 700-42).

Specifications

Temperature Controlled Mount

Size

a) without Collimating Lens Housing	4" x 4" x 1.6"
b) with Collimating Lens Housing	4" x 4" x 2.9"

Optical Height:

a) with riser	4"
b) without riser	2.5"
c) without riser and baseplate	2.0"

The Temperature Controlled Mount can be mounted without the baseplate or riser using standard opto-mechanical hardware.

TE Modules

Two 12.5W, 20mm x 20mm maximum 6.0 Amps and 7.5 volts.

Laser Diode Mounting Plates

- a)9mm/5.6mm packages (base diameter)
- b) TO-3 packages
- c) Blank plate with predrilled pilot hole

Temperature Sensors

- a) $10 \,\mathrm{k}\Omega$ thermistor
- b) AD592CN sensor

Connectors

- a) D-sub 15-pin male, Temperature Controller connection
- b) D-sub 9-pin male, Laser Diode Driver connection
- c) Isolated BNC, for modulation input
- d) Purge Nipple, for dry nitrogen

Collimating Lens Housing

Lens Adjustment

a) X and Y directions 4mm, 80 threads per inch b) focal axis 10mm, 80 threads per inch

Lens Cartridge 9mm inside diameter

Collimating Optics A standard lens assembly is

available to use with the Collimat-

ing Lens Housing

Part No.Focal LengthNumerical ApertureWorking DistanceOptical Optical DistanceWindow QualityWindow ThicknessField-Of-View DiameterClear Aperture700-425.0 mm0.502.67 mm600-1020 nm\(\lambda/201\) 0.30 mm0.014 mm5.0 mm

Specifications are subject to change without notice.

Using the Temperature Controlled Mount

The Model 700 Series Temperature Controlled Mount is versatile for controlling the temperature of laser diodes having many different types of packages. This mount can also be used to cool IR detectors for noise reduction in low level signal detection. Dry nitrogen may be used to purge the inside water vapor to prevent condensation when operated at below ambient temperatures. Mounting a device is a simple procedure but care must be taken not to damage the TE modules and to ensure that the connections to the laser diode and photodiode are correct.

Mount Assembly

Access to the laser diode mounting plate is from the front, while access to the electrical connections is from the rear of the mount. The unit comes completely assembled as an aid in showing how each component fit together. The front cover is held on with four bottom head screws. Removing them exposes the laser diode mounting plate, attached thermistor and AD592 sensor, and the TE modules held in place with heat transfer grease.

Removal of the rear cover should be done with the front cover or collimating lens housing secured to the main housing to avoid stressing thermistor and TE module wires. Carefully lay the mount down on its front cover and remove the four screws. This exposes the rear of the main housing where the electrical connections are made to the two D-sub connectors, and an isolated BNC connector.

Laser Diode Handling Precautions

NOTE

Laser diodes are extremely sensitive to static discharge. The manufacturer's guidelines should be followed at all times when handling laser diodes.

- All operators must be properly grounded before handling any laser diode.
- b. All soldering irons must be properly grounded.
- c. All related test and assembly equipment must be properly grounded.

Laser Diodes can only withstand a maximum reverse voltage of 2 to 3 volts across their leads and no more than their maximum rated current in the forward direction. Always follow the manufacturer's instructions for removing and handling laser diodes.

Additional precaution must be taken when soldering to the leads of a laser diode. Excess heat from soldering damages the laser facet. Care must be taken to provide a heat sink between the laser diode and the leads during soldering. Also, *always* follow the laser diode manufacturer's specifications for maximum temperature and soldering times.

It is recommended that the connection to the laser diode remain floating relative to Chassis Ground (earth ground). This prevents AC transients or other voltage potentials arising from multiple earth ground loops front damaging the laser diode. Extreme care must be taken to ensure that all devices including the Model 500 Series and any devices connected to the laser diode, such as an external modulations source, are all grounded to the same earth ground point. It is strongly recommended that this common earth ground be the chassis ground (pin 3, brown wire) on the sub-D

9-Pin connector. If you have any questions on earth grounding a laser diode contact a Newport applications engineer.

Mounting a Laser Diode


The Model 700 Series Temperature Controlled Mount has three mounting plates available. These mounting plates include; a) a 9mm/5.6 mm mounting plate for laser diodes having a base diameter of 9mm and 5.6mm, b) an optional TO-3 mounting plate for higher power laser diodes, and c) an optional blank mounting plate having a predrilled pilot hole that can be milled for custom and non-standard laser diode packages. Each mounting plate has a hole milled from the bottom side that comes within .040" of the top surface of the mounting plate. This hole has a precision $10\,\mathrm{k}\Omega$ thermistor and AD592CN sensor epoxied inside.

9mm/5.6mm Combo Mounting Plate

Many laser diodes come in a package that has a base diameter of 9mm. A list of some manufacturer laser diodes having these package types includes the following:

Manufacturer	Package type
Hitachi	All 9mm cans
Mitsubishi	All 9mm cans
Sharp	Cand D type
Sony	V labeled models
NEC	NDL 3200, VDL
Toshiba	TOLD 9200, VLD
Spectra Diode Labs	G1 and V1

The figure below shows the 9mm mounting plate with its retaining plate.

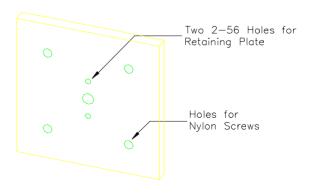


The retaining plate is attached to the 9mm mounting plate by two screws. To mount a laser diode, remove the screws for the retaining plate and carefully center the laser diode over the center hole. The retaining plate will center the laser diode when it is secured by the two screws.

To orient the laser diode for vertical or horizontal polarization, loosen the two retaining screws and rotate the laser diode can to the correct position.

To remove the mounting plate from the main housing the wires from the thermistor or the AD592 sensor must be unsoldered from the D-sub 15-pin connector, so they may be pulled through the hole on the bottom of the main housing. Before soldering the sensor to the D-sub connector consult the Temperature Controller Connection section for the correct sensor polarity.

TO-3 Mounting Plate

The TO-3 mounting plate, shown in the figure below, provides a convenient method for mounting laser diode packages in TO-3 cans. With the front cover removed, align the TO-3 package's holes with the holes on the mounting plate and secure the laser diode with the 6-32 screws.

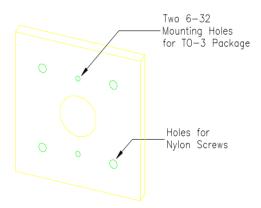

The mounting plate is factory aligned so that the theta parallel polarization plane is horizontal. To rotate the diode or vertical polarization, remove the four nylon screws holding the baseplate. Reposition the TE modules to prevent them from interfering with the temperature sensor

wires then rotate the baseplate 90°. Make sure that the wires are not pinched between the TE modules and the mounting plate. Finger tighten the screws in diagonal pairs to avoid uneven pressure that might deform or crack the TE modules underneath.

To remove the mounting plate from the main housing the wires from the thermistor must be unsoldered from the D-sub 15-pin connector, then they may be pulled trough the hole at the bottom of the main housing. See the Temperature Controller Connection section for the Correct polarity before reconnecting the temperature sensor.

Blank Mounting Plate

Open air and non-standard laser diode packages may be mounted on a blank mounting plate. It has a pre-drilled pilot hole in the center of the mount and may be milled by the customer to accept many different laser diode types.

Thermoelectric (TE) Modules

The Model 700 Series Temperature Controlled Mount uses two 12.5 watt thermoelectric modules or active heating and cooling. A series connection is used to maximize their efficiency when used with a Model 300 Temperature Controller insuring that the current flow to the TE modules does not exceed their maximum current rating. In series, these TE modules can handle a maximum of 6.0 Amps and will drop a maximum of 7.5 volts. Care must be taken not to exceed the TE modules' maximum temperature rating of +80 °C. If your application requires operating at a higher temperature, contact Newport Corporation.

Even though the TE modules can dissipate up to 25 watts, at high levels convection cooling may not be sufficient to stabilize heat dissipation, limiting the mount's ability to maintain laser temperatures below ambient. Fan cooling increases mount dissipation efficiency and will allow operation at low desired temperatures, preventing thermal saturation or runaway conditions. Consult Newport if you have requirements to lower the temperature of a laser diode below 10YC.

Electrical Connections

Electrical Connections are made to the laser diode, TE modules, and temperature sensors from the rear of the mount. Connections to a Temperature Controller are made via a DB-15 and to a Laser Diode Driver via a DB-9 connector. A BNC connector is available to input a modulation

signal either to a PC board of you own design or to a bias tee that can be mounted inside rear compartment of the main housing.

Temperature Controller Connection

A D-sub 15-pin connector has been provided to connect the TE modules and thermistor to a temperature controller. The Model 300 Series Temperature Controller can be connected directly to the connector using the Newport's cable part number 300-04. Looking from the outside of the mount, pin numbers can be seen on the connector's insulation found around the pins.

<u>Pin</u>	Connection	Wire Color
1 & 2	TE+	Red
3 & 4	TE-	Black
7	Sensor+	White(thermistor), Red (AD592)
8	Sensor-	White(thermistor), Blue(AD592)


Pins 1 & 2 and 3 & 4 are soldered together inside the main housing. If the maximum capabilities of the TE modules are to be used, paralleling wires in cabling to the mount is permissible to handle 6 Amps. The pins of the D-sub connector are each rated for 5 Amps. The Model 700 Series Temperature Controlled Mount comes with a precision 10 kohm thermistor and a AD592 sensor. The mount comes with the thermistor connected to the 15-pin connector. When connecting the AD592 sensor, assure that the polarization is correct.

Laser Diode Driver Connection

A D-sub 9-pin male connector has been provided with wire pigtails to connect to a laser diode socket. A Model 500 Series Laser Diode Driver can be connected directly to the mount using Newport's cable part number 500-04. Looking from the outside of the mount, the pin numbers can be seen on the connector's insulation found around the pins.

<u>Pin</u>	<u>Connection</u>	Wire Color
3	Chassis Ground	None
4,5	Laser Cathode	Black
6	Photodiode Cathode	White
7	Photodiode Anode	Green
8,9	Laser Anode Red	

The figure below shows the three possible connections of a laser diode and photodiode. Standard sockets may be used to connect the device.

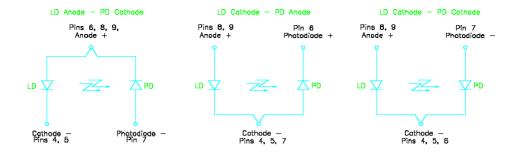

The chassis ground connection, earth ground, can be used if there is a danger of electrostatic discharge (ESD) to the laser diode when the collimating lens housing is not used. This connection provides a path to earth ground for energy arising from ESD at the laser diode case. The ground connection must be made at the laser diode and only one ground path must be made. The mount and any equipment connected to the mount must have only one ground path and that must be through the chassis ground pin (pin 3) on the laser diode connector. If possible, the laser diode should be left floating (with no connection to earth ground) to improve transient protection and to prevent ground loop potentials created from improper earth grounding, which could damage the laser diode.

Modulation Input Connection

Above the laser diode driver connector is a BNC that can be used to input a modulation signal. A customer designed PC board can be mounted in the rear chamber using four pre-tapped holes. Also, a bias tee can be used to modulate the laser diode and can be mounted in the rear chamber. Contact Newport for additional information on using a bias tee.

Purge Nipple

To prevent condensation from occurring on the laser diode when operating below ambient temperature, a dry nitrogen purge nipple is supplied with all mounts. The purge nipple is located on the same side as the temperature controller connector towards the front of the main housing. Flexible tubing, with an inside diameter of one sixteenth (1/16'') inch, is used to connect the mount to a dry nitrogen source. When the collimating lens housing is not used the flow of nitrogen must be great enough to fill the front portion of the mount and flow out of the front cover around the laser diode package.

General Operating Procedures

- Securely mount the Model 700 Series Temperature Controlled Mount on an optical table by the baseplate supplied with the mount.
- 2. After securing the mount, connect the cables of the temperature controller and the laser diode driver to the mount.
- 3. Set the maximum TE module current on the temperature controller.
- 4. Set the current limit level on the laser diode driver and the desired drive current. Turn the output of the laser diode driver on.
- 5. Allow the mount to stabilize its temperature which may take up to one half an hour.

WARNING

Never look directly into the output aperture of the mount at any time. Laser Diodes emit invisible radiation that can cause damage to the eyes. Also, take precautions to prevent specular reflections from the laser diode's output beam. Avoid exposure at all times to laser emissions or collateral radiation in excess of the applicable emission limits given in "Performance Standards for Laser Products" United States Code of Federal Regulation, 21 CFR 1040.10(D)

Collimating Lens Housing


The Model 700C Series Temperature Controller Mount includes a complete collimating lens housing. Each collimating lens housing comes fully assembled with the lens cartridge and protective covers in place, as shown in the figure below. Newport offers a precision, three element, collimating lens for laser diodes.

Lens Cartridge

Each collimating lens housing has one lens cartridge supplied with it. Remove the protective cover, then unscrew the knurled lens cartridge from the collimating assembly. The collimating optics slide into the end of the lens cartridge opposite the knurled end. A #2-56 set screw is used to secure the collimating optics inside the lend cartridge. Reinstall the


lens cartridge, careful not to strip the threads (80 threads per inch with non-outgassing grease) to a depth of $5/16^{\prime\prime}$ (8mm) with respect to the surface of the housing. This insures that the lens will not touch the laser diode package. The laser diode output beam may now be collimated by screwing the lens cartridge into the collimating lens housing and adjusting the X-Y centering setscrews.

Collimating Optics

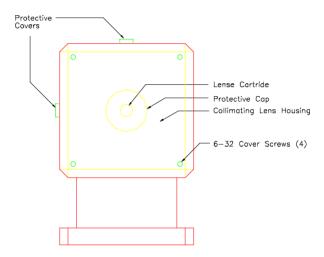

Collimating optics may be purchased from Newport or provided independently by the customer. Newport's 5mm collimating lens (part #700-42) is optimized for operation in the 600-1020nm wavelength range. The lens cartridge has a 9mm inside diameter for the collimating optics assembly. The orientation of the lens with respect to the laser diode window is shown in the figure below. The lens slides into the Lens Cartridge opposite the knurled end.

Collimating a Laser Diode

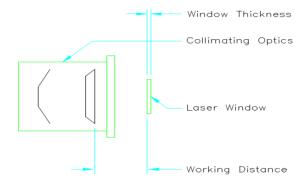


There are several methods used to collimate a laser diode. The most accurate and time consuming method uses an interferometer to look at the interference pattern while adjusting the collimating optics until the fringe pattern disappears.

A second method uses a beam profiler and a single lens having a long focal length. The lens is located exactly one focal length from the measurement plane of the beam profiler. The output beam of the laser diode is collimated when the minimum spot size is measured. The optical basis for this method of collimation is shown in the figure below.

Focusing is accomplished by screwing the lens in and out until the output beam of the laser diode is focused. To align the laser diode emitting aperture with the center of the lens the X and Y adjustment screws must be

used. The screws are accessed by removing the two protective caps. $Q = Df\left(mm\right) / f\left(mm\right)$

 where:



- 1) Q = full angle divergence from the collimator
- 2) Df = spot width at one focal length from the lens $(1/e^2)$
- 3) f = focal length of lens, and is true for any laser mode or mixture of modes.

NOTE

Disconnect laser diode from laser diode driver instrument before starting the alignment procedure. Never look into the output aperture of a laser diode when it is operating.