

## Goclever Chronos Eco

Display: Sharp Memory LCD 1.26" (144x168px), illuminated  
Compatibility: BT 4.0 + Android 4.4.0 or newer  
Sensor: 3 axis accelerometer

Functions:

- FITNESS:** Number of steps, distance traveled, burned energy, sleep statistics.
- MUSIC:** remote control of your playlist
- CAMERA:** remote shutter functionality
- NOTIFICATIONS:** vibrates and displays incoming call number, incoming e-mails and notifications from user selected apps
- ANTI LOSS:** displays warning about lost connection with paired device
- CLOCK:** Date, hours, minutes. 3 clock faces
- BATTERY:** Displays battery charge level

Water resistance: 5ATM  
Battery: 110mAh, Li-Ion  
Charging time: 3 hours  
Working time: Up to 3 weeks: normal usage  
Up to 4 weeks: standby  
Working temperature 0-50°C  
Bluetooth range Up to 10 meters  
Accessories: -Dedicated USB charging cable  
-User manual

EAN: 5906736068503  
Product code GCWCHREW  
Envelope dimensions: 4,5x3,5x1,1 cm  
Weight 36 g

Dimensions of collective box: 378 x 204 x 162  
Weight of collective box: 3,24  
Number of pieces in collective box: 20



## Q&A

### **How can I connect Chronos Eco with my phone?**

Firstly install on your mobile device dedicated app. When opened, go to Device Connection menu, then push Scan button. After app finds the smart watch choose its name to connect.

### **How can I customize which notification will be pushed into Chronos Eco?**

Inside dedicated app go to menu and choose „Message Filtering”. To add application which may send notifications push „+” button, choose desired app from the list and confirm.

### **How can I update firmware?**

Inside dedicated app go to menu and choose „Check For Updates”. If new firmware is available you will be able to choose „Upgrade”. App will download latest firmware and upload it wirelessly into Chronos Eco.

### **How can I remotely control camera in my mobile device?**

Inside dedicated app choose camera icon. Watch will automatically switch to camera control mode. You will be able to use it as remote trigger for taking photos and recording movies.

### **How can I reset Chronos Eco?**

1. Plug smart watch to power. 2. Press simultaneously up and down buttons.

### **How can I reset fitness statistics?**

In current firmware version you can do this by resetting Chronos Eco

### **How can I turn off notifications?**

Go to watch’s menu, choose “Settings”, then set “Night” to ON.

### **How can I turn off fitness counters?**

Go to watch’s menu, choose “Settings”, then set “Fitness” to OFF.

### **How can I turn on LCD backlight?**

To do this permanently go to watch’s menu, choose “Settings, then set „Backlight” to ON.

To turn on backlight only when you move your wrist go to watch’s menu, choose “Settings”, then set „Backlight” to OFF and “Motion” to ON.

### **Is Chronos Eco is waterproof?**

Yes it is. It is protected against rain and moisture. You can swim with it, but not dive.