

Thanks for buying the CZH-T200 portable FM transmitter.

Before you use this transmitter for the first time, please read the user manual carefully and operate the device following the instructions. It is multi-functional device but easy to operate. We sincerely hope our products will bring you happy experience.

# CZH-T200 Portable FM Transmitter User Manual



Please read this manual before you use the device, restore the manual carefully in case you'll need it in the future.



#### Copyright

This manual belongs to our company only, all rights are reserved by us. This manual is subject to change without notice. Without the permission of our company, it shall not be copied or transmitted or translated to any language or computer codes.

#### 1. Attention before use

- 1) Only professional engineers can do the repair work.
- 2) Don't power on the transmitter without connecting the antenna.
- 3) Don't use the transmitter in explosive environment.(such as gas station, natural gas or steam)
- 4) Don't put the transmitter in extreme dusty, damp or hot places.
- 5) Please use the transmitter following the local regulations.
- 6) Please try not to use the transmitter in thunder/storm weather.

#### 2. Main Characteristics:

- 1) This transmitter uses professional transmitting transistors, it gives excellent audio quality. The audio port and microphone port are independent from each other, the input signal will be processed independently too, this decrease the loss of sound quality in a large extent.
- 2) The Power output is 4 levels adjustable; choose different power in different situation can avoid interference to the environment around.
- 3) This transmitter is equipped with special antenna; it is stable and reliable in transmitting a relative far range.
- 4) This transmitter uses 1000ma Li-on battery, its high capacity enables a long working time up to 16hours at the lowest power output mode.
- 5) The noise and harmonics are ≤60dB, achieving professional standard. This can avoid the interference to surround environment.
- 6) MONO/STEREO adjustable, easy to use.

#### 3. Application Area

Driving school teaching	Campus teaching		
Stage directing	Public speech		
Tourism guide	CAR walkie-talkie,MP3 audio transmission		
HOME wireless audio system	Wireless meeting system		
Spontaneous translation	Outdoor camping		




### **CZH-T200 FM Transmitter Application Areas**




#### 4. Operation Instruction:



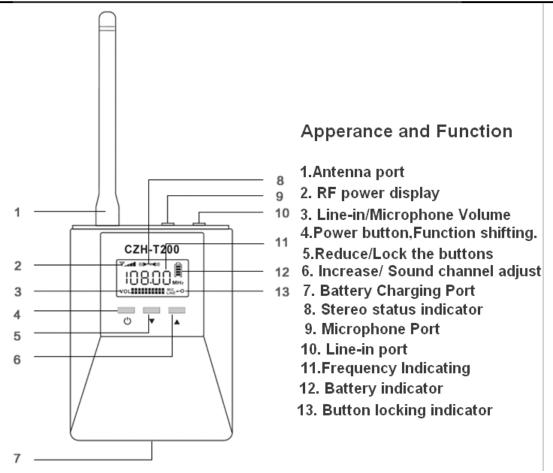


#### 1). Battery cover Install/removing:

A. Install the battery cover by inserting its legs to the holes on the back of transmitter, then push in (Picture A), and Press until it's locked tightly(Picture B).

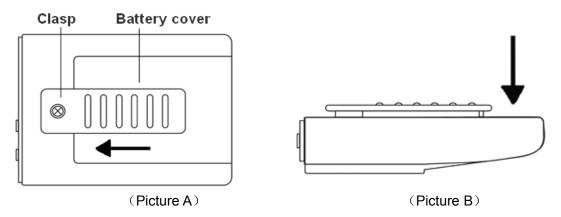


B. Hold the back of the cover and open it a little (Picture C), then pull out the cover from the slot (Picture D).



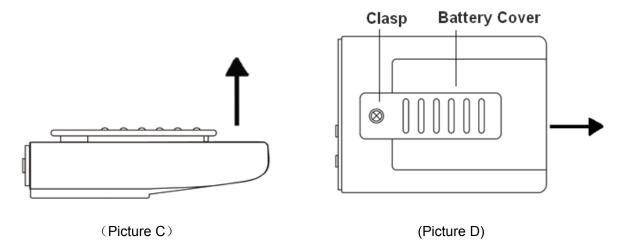

#### 2). Antenna Install/Uninstall (This is anti-screw direction antenna)

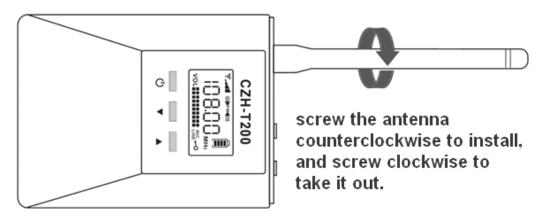

#### 3). Power ON/OFF

- A. When the transmitter is OFF, press and hold [ 🛈 ] to power on.

#### 4). Microphone Volume Setting

Press [♠], the MIC icon starts flashing, press ▼ 1 to reduce the volume and press ▲ 1to increase.

#### 5) Line-in Volume Setting

#### 6) Frequency Setting

Press ( $\bigcirc$ ), The "MHz" icon starts flashing, press ( $\blacktriangledown$ ) to turn down frequency, and press ( $\blacktriangle$ ) to turn up.

#### 7) RF Power Setting

#### 8) Button lock/unlock function

A. Under normal working status, press and hold 【▼】, the screen will show 【 <sup>--○</sup> 】 which means



the other buttons are all locked.

B. Under button locking status, press and hold 【▼】, the screen will show 【 <sup>→</sup>○ 】 which means the buttons are unlocked.

#### 9) Stereo/Mono adjustable

Under normal working status, press and hold  $[ \triangle ]$  to shift between stereo/mono, when the screen shows  $[ ((1) \bigcirc (1))]$  , it means the current sound mode is Stereo. When the screen doesn't show  $[ ((1) \bigcirc (1))]$  , it means the current sound mode is Mono.

#### 10) Battery charging

- (2) When battery is full after charge, the [1] icon will stop flashing. Usually it's about 5hours to charge battery full.

# 11) Reminder: Battery charging can be done no matter the transmitter is ON or OFF. Please kindly note the following items:

- B . When charging battery as transmitter is ON, the transmitting power will be automatically shifted to the minimum level, this is a normal phenomenon.
  - C. When charging battery as transmitter is OFF, there is nothing showing on the screen.
  - D. When the transmitter is vacant for a long time, please take the battery out and put it in cool and dry environment.

#### 5. Main Specifications:

No.	Item	Specification	
1	Power supply	BL-5C Li-on battery, 3.7V 1000mAh	
2	Frequency range	87~108MHz / 76~90MHz (optional)	
3	Frequency Stability	±10PPM	
4	Frequency stepping	100KHz	
5	RF power output	(Level 1/2 /3/4) 0.01mW-10mW-100mW-200mW	
6	Broadcasting range for reference	(Level 1/2 /3/4) 10m-100m-300m-500m	
7	Working time	(Level 1/2 /3/4) 16h-10h-8h-6h	
8	Battery Charging time	About 5hours, voltage is 5V.	
9	Spurious, harmonic radiation	C ≤-60dB	
10	Sound distortion	≤0.2%	
11	Frequency response	50Hz~15000Hz	

_				
	12	Input level	≤-15 dBV	
	13	Frequency Modulation	±75KHZ	
	14	SNR	≥60 dB	
	15	Device Size	82*60*22mm (extruding part not included	
	16	Weight	About 67g(Battery not included)	

#### 6. All configurations

NO.	Item	Product Name	Description	Quantity	Unit
1		Transmitter	CZH-T200	1	pcs
2		FM antenna	Anti-screw direction	1	pcs
3		Li-on battery	BL-5C 1000mAh	1	pcs
4	Standard	Car charger	With IC protection, Output voltage: DC 5V 1000mA	1	pcs
5	configuration	Lavaliere microphone	Stereo, gold plating, 1.2 meters with shielding function.	1	pcs
6		Audio cable	3.5 male to male	1	pcs
7		USB cable	USB to T Port (MINI)	1	pcs
8		Packing box	Color box neutral packing	1	pcs
9	Optional accessories	USB charger	With IC protection Output voltage: DC 5V 500mA	1	pcs
10		Headphone micropohne	Stereo,1.2m cable	1	pcs

#### 7. After-sales Service:

Thank you for choosing our product, we'll provide lifetime maintenance. Within 200days after purchasing, we provide all-free repairing. The following circumstances are excluded:

- 1). Problems caused by unauthorized disassembling or repairing on the product.
- 2). Problems caused by mis-operation without following the instruction.
- 3). Problems caused by man-made damage/hit/crash/water and other non-product quality problems.
- 4). The product being damaged by Thunder or other force majeure.
- 5). Product case, Li-on battery, microphone, charger, audio cable, charging cable and other accessories are not in free repairing range.

For products over or not belonging to the free-repairing period, we can provide repairing with very low cost.

1) We provide lifetime maintenance for product over the free-repairing period.



2) We can repair the products that over the free-repairing period or damaged manmade with very low cost.

#### 8. Disclaimer

Please use this product following local laws or regulations about using wireless products, otherwise the user will be responsible for any problems occurred by not obeying rules. We and our distributors are free of responsibility for that.

#### **CZH-T200 Customer Feedback Card**

If you are satisfied with our product, we'll highly appreciate if you refer to your friends of our products.

If you are not satisfied with our product, please kindly let us know what we can do to help, we'll be glad to improve our products per customer's needs to achieve full satisfaction.

Thanks for your letter!

Your advices:

## Warranty Service Card

Distributor Name				
<b>Distributor Website</b>				
E-shopping ID	Purchase Date	Customer Name	Contact Number	
Customer Shipping Address				



## www.fmpirate.org

Product problem description:				

Remark: Please fill in this card carefully for the sake of us sending it back to you in time, the characters should be recognizable and clear. The problem description should be as detailed as possible as we can find out the solution quickly.