


## Wind 'N Go® 1-Watt Waterproof Flashlight #7351

### IMPORTANT SAFEGUARDS

- Read all instructions before operating
- Do not look directly at the light; may cause injury to your eyes
- Do not use in flammable or explosive environments
- Do not operate at temperatures above 120°F or below 32°F
- Turn off flashlight before charging
- Do not use alcohol, flammable or other solvents on or near this unit-only clean with warm water and soft cloth
- Protect LED lens from damage and scratching
- Administer close supervision when using around children
- Never use or submerge in water with DC CAP removed

### PARTS IDENTIFICATION

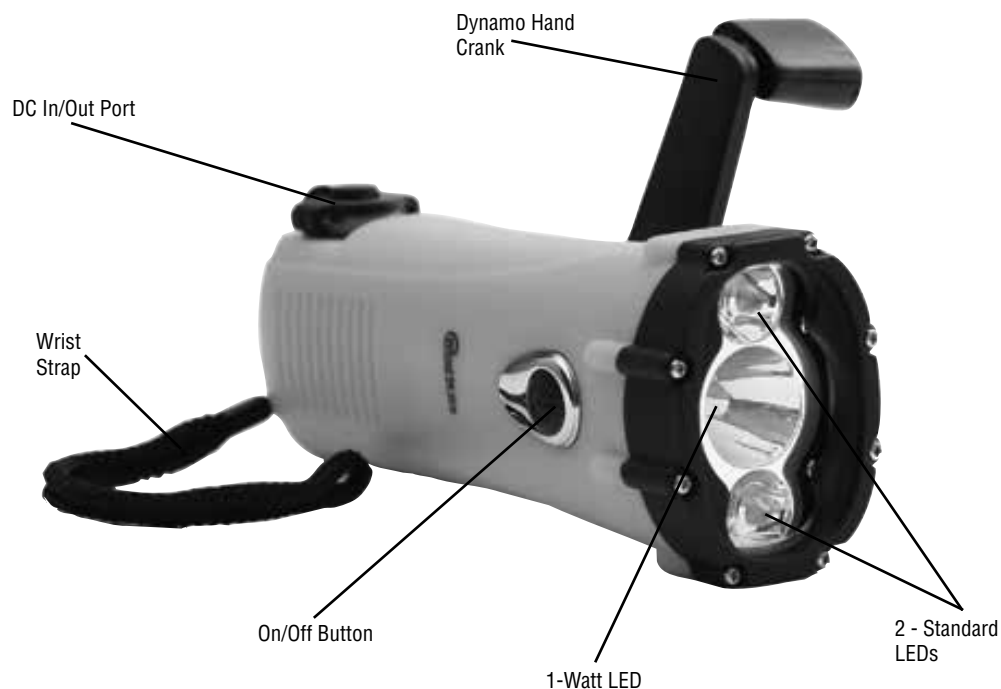

### CHARGING

Note: Before charging, turn flashlight off.

#### Dynamo charging by hand crank

1. Open DYNAMO HAND CRANK and rotate clockwise at approximately 120 cycles/minute for a minimum of 1 minute. Winding for longer periods of time will yield longer power durations.
2. Close DYNAMO HAND CRANK and unit is now ready for use.
3. If desired to verify that charging is taking place, remove the DC IN/OUT PORT cap to exposes the small green LED charge indicator light. Caution: Close cap and seal completely to assure waterproof integrity after charging and before use. Do not open cap under water.
4. Unit may also be charged under water.

#### AC/DC Adapter charging (adapter not included)

1. Charge the internal battery of the flashlight for increased standby power by using an auxiliary AC/DC ADAPTER.
2. Remove the DC IN/OUT PORT cap to expose the DC IN/OUT PORT. Carefully plug the small male connector of the AC/DC ADAPTER into the DC IN/OUT PORT. Plug the adapter into an approved 120V AC power outlet. Verify that the charge is taking place by assuring the small LED indicator light is illuminated. Close cap and seal completely to assure waterproof integrity after charging and before use.
3. Full charge times are indicated in the specifications on the back page.

#### Charging a cell phone

1. Unit charges cell phones by using the DYNAMO HAND CRANK.
2. Flashlight includes a Nokia cell phone adapter tip to match most common Nokia phones.
3. To charge your phone, connect the Universal DC cable into the DC IN/OUT PORT of the flashlight. Plug the other end of the cable directly into the Nokia phone, or the appropriate adapter tip for your phone.
4. Wind the flashlight DYNAMO HAND CRANK for a minimum of 1–3 minutes for a 1-5 minute phone call, depending on cell phone model. Longer cranking duration will increase talk time ability.

### FLASHLIGHT OPERATION

Press the ON/OFF BUTTON located on front of flashlight.

- Press once to activate the 2 left and right side LEDs
- Press twice to activate center 1-watt single LED
- Press third time to activate 1-watt single LED with flashers
- Press fourth time to turn flashlight off

## TECHNICAL INFORMATION

SPECIFICATIONS	
INTERNAL RECHARGEABLE BATTERY	3.6V 800mAh Ni-Mh
DC INPUT	6V 200 mA
DC OUTPUT	6V 700-800 mA
WEIGHT	11 oz.
DIMENSIONS	7" L x 3" W x 2.25" H (173 x 69 x 56.5 mm)
BRIGHTNESS IN MCD	1-watt center LED = 250,000 MCD (20 lm) 2 side LEDs = 30,000 MCD (4 lm)

POWER DURATION	FLASHLIGHT	FLASHER
1 minute winding	1-watt center LED = 20 minutes 2 side LEDs = 50 minutes	1-watt center LED = 50 minutes
AC/DC Charge (Full charge = 8 hours)	1-watt center LED = 8 hours 2 side LEDs = 40 hours	1-watt center LED = 40 hours

CELL PHONE CHARGING	
1-3 minutes of winding	3-7 minutes of emergency talk time. Longer talk times may be achieved with additional winding.

# Wind 'N Go®

## 1-Watt Waterproof Flashlight

### OPERATING INSTRUCTIONS



# Wind 'N Go®

AERVOE INDUSTRIES, INC.  
Gardnerville, NV 89410 • 1-800-227-0196  
www.aervoe.com • mailbox@aervoe.com