

Wireless Home Security System

DIY Kits 15-980PKC2

User Manual



1. KITS CONTENTS

- | | |
|------------|---------------------------------------|
| a.15-980C2 | 9 Wireless Zones Central Control Unit |
| b.15-980K | Remote Keypad |
| c.15-980I | Wireless PIR Detector |
| d.15-980MT | Wireless Door/Window move Detector |
| e. 15-980T | Remote Controller |

2. FEATURES

2-1 15-980C2 Central Control Unit

- 9 wireless Zones, Zone 1~8 is programmable for arm/disarm, Zone 9 is programmed for 24 hours arming.
- 2 hard-wired Alarm trigger input(24 hours), 1 DC 12V Alarm output
- User can define 2 ARM Modes(ARM 1 & ARM2), each mode has 8 wireless detection zones which can be programmed as “activate” or “bypass” randomly. Each wireless zone can co-operate with unlimited number of COP wireless alarm accessories. (sensor, detector, etc.)
- Built-in rechargeable battery, which allows Central Control Unit to work continuously up to 4 hours when AC power off.
- Built-in 110dB Siren
- 16-Character Back-light LCD display

2-2 15-980K Remote Keypad

- This Remote Keypad is able to set access code and operate all other functions when it is attached to the Central Control Unit.
- This keypad can be apart from the Central Control unit as the remote controller(only controls ARM1, ARM2, DISARM and PANIC)
- 20 push buttons (19 programming button and 1 Panic button), can control arm(ARM1 & ARM2)/disarm, Panic.
- Low battery LED indication(green light)
- Power LED indication(red light)

2-3 15-980I Wireless PIR Detector

- Provides **Pulse-Count Feature** to avoid miss triggering. Once the Detector was triggered, the red LED of detector will flash, but PIR Detector will not transmit signal to the Control Unit unless the

next trigger was detected within 20 seconds from previous trigger.

- b. Detecting Distance: 8M, Detecting Angle: 110°
- c. Built-in Vibration Detection for self-protect (Jumper ON, see Fig. 3-2-2)
- d. Low Battery Indication

2-4 15-980MT Wireless Door/Window move Detector

- a. This detector will transmit different signal for “door/window close” or “door/window open” to Control Unit.
- b. This detector can be co-operated with other sensors. For example, gas detector, smoke detector, etc.
- c. Built-in Vibration Detection for self-protect (Jumper ON, see Fig.3-3-1)
- d. Low Battery Indication (LB LED, green light)
- e. Power on Indication (ON LED, red light)


2-5 15-980T Remote Controller

- a. 3 key buttons for Arm/Disarm/Panic wireless remote control (key button: **ON**: ARM 1, **H**: DISARM, **T**: PANIC)
- b. Code-learning function
- c. ON LED(red): LED will light while pressing any key of 15-980T


3. Structure Figures

3-1. 15-980C2

(Fig. 3-1-2)

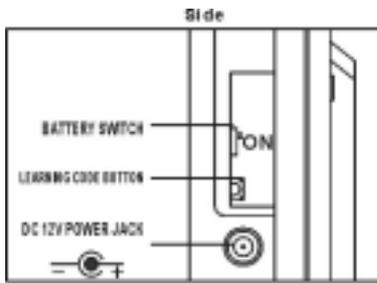

(Fig. 3-1-3)

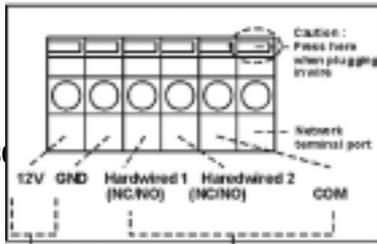

3-2. 15-980T




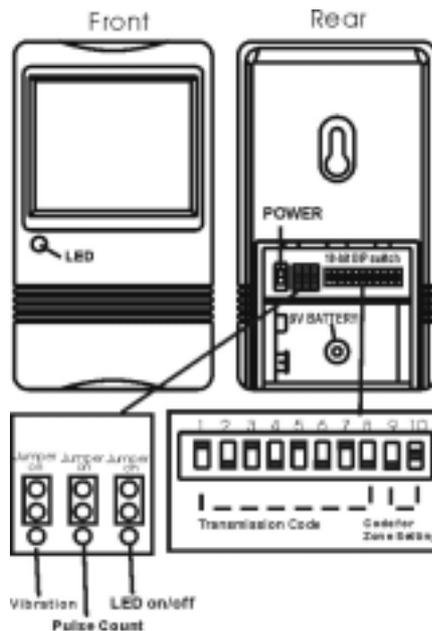



Fig.3-2-2

Fig. 3-2-1


3-3. 15-980MT

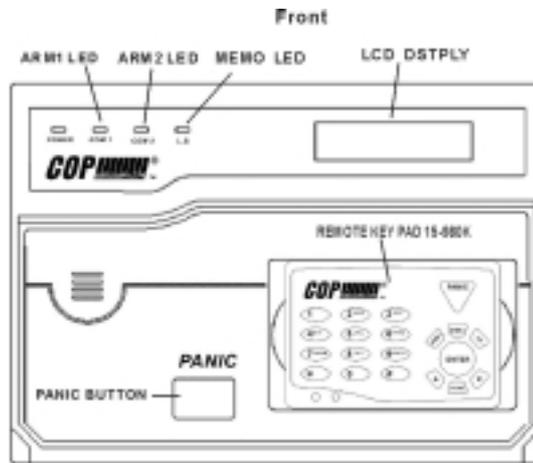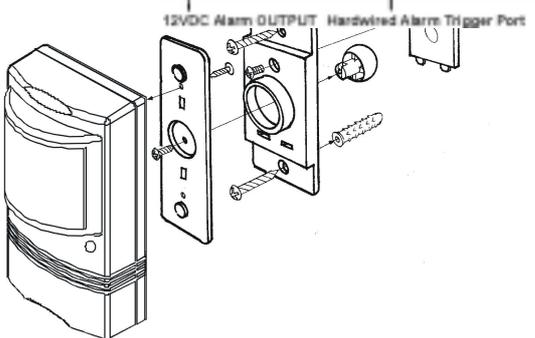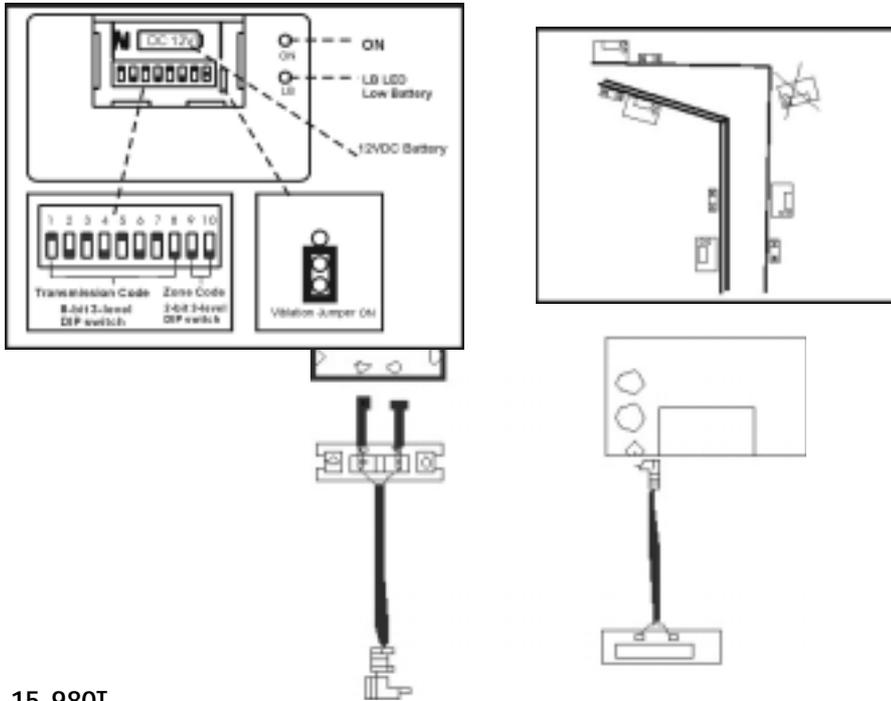


3-4. 15-980T

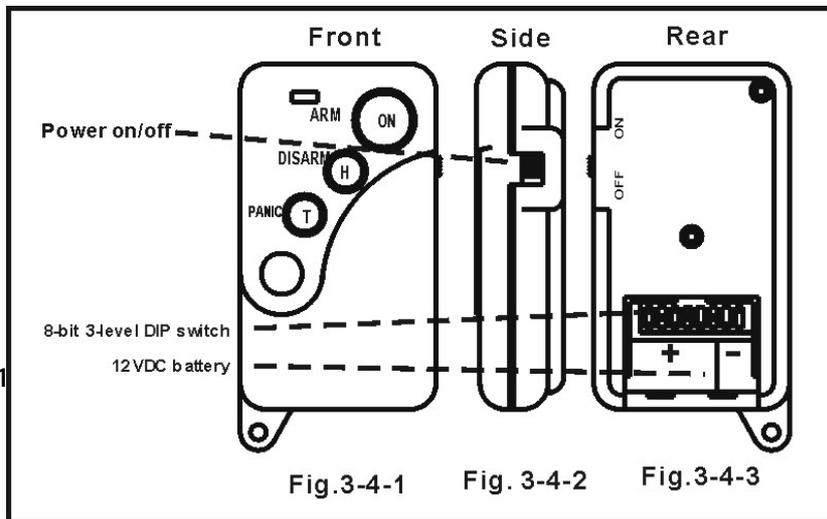


3-5. 1

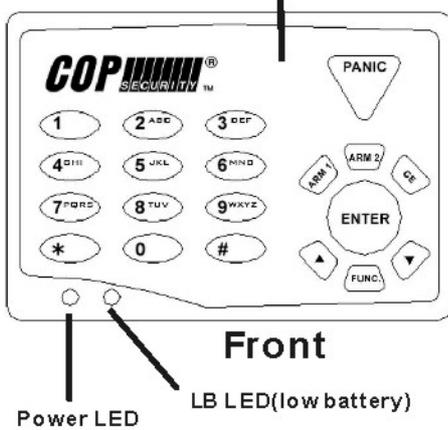

(Fig.3-5-1)

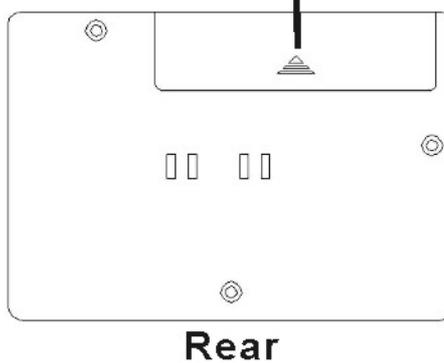

(Fig.3-5-2)

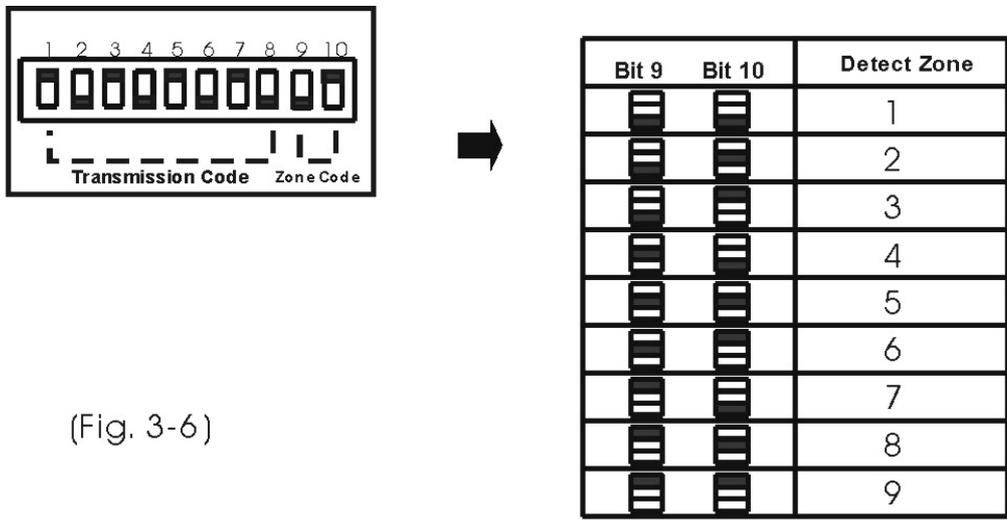

(Fig. 3-6)

Please refer to Fig. 3-6 for setting Detecting Zone

4. Preset configuration

4-1 15-980C2

- Access code: 111
- In-delay Time: 30 seconds
- Out-delay Time: 30 seconds
- Alarm Time: 60 seconds
- ARM1 zone 1 ~ zone 8(activate)
- ARM2 zone 1 ~ zone 8 (bypass)
- 15-980

4-2 Preset Zone for detector

- 15-980MT zone 1
- 15-980I zone 2

5. INSTALLATION & TEST

5-1 This Central Control Kits was programmed for **ready-to-use**. The user may reset the access code if he prefer other access code to instead.

5-2 CHECKING

Check the DIP switch of all detectors and remote controllers, please be sure all the preset configuration are the same.(Fig. 3-2-2, Fig. 3-3-1, Fig. 3-4-3)

5-3 INSTALLATION

- Install all detectors on the proper place. For example, place 15-980MT on the door or window (Fig. 3-3-2), 15-980I on the wall (Fig. 3-2-1). After complete installation, check battery is in the detector correctly/turn the power on.
Note: 15-980I PIR Detector is for indoor use. To avoid miss triggering, please do not place the detector facing abnormal temperature object.
- Place the battery in the Remote Keypad 15-980K and then put it in to the hole at right side of Central Control Panel.
- Fix the hanger on the wall, after that, hang up the Central Control Unit 15-980C2 in the hanger(Recommend to place this Control Unit at the central of security control kits)
- Plug AC adaptor cable to 15-980C2, you will hear 2 bi sounds, LCD will displays **COP Security**(it means 15-980C2 is in **Standby Mode**), remember to slide the battery switch to the ON position(Fig. 3-1-2)
- Place battery correctly in the battery compartment of Remote Control 15-980T and turn power switcher on.(Fig.3-4-2)

5-4 TEST

Note: Because of the Pulse-Count Feature of PIR detector (please refer to paragraph 2-3, point a), to avoid miss triggering, you have to away from the detecting area over 20 seconds before test.

Please follows the below test procedure for Function Test

a. Out-Delay Time Test

- Press the **ARM** button of Remote Control 15-980T or **ARM1** button of Remote Keypad 15-980K,
- The Central Control Unit will start **Out-Delay Time** countdown for 30 seconds (preprogrammed), you will hear the continuous bi sounds during Out-delay time.
- You will hear a beep sound after Out-delay time, and then the LCD will displays **ARM 1 Mode>**. The Security Control System will be in ARM condition.

b. In-Delay Time Test

- Trigger the detector (For example, open the door or window), the red LED of detector will light for 1 second, and you will hear 3 bi sounds. (the detector will transmit signal to Central Control Unit)
- Central Control Unit will start **In-delay Time** countdown for 30 seconds (preprogrammed).
- After In-delay Time countdown is completed, you will hear the alarm sound from the Siren of Control Unit for 60 seconds (preprogrammed Alarm time).
- When the Alarm sound stop, the system will be back to ARM condition. LCD will displays, for example, **WL Zone: 1** (if triggered signal was from Wireless Zone 1)

c. 15-980T/15-980K Disarm Function Test

The user may press the **DISARM** button of 15-980T or buttons **#111#** of 15-980K (111 is the preset access code) for disarming.

Note: the Remote Keypad 15-980K will be disable for 60 seconds if the user key in wrong access code for 3 times.

d. Panic Alarm Test

Before you remove the Remote Keypad as the remote controller, you have to key in the access code (#111#) and apart the keypad within 5 seconds from the time of enter access code. Otherwise the Alarm will be triggered. (LCD shows **Panic alarm**)

e. 15-980I/15-980MT Vibration Detection Test

The detector 15-980I & 15-980MT has built-in vibration detection for self-protect. So when Vibration Jumper is in ON position (see Fig. 3-2-2, Fig. 3-3-1), the detector will trigger the alarm function once the detector is vibrated or destroyed.

f. 15-980C2 Vibration Detection Test

Because the Central Control Unit has built-in vibration detection, so once the Control Unit was vibrated or destroyed, the Control Unit siren will sound and the LCD Display will show "**HGSW**".

g. Door-open Signal Test

- When you open the door or window which had been installed detector 15-980MT under DISARM condition, the Door/Window Detector will transmit door-open-signal to Control Unit. You will hear Din-Don (Door bell function, please refer to paragraph 6-2-4)
- Every time the Control Unit enters ARM condition, you will hear 4 bi sounds (LCD displays NG) before countdown In-delay Time, that remind you the door or window has not closed well.

h. Low Battery

This system provides low battery warning function. If any of detectors are in low battery status, when Control Unit enters ARM condition, you will hear the 4 bi sounds (LCD displays LB) before countdown In-delay Time.

i. After you have completed the above tests, the Wireless Security System has been successfully installed.

6. RE-PROGRAMMING

You may also re-program the preset configuration to meet your requirement.

6-1 Change transmission code and zone code

Please follow the below procedure for resetting the codes

6-1-1 Change transmission Code of Remote controller 15-980T, Detector 15-980I and 15-980MT

- a. Open the battery cover of controller and detector You will find a 10-bit DIP switch of detector and 8-bit DIP switch of controller, bit1~bit8 is the 3 levels switch for setting transmission code, bit9~bit10 is the 3 levels switch for setting Zone Code.(Fig. 3-2-2 Fig. 3-3-1 & Fig.3-4-3)
- b. Switch bit1~bit8(any combination is available) to set transmission code(up to 6561 code combination). Please make sure all code combinations set for every detector and controller are the same.

Note: Because that all the transmission code must be the same. So once you have changed detector's transmission code, you have to do Learning-Code(see paragraph 6-1-2) to change 15-980C2's transmission code. (also the 15-980K, please refer to paragraph 6-2-3, point A)

6-1-2 Change transmission code for Central Control Unit 15-980C2

- a. Press 15-980K Keypad button #111# (be sure the Keypad is attached on the control unit)
- b. Control Unit LCD Display shows [DISARM], and you will hear 2 bi sounds
- c. Press the **Learning Code Button** on the side of Control Unit(Fig. 3-1-2) within 20 seconds while LCD shows [DISARM])
- d. LCD displays [Learning], you will hear 2 bi-bi sounds
- e. Press any button of Remote Controller **15-980T** within 5 seconds after the bi sound.
- f. You will hear 4 bi sounds again
- g. LCD will display [Successful] after learning code process is completed.
- h. If the learning code process was wrong, the LCD will display [Fail], then you have to re-program again follow the above steps.(a~g)

6-1-3 Please refer Fig. 3-6 for setting Detecting Zone.

6-2 15-980C2 Function re-program

Any functions re-programming have to be processed in Function Mode.

*How to enter Function Mode:

- a. Key in the access code #111#(original configuration)
- b. The LCD will display [DISARM] if the access code is correct
- c. Press **FUNC.** button to enter Function Mode within 20 seconds while LCD shows [DISARM]
- d. LCD will display **FUNCTION>**, then Press **▲** or **▼** button to search one of your demand mode. When LCD display the correct mode you want, then press **ENTER** button.

Note: * **During re-programming process, any steps have to be completed within 20 seconds, or the status will go back to previous mode**

***You may press CE button if you would like to return to the previous mode during re-programming operation.**

*How to Re-program:

6-2-1 **ARM 1 Mode>** this mode allows you to program zone 1~8 be activated or bypassed.

- a. Press **▲** or **▼** button to search **ARM 1 Mode>**, and then press **ENTER**
- b. Press **ENTER** button and then LCD will display **ARM 1 > 12345678** (Preset configuration), this means wireless zone 1,2,3,4,5,6,7,8 are in ARM 1 Mode as the activate zone
- c. You may press any figure buttons 1~8 to re-set activate/bypass zone.
- d. Please do remember to Press **ENTER** button to confirm the setting.

6-2-2 **ARM 2 Mode>** this mode allows you to program zone 1~8 be activated or bypassed.

- a. Press **▲** or **▼** button to search **ARM 2 Mode>**, and then press **ENTER**
- b. Press **ENTER** button and the LCD will display **ARM 2 > _____** (preset configuration), this means wireless zone 1,2,3,4,5,6,7,8 are in ARM 2 Mode as the bypass zone.
- c. You may press any figure buttons 1~8 to re-set activate/bypass zone.
- d. Please do remember to Press **ENTER** button to confirm the setting.

6-2-3 **Set Code**> This mode provides 2 functions

A. 15-980K Learning Code –

- a. Press ▲ or ▼ button to search **Set Code**>, and then press ENTER
- b. Press ENTER button and then LCD displays **Code**>, the green LED of KeyPad will quick flash for 0.5 second and you will hear 2 bi sounds. This means the learning code process is successfully completed.
- c. Press CE button to return to previous Mode.

B. 15-980K Changes Access Code

- a. Follow the above process to enter into **Code**>
- b. Key in the original programmed access code(111), your will hear 2 bi sounds, and then press ENTER
- c. LCD displays **Newly**> , key in the new access code(available for 3~5 digital number) then press ENTER button
- d. LCD displays **Again**>, then key in the new access code again for confirmation
- e. Press ENTER button, you will hear 2 bi-bi sounds and the changing access code is successfully completed.

6-2-4 **Door Bell**> Only the wireless zone 1 can be set as doorbell in DISARM condition. In this mode, you may enable or disable the doorbell function. (Once wireless Zone 1 is triggered, Control Unit will sound Din-Don)

- a. Press ▲ or ▼ button to search **Door Dell**>, and then press ENTER
- b. Press ▲ or ▼ button to select **Bell>Enable** or **Bell>Disable**
- c. If Press **ENTER** button after LCD displays Bell>Enable, then the doorbell mode is functioned.
- d. If Press **ENTER** button after LCD displays Bell>Disable, then the doorbell function is disabled

6-2-5 **Alarm Time**> Alarm time programmable from 0~255 seconds

- a. Press ▲ or ▼ button to search **Alarm Time**>, and then press ENTER
- b. Press the figure button for alarm time setting (for example, 60)
- c. LCD displays **Alarm**> **60**, Press ENTER button. This means the Alarm time was set as 60 seconds.

6-2-6 **In Delay Time** > This is for setting In-delay alarm time, time programmable form 0~225 seconds

- a. Press ▲ or ▼ button to search **In Delay Time**>, then press ENTER
- b. Press the number button for setting In-Delay Time (for example, 30)
- c. LCD displays **In Delay** >**30**, press ENTER button. This means the In- Delay Time was set as 30 seconds

6-2-7 **Out Delay Time** > This is for setting out delay alarm time, time programmable form 0~225 seconds

- a. Press ▲ or ▼ button to search **Out Delay Time**>, then press ENTER
- b. Press the number button for setting Out-Delay Time (e.g. 30)
- c. LCD displays **Out Delay** >**30**, press ENTER button. This means the Out- Delay Time was set as 30 seconds

6-2-8 RESET> this reset function is for reverting to the original preset configuration

- a. Press ▲ or ▼ button to search **RESET**>, then press ENTER
- b. LCD display **CODE**>, press ENTER button
- c. Key in access code, and then press ENTER button
- d. You will hear 2 bi-bi sounds, all configuration(except the access code) will then be revert to the original setting

6-2-9 Network Zone>

This is used only with optional software pack. Press **CE** button to exit.

7. Checking the configuration

At Standby Mode, LCD displays COP Security

- Key in correct access code #111# (or the new access code you changed)
- LCD will display [DISARM], you will hear 2 bi-bi sounds
- You may press the ▲▼ button to read the configuration shows on LCD Display and check the current status of sensors/detectors.

(Note: in this mode, configuration can be read only, not re-programmed)

For Example:

- ARM1: 1 2 4 7 8 → zone 1,2,4,7,8 of ARM1 are activated(the rest is bypassed)
ARM2: 3 5 6 7 8 → zone 3,5,6,7,8 of ARM2 are activated(the rest is bypassed)
NG: 5 → door/window of zone 5 isn't close well
LB: 3 → Detector of zone 3 in low battery condition
In Delay: 30 → In-Delay Time 30 seconds
Out Delay: 30 → Out-Delay Time 30 seconds
Alarm Time: 60 → Alarm Time 60 seconds
WL Zone: 3 → Wireless Zone 3 was triggered, and this previous trigger was memorized, it will be erased automatically in next ARM status.
HW Zone: → Hardwire Zone 3 was triggered, and this previous trigger was memorized, it will be erased automatically in next ARM status.
Bell> Enable → Doorbell function is enabled (Bell>Disable, doorbell function is disabled)

8. SYSTEM EXTENSION

- 8-1 This Wireless Security System can co-operate with full alarm accessory line from COP Security, such as PIR-15980I wireless PIR detector, 15-980MT wireless door/window move detector, 15-980ST Remote Control, 15-980ST wireless shake sensor and glass breaking detector, etc... (for more information, please contact our local dealer or visit our web site: www.cop-security.com)
- 8-2 Wireless Zone 9 is 24 hours arming, which is able to co-operate with 15-980MT door/window detector, gas detector, smoke detector, etc.
- 8-3 Co-operate with 15-980SL Wireless Siren for additional protection. Once the Central Control Unit alarm is activated, the Siren is triggered at the same time and will flash & sound continuously until the alarm is stop.
- 8-4 Co-operate with 15-9802D Wireless Voice Auto Dialer. Once the Alarm is triggered, this Dialer will automatically dial the pre-set telephone number twice and send the pre-set voice message twice.
- 8-5 Co-operate with 15-980R Wireless Multi-Channel Repeater, that can extent detective distance for another 30M.
- 8-6 Co-operate with hardwire detector/sensor or external Siren, please refer to Figure 3-1-3 for installation.

9. Trouble Shooting

- 9-1 15-980I, 15-980MT
- a. LED no indication: check the battery and power switch. Be sure battery is placed well, and power switch is at ON position.
 - b. Wireless Zone has no transmission:
 - Check the Control Unit and all detectors and be sure their transmission code is the same.
 - Check the Control Unit and be sure this wireless zone has been programmed in ARM status
 - Check and see if the detector was barricaded, or exceed the wireless transmission distance. In this situation, you may try to re-place it to a proper location.
- 9-2 15-980K
- a. LED no indication: Check the battery, be sure it is placed correctly.
 - b. No transmission: Place the Remote Keypad in Control Unit and re-process Learning Code.
- 9-3 15-980C2
- a. LED no indication: Check the AC Power Cable and be sure it is well connected.
 - b. Rechargeable function failed: Check the Battery Switch, be sure it is at the ON position.