



DSU III AR
Data Service Unit
USER MANUAL

Trademark:

Hayes is a registered trademark of Hayes Microcomputer Products, Inc.



901 Explorer Boulevard
P.O. Box 140000
Huntsville, AL 35814-4000
Phone: (205) 963-8000

© 1997 ADTRAN, Inc.
All rights reserved.
Printed in USA.

FCC regulations require that the following information be provided in this manual:

1. This equipment complies with Part 68 of the FCC rules. On the bottom of the equipment housing is a label that shows the FCC registration number and Ringer Equivalence Number (REN) for this equipment. If requested, provide this information to the telephone company.
2. If this equipment causes harm to the telephone network, the telephone company may temporarily discontinue service. If possible, advance notification is given, otherwise, notification is given as soon as possible. The telephone company will advise the customer of the right to file a complaint with the FCC.
3. The telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the proper operation of this equipment; advance notification and the opportunity to maintain uninterrupted service is given.
4. If experiencing difficulty with this equipment, please contact ADTRAN for repair and warranty information. The telephone company may require this equipment to be disconnected from the network until the problem is corrected, or it is certain the equipment is not malfunctioning.
5. This unit contains no user serviceable parts.
6. An FCC compliant telephone cord with a modular plug is provided with this equipment. This equipment is designed to be connected to the telephone network or premises wiring using an FCC compatible modular jack, which is Part 68 compliant.
7. The following information may be required when applying to the local telephone company for leased line facilities:

Service Type	Digital Facility Interface Code	Service Order Code	Network Jacks
2.4 kbps Digital Interface	04DU5-24	6.0F	RJ-48S
4.8 kbps Digital Interface	04DU5-48	6.0F	RJ-48S
9.6 kbps Digital Interface	04DU5-96	6.0F	RJ-48S
19.2 kbps Digital Interface	04DU5-19	6.0F	RJ-48S
38.4 kbps Digital Interface	04DU5-38	6.0F	RJ-48S
56 kbps Digital Interface	04DU5-56	6.0F	RJ-48S
64 kbps Digital Interface	04DU5-64	6.0F	RJ-48S

**FEDERAL COMMUNICATIONS COMMISSION
RADIO FREQUENCY INTERFERENCE STATEMENT**

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio frequencies. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Shielded cables must be used with this unit to ensure compliance with Class A FCC limits.



Change or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CANADIAN EMISSIONS REQUIREMENTS

This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus as set out in the interference-causing equipment standard entitled "Digital Apparatus," ICES-003 of the Department of Communications.

Cet appareil numérique respecte les limites de bruits radioélectriques applicables aux appareils numériques de Class A prescrites dans la norme sur le matériel brouilleur: "Appareils Numériques," NMB-003 édictée par le ministre des Communications.

CANADIAN EQUIPMENT LIMITATIONS

Notice: The Canadian Industry and Science Canada label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective, operational, and safety requirements. The Department does not guarantee the equipment will operate to the user's satisfaction.

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. In some cases, the company's inside wiring associated with a single line individual service may be extended by means of a certified connector assembly (telephone extension cord). The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

Caution: Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or an electrician, as appropriate.

The Load Number (LN) assigned to each terminal device denotes the percentage of the total load to be connected to a telephone loop which is used by the device, to prevent overloading. The termination on a loop may consist of any combination of devices subject only to the requirement that the total of the Load Numbers of all devices does not exceed 100.

Table of Contents

Chapter 1. Introduction

Product Overview	1
DDS Overview	3
4-Wire Switched 56 Overview	3
Warranty and Customer Service	4

Chapter 2. Installation

Unpack, Inspect, Power Up	5
Receipt Inspection	5
Equipment Provided	5
Power Up	6
Network Interface Connection	7
DTE Data Connection/Primary DTE	8
Secondary Channel Connection	10
Configuration	10
Configuration Methods	11
AT Commands	11
V.25 bis Commands	12
SDLC Option	12
Character Format	12
Command Structure	12
Bi-Sync Option	13
Character Format	13
Command Structure	13
Asynchronous Option	13
Character Format	13
Command Structure	13
Command Descriptions	13
Syntax and Possible Responses	14
CIC (Connect Incoming Call)	14
CNL (Configuration Local)	14
CNR (Configuration Remote)	15
Switched 56 Operation	15
CRN (Call Request with Number)	15
CRS (Call Request Using Stored Number)	16
DIC (Disregard Incoming Call)	16

PRN (Program Number)	16
RLN (Request List of Numbers)	17
 Chapter 3. Operation	
Menu Structure	19
LCD Display of the Main Menu	19
Main Menu	20
Status	20
Test	20
Configuration (CONFIG)	20
Dial	20
Basic Menu Travel	21
Front Panel	23
LCD Window	23
Enter	23
Numeric Keypad	23
Shift	24
Quick	24
Cancel	24
Up and Down Arrows	24
LED Description	24
Rear Panel	25
 Chapter 4. Configuration Overview	
Local and Remote Configuration	27
 Chapter 5. Configuring Network Options	
Network Options	31
Loop Rate	31
Network Address	34
Remote Configuration	35
Network Type	36
Clock Source	37
 Chapter 6. Configuring DTE Options	
DTE Options	39
DTE Rate	39
Connector Type	43
Data Format	44
DTE Command Option	45

Transmit Clock	46
CS Options	48
Anti-Stream	50
CD Options	51
TR Options	52
SR Options	54
Secondary Rate	55
 Chapter 7. Configuring Test Options	
Test Options	57
Test Timeout	57
Remote Digital Loopback	58
EIA Local Loopback	59
EIA Remote Loopback	60
 Chapter 8. Configuring Dial Options	
Dial Options	61
Phone Number	61
Auto Answer	62
 Chapter 9. Manual Command	
Manual Command	63
 Chapter 10. Dial Selection	
Dial Options	67
 Chapter 11. Testing and Troubleshooting	
Test Overview	69
Initiating a Test	70
Test Status Display	71
Exiting a Test	71
Troubleshooting	73
Messages from the DSU/CSU	73
Troubleshooting New Installs	75
Test Sequence for Troubleshooting New Installs or Existing Circuits	76
Local Unit Diagnostics	77
DTE & Loop (LL)	79
Test Description	79
Test Purpose	79

Initiating	80
Interpreting Test Results	80
Loop Only (RT)	81
Test Purpose	81
Initiating	81
Interpreting Test Results	82
DTE Only	83
Test Purpose	83
Initiating	84
Interpreting Test Results	84
DTE With Test Pattern	85
Test Purpose	85
Initiating	85
Interpreting Test Results	86
Test Pattern	87
Test Purpose	87
Initiating	87
Interpreting Test Results	88
Self Test	89
Test Purpose	89
Initiating	89
Interpreting Test Results	89
Remote Unit Diagnostics	90
Test Purpose	90
Initiating	91
Test Results	91
Interpreting Test Results	91
 Chapter 12. Status Selection	
Status Display	93
DSU Operational Status	94
Data Mode	94
Unit in Test	94
DTE Command Mode	94
Idle	94
Incoming Call	94
Dialing	94
DDS Network Status	94
Loop is Normal	94

Open Loop	94
No Rx Signal	94
Check Telco Line	95
OOS/OOF from Net	95
No Frame Sync	95
Test from Telco	95
Rate Adapting	95
Answering Call	95
No Wink from CO	95
Call Disconnect	95
Network Rate	96
DTE Rate/Mode	96
DTE Control Leads and Status	96
 Appendix A. AT Commands	 97
 Appendix B. Default Configuration Profiles	
Default Configuration Profiles	99
Profile 1	99
Profile 2	99
Profile 3	99
Profile 4	99
 Appendix C. DSU to Modem Interconnect	
Modem Tail Circuit Application	103
 Appendix D. EIA-232 Connector	
56 and 64 kbps Application	105
 Appendix E. Specifications	
Specifications and Features	107
 Glossary	 111
Index	119
 List of Tables	
Table 2-A Pin Assignments for Telco Connector	7
Table 2-B Pin Assignments for Primary EIA-232 Connector	8
Table 2-C Pin Assignments for Primary V.35 Connector	9
Table 2-D Pin Assignments for Auxiliary EIA-232 Connector	10

Table 2-E	Configuration Methods	11
Table 5-A	Loop Rate Commands	33
Table 5-B	Network Address Command	34
Table 5-C	Remote Configuration Commands	35
Table 5-D	Network Type Commands	36
Table 5-E	Clock Source Commands	37
Table 6-A	DTE Rate AT Commands	40
Table 6-B	Scrambler On/Off AT Commands	41
Table 6-C	Data Format Commands	44
Table 6-D	Transmit Clock AT Commands	46
Table 6-E	CS Options AT Commands	49
Table 6-F	Short and Long Delays at Different Operating Speeds	49
Table 6-G	Anti-Stream AT Commands	51
Table 6-H	CD Options AT Commands	52
Table 6-I	TR Options AT Commands	53
Table 6-J	SR Options AT Commands	54
Table 6-K	Secondary Rate AT Commands	56
Table 6-L	DSU III AR Network Throughput	56
Table 7-A	Test Timeout AT Commands	58
Table 7-B	Remote Digital Loopback AT Commands	58
Table 7-C	EIA Local Loopback AT Commands	59
Table 7-D	EIA Remote Loopback AT Commands	60
Table 8-A	AT Command for Storing Phone Numbers	62
Table 8-B	AT Commands for Auto Answer	62
Table 9-A	Manual Commands	65
Table 11-A	Messages from the DSU/CSU	74
Table 11-B	Troubleshooting New Installs	75
Table 11-C	Test AT Commands	77
Table 11-D	DTE with Test Pattern Commands	78
Table 11-E	Remote Tests and AT Commands	90
Table A-A	AT Commands	97
Table B-A	Default Configuration Profiles	100

List of Figures

Figure 1-1	Sample Point-to-Point Application for DSU III AR	2
Figure 3-1	Example of Basic Menu Travel	22
Figure 3-2	DSU III AR Front View	23
Figure 3-3	DSU III AR Rear View	25
Figure 4-1	Complete Configuration Menu	29
Figure 5-1	Setting Loop Rate Options	32

Figure 5-2	Setting the Network Address	34
Figure 5-3	Enabling/Disabling Remote Configuration.....	35
Figure 5-4	Setting Network Type Options	36
Figure 5-5	Setting the Clock Source	37
Figure 6-1	DTE Rates for 56 or 64 kbps Loop Rate with No Secondary Channel	40
Figure 6-2	DTE Rates for 56 kbps Secondary Channel and 64 kbps Loop Rates	41
Figure 6-3	Selecting the Connector Type	43
Figure 6-4	Selecting Asynchronous or Synchronous Data Format	44
Figure 6-5	Selecting DTE Command Option	45
Figure 6-6	Transmit Clock Options	46
Figure 6-7	Selecting CS Options	48
Figure 6-8	Anti-Stream Options.....	50
Figure 6-9	Selecting CD Options	51
Figure 6-10	Selecting TR Options	52
Figure 6-11	Setting SR Options	54
Figure 6-12	Setting the Secondary Rate	55
Figure 7-1	Setting Test Timeout Option	57
Figure 7-2	Remote Digital Loopback	58
Figure 7-3	EIA Local Loopback Options	59
Figure 7-4	EIA Remote Loopback Options	60
Figure 8-1	Editing Stored Phone Numbers	61
Figure 8-2	Enabling/Disabling the Auto Answer Function	62
Figure 9-1	Manual Command	63
Figure 10-1	Dial Options Menu	67
Figure 10-2	Path to Storing Numbers Option	68
Figure 11-1	Normal Operation Before Initiating Loopback Test	69
Figure 11-2	Initiating a Test	70
Figure 11-3	Sample Test Status Displays	71
Figure 11-4	Complete Test Menu	72
Figure 11-5	DTE & Loop Test	79
Figure 11-6	Initiating a DTE & Loop Test	80
Figure 11-7	Loop Only Test.....	81
Figure 11-8	Initiating a Loop Only Test	81
Figure 11-9	DTE Only Test Diagram	83
Figure 11-10	Initiating a DTE Only Test.....	84
Figure 11-11	DTE With Test Pattern	85
Figure 11-12	Initiating a DTE Test with Test Pattern	86
Figure 11-13	Test Pattern Only	87
Figure 11-14	Initiating a Test Using a Test Pattern	88
Figure 11-15	Initiating a Self Test	89

Figure 11-16 V.54 RDL with Test Pattern 90

Figure 11-17 Initiating a Remote Test 91

Figure 12-1 Example of Status Displays 93

Figure C-1 DSU to Modem Interconnect 103

Figure D-1 EIA-232 Connector 105

Chapter 1

Introduction

PRODUCT OVERVIEW

The ADTRAN DSU III AR provides a reliable, high speed data connection for customer Data Terminal Equipment (DTE) through Digital Data Service (DDS) lines, DDS secondary channel services (DDSII), or 4-wire Switched 56 network (SW56) lines. The DSU III AR supports both synchronous and asynchronous data communication over the DDS or 4-wire Switched 56 networks.

This unit is an all rate DSU/CSU, supporting services from 2.4 to 64 kbps including 19.2 and 38.4 kbps services. The DSU III AR may be used in either point-to-point or multi-point circuits.

The DSU III AR provides both V.35 and EIA-232 electrical and physical DTE interfaces to accommodate a variety of applications. A second EIA-232 interface is provided for use on DDS lines with secondary channel services.

To insure a reliable connection, the unit features an extended receiver capability which permits operation over long loops (3.4 miles or 5.5 km of 26 AWG at 56 kbps).

In addition to DDS, the unit also supports Switched 56 (4-wire) service with dialing accomplished from the front panel. This model is compatible with AT&T Accunet and Sprint SW56 type services.

Figure 1-1 shows a sample point-to-point application for the DSU III AR.

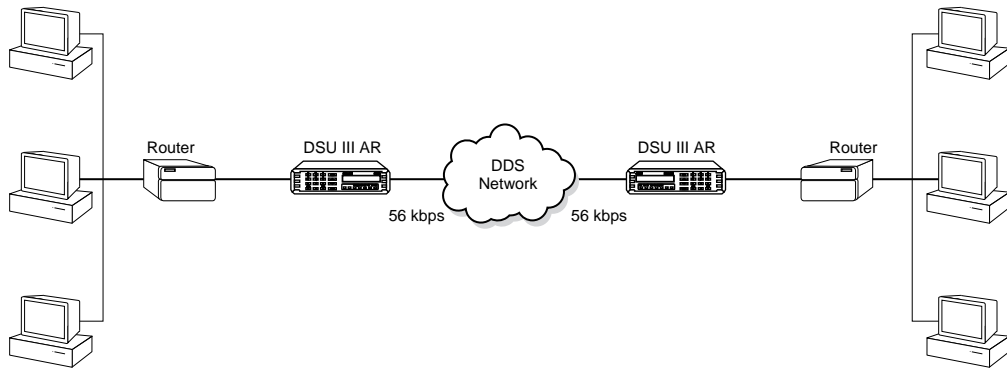


Figure 1-1
Sample Point-to-Point Application for DSU III AR

DDS Overview

Digital Data Service (DDS) is a nationwide service that allows interconnection and transport of data at speeds up to 64 kbps. The local exchange carriers provide the local loop service to DDS customers and may provide data for routing Inter-LATA to an interexchange carrier. In DDS mode, the DSU III AR supports all DDS service rates yielding DTE rates of 2.4, 4.8, 9.6, 19.2, 38.4 (sync or async), 56 and 64 kbps. An additional rate of 57.6 kbps is available in async mode. At the service rates of 56 kbps and 64 kbps, the unit can be configured to run slower DTE rates (async or sync). Secondary channel operation is supported at all service rates up to 56 kbps, providing terminal rates of 75, 150, 300, 600, 1200, and 2400 bps. The secondary rates available depend on the service rate configured.

4-Wire Switched 56 Overview

This switched, 4-wire Digital Data Service allows customers to pay for data connection only for the time the unit is active. The regional operating companies provide the 4-wire local loop service to SW56 customers. In SW56 mode the DSU III AR supports DTE rates of 2.4, 4.8, 9.6, 19.2, 38.4 (asynchronous or synchronous) and 56 kbps (synchronous). An additional DTE rate of 57.6 kbps is available in async modes.

WARRANTY AND CUSTOMER SERVICE

ADTRAN will replace or repair this product within five years from the date of shipment if it does not meet its published specifications or fails while in service. For detailed warranty, repair, and return information refer to the ADTRAN Equipment Warranty and Repair and Return Policy Procedure.

Return Material Authorization (RMA) is required prior to returning equipment to ADTRAN.

For service, RMA requests, or further information, contact one of the numbers listed on the inside back cover of this manual.

Chapter 2

Installation

UNPACK, INSPECT, POWER UP

Receipt Inspection

Carefully inspect the DSU III AR for any shipping damages. If damage is suspected, file a claim immediately with the carrier and contact ADTRAN Customer Service. If possible, keep the original shipping container for use in shipping the DSU III AR for repair or for verification of damage during shipment.

Equipment Provided

The following items are included in ADTRAN shipments of the DSU III AR:

- DSU III AR unit
- An 8-position modular to 8-position modular cable
- The user manual

The customer must provide an EIA-232 interface cable with standard 25-pin male D-type connectors (Cannon or Cinch DB-19604-432) or V.35 cable.

Power Up

Each DSU unit is provided with a captive eight-foot power cord, terminated by a three-prong plug which connects to a grounded 115 VAC power receptacle. A telco connector is also provided for interface to the network.



Power to the DSU must be provided from a grounded 115 VAC, 60 Hz receptacle.

NETWORK INTERFACE CONNECTION

The DSU III AR has an eight-position modular jack labeled **TELCO**. The connector is used for connecting to the network when the unit is configured for either dedicated or switched operation. The pin assignments for the telco connector are listed in Table 2-A.

Table 2-A
Pin Assignments for Telco Connector

Pin	Name	Description
1	R1	Transmit Data from DSU to Network-Ring 1
2	T1	Transmit Data from DSU to Network-Tip 1
3-6	-	Not Used
7	T	Receive Data from Network to DSU-Tip
8	R	Receive Data from Network to DSU-Ring

DTE DATA CONNECTION/PRIMARY DTE

The primary DTE should be connected to either the EIA-232 DTE connector or the CCITT V.35 DTE connector. The maximum cable lengths recommended are 50 feet for the EIA-232, and 100 feet for the CCITT V.35. The pin assignments for the connectors are listed in Tables 2-B and 2-C.

The V.35 connector is recommended for use with data rates above 19.2 kbps. The EIA-232 connector works up to 56 kbps with a low capacitance cable or with the external transmit clock option selected. The primary DTE rate is configured from the front panel. The primary DTE can operate in asynchronous or synchronous modes.



CAUTION

To prevent possible radio frequency interference emissions, a shielded cable is required.

Table 2-B
Pin Assignments for Primary EIA-232 Connector

Pin	EIA	Description
1	AA	Protective Ground (PG)
2	BA	Transmit Data (TD)
3	BB	Receive Data (RD)
4	CA	Request to Send (RS)
5	CB	Clear to Send (CS)
6	CC	Data Set Ready (SR)
7	AB	Signal Ground (SG)
8	CF	Received Line Signal Detector (CD)
9	-	+12 Test Point
10	-	-12 Test Point
15	DB	Transmit Clock (TC)
17	DD	Receive Clock (RC)
18	-	Local Loopback (LL)
20	CD	Data Terminal Ready (TR)
21	-	Remote Loopback (RL)
22	CE	Ring Indicator (RI)
24	DA	External TX Clock (ETC)
25	-	Test Indicator (TI)

Table 2-C
Pin Assignments for Primary V.35 Connector

Pin	CCITT	Description
A	101	Protective Ground (PG)
B	102	Signal Ground (SG)
C	105	Request to Send (RS)
D	106	Clear to Send (CS)
E	107	Data Set Ready (SR)
F	109	Received Line Signal Detector (CD)
H	-	Data Terminal Ready (TR)
J	-	Ring Indicator (RI)
L	-	Local Loopback (LL)
N	-	Remote Loopback (RL)
R	104	Received Data (RD-A)
T	104	Received Data (RD-B)
V	115	Receiver Signal Element Timing (SCR-A)
X	115	Receiver Signal Element Timing (SCR-B)
P	103	Transmitted Data (SD-A)
S	103	Transmitted Data (SD-B)
Y	114	Transmitter Signal Element Timing (SCT-A)
AA	114	Transmitter Signal Element Timing (SCT-B)
U	113	External TX Signal Element (SCX-A)
W	113	External TX Signal Element (SCX-B)
NN	-	Test Indicator (TI)

SECONDARY CHANNEL CONNECTION

If used, the secondary DTE should be connected to the auxiliary EIA-232 connector. The pinout for the connector is shown in Table 2-D.

Table 2-D
Pin Assignments for Auxiliary EIA-232 Connector

Pin	CCITT	Description
1	AA	Protective Ground (PG)
2	BA	Transmit Data (TD)
3	BB	Receive Data (RD)
4	CA	Request to Send (RS)
5	CB	Clear to Send (CS)
6	CC	Data Set Ready (SR) On all the time.
7	AB	Signal Ground (SG)
8	CF	Received Line Signal Detector (CD) On all the time.

CONFIGURATION

The DSU III AR contains four different user profiles (sets of configurations options) that are stored in read only memory. These profiles are listed in the appendix *Default Configuration Profiles*. The unit is shipped from the factory with profile 1 (default configuration) loaded into the nonvolatile configuration memory. If profile 1 matches the desired system requirements, then no additional configuration is required to put the unit into service. If profile 1 does not match the desired system requirements, modify the default configuration or select another profile more closely matching the desired configuration and modify.

When a new profile is loaded or the existing profile is modified, it is stored in the nonvolatile configuration memory. The DSU III AR is then configured with that profile every time power is turned on or reset.

See the chapter *Manual Command* for information on loading default configuration profiles.

Configuration Methods

The DSU III AR provides methods for both local and remote configuration. These methods are shown in Table 2-E.

Table 2-E
Configuration Methods

Method	Stand Alone	
	Local	Remote
AT Commands	Yes	Yes
V.25 Commands	Yes	Yes
Front Panel	Yes	Yes
DATAMATE	No	Yes
VT 100	No	Yes

AT Commands

The DSU III AR can be configured and controlled with in-band AT commands from an asynchronous DTE port just as modems are.

To exit the data mode and enter the command mode, the asynchronous DTE device must transmit a proper escape sequence or three pluses (+++) to the DSU III AR. A specified time delay must occur between the last data character and the first escape sequence character. This is the guard time delay, and it can be changed by writing a value to the S12 register. The default value for the guard time is one second. For a valid escape sequence to occur, the DTE must transmit the escape code character three times in succession with delay between each character being less than the guard time.

Once the command mode is entered, AT commands can be transmitted to the DSU III AR to configure most of the options or initiate tests to check both the DSU III AR and the network connections. All command lines must begin with the AT character set in either capital or lower case letters.

The command line may contain a single command or a series of commands after the AT attention code. When a series of commands is used, the individual commands may be separated with spaces for readability. The maximum length for a command line is 40 characters. Each command line is executed by the DSU III AR upon receipt of a terminating character. The default terminating character is a carriage return (ASCII 013), but it can be changed by writing a different value to register S3.

Before the terminating character is transmitted, the command line can be edited by using the backspace character (ASCII 008) to erase errors so the proper commands can be entered. Valid AT commands for the DSU III AR are listed in the appendix *AT Commands*.

V.25 bis Commands

When configured for the V.25 bis option, the DSU III AR accepts in-band dialing and configuration commands from both synchronous and asynchronous DTE ports.

The V.25 bis option supports the following protocols:

- SDLC (Synchronous Data Link Control)
- BI-SYNC
- ASYNCHRONOUS

SDLC Option

Character Format

- Data bits - 8
- Parity bit - Ignored

Command Structure

[F][A][C][V.25 bis COMMAND][FCS][F]

The address field [A] is FFH. The control field [C] is set to 13H except for cases of multi-frame responses. For this case, the control field is set to 03H in all but the last frame. The 03H in the control field indicates that other frames are to follow while the 13H in the control field indicates the final frame.

Bi-Sync Option

Character Format

- Data bits - 7
- Parity bit - Odd

Command Structure

[SYN][SYN][STX][V.25 bis COMMAND][ETX]

Asynchronous Option

Character Format

- Start bit - 1
- Data bits - 7
- Parity bit - Even
- Stop bit - 1

Command Structure

[V.25 bis COMMAND][CR][LF]

Command Descriptions

The ADTRAN V.25 bis command set is a subset of the CCITT V.25 bis command set. In addition to the CCITT commands supported, ADTRAN has added configuration commands for both local and remote DSUs. The ADTRAN V.25 bis command set follows:

CIC	Connect incoming call
CNL	Configuration local
CNR	Configuration remote
CRN	Call request with number
CRS	Call request using stored number
DIC	Disregard incoming call
PRN	Program number
RLN	Request list of numbers

The following list contains possible responses to V.25 bis commands:

VAL	Valid V.25 command processed
CFIET	Call failed on switched network - busy detected
CFIDE	Call failed on switched network - no wink detected
CFINS	Call failed - no dial string in specified register
INVCU	Unknown command detected
INVPS	Invalid parameter syntax
INVPV	Invalid parameter value
INVBL	Invalid local password
INVBM	Invalid remote password
INC	Incoming call
CNX	Call connected

If verbose (wordy) responses are disabled (ATV0), the following list of three-character responses are the only ones returned:

VAL	Valid V.25 command processed
INV	Invalid command received
CFI	Call failed
INC	Incoming call
CNX	Call connected

Syntax and Possible Responses

CIC (Connect Incoming Call)

This command causes the DSU to go on-line. For dial backup units, this command hangs up the dial backup line and initiates an attempt to reestablish the main (DDS) line. There are no parameters associated with this command. Possible indications include VAL, CNX, and CFIdx.

CNL (Configuration Local)

This command is used to pass AT commands to the local modem via the V.25 bis command processor. This allows the DSU III AR to be configured with AT commands via a synchronous interface. The command has the following format:

```
CNL[LOCAL PASSWORD;]AT[ONE OR MORE AT COMMANDS]
```

A local password may not be required depending on the present

configuration of the unit. Responses to CNL commands are returned in the data format currently configured. Possible responses include VAL and INVn.

CNR (Configuration Remote)

This command is used to pass AT commands over the network to the remote DSU via the V.25 bis command processor. This allows a remote DSU III AR to be configured from a synchronous interface. The command's format is as follows:

```
CNR[REMOTE PASSWORD;]AT[ONE OR MORE AT COMMANDS]
```

The remote password may or may not be required depending on the present configuration of the remote unit. Responses to the CNR commands are returned in the data format currently configured. Possible responses include VAL and INVn.

Switched 56 Operation**CRN (Call Request with Number)**

When the DSU III AR is configured for SW56 operation, the CRN command causes the DSU to dial the supplied number. The command's format follows:

```
CRN[NUMBER TO BE DIALED]
```

If no number is included in the command, the number stored in dial register number 1 is dialed. If no number is provided and no number is stored in dial register number 1, the DSU III AR responds with the call failure indication CFINS (Call Failure Indication Not Stored).

For a DBU unit, this command initiates dialing on the backup circuit. If the number supplied contains non-dialable digits, they are ignored and only the dialable digits are dialed. Possible responses include VAL, CNX, and CFIdx.

CRS (Call Request Using Stored Number)

The CRS command causes the DSU III AR to dial the number

stored in the specified register. The format of this command is as follows:

```
CRS      [OPTIONAL SPACE][REGISTER NUMBER 1-10]
```

If this command is issued without the register number parameter, the INVPS (Invalid Parameter Syntax) response is issued. If this command is issued and the register parameter is not in the valid range for dialing registers, the INVPV (Invalid Parameter Value) response is returned. Other responses include VAL,CNX, and CFIXx.

DIC (Disregard Incoming Call)

This command causes the V.25 bis processor to return to command mode even if there is an incoming call pending. This allows local commands to be issued and incoming calls to be ignored. There are no parameters associated with this command. The DSU responds with VAL.

PRN (Program Number)

This command stores the supplied number into the specified register. The command has the following format:

```
PRN      REGISTER NUMBER;[NUMBER TO BE STORED]
```

If this command is entered with no parameters, the INVPS response is returned. If no register number is included in the command or if it is invalid, the INVPV response is returned. This response is also returned if the number to be stored contains invalid characters. The characters 1, 2, 3, 4, 5, 6, 7, 8, 9, 0, P, T, and & are valid dial characters. If no digits are issued with this command, the specified register is cleared. The DSU responds with VAL.

RLN (Request List of Numbers)

This command causes the DSU III AR to return the number

stored in the specified register. The format of this command follows:

```
RLN    [REGISTER NUMBER]
```

If the register number is invalid, the INVPV response is returned. When a correct register number is entered, the following response is returned:

```
LSN    [REGISTER NUMBER];[NUMBER STORED]VAL
```

If no register number is present in the command, the DSU III AR responds with a list of all the registers and the stored numbers. This list is followed by the VAL response.

Chapter 3

Operation

MENU STRUCTURE

The DSU III AR uses a multilevel menu approach to access its many features. All menu operations are displayed in the LCD window.

The opening menu is the access point for all other operations. There are four Main menu branches: Status, Test, Configuration and Dial.

Each Main menu item has several functions and sub-menus to identify and access specific parameters.

LCD Display of the Main Menu

1=STATUS

2=TEST

3=CONFIG

4=DIAL



The DIAL option is only available when the unit is configured for a Switched 56 network type. For more information, see the chapter Dial Selection.

Main Menu

The following paragraphs briefly describe the main menu's four branches. More detailed information is provided in the individual chapters for each branch.

Status

Status is used to display all relevant information for the network and DTE interfaces. It displays the current operating mode, loop status, rate of service from the network, DTE data rate and format, and TR, SR, LL, and RL DTE interface lead status. The display returns to the status menu when the front panel is not accessed. Refer to the chapter *Status Selection* for more detailed information.

Test

Test is used to control local and remote testing. Select local or remote testing, and select the type of test and test pattern when required. For more information see the chapter, *Test Selection*.

Configuration (CONFIG)

Configuration is used to select network and DTE operating parameters. This menu branch is divided into several chapters for easier reference. The division includes a brief overview chapter followed by a separate chapter for each of the five sub-menus of the CONFIG branch: *Configuring Network Options*, *Configuring DTE Options*, *Configuring Test Options*, *Configuring Dial Options*, and *Manual Command*.

Dial

Dial provides manual dialing functions. Key in a number to dial, select one of the ten stored numbers, or redial the last dialed number. This menu is available for use only when AT&T/MCI SW56 or US SPRINT SW56 is the selected network type. See the chapter, *Dial Selection*, for more information.

Basic Menu Travel

Four function keys on the left side of the DSU III AR keypad allow the various menu branches to be entered, exited, and scrolled through. The four function keys are defined below.

Enter	Selects a displayed item.
Up Arrow	Scrolls up the sub-menu items.
Down Arrow	Scrolls down the sub-menu items.
Cancel	Exits (back one level) from the current branch of the menu.

To choose a menu item, press the corresponding number or alpha character on the keypad (press **Shift** to activate alpha characters). The item flashes on and off to show it is the currently selected (active) choice. Pressing either the **Up** or **Down Arrow** scrolls through the available menu items. Pressing **Enter** selects the flashing item.

The following example and Figure 3-1 illustrate how to select the DSU III AR Loop Rate option.

1. Select Configuration (CONFIG) by pressing **3**, then press **Enter**.
2. Select LOCAL or REMOTE test by pressing the corresponding number, then press **Enter**.
3. Use the **Up** and **Down Arrows** to view sub-menu items.
4. Choose an item on the sub-menu such as Network Options (NETWORK OPT).
5. To select NETWORK OPT press **1**, then press **Enter**.
6. To select LOOP RATE options, press **1**, then press **Enter**.
7. The current network loop rate is flashing. Scroll up or down to view possible options. To select a new loop rate, press the corresponding number then press **Enter**.

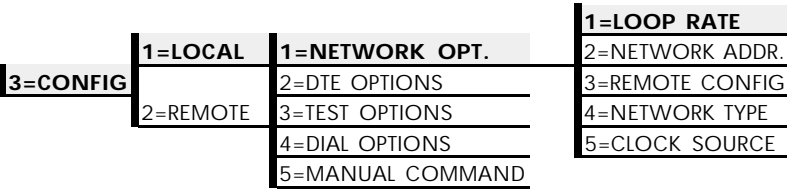


Figure 3-1
Example of Basic Menu Travel

FRONT PANEL

The DSU III AR faceplate is shown in Figure 3-2.

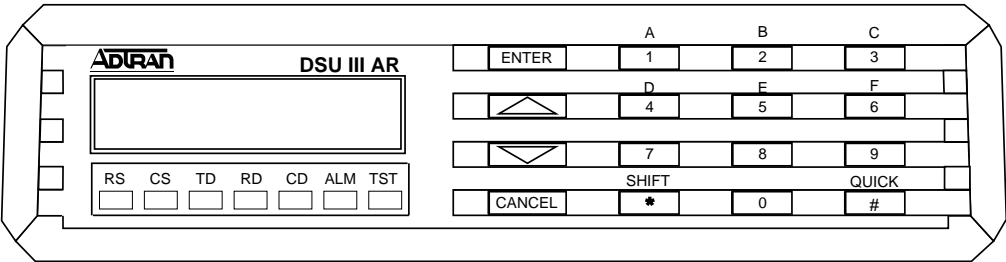


Figure 3-2
DSU III AR Front View

The following function descriptions apply to the stand alone DSU III AR.

LCD Window

Displays menu items and messages in 2 lines by 16 characters.

Enter

Selects active menu items. To activate a menu item, press the number of the item. When the menu item is flashing, press **Enter** to select it. A sub-menu item is invoked or a configuration parameter is set. The display of **COMMAND ACCEPTED** indicates a valid operation.

Numeric Keypad

The numeric keypad contains the numbers 0 through 9 and alpha characters A through F, which are used to activate menu items or enter parameters.

Shift

Alpha characters are entered by pressing **Shift** before each desired character.

To activate a menu item designated by an alpha character rather than a number, display the menu item using the **Up** and **Down Arrows**, press **Shift** then the letter. Press **Enter** to select the item.

If a key is pressed without using **Shift**, the numbered item becomes active instead of the alpha item. If this happens, repeat the correct procedure.

Quick

During most operations, the **Quick** key returns the display to the Main menu. During a test, the **Quick** key returns to the top of the Test menu. In SW56 operation, if the unit is not in test, the **Quick** key returns to the Dial menu.

Cancel

The **Cancel** key stops the current activity and returns to the previous menu. Repeat until the desired menu level is reached.

Up and Down Arrows

The **Up** and **Down Arrows** scroll through the sub-menu items available in the current menu. Sub-menu items appear two at a time in a circular or wrapping fashion. When the sub-menu items are scrolled, they continuously appear from beginning to end in a forward (**Down Arrow**) or reverse (**Up Arrow**) pattern.


LED Description

The DSU III AR has seven LED indicators: RS, CS, TD, RD, CD, ALM and TST. These LEDs are identified as follows:

RS:	Request to Send
CS:	Clear to Send
TD:	Transmit Data
RD:	Receive Data
CD:	Carrier Detect
ALM:	Alarm Indication
TST:	Test Mode Manual

REAR PANEL

The rear panel contains three DTE connectors which provide primary channel V.35 or EIA-232, and a secondary channel EIA-232 port (auxiliary EIA -232). An 8-pin telco jack, a captive power cord, and a power switch are also located on the rear panel. Pin assignments for the DTE and network connections are listed in the chapter *Installation*. The DSU III AR rear panel is shown in Figure 3-3.

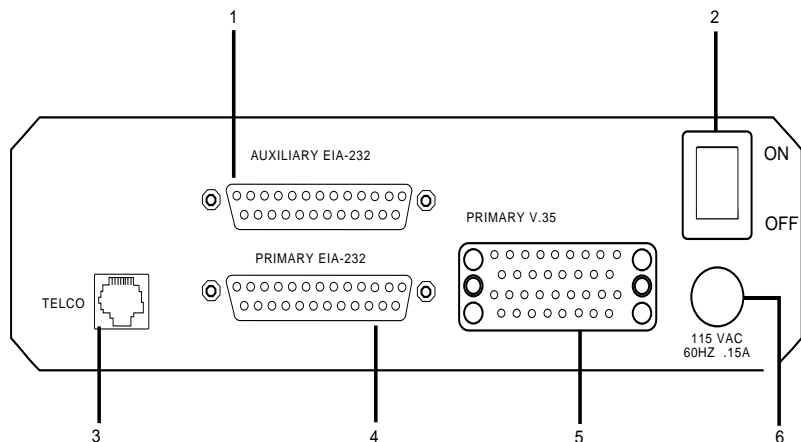

Identification of Numbers

Item	Function
1. Auxiliary EIA-232	Secondary channel services
2. Power Switch	Used to turn power on or off
3. Telco Connection	Connection to the dedicated circuit
4. Primary EIA-232	DTE interface
5. Primary V.35	High speed DTE interface
6. 115 VAC Connection	Power cord connection

Figure 3-3
DSU III AR Rear View

Chapter 4

Configuration Overview

LOCAL AND REMOTE CONFIGURATION

The DSU III AR can be configured locally using the front panel or remotely by establishing communications with another DSU. The front panel of the local DSU can then be used to configure the remote DSU. During remote configuration, the DSU III AR prompts for the remote address before continuing to the Configuration (CONFIG) menus.

The Configuration menu consists of a group of five sub-menus relating to a specific interface or function of the DSU III AR that requires setup.

1=Network Opt.	Network Interface Parameters
2=DTE Options	DTE Interface Parameters
3=Test Options	Unit Test Options
4=Dial Options	Unit Dialing Options
5=Manual Command	ADTRAN Specific Commands

The DSU III AR contains four different user profiles (sets of configurations options) that are stored in read only memory (see the appendix, *Default Configuration Profiles*). The unit is shipped from the factory with profile number 1 (default configuration) loaded into the current (nonvolatile configuration) memory. If profile 1 matches requirements for the system, then no additional configuration is required to put the unit into service. If

profile 1 does not match system requirements it can be modified, or one of the other profiles that more closely matches the system requirements can be loaded into current memory. When a different profile is loaded, or the existing profile is modified, it is stored in the current (nonvolatile configuration) memory. The DSU III AR is then configured with that profile every time power is turned on or until the unit is reset.

For detailed information on configuration see the chapters *Configuring Network Options*, *Configuring DTE Options*, *Configuring Test Options*, *Configuring Dial Options*, and *Manual Command*.

A complete Configuration menu is shown in Figure 4-1.

(Fold Out of Complete Configuration Menu belongs here)

Figure 4-1
Complete Configuration Menu

Chapter 5

Configuring Network Options

NETWORK OPTIONS

The NETWORK OPTIONS configuration parameters control the loop operation of the DSU III AR.

Once a parameter is set, **Command Accepted** is displayed briefly before returning to the active menu.

Loop Rate

The Loop Rate option sets the loop operating speed. The unit should be set to the rate required by the DDS Service. The DSU III AR also supports subrate DTE data over a 56 kbps or 64 kbps loop. The loop rate must be set independently of the DTE rate.

Eight loop rate selections are available (shown in Figure 5-1). After selecting any loop rate other than Auto or 64 kbps the option for a secondary channel is available. The secondary channel rate is determined by the current loop rate.

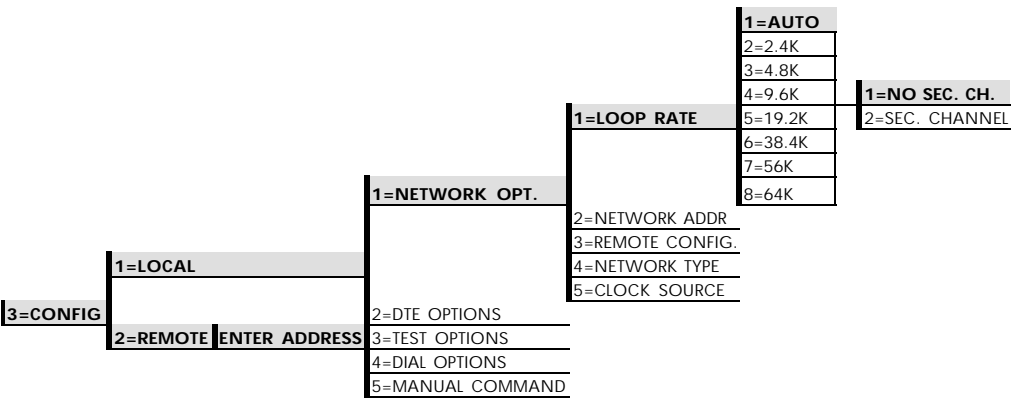


Figure 5-1
Setting Loop Rate Options

The default factory setting is AUTO. When configured to AUTO, the DSU will automatically attempt to adapt to the loop rate. Since 64k and 56k secondary channel look identical on the network, the DSU III will adapt to 56k secondary channel for either loop rate. If the loop rate is known, select the rate from the menu. The various loop rates and format selections are listed in Table 5-A with the equivalent AT commands that perform the same configuration functions.

Table 5-A
Loop Rate Commands

Front Panel	AT Command
AUTO	%B0
2.4K with no secondary channel	%B1
4.8K with no secondary channel	%B2
9.6K with no secondary channel	%B3
19.2K with no secondary channel	%B4
38.4K with no secondary channel	%B5
56K with no secondary channel	%B6
64K clear channel	%B7
2.4K with secondary channel	%B9
4.8K with secondary channel	%B10
9.6K with secondary channel	%B11
19.2K with secondary channel	%B12
38.4K with secondary channel	%B13
56K with secondary channel	%B14

Network Address

A two-digit decimal address can be assigned to each DSU III AR. This addressing capability makes it possible to perform remote configuration and testing in point-to-point and multi-drop networks. Figure 5-2 shows the menu path used to change the network address. The factory default setting is 0.

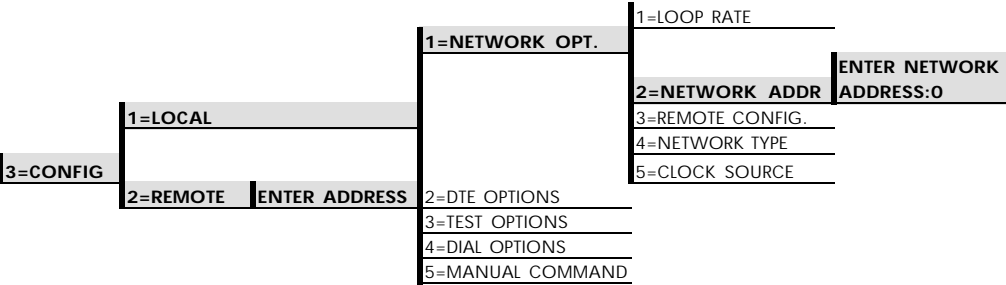


Figure 5-2
Setting the Network Address

Table 5-B shows the AT command used to set the network address.

Table 5-B
Network Address Command

Front Panel	AT Command	Description
XX (Decimal)	_N=xx	Assigns a 2 digit Network Address

Remote Configuration

This option sets up the DSU III AR to accept or reject remote configuration commands. Figure 5-3 shows the menu path for enabling/disabling remote configuration. The factory default setting is ENABLED.

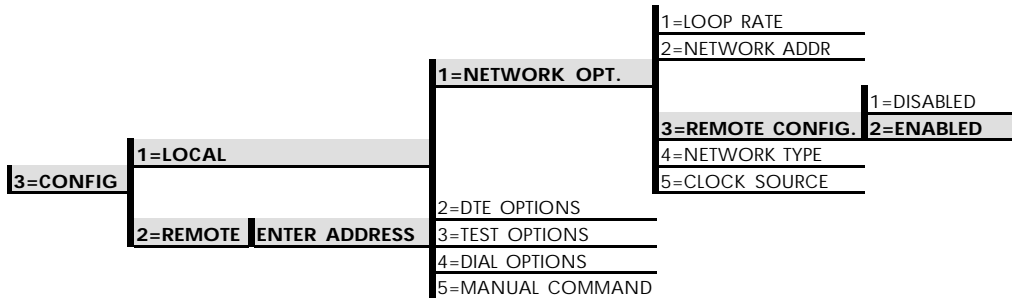


Figure 5-3
Enabling/Disabling Remote Configuration

Table 5-C shows the equivalent AT commands used to enable or disable remote configuration.

Table 5-C
Remote Configuration Commands

Front Panel	AT Command	Description
1=DISABLE	&P4	Disable Remote Configuration
2=ENABLE	&P5	Enable Remote Configuration

Network Type

This option configures the DSU III AR for the specific type of network being used. The factory default setting is DEDICATED (see Figure 5-4).

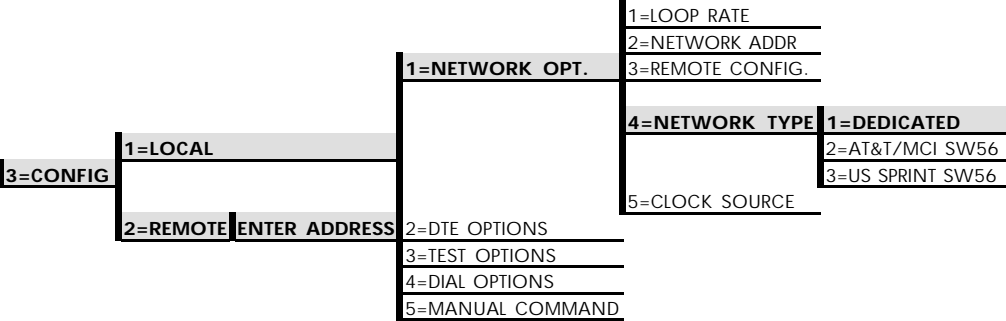


Figure 5-4
Setting Network Type Options

Table 5-D shows the equivalent AT commands that perform the same configuration functions.

Table 5-D
Network Type Commands

Front Panel	AT Command	Description
1=DEDICATED	&LO	Any 4-wire DDS Network
2=AT&T/MCI	&L1	AT&T/MCI Switched 56 Service
3=US SPRINT	&L2	US SPRINT Switched 56 Service

When AT&T/MCI SW56 or US SPRINT SW56 is selected, the Main menu displays the DIAL selection.



Clock Source

The CLOCK SOURCE options specify the timing source for the DSU III AR's internal circuitry. The factory default setting is FROM NETWORK (see Figure 5-5).

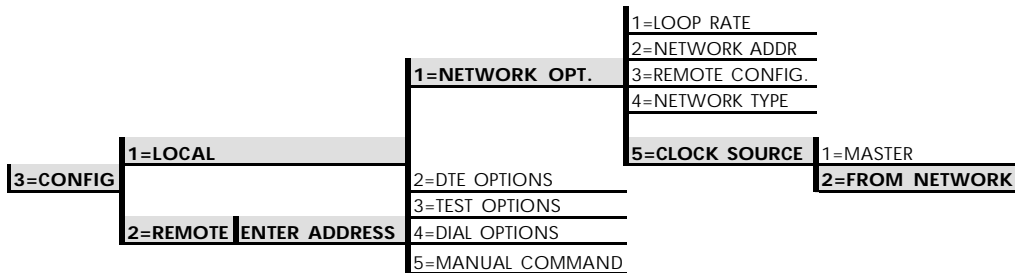


Figure 5-5
Setting the Clock Source

When operating on a DDS network, the timing should be FROM NETWORK. On a point-to-point private network, one DSU III AR must be set for MASTER, and the other set for FROM NETWORK. Table 5-E shows the equivalent AT commands for setting the clock source.



Select Master timing only if the circuit has no timing source (for example, two DSUs and a crossover cable).

Table 5-E
Clock Source Commands

Front Panel	AT Command	Description
1=MASTER	_X0	DSU is the master timing source
2=FROM NETWORK	_X1	Network RX Signal is timing source

Chapter 6

Configuring DTE Options

DTE OPTIONS

The DTE OPTIONS menu is used to select the configuration parameters that control the operation of the DSU III AR's DTE Interface such as the DTE rate, connector type, data format, DTE command options, transmit clock, CS options, anti-stream, and CD options.

DTE Rate

The selectable DTE rates over a 56 or 64 kbps loop with no secondary channel are shown in Figure 6-1. If a slower loop rate is selected, then the DTE rate automatically matches the loop rate. If an attempt is made to set the DTE rate for loop rates slower than 56 kbps, the DSU III AR briefly displays **DTE RATE SAME AS THE NETWORK** before returning to the status screen. The factory default setting is **SAME AS LOOP**.

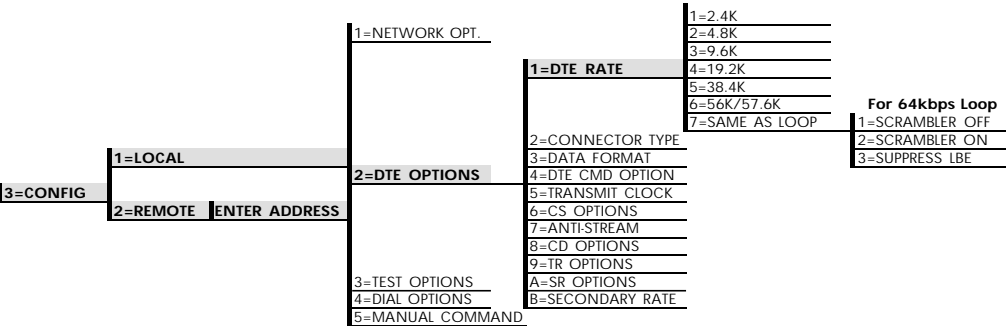


Figure 6-1


DTE Rates for 56 or 64 kbps Loop Rate with No Secondary Channel

The equivalent AT commands for setting the DTE rate for a 56 kbps loop rate with no secondary channel are shown in Table 6-A.

Table 6-A
DTE Rate AT Commands

Front Panel	AT Command	Description
1=DTE 2.4K	%K3	DTE rate 2.4K sync and async
2=DTE 4.8K	%K4	DTE rate 4.8K sync and async
3=DTE 9.6K	%K5	DTE rate 9.6K sync and async
4=DTE 19.2K	%K6	DTE rate 19.2K sync and async
5=DTE 38.4K	%K7	DTE rate 38.4K sync and async
6=DTE 56K/57.6K	%K8	DTE rate 56K sync or 57.6K async
7=SAME AS LOOP	%K9	DTE rate same as loop speed

If the DSU III AR is set for a loop rate of 56 kbps with secondary channel, then SCRAMBLER ON/OFF options are available as shown in Figure 6-2. The factory default setting is SCRAMBLER OFF.

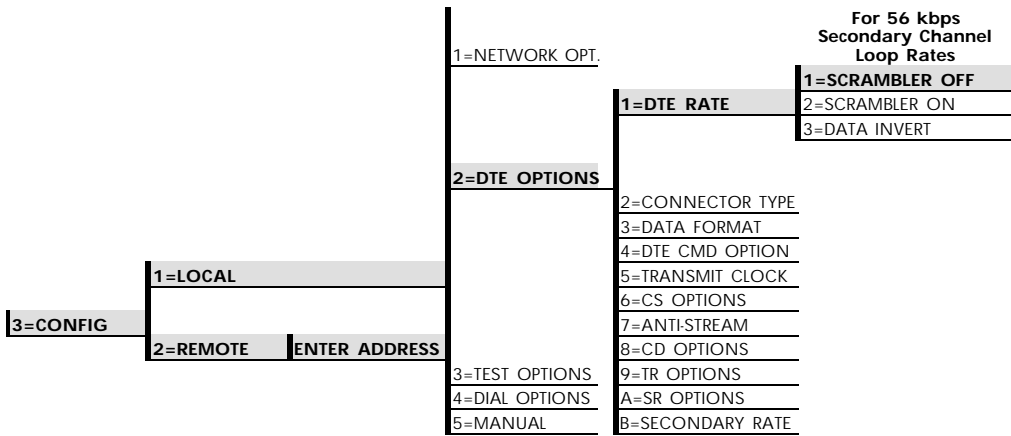**Figure 6-2**

DTE Rates for 56 kbps Secondary Channel and 64 kbps Loop Rates

Table 6-B shows the equivalent AT commands for setting SCRAMBLER ON/OFF for loop rates of 56 kbps with secondary channel and 64 kbps.

Table 6-B
Scrambler On/Off AT Commands

Front Panel	AT Command	Description
1=SCRAMBLER OFF	_F0	DTE data scrambler disabled
2=SCRAMBLER ON	_F1	DTE data scrambler enabled
3=DATA INVERT	_F2	DTE data invert enabled (56 kbps secondary channel Loop Rate only). LBE codes from DTE suppressed (64 kbps only).



For point-to-point operation at 56 kbps with secondary channel, the network requires that the primary and secondary channel data not be all zeros simultaneously. For HDLC protocol applications, this constraint can be eliminated by selecting either the DATA INVERT option or the SCRAMBLER ON option.

For 64 kbps clear channel operation, there is a possibility that the DTE data sequences might mimic network loop maintenance functions and erroneously cause other network elements to activate loopbacks. To prevent this, the SCRAMBLER ON or SUPPRESS LBE option should be selected for both the local and remote DSU III AR.

Connector Type

The CONNECTOR TYPE option is used to specify which of the primary channel connectors is used to connect to the DTE. Figure 6-3 shows the menu path used to set the connector type. The factory default setting is V.35. There are no AT commands available to set the connector type.

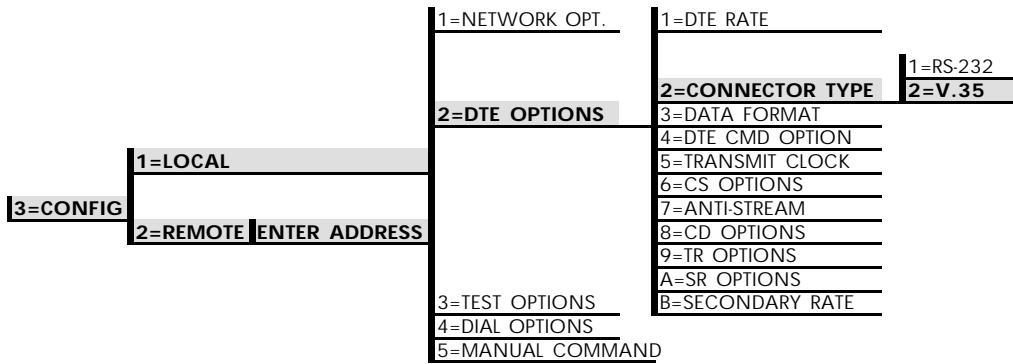


Figure 6-3
Selecting the Connector Type

Data Format

The DATA FORMAT option is used to select either the SYNCHRONOUS or ASYNCHRONOUS mode of operation for the DTE interface. The factory default setting is SYNCHRONOUS (see Figure 6-4). If ASYNCHRONOUS is chosen, the length of the data bytes must be selected.

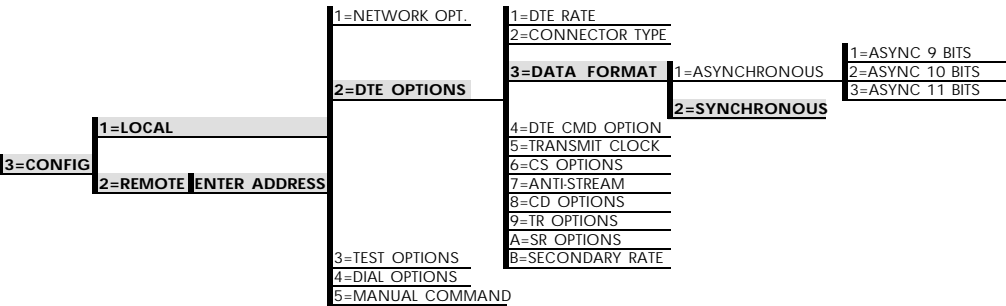


Figure 6-4
Selecting Asynchronous or Synchronous Data Format

Table 6-C shows the AT commands that can be used to set the DATA FORMAT.

Table 6-C
Data Format Commands

Front Panel	AT Command	Description
1=ASYNCHRONOUS	&Q0	Always asynchronous
2=SYNCHRONOUS	&Q2	Always synchronous
For asynchronous options, select the length of the data bytes.		
1=ASYNCH 9 BITS	N/A	9 bits including start, stop, parity
2=ASYNCH 10 BITS	N/A	10 bits including start, stop, parity
3=ASYNCH 11 BITS	N/A	11 bits including start, stop, parity

DTE Command Option

The DTE COMMAND option is used to enable AT commands from the DTE, enable V.25 bis SDLC (Synchronous Data Link Control) commands, enable V.25 (Bisync and Async), or disable all DTE command modes (see Figure 6-5).

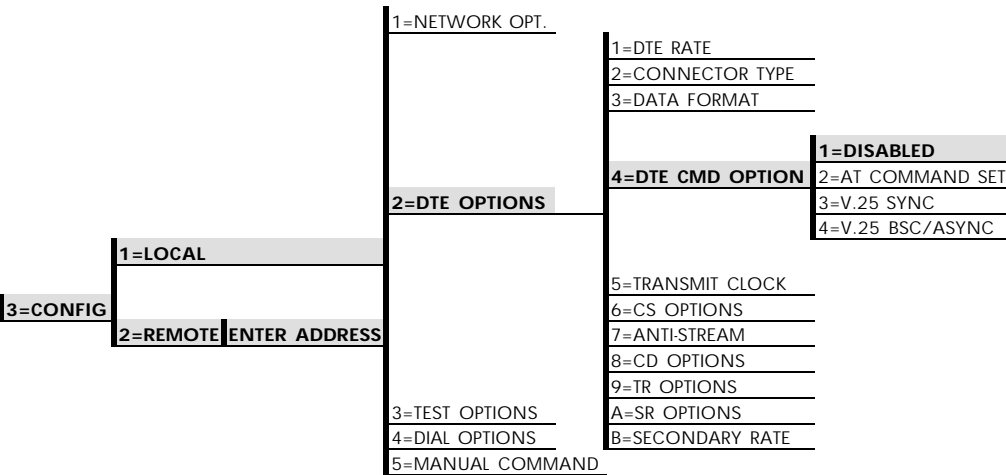


Figure 6-5
Selecting DTE Command Option



NOTE

When the unit is in DTE CMD OPTION mode (idle in SW56 mode, forced with TR option, or from escape sequence in AT mode) with AT COMMAND SET or V.25 SYNC selected, the DTE format is independent of the DATA FORMAT option. However, if V.25 BSC/ASYNC is selected, the unit will use V.25 BISYNC (BSC) commands for synchronous data format or V.25 ASYNC commands for asynchronous data format.

Transmit Clock

The TRANSMIT CLOCK option is used to select the source of the clock used to transfer data from the DTE into the DSU III AR. Figure 6-6 shows the menu path used to set the TRANSMIT CLOCK option.

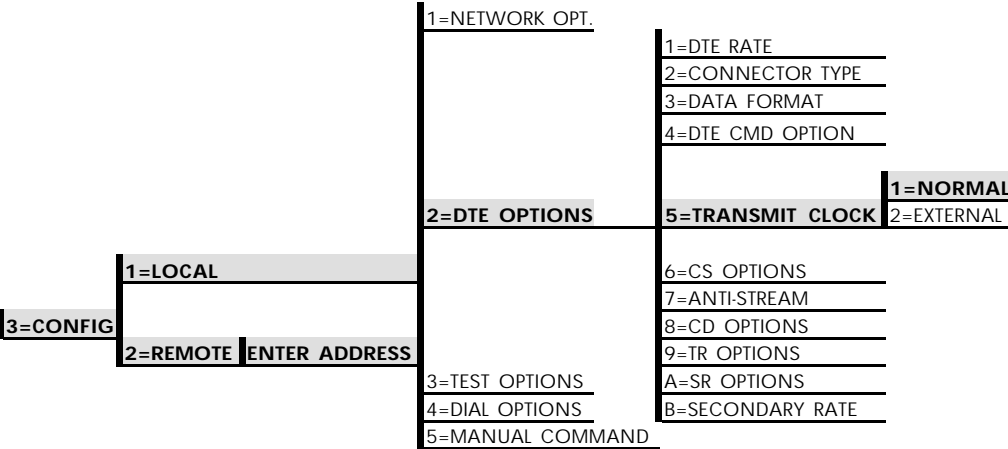


Figure 6-6
Transmit Clock Options

Table 6-D shows the AT commands used to set the Transmit Clock option.

Table 6-D
Transmit Clock AT Commands

Front Panel	AT Command	Description
1=NORMAL	&X0	TX clock from DSU selected
2=EXTERNAL	&X1	ETC clock from DTE selected

The EXTERNAL clock option is normally used in modem tail circuit applications. A DSU to modem interconnect diagram for this application is shown in the appendix, *DSU to Modem Interconnect*.

The EXTERNAL clock option is also recommended when the EIA-232 connector is used for 56 kbps and 64 kbps applications. A special DSU cable diagram for this application is shown in the appendix, *EIA -232 Connector*. Using this option and special cable eliminates data errors caused by excessive delays in the DTE transmit clock receiver and transmit data driver.

CS Options

The CS (clear to send) OPTIONS menu is used to select one of five different control modes for the CS lead. Figure 6-7 shows the menu path used to access the CS OPTIONS menu. The default factory setting is FOLLOWS RS with CS DELAY SHORT.

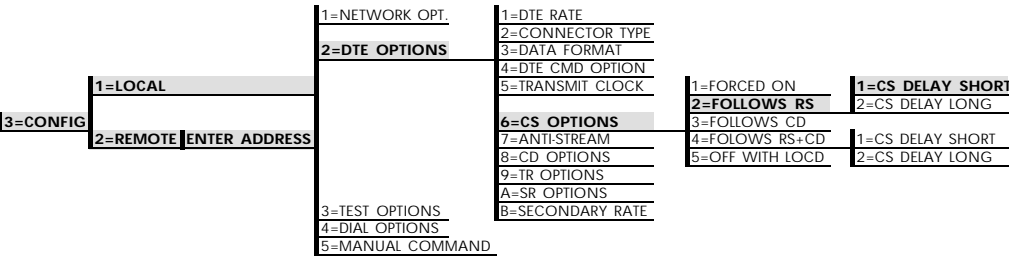


Figure 6-7
Selecting CS Options

If one of the options chosen involves request to send (RS), then the delay from RS to CS must be selected. Table 6-E shows the AT Commands used to set the CS OPTIONS.

Table 6-E
CS Options AT Commands

Front Panel	AT Command	Description
1=FORCED ON	&R0	CS always on.
2=FOLLOWS RS	&R1	CS on with RS after delay; off when RS or if DSU cannot pass data.
3=FOLLOWS CD	&R2	CS off when CD goes off or if DSU cannot pass data.
4=FOLLOWS RS+CD	&R3	CS follows RS after delay and also off if CD off. If CD goes off after RS is on, DSU III AR will turn off CS but continue to pass data until RS goes off. CS also off if DSU cannot pass data.
5=OFF WITH LOCD	&R4	Off 5 sec after LOCD. Valid only in SW56 mode. CS is forced on but will turn off for 5 seconds after a call is disconnected.
For RS options, select the RS to CS delay length.		
1=CS DELAY SHORT	_D0	Short Delay from RS to CS selected.
2=CS DELAY LONG	_D1	Long Delay from RS to CS selected.

Specified times for the short and long delays at the different operating speeds are shown in Table 6-F.

Table 6-F
Short and Long Delays at Different Operating Speeds

Rate	Short Option	Long Option	Tolerance	Add to Maximum Time for Secondary Channel
64K	1.1ms	16.1ms	±.4ms	
56K	1.1ms	16.1ms	±.4ms	.33ms
38.4K	1.5ms	16.5ms	±.4ms	.63ms
19.2K	1.5ms	16.5ms	±.4ms	1.25ms
9.6K	1.5ms	16.5ms	±.4ms	2.5ms
4.8K	1.9ms	16.9ms	±.7ms	5.0ms
2.4K	3.8ms	18.8ms	±1.3ms	10.0ms

Anti-Stream

The ANTI-STREAM option is used to select the anti-stream timeout. Figure 6-8 shows the menu path used to access the ANTI-STREAM options menu. The anti-stream timeout is the maximum time the DSU III AR transmits data into the network from the DTE. This feature prevents one DTE device on a multi-drop network from continuously tying up the transmit circuit back to the master DSU.

The anti-stream timer is reset to zero when RS changes to the active state and is updated every second while RS is active. When the anti-stream timeout expires, the DSU III AR stops transmitting DTE data into the network but continues to accept data from it. This condition exists until the DTE deactivates the RS input.

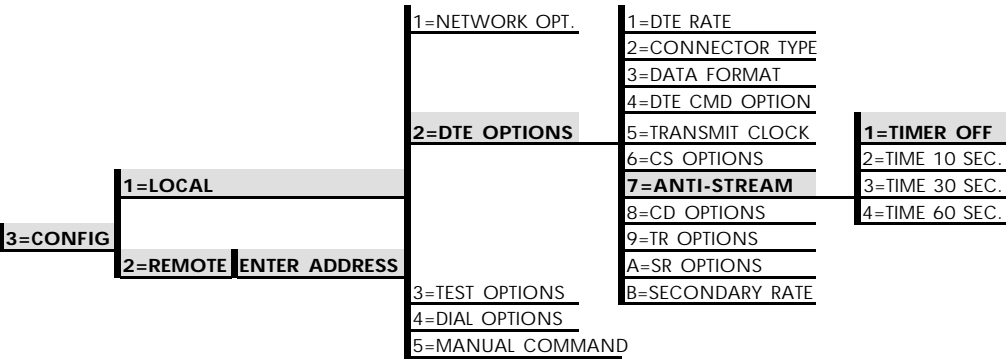


Figure 6-8
Anti-Stream Options

The factory default setting is **TIMER OFF**. Table 6-G shows the available options and their AT commands.

Table 6-G
Anti-Stream AT Commands

Front Panel	AT Command	Description
1=TIMER OFF	%T0	Anti-stream timer disabled
2=TIME 10 SEC.	%T1	Timeout equal 10 seconds
3=TIME 30 SEC.	%T2	Timeout equal 30 seconds
4=TIME 60 SEC.	%T3	Timeout equal 60 seconds

CD Options

The CD OPTIONS menu is used to select one of three different control modes for the receive line signal detector (CD) lead. The default factory setting is **NORMAL** (see Figure 6-9).

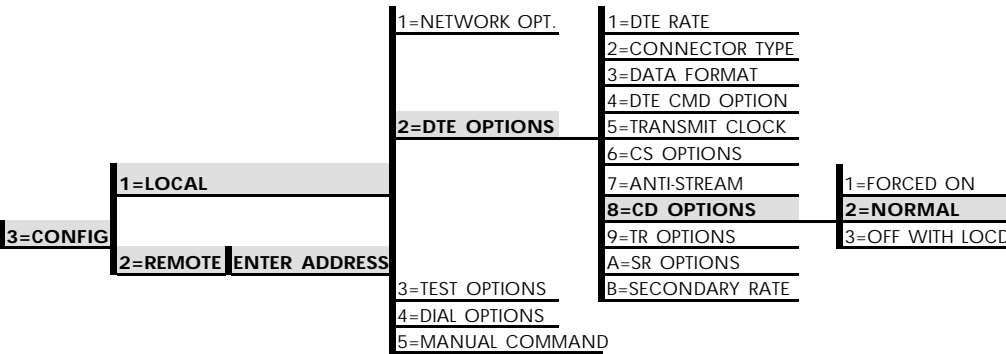


Figure 6-9
Selecting CD Options

Table 6-H shows the equivalent AT commands for setting CD options.

Table 6-H
CD Options AT Commands

Front Panel	AT Command	Description
1=FORCED ON	&C0	On all the time.
2=NORMAL	&C1	On only when data present on loop.
3=OFF WITH LOCD	&C2	On except after disconnect in Switched 56 application.

TR Options

The TR OPTIONS menu is used to select the DSU III AR response to the data terminal ready (TR) lead. The factory default setting is IGNORED (see Figure 6-10).

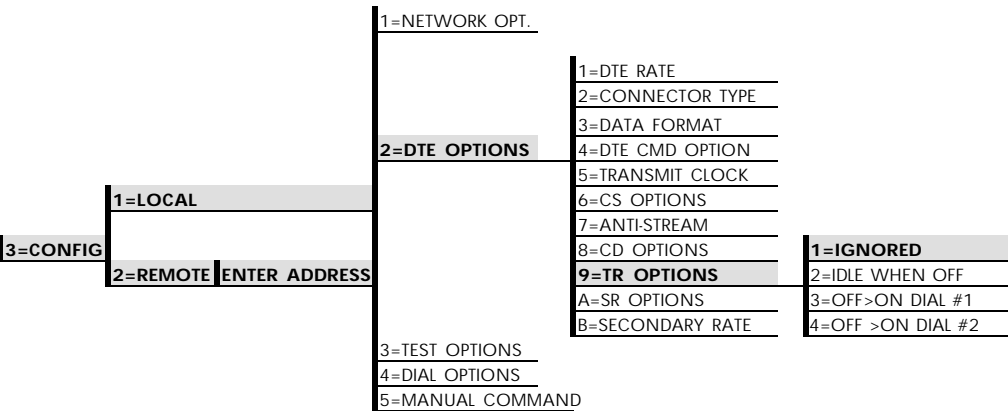


Figure 6-10
Selecting TR Options

Table 6-I shows the equivalent AT commands for setting TR OPTIONS.

Table 6-I
TR Options AT Commands

Front Panel	AT Command	Description
1=IGNORE	&D0	Ignore the TR input.
2=IDLE WHEN OFF	&D2	See the following Note.
3=OFF>ON DIAL #1	&D3	Dial Stored #1: TR goes off to on (SW56 only).
4=OFF>ON DIAL #2	&D4	Dial Stored #2: TR goes off to on (SW56 only).



For IDLE WHEN OFF option: In SW56 mode, TR off will cause the DSU to go On Hook (Idle). The unit also will not dial out if TR is off. In dedicated mode, the DSU will go into DTE command mode when TR goes off. When TR goes on, if the DSU does not receive a command in the number of seconds set in S40, the DSU will go into data mode.

SR Options

The SR OPTIONS menu is used to select the operating mode for the data set ready (SR) lead. Press **Shift + A** to activate the SR OPTIONS sub-menu. The factory default setting is OFF TEST ONLY (shown in Figure 6-11).

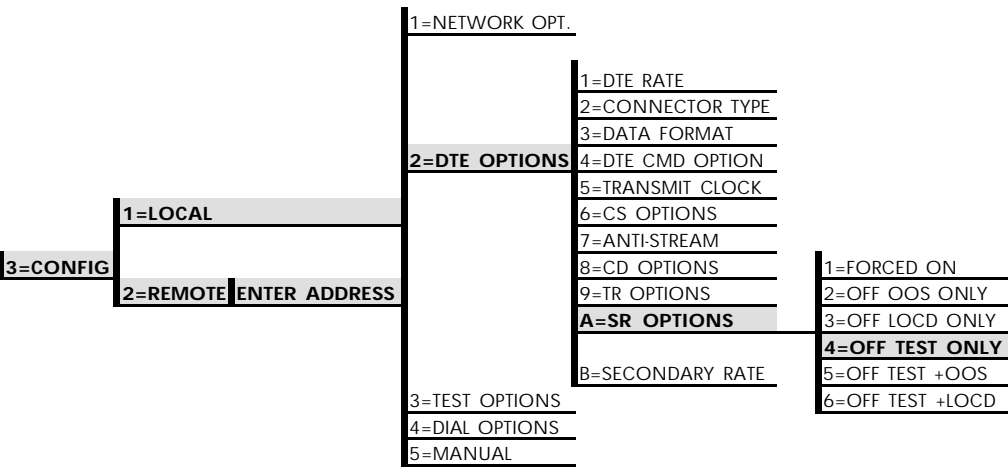


Figure 6-11
Setting SR Options

Table 6-J shows the AT commands for setting SR OPTIONS.

Table 6-J
SR Options AT Commands

Front Panel	AT Command	Description
1=FORCED ON	&S0	Always on.
2=OFF OOS ONLY	&S1	Off when network Out Of Service (OOS).
3=OFF LOCD ONLY	&S3	Off 5 seconds after disconnect (SW56 only).
4=OFF TEST ONLY	&S0_C0	Off when unit is in test.
5=OFF TEST +OOS	&S1_C0	Off in test or OOS.
6=OFF TEST +LOCD	&S5	Off 5 seconds after disconnect or test.

Secondary Rate

The SECONDARY RATE option is used to select the operating speed for the secondary channel if the secondary channel option was selected during setup of the Network Options (see Figure 6-12). Press **Shift + B** to activate the SECONDARY RATE sub-menu. The factory default is OFF. The secondary channel has an internal 256 byte buffer. If the secondary channel speed is higher than the throughput in the network, CTS flow control is activated. If the secondary DTE does not respond to CTS flow control, care should be taken to prevent the secondary channel internal buffer from overflowing. Network throughput is shown in Table 6-L.

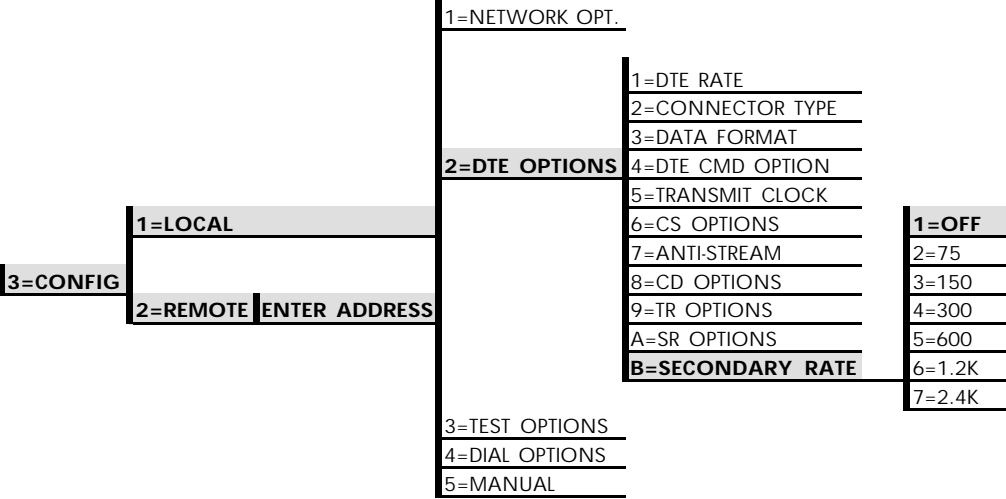


Figure 6-12
Setting the Secondary Rate

Table 6-K shows the equivalent AT commands for setting the secondary rate option.

Table 6-K
Secondary Rate AT Commands

Front Panel	AT Command	Description
1=OFF	_Y0	No secondary channel selected
2=75	_Y1	Secondary channel rate: 75 bps
3=150	_Y2	Secondary channel rate 150 bps
4=300	_Y3	Secondary channel rate: 300 bps
5=600	_Y4	Secondary channel rate 600 bps
6=1.2K	_Y5	Secondary channel rate 1200 bps
7=2.4K	_Y6	Secondary channel rate: 2400 bps

Table 6-L
DSU III AR Network Throughput

Loop Rate	Secondary Channel Throughput
2.4k	78
4.8k	156
9.6k	312
19.2k	627
38.4k	1.25k
56k No Scrambler	1.83k
56k Scrambler	2.4k

Chapter 7

Configuring Test Options

TEST OPTIONS

The TEST OPTIONS menu enables or disables different test modes and specifies the maximum test time allowed.

Test Timeout

The TEST TIMEOUT option sets the length of time a DSU III AR remains in a test mode before automatically returning to the data mode. Enter the timeout from 0 to 255 seconds. The factory default setting is off (0). Figure 7-1 shows the menu path used to access TEST TIMEOUT.

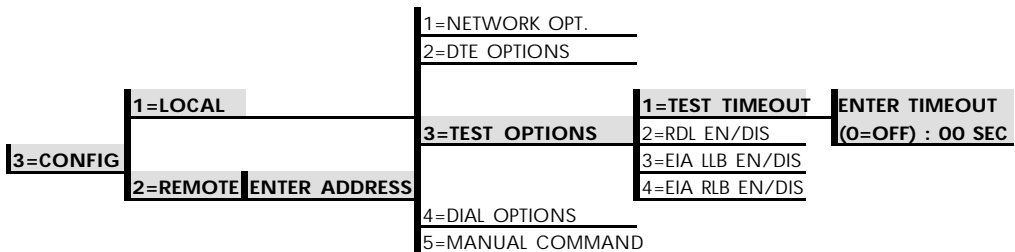


Figure 7-1
Setting Test Timeout Option

Table 7-A shows the equivalent AT commands for setting the TEST TIMEOUT.

Table 7-A
Test Timeout AT Commands

Front Panel	AT Command	Description
ENTER TIMEOUT	S18=x	Specify 0 - 255 seconds test timeout

Remote Digital Loopback

The RDL (Remote Digital Loopback) option specifies whether or not the DSU III AR responds to an RDL request from the far end of the circuit. The factory default setting is RDLACCEPTED. Figure 7-2 shows the menu path used to access this option.

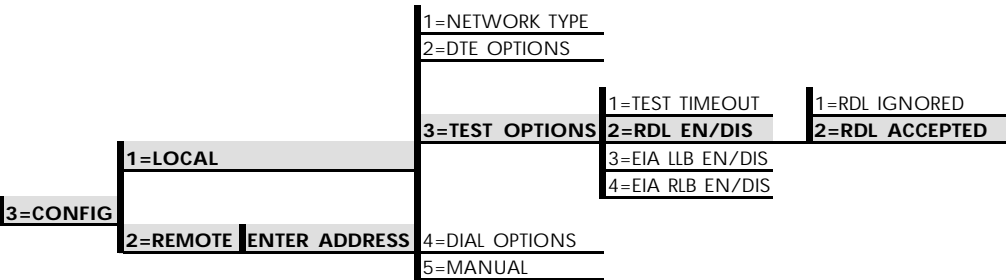


Figure 7-2
Remote Digital Loopback

Table 7-B shows the equivalent AT commands for setting the RDL option.

Table 7-B
Remote Digital Loopback AT Commands

Front Panel	AT Command	Description
1=RDL IGNORED	&T5	RDL request from remote DSU ignored
2=RDL ACCEPTED	&T4	RDL request accepted

EIA Local Loopback

The EIA LLB (Electronics Industries Association Local Loopback) option specifies whether or not the DSU III AR responds to the LLB input from the DTE. The factory default setting is DISABLED. Figure 7-3 shows the menu path used to access the EIA LLB option.

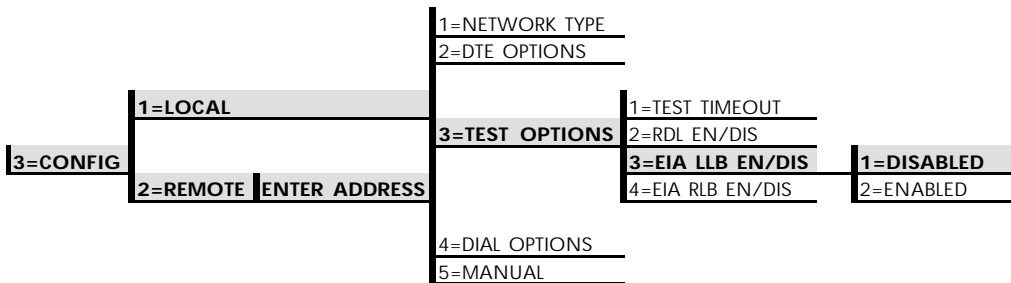


Figure 7-3
EIA Local Loopback Options

Table 7-C shows the equivalent AT commands for setting the EIA LLB options.

Table 7-C
EIA Local Loopback AT Commands

Front Panel	AT Command	Description
1=DISABLED	_A0	EIA LLB disabled
2=ENABLED	_A1	EIA LLB enabled

EIA Remote Loopback

The EIA RLB (Electronics Industries Association Remote Loopback) option specifies whether or not the DSU III AR responds to the RLB input from the DTE. The factory default setting is DISABLED. Figure 7-4 shows the menu path for the EIA RLB options.

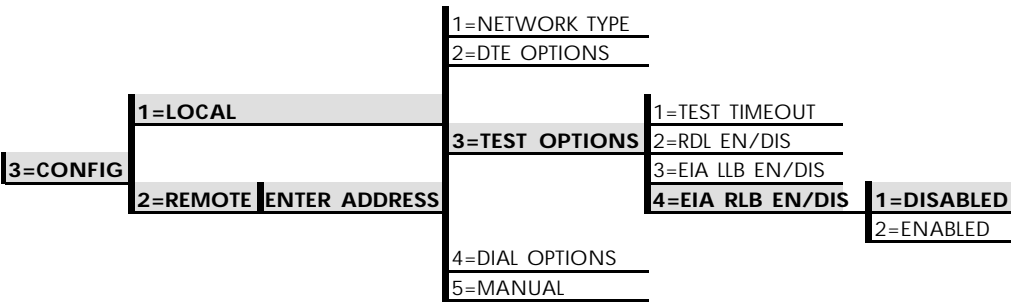


Figure 7-4
EIA Remote Loopback Options

Table 7-D shows the equivalent AT commands for setting the EIA RLB options.

Table 7-D
EIA Remote Loopback AT Commands

Front Panel	AT Command	Description
1=DISABLED	_R0	EIA RLB disabled
2=ENABLED	_R1	EIA RLB enabled

Chapter 8

Configuring Dial Options

DIAL OPTIONS

The DIAL OPTIONS menu stores up to ten phone numbers and defines the AUTO ANSWER operation of the DSU III AR when it is configured for Switched 56 operation.

Phone Number

The DSU III AR stores up to ten numbers of 36 digits each. Edit a phone number by reentering the entire number. This process overwrites the previously stored number. Figure 8-1 shows the menu path used to access the PHONE NUMBER option.

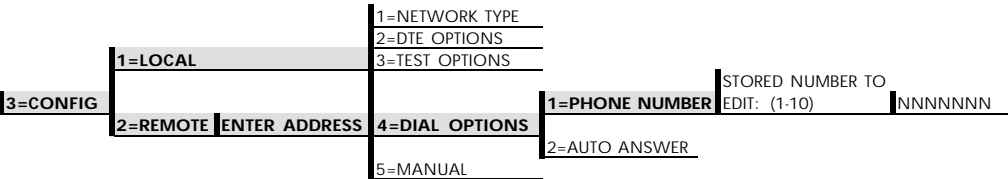


Figure 8-1
Editing Stored Phone Numbers

Table 8-A shows the AT Command for storing phone numbers.

Table 8-A
AT Command for Storing Phone Numbers

AT Command	Description
&Zn=	Store Phone Number

Auto Answer

The AUTO ANSWER option is used to specify how incoming calls are to be answered. If ENABLED, incoming calls are automatically answered by the DSU III AR. If DISABLED, an incoming call can be answered manually by an AT or V.25 command from the DTE, or by raising TR from the DTE. Figure 8-2 shows the menu path used to enable or disable this option.

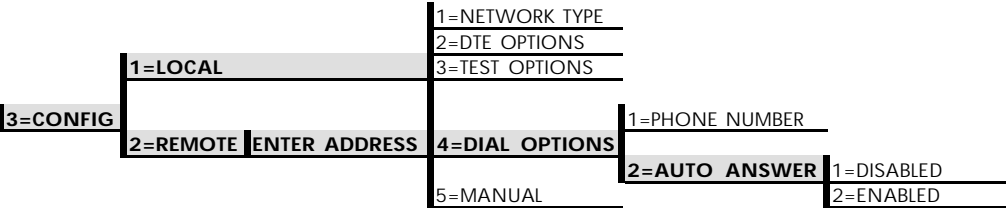


Figure 8-2
Enabling/Disabling the Auto Answer Function

Table 8-B show the AT Commands available for the AUTO ANSWER option.

Table 8-B
AT Commands for Auto Answer

Front Panel	AT Command	Description
1=DISABLED	_J0	Auto Answer disabled
2=ENABLED	_J1	Auto Answer enabled

Chapter 9

Manual Command

MANUAL COMMAND

The MANUAL COMMAND option is a shortcut method for entering configuration and control commands for the DSU III AR.

The first display prompts the user to enter the command number.

COMMAND:00

Figure 9-1 shows the menu path for MANUAL COMMAND. The available manual commands are listed in Table 9-A.

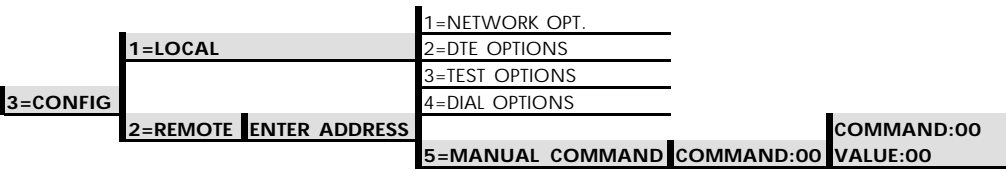


Figure 9-1
Manual Command

Use the number keys to enter the hexadecimal command number. Press **Enter** to complete. Once the command number is entered, the display shows both the command number and the present value or setting for the command. The command value can be edited or reissued with the existing value.

COMMAND: XX
VALUE: 00

Use the number keys to enter the hexadecimal value. Press **Enter** to complete. The system briefly displays **COMMAND ACCEPTED** and returns to the active menu.

Table 9-A
Manual Commands

Command Description	Command	Value
AT Command Echo		
Disable	82	00
Enable	82	01
AT Result code		
Enable	85	00
Disable	85	01
AT Long or Short code		
Short form	86	00 to FF
Long form	86	00 to FF
AT Escape Character	2	00 to FF
AT CR Character	3	00 to FF
AT LF Character	4	00 to FF
AT BS Character	5	00 to FF
AT Escape Char. Timer	0C	00 to FF
Abort Call Timer	7	00 to FF
DTR Recognize Delay (x 2.5ms)	19	00 to FF
DTR Initiated Command Timeout (seconds)	28	00 to FF
Load Factory Opt.		
Option Set #1	8A	00
Option Set #2	8A	01
Option Set #3	8A	02
Option Set #4	8A	03
Store User Profile		
Save to Profile 0	91	00
Save to Profile 1	91	01
Select User Profile		
Power Up Profile 0	93	00
Power Up Profile 1	93	01
Network Address Lock		
Network Addr. Unlock	C3	00
Network Addr. Lock	C3	01

Chapter 10

Dial Selection

DIAL OPTIONS

The DIAL selection available in the Main menu (4=Dial) includes options for manual dialing, redialing, and dialing stored numbers. The DIAL selection is available for use only if AT&T/MCI SW56 or US SPRINT SW56 is the selected NETWORK TYPE. Figure 10-1 shows the menu path used to access these options.

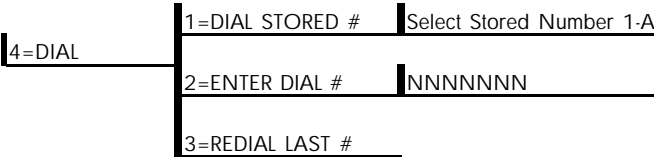


Figure 10-1
Dial Options Menu

Dial Stored

This option allows a stored number to be dialed. The numbers are stored within the CONFIG selection. Figure 10-2 shows the menu path used to access the Phone Numbers option.

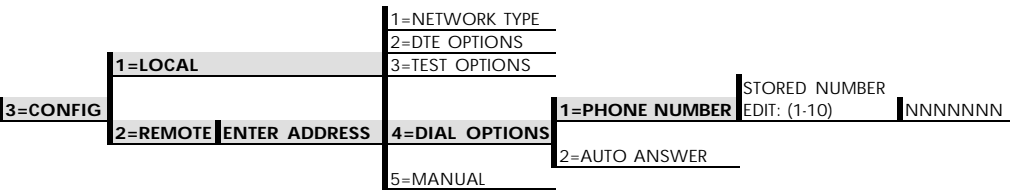


Figure 10-2
Path to Storing Numbers Option

See the chapter *Configuring Dial Options* for more information.

Enter Dial #

This option allows you to enter a phone number of up to 36 digits for the DSU III AR to dial.

Redial Last #

Selecting this option redials the last phone number entered.

Chapter 11

Testing and Troubleshooting

TEST OVERVIEW

The DSU III AR performs a variety of diagnostic functions that isolate portions of the circuit to identify the problem source. Tests may be initiated and terminated from the front panel or the DTE interface. In asynchronous mode, AT commands can control the testing from the DTE interface. For synchronous operation, V.25 bis commands can provide test control.

The unit also responds to standard DDS network tests initiated from telco test centers. In addition, it can run several tests such as local and remote loopbacks to aid in problem isolation.

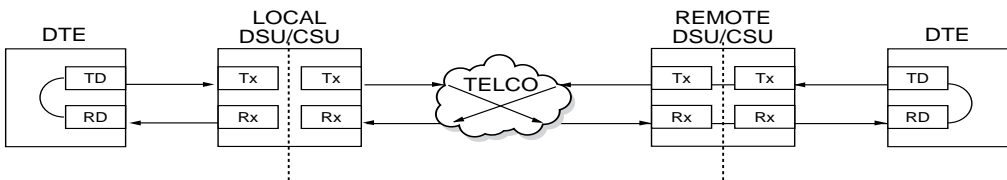


Figure 11-1

Normal Operation Before Initiating Loopback Test



CAUTION

All diagnostic tests disrupt data flow.

Initiating a Test

Initiate tests using the following procedure:

1. Select Test from the main menu by pressing 2, then press **Enter**.
2. Specify local, remote, or AR testing by selecting the corresponding number, followed by **Enter**.
3. Use the **Up** and **Down** Arrows to view test options.
4. Select a test from the available options by pressing the corresponding number, followed by **Enter**.

The example in Figure 11-2 shows the menu path for initiating a local DTE and Loop test.

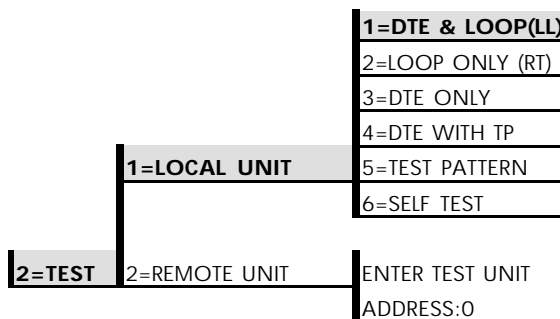


Figure 11-2
Initiating a Test

Once a test is initiated **Please Wait** is displayed briefly followed by the status screen.

Test Status Display

The Test Status display appears automatically during a test. The Test Status display is similar to the status screen described in the chapter *Status Selection*, with additional prompts for the type of test and the number of errors (for tests with a test pattern).

Figure 11-3 shows an example of a Test Status Display for a test with a test pattern.

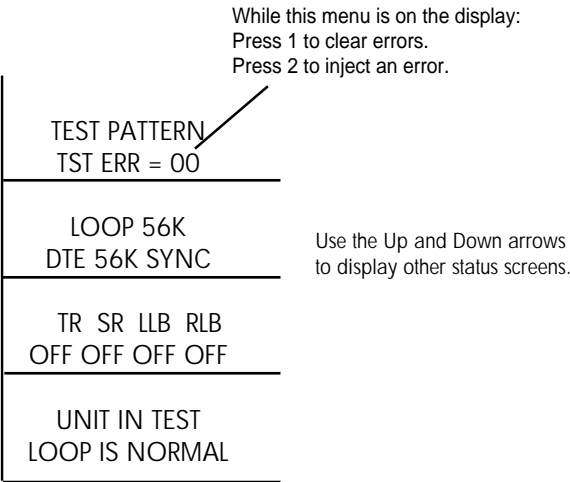


Figure 11-3
Sample Test Status Displays

Exiting a Test

During a test, press **Quick** to access the Exit Test/Display Status menu or press **Cancel** to return to the Main menu. The Exit Test/Display Status menu provides the following options, which are available only after a test has been initiated:

Exit Test	Exits the current test and returns to the Main menu.
Display Status	Reenters test display.

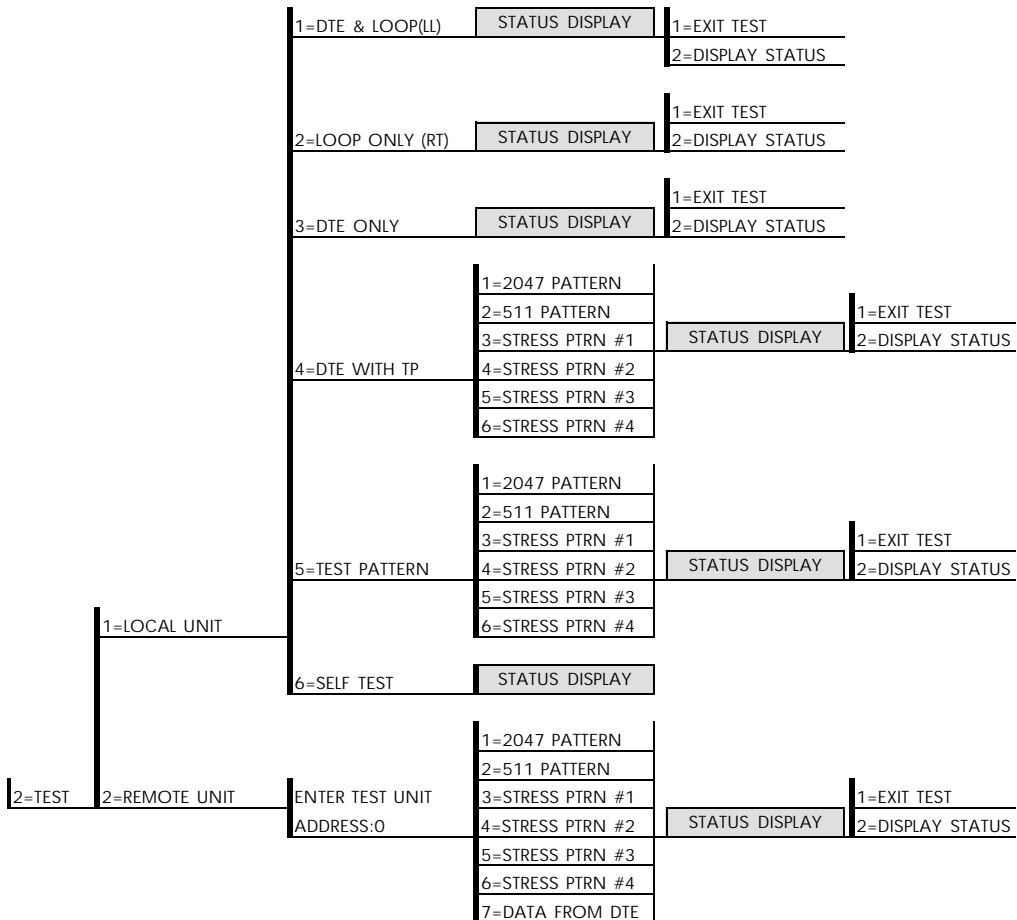


Figure 11-4
Complete Test Menu

TROUBLESHOOTING

This section is intended to provide a quick and easy means of diagnosing suspected problems associated with local or remotely attached ADTRAN DSU/CSUs. Two separate troubleshooting sections are provided; one focuses on new installs, the other on existing circuits.

Messages from the DSU/CSU

The DSU III AR displays messages on the LCD display and LEDs concerning the status of the unit and the local loop. If the Alarm LED is *On*, one or more of the messages shown in Table 11-A is displayed on the LCD.



NOTE

*The Status menu must be selected in order for the unit to display status messages. Pressing **Quick** returns to the main menu where **STATUS** can be selected.*

Table 11-A
Messages from the DSU/CSU

Message	Meaning	Probable Cause	Action
LOOP IS NORMAL	Good local loop signal being received from the telco.	Indicates good local loop.	No action required; unit properly connected to telco circuit.
OPEN LOOP	Unit not receiving a signal from the telco.	Bad telco cable from the DSU to telco jack or bad circuit to telco.	Replace telco cable from DSU to wall jack. If a problem persists, contact telco provider.
NO RX SIGNAL	Unit detects sealing current but no data signal from telco.	Bad conductor in telco cable from DSU to telco jack or bad circuit to telco.	Replace telco cable from DSU to wall jack. If a problem persists, contact telco provider.
OOS/OOF FROM NET	Unit detects an Out of Service or Out of Frame condition from the telco.	Telco is having problems with DDS circuit or remote unit is turned off or disconnected.	Check remote unit. Contact telco service provider. If a problem persists, contact telco provider.
CHECK TELCO LINE	Transmit/receive pair reversal detected.	Telco wall jack wired incorrectly.	Switch wire pairs in wall jack or contact telco service provider.
TEST FROM TELCO	Telco activated a loopback to test the DDS circuit.	Telco is testing circuit.	Wait until test is complete or contact telco service provider.

Troubleshooting New Installs

Before initiating diagnostics on a newly installed unit and/or DDS circuit and before contacting ADTRAN Technical Support, please check the items in Table 11-B to ensure the unit is configured properly.

After verifying the items listed in Table 11-B the unit should operate properly and display the following:

**DATA MODE
LOOP IS NORMAL**

If a status message other than **DATA MODE LOOP IS NORMAL** is shown, begin performing diagnostics described in the section *Test Sequence for Troubleshooting New Installs or Existing Circuits*.

Table 11-B
Troubleshooting New Installs

Configuration Item to Check	Option Selection	Action
DTE Type	RS-232 or V.35	Select the type of DTE interface option to connect to the DSU/CSU from the configuration menu.
Loop Rate	Auto, 2.4 to 64 kbps	Select the DDS loop rate of the DDS circuit from the configuration menu.
Data Format	Async or Sync	Select the type of data to be used from the configuration menu.
DTE Cable	N/A	Verify DTE cable connection to the proper DTE connector on the DSU/CSU.
Telco Cable	N/A	Verify the telco cable is securely connected to the DSU/CSU and wall jack.
Power the unit Off and then On.	N/A	Verify the unit passes self test during power-up (displayed on the LCD).

Test Sequence for Troubleshooting New Installs or Existing Circuits

If your DSU

Do this...

is suspected of having
mine problems

Perform a **Self Test** to deter-
mine the unit is in good health.

is receiving excessive errors
Perform a **DTE with Test Pattern**
requiring retransmission
to determine if the unit's internal
of data

transmitter and receiver is
operating error free.

is receiving excessive
errors requiring
the retransmission of data

Perform a **Remote Test** to
verify the connection between
local and remote unit is error
free. Run the test using all
available test patterns.



If an external BERT tester is available these additional tests may be performed:

- DTE & Loop Test
- DTE Only Test
- Loop Only Test

If the unit fails any of these tests or the problem has not been determined, contact ADTRAN Technical Support; see inside back cover.

LOCAL UNIT DIAGNOSTICS

The local DSU III AR can perform six different tests; see Table 11-C.

Table 11-C
Test AT Commands

Front Panel Display	AT Command	Description
DTE & Loop (LL)	&T10	TD/RD and RX/TX Loopbacks
Loop Only (RT)	&T11	RX/TX Loopback at Network Interface
DTE Only	&T1	TX/RX Loopback at DTE Interface
DTE with TP	&T8	RX/RX Loopback with Test Pattern
Test Pattern	&T9	Transmit/Receive Test Pattern
Self Test	Z	Check Internal Components (Resets Unit)
Exit Test	&T0	Stops test, returns to data mode
TD = Customer Transmit Data RD = Customer Receive Data TX = Network Transmit Data RX = Network Receive Data		

The test patterns shown in Table 11-D are available for the DTE with Test Pattern and Test Pattern tests.

Table 11-D
DTE With Test Pattern Commands

Front Panel	AT Command	Description
1=2047 PATTERN	_T0&T8	Standard 2047 random data pattern.
2=511 PATTERN	_T1&T8	Standard 511 random data pattern.
3=STRESS PTRN #1	_T2&T8	Stress pattern with alternating high and low ones densities. Repeated pattern of 100 octets: 1111 1111; followed by 100 octets: 0000 0000.
4=STRESS PTRN #2	_T3&T8	Stress pattern with alternating medium and low ones densities. Repeated pattern of 100 octets: 0111 1110; followed by 100 octets: 0000 0000.
5=STRESS PTRN #3	_T4&T8	Stress pattern with medium ones density. Continuous series of octets: 0011 0010.
6=STRESS PTRN #4	_T5&T8	Stress pattern with low ones density. Continuous series of octets: 0100 0000.

DTE & Loop (LL)

Test Description

The DTE & Loop test splits the DSU III AR into two separate DTE and loop interface sections and then loops the receive data of each interface back to its respective transmit data. The DTE & Loop test provides a bidirectional loopback at the DSU/CSU. Figure 11-5 illustrates the loopback points and the signal paths for this test.

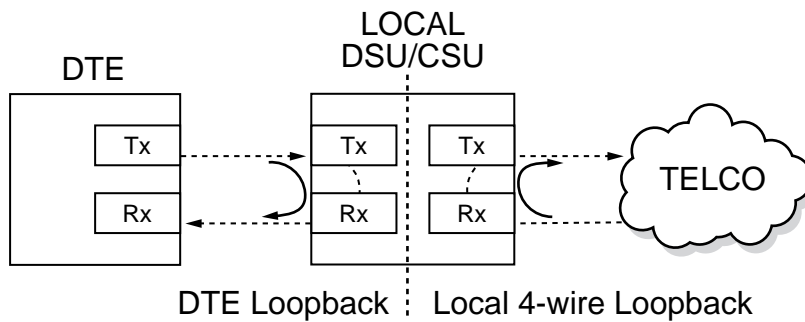


Figure 11-5
DTE & Loop Test

Test Purpose

The DTE & Loop test is used for the following purposes:

- Verify integrity of the DTE interface and cable.
- Provide a loopback for network tests.

Initiating

Follow the menu path outlined in Figure 11-6 to initiate a DTE & Loop Test.

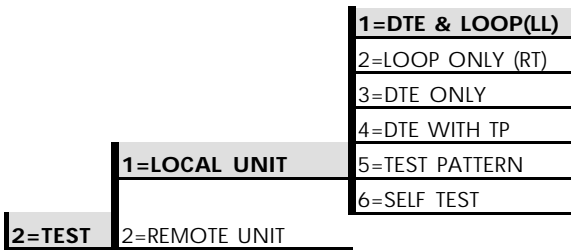


Figure 11-6
Initiating a DTE & Loop Test

Interpreting Test Results

A BERT tester must be used to interpret the test results of a DTE & Loop test.

Loop Only (RT)

The Loop Only (RT) test allows the loop interface and a major portion of the DTE interface for the local DSU III AR to be tested from the remote site over the actual communication circuit.

Figure 11-7 illustrates the loopback point and the signal paths for this test.

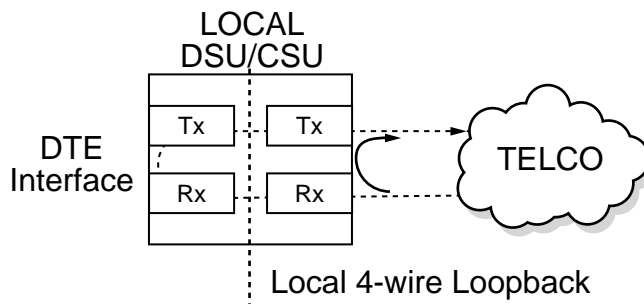


Figure 11-7
Loop Only Test

Test Purpose

The Loop Only test is used to provide a loopback for network tests.

Initiating

Follow the menu path outlined in Figure 11-8 to initiate a Loop Only test.

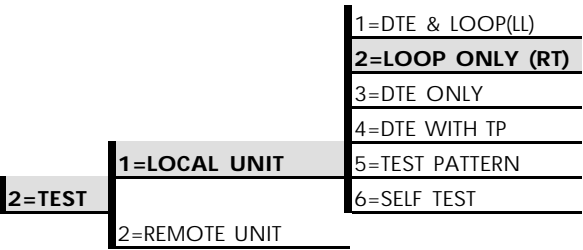


Figure 11-8
Initiating a Loop Only Test

Interpreting Test Results

The Loop Only test is used for the purpose of looping the DDS circuit back to the telco. No test results are available from the local DSU III AR.

DTE Only

The DTE Only test provides a method for testing both the DTE interface drivers and receivers of the local DSU III AR plus its loop transmitter and receiver. For this test, the loop transmit data is connected to the loop receive data at a point close to the physical network interface. This test can be used to verify proper operation between the local DTE and the local DSU III AR.



NOTE

When this test is implemented, the far unit receives an OOS/OOF message from the network and enters an alarm state.

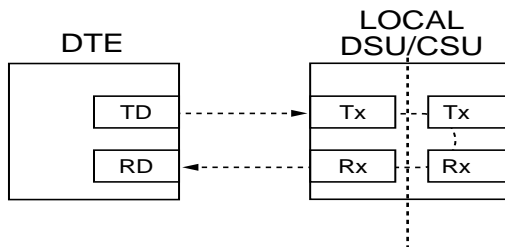


Figure 11-9
DTE Only Test Diagram

Test Purpose

The DTE Only test is used for the following purposes:

- Verify integrity of the DTE interface.
- Verify integrity of connection between DTE and DSU III AR.

Initiating

Follow the menu path outlined in Figure 11-10 to initiate a DTE Only test.

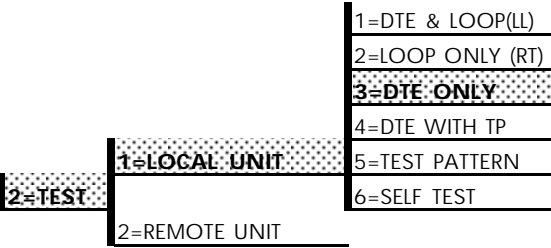


Figure 11-10
Initiating a DTE Only Test

Interpreting Test Results

A BERT tester must be used to interpret the test results of a DTE Only test.

DTE With Test Pattern

The DTE with TP (test pattern) test is similar to the DTE Only test described previously except the test pattern is generated using the DSU/CSU internal test pattern generator. This test can be used to detect deficiencies within the internal drivers and receivers of the DSU III AR. Figure 11-11 illustrates the loopback point and the data paths for this test.

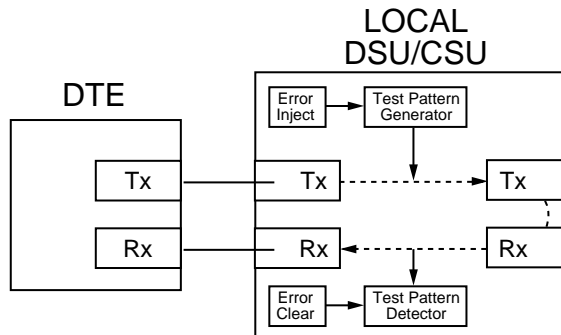


Figure 11-11
DTE with Test Pattern

Test Purpose

A DTE test using a test pattern is used for the following purposes:

- Verify integrity of the DTE interface.
- Verify integrity of connection between DTE and DSU III AR.

Initiating

Follow the menu path outlined in Figure 11-12 to initiate a DTE Test using a Test Pattern.

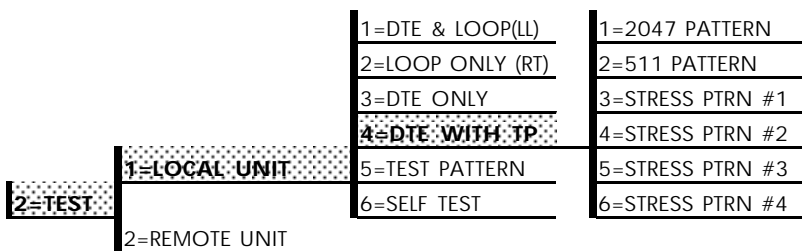


Figure 11-12
Initiating a DTE Test with Test Pattern

Interpreting Test Results

If the unit is functioning properly, the DSU III AR displays:

DTE WITH TP
TST ERR=XX

The first line of the display indicates the type of test being performed while the second line of the display indicates the number of errors accumulated by the test pattern detector.

If errors occur during this test, the test error count can be reset to zero by pressing 1. To verify proper operation of this test, single bit errors can be injected into the transmitted test pattern by pressing 2. These errors appear on the TEST ERR display.

Test Pattern

The Test Pattern option converts the local DSU III AR into a BERT tester for the purpose of testing the DDS circuit. When this test is used, the remote DSU/CSU must be in loopback or transmitting a test pattern. Figure 11-13 illustrates the data paths for this mode.

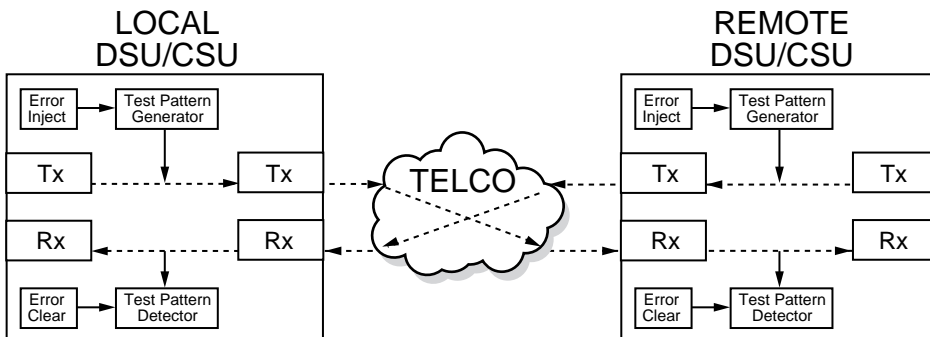


Figure 11-13
Test Pattern Only

Test Purpose

Testing using a test pattern is used for the following purposes:

- Transmits user selected test pattern using an internal test pattern generator, and compares the received data using internal test pattern detector to detect if there are any errors on the DDS circuit
- Injects errors and verifies the unit transmits data across the communication circuit to the remote unit.
- Helps determine from which direction the circuit is receiving errors.

Initiating

Follow the menu path outlined in Figure 11-14 to initiate a test using a test pattern.

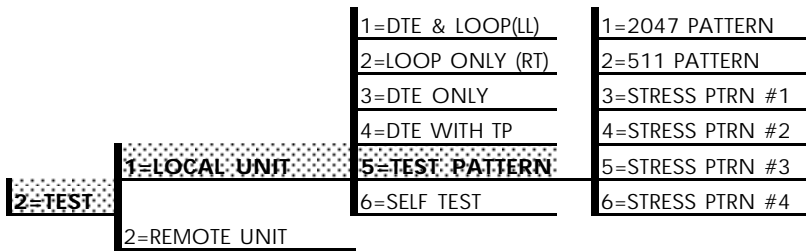


Figure 11-14
Initiating a Test Using a Test Pattern

Interpreting Test Results

If the unit is functioning properly, the display should show the following:

TST ERR = 00

Self Test

The Self Test verifies current operation of the DSU III AR. It can be performed at any time and is recommended if there is any question about the DSU's health.

Test Purpose

To determine if the DSU is functioning properly.

Initiating

Follow the menu path outlined in Figure 11-15 to initiate a test using a test pattern.

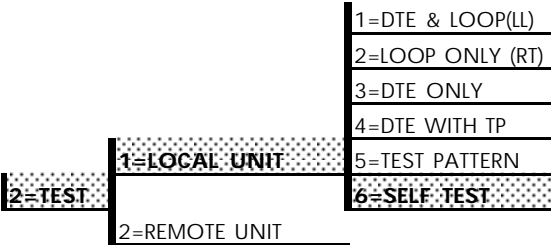


Figure 11-15
Initiating a Self Test

Interpreting Test Results

Once Self Test is activated, the LEDs cycle on and off as the system runs the self test. A pass or fail status will be displayed on the LCD along with a checksum indicating the current firmware revision.

REMOTE UNIT DIAGNOSTICS

A remote DSU III AR can perform seven different tests; see Table 11-E.

Table 11-E
Remote Tests and AT Commands

Front Panel	AT Command	Description
1=2047 PATTERN	_T0&T7	Standard 2047 random data pattern
2=511 PATTERN	_T1&T7	Standard 511 random data pattern
3=STRESS PTRN #1	_T2&T7	DDS Stress Pattern #1
4=STRESS PTRN #2	_T3&T7	DDS Stress Pattern #2
5=STRESS PTRN #3	_T4&T7	DDS Stress Pattern #3
6=STRESS PTRN #4	_T5&T7	DDS Stress Pattern #4
7=DATA FROM DTE	&T6	Data from DTE

The Remote Unit submenu allows a remotely installed DSU to be placed into loopback. There are six test patterns to choose from or Data from the DTE may be selected.

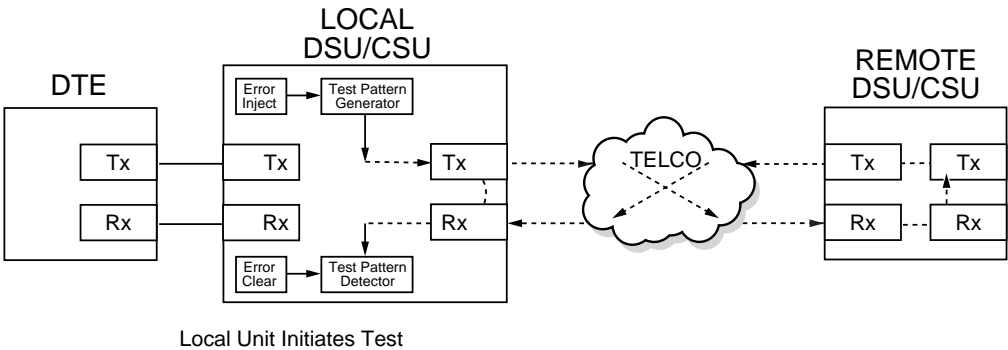


Figure 11-16
V.54 RDL with Test Pattern

Test Purpose

Test the local DSU, the DDS circuit, and remote DSU.

Initiating

Follow the menu path outlined in Figure 11-17 to place a remote DSU III AR into loopback.



Figure 11-17

Initiating a Remote Test

After selecting Remote Unit from the menu, the following prompt is displayed for entering the address for the remote unit:

**ENTER TEST UNIT
ADDRESS:XX**

Use the number keys to type the address of the remote DSU, then press **Enter**. The test pattern selections are displayed. After a test pattern is selected, the system briefly displays **Please Wait**.

Test Results

If the test is successful the status menu is displayed. If not, **Unable to Execute Test** is displayed.

Interpreting Test Results

If the unit is functioning properly, the display should show:
TST ERR = 00.

Chapter 12

Status Selection

STATUS DISPLAY

The STATUS selection displays two lines at a time of the current operational status of the network and the DTE interfaces.

After 30 seconds of no front panel operation, the DSU III AR automatically reverts to the status display. Examples of possible status displays are shown in Figure 12-1.

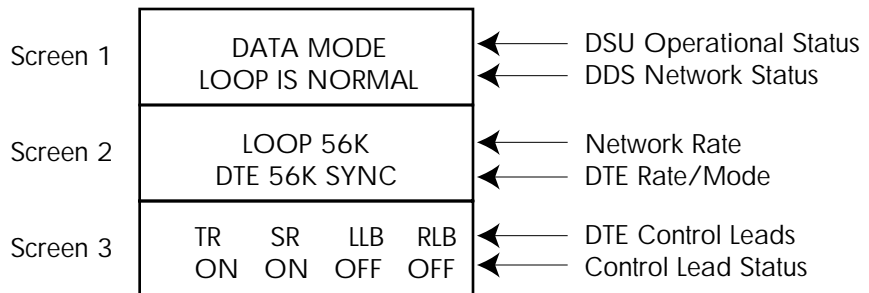


Figure 12-1
Examples of Status Displays

DSU Operational Status

Possible messages include:

DATA MODE

The unit is ready to pass data if network status is normal.

UNIT IN TEST

The unit is in test. Scroll to next status menu for test type.

DTE COMMAND MODE

The unit is in command mode from the DTE (AT or V.25 bis).

In SW56 mode the following messages are possible:

IDLE

The unit is idle, waiting for a call or a dial command.

INCOMING CALL

The unit has detected an incoming call.

DIALING

The unit is dialing a number.

DDS Network Status

This line of the display shows the current status of the dedicated network interface. Possible messages include:

LOOP IS NORMAL

The DSU is connected to the dedicated line. No line irregularity detected.

OPEN LOOP

The DDS physical connection has been broken.

NO RX SIGNAL

The DSU III detects sealing current but no receive signal.

CHECK TELCO LINE

The DSU III detects a possible reversal in the Rx and Tx pairs.

OOS/OOF FROM NET

The DSU III detects an abnormal condition code from the network.

NO FRAME SYNC

The DSU III cannot sync on the signal from the telco (64k or secondary channel mode only).

TEST FROM TELCO

The DSU III is in a test initiated from the telco. Scroll to next status menu for test type.

RATE ADAPTING

The DSU III is attempting to determine the loop rate provided from the telco.

In SW56 mode the following messages are possible:

ANSWERING CALL

The DSU III is answering an incoming call.

NO WINK FROM CO

The DSU III did not see a proper signal from the network during dialing.

CALL DISCONNECT

The SW56 was terminated.

Network Rate

The message displayed on this line of the Status display screen indicates the rate of the service configured for the network.

DTE Rate/Mode

The message displayed on this line of the Status display screen indicates the DTE data rate and format.

DTE Control Leads and Status

Four additional DTE interface leads are displayed with their current status (on or off) displayed below them. The leads are identified as follows:

- TR - Data terminal ready
- SR - Data set ready
- LLB - Local loopback
- RLB - Remote loopback

Appendix A

AT Commands

Table A-A shows the AT commands available for the DSU III AR.

Table A-A
AT Commands

Command	Title	Default
A/	Re-execute Command	none
ATA	Answer	none
ATDn	Dial Number	none
ATE	Echo Command	1
ATH	Hang Up Call	none
ATO	Go Online	none
ATQn	Result Code Display	0
ATSn?	Read S-Register	none
ATSn=x	Write to S-Register	none
ATVn	Result Code From	1
ATZ	Reset	none
AT&Cn	DCD Option	0
AT&Dn	DTR Option	0
AT&Fn	Restore Factory Options	none
AT&Kn	Flow Control	none
AT&Ln	Network Type	0
AT&Qn	DTE Data Format	0
AT&Rn	CS Options	0
AT&Sn	SR Options	0
AT&Tn	Test Commands	0
AT&V	View Current Configuration	none
AT&Wn	Store User Profile	0

Table A-A (Cont'd)
AT Commands

Command	Title	Default
AT&Xn	Transmit Clock	0
AT&Yn	Power Up User Profile	0
AT&Zn=x	Store Phone Number	none
AT%Bn	Loop Rate Select	0
AT%Kn	DTE Rate Select	
AT%P	Password Control	0
AT%P=x	Password Entry	0
T%P>x	Password Verify	0
AT%R	Initiate Remote Config.	
AT%Tn	Anti-stream Option	0
AT_An	LLB Control	0
AT_Cn	SR Control During Test	0
AT_Dn	RTS-CTS Delay	0
AT_Fn	Scrambler Control	0
AT_Jn	Auto Answer Enable/Disable	0
AT_N=xx	Set Network Address	none
AT_Pn	Front Panel Enable/Disable	0
AT_Rn	LB Enable/Disable	0
AT_S=xx	Set Serial Number	none
AT_Tn	Select Test Pattern	0
AT_Xn	Clock Source Select	0
AT_Yn	Secondary Channel Rate Select	0

Appendix B

Default Configuration Profiles

DEFAULT CONFIGURATION PROFILES

The DSU III AR contains four different user profiles (sets of configurations options) stored in read only memory (see Table B-A). The unit is shipped from the factory with profile 1 loaded into the nonvolatile configuration memory. See the chapters *Installation* and *Manual Command* for more information.

Profile 1

Profile 1 is configured for a 56 kbps, synchronous, point-to-point or dial up operation with a V.35 connector.

Profile 2

Use profile 2 for a 56 kbps, synchronous, point-to-point or dial up operation with an EIA-232 connector.

Profile 3

Use profile 3 for a SW56, asynchronous operation with CS and CD forced on.

Profile 4

Use profile 4 for a SW56 operation with DTR idle when off.

Table B-A
Default Configuration Profiles

	Profile Numbers			
	(00) 1	(01) 2	(02) 3	(03) 4
Manual Command				
Escape Character	43=2BH	43=2BH	43=2BH	43=2BH
CR Character	13=ODH	13=ODH	13=ODH	13=ODH
LF Character	10=0AH	10=0AH	10=0AH	10=0AH
BS Character	8	8	8	8
SW56 Abort Call Timer	50=32H	50=32H	50=32H	50=32H
Escape Guard Timer	50=32H	50=32H	50=32H	50=32H
Command Echo	Enable	Enable	Enable	Enable
Result Code	Enable	Enable	Enable	Enable
Long or Short Code	Long	Long	Long	Long
Test Pattern Type	2047	2047	2047	2047
CS Delay	Short	Short	Short	Short
DTR Recog. Delay (x2.5ms)	3	3	3	3
DTR Command Timeout (x1 sec)	8	8	8	8
Front Panel En/Dis	Enable	Enable	Enable	Enable
AT Password Control	Disable	Disable	Disable	Disable
Network Options				
Loop Rate	AUTO	AUTO	56k	AUTO
Network Address	0	0	0	0
Remote Conf. En/Dis	Enable	Enable	Enable	Enable
Network Type	Dedicated	Dedicated	AT&T/MCI SW56	AT&T/MCI SW56
Clock Source	From Network	From Network	From Network	From Network
DTE Options				
Remote DSU Address	0	0	0	0
DTE Rate (56/64k loop)	Same as Loop	Same as Loop	Same as Loop	Same as Loop
Scrambler Mode	OFF	OFF	OFF	OFF
Connector Type	V.35	EIA232	EIA232	V.35
DTE Data Format	SYNC	SYNC	ASYN	SYNC
DTE Command Options	DIS	DIS	DIS	DIS
Transmit Clock	Normal	Normal	Normal	Normal
CS Options	Follow RS	Follow RS	Forced On	Follow RS
Anti-stream Timer	Timer Off	Timer Off	Timer Off	Timer Off
CD Options	Normal	Normal	Forced On	Normal
TR Options	Ignored	Ignored	Ignored	Idle When Off
SR Options	Off Test+OOS	Off Test+OOS	Off Test+OOS	Off Test+OOS
Secondary Channel Rate	OFF	OFF	OFF	OFF

Table B-A (Cont'd)
Default Configuration Profiles

	Profile Numbers			
	(00) 1	(01) 2	(02) 3	(03) 4
Test Options				
Test Timeout	Off	Off	Off	Off
RDL En/Dis	RDL Accepted	RDL Accepted	RDL Accepted	RDL Accepted
EIA Controlled LLB	Disable	Disable	Disable	Disable
EIA Controlled RLB	Disable	Disable	Disable	Disable
Dial Options				
Auto Answer	Enable	Enable	Enable	Enable

Appendix C

DSU to Modem Interconnect

MODEM TAIL CIRCUIT APPLICATION

A DSU to modem interconnect diagram for a modem tail circuit application is shown in Figure C-1.

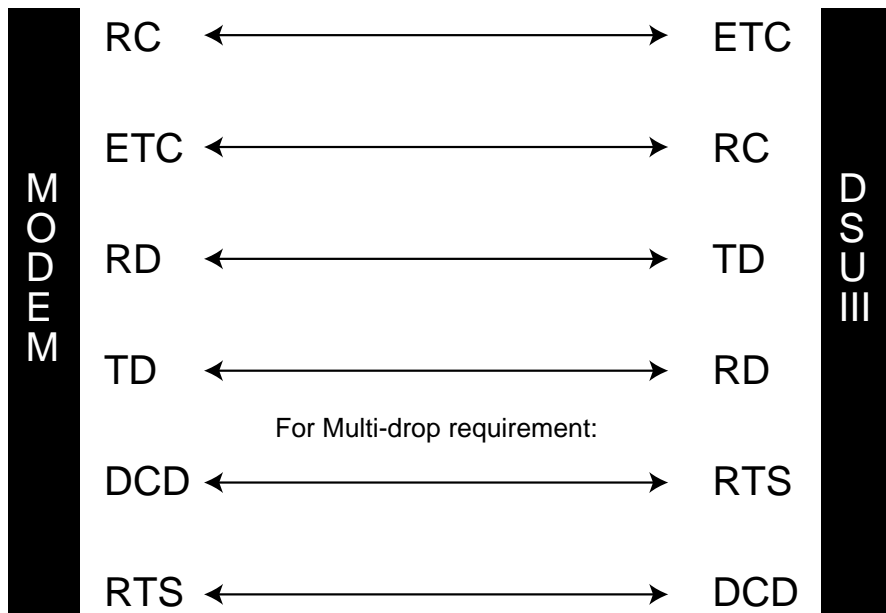


Figure C-1
DSU to Modem Interconnect

Appendix D

EIA-232 Connector

56 AND 64 KBPS APPLICATION

The EIA-232 connector, shown in Figure D-1, may be used for 56 and 64 kbps applications. Using the External clock option and this cable should eliminate data errors caused by excessive delays in the DTE transmit clock receiver and transmit data driver. When creating this cable at the DTE interface EIA-232 connector, tie transmit clock lead (TC) to external transmit (ETC) as shown.

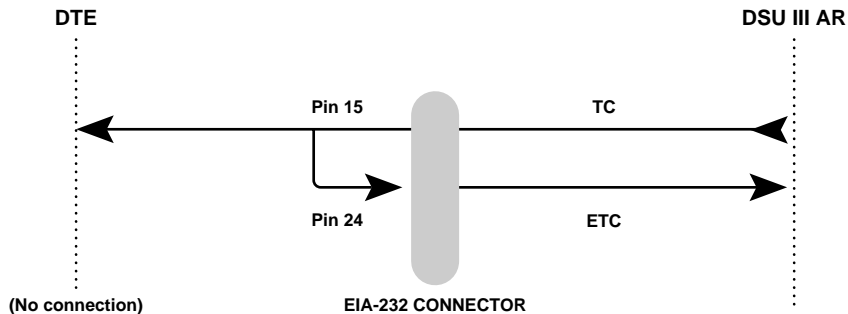


Figure D-1
EIA-232 Connector

Appendix E

Specifications Summary

SPECIFICATIONS AND FEATURES

This section describes the standard specifications and features incorporated in the DSU III AR.

Operating Modes

Dedicated DDS (point-to-point, multipoint)

DDSII DDS with secondary channel (point-to-point, multipoint)

Switched 56 (4-wire)

Data Rates

Dedicated mode service rate: 2.4, 4.8, 9.6, 19.2, 38.4, 56, and 64 kbps

Switched mode service rate: 56 kbps

DTE Rates

DTE rates match service rates

DTE-to-loop rate matching in both dedicated and switched modes

Synchronous rates: 2.4, 4.8, 9.6, 19.2, 38.4, 56, and 64 kbps

Asynchronous rates: 2.4, 4.8, 9.6, 19.2, 38.4, and 57.6 kbps

FCC Approval

FCC part 15, class A and part 68

DTE Interfaces

Both EIA-232 and V.35 electrical and physical DTE interfaces

Data Buffering

Internal slack buffer

Clocking

Normal DDS or private network tributary
(slaved to network receive clock)

Private network master (internal clock)

Normal DDS with tail circuit

Private network master (slaved to external clock)

Switched Mode Dialing Options

Stored number

Front panel keypad

DTR dialing of stored number

In-band AT commands

V.25 bis in-band dialing

Diagnostics

Network: CSU and DSU loopbacks

User: Local DTE and loop, remote V.54

Test Patterns: 2047, 511, DDS, stress patterns 1 to 4

Line Requirements

Loop transmission parameters as defined in:

AT&T PUB 62310: Dedicated DDS

AT&T PUB 41468: Switched 56

SPRINT TS 0046: Switched 56

Line Interface

RJ-48S, 4-wire, full duplex

Receiver Sensitivity

-45 dB at all rates

Environment

Operating Temperature: 0°C to 50°C (32°F to 122°F)

Storage Temperature: -20°C to 70°C (-4°F to 158°F)

Relative Humidity: Up to 95% non-condensing

Dimensions: 2.25"H, 8.75"W, 10.25"D

Weight: 3 lbs

Power

115 VAC, 60 Hz, 8 W

MTBF

439754 hours

CLEI

DDSUJ602AA

Glossary

2047

A pseudorandom test pattern that is repeated every 2047 bits; used to test DSU/CSUs.

511

A pseudorandom test pattern that is repeated every 511 bits; used to test DSU/CSUs.

4-wire switched 56

An AT&T proprietary 56/64 kbps switched digital data service offered by telco service providers and delivered to users over 4 copper wires. Compatible with the ADTRAN DSU III S4W and with the DSU III TDM 4-wire Switched 56 TDM option.

asynchronous

A method of data transmission which allows characters to be sent at irregular intervals by preceding each character with a start bit, followed by a stop bit.

AT commands

Also known as the Hayes® Standard AT Command Set. A language that enables PC communications software to control asynchronous and Hayes-compatible modems. "AT" is short for attention.

AWG

American Wire Gauge. Standard measuring gauge for nonferrous conductors (i.e. non-iron and non-steel). The higher the AWG number, the thinner the wire.

BERT

Bit error rate test. A known pattern of bits is transmitted and the errors received are counted to figure the bit error rate. The idea is to measure the quality of data transmission. The bit error rate is the ratio of received bits that are in error, relative to the number of bits received (usually expressed in a power of 10).

bisync

Bisynchronous transmission. A half-duplex, character-oriented, synchronous data communications transmission method originated by IBM in 1964.

carrier detect

CD. A signal generated by a DCE (a modem or DSU/CSU). CD informs the DTE device if the DCE is receiving a carrier signal from the line. If the CD light is on, the device is speaking to another device.

channel service unit

CSU. A DCE device used to connect a digital phone line (T1 or Switched 56 line) coming in from the phone company to either a multiplexer, channel bank, or directly to another device producing a digital signal (for example, a digital PBX, a PC, or data communications device). A CSU performs certain line-conditioning and equalization functions, and responds to loopback commands sent from the central office. A CSU regenerates digital signals, monitors them for problems, and provides a way of testing the digital circuit.

clocking

An oscillator-generated signal that provides a timing reference for a transmission link. A clock provides signals used in a transmission system to control the timing of certain functions. The clock has two functions: (1) to generate periodic signals for synchronization, and (2) to provide a time base.

controller card

The card installed in slot 1 of an ADTRAN SMART 16 shelf, used to connect a VT 100 terminal or DATAMATE for configuring SMART 16 DSU/CSU products.

customer premise equipment

CPE. All telecommunications terminal equipment located on the customer premises, including telephone sets, private branch exchanges (PBXs), data terminals, and customer-owned coin-operated telephones.

clear to send

CTS (also called CS). A signal on the DTE interface indicating that the DCE is clear to send data.

DATAMATE

An ADTRAN designed and manufactured device that provides a hand-held means of configuring the SMART 16 shelf. The DATAMATE plugs into the front of the controller card and provides a 2x16 LCD display and full numeric keypad.

data service unit

DSU. A device designed to transmit and receive digital data on digital transmission facilities.

dataphone digital service

DDS (also called Digital Data System). A private line digital service, for transmitting data end-to-end at speeds of 2.4, 4.8, 9.6, and 56 kbps and in some cases 19.2, 38.4, or 64 kbps. The systems can use central hub offices for obtaining test access, bridging legs of multipoint circuits, and cross connecting equipment. DDS is offered on an inter-LATA basis by AT&T and on an intra-LATA basis by the Bell operating companies.

data set ready

SR. A signal on the EIA-232 interface that indicates if the communications is connected and ready to start handshaking control signals so communications can begin.

data terminal equipment

DTE. In the EIA-232C standard specification, the EIA-232C is connected between the DCE and a DTE. The main difference between the DCE and the DTE is that pins two and three are reversed.

dB

Decibel. A unit of measure of signal strength, usually the relation between a transmitted signal and a standard signal source.

DTE to loop rate matching

A feature designed into ADTRAN DSU/CSU products that allows slower DTE devices to communicate over 56/64 kbps digital circuits.

DTR

Data terminal ready. A control signal sent from the DTE to the DCE that indicates the DTE is powered on and ready to communicate.

EIA-232

A set of standards specifying various electrical and mechanical characteristics for interfaces between computers, terminals, and modems. Defines the mechanical and electrical characteristics for connecting DTE and DCE data communications devices. It defines what the interface does, circuit functions, and their corresponding connector pin assignments. The standard applies to both synchronous and asynchronous binary data transmission.

EIA-366

An EIA interface standard for autodialing.

FCC part 15 of class A

Radiated and conducted emissions standards set for commercial and industrial use.

FCC part 15 of class B

Radiated and conducted emissions standards set for residential use.

FCC part 68

FCC Rules and regulations intended to provide protection of the telephone network from harm caused by connection of equipment to the network.

full duplex

A circuit designed to transmit and receive data simultaneously.

half duplex

A circuit designed to both transmit and receive data, but not at the same time.

in-band

Signaling (dialing, diagnostics, management, configuration, etc.) over the same channel used for data.

ISDN

Integrated Services Digital Network. A network architecture that enables end-to-end digital connections. The network supports diverse services through integrated access arrangements and defines a limited set of standard, multipurpose interfaces for equipment vendors, network providers, and customers. Interworking with a public switched telephone network is retained.

LATA

Local Access and Transport Area. One of 161 local geographical areas in the US within which a local telephone company may offer telecommunications services - local or long distance.

local DTE and loop test

A test initiated by the user that loops the DSU to the central office and back. This is used to test the local DSU's DTE and local loop.

multi-point

A communications arrangement in which multiple devices share a common transmission channel, although only one may transmit at a time. Also referred to as multi-drop.

nonvolatile memory

Memory that is not lost when the power is shut off.

out-of-band

Signaling that is separated from the channel carrying information (voice, data, video, etc.). Typically the separation is accomplished by a filter. The signaling includes dialing and other supervisory signals.

parity bit

A binary bit appended to an array of bits to make the sum of all the bits always odd or always even.

point-to-point

A private circuit, conversation, or teleconference in which there is one person at each end, usually connected by some dedicated transmission modem.

read only memory

ROM. A memory device which is programmed at the factory and whose contents thereafter cannot be altered.

remote digital loopback

RDL

remote configuration

A feature designed into ADTRAN DSU/CSU products that allows a remote DSU/CSU to be configured from a local DSU/CSU or VT 100 compatible terminal.

scrambler

A device that transposes or inverts signals, or otherwise encodes a message at the transmitter, to make it unintelligible at a receiver not equipped with an appropriately set descrambling device.

synchronous data link control

SDLC. A bit-oriented synchronous communications protocol developed by IBM where the message may contain any collection or sequence of bits without being mistaken for a control character.

service

The provision of telecommunications to customers by a common carrier, administration, or private operating agency using voice, data, and/or video technologies.

simple network management protocol

SNMP. A control and reporting scheme widely used to manage devices from different vendors. SNMP operates on top of the Internet protocol.

start bit

In asynchronous data communications, characters are sent at arbitrary intervals. In order for the computer to make sense of what is coming in, each character starts its transmission with a start bit. This way if the first bit of the character to be transmitted is a 0, the fact of receiving a start bit (always a 1) tips off the

computer that the next bit is part of a transmitted character and not just part of the inter-character gap. See stop bit.

stop bit

The stop bit is an interval at the end of each asynchronous character that allows the receiving computer to pause before the start of the next character. The stop bit is always a 0. See start bit.

switched

In regard to DSU/CSUs, the ability to perform the functions of establishing and releasing connections on a per call basis between two or more circuits, services, or communications systems. The DSU III S2W and DSU III S4W are examples of *Switched 56 DSU/CSUs*.

synchronous

Communications in which the timing is achieved by sharing a single clock. Each end of the transmission synchronizes itself with the use of clocks and information sent along with the transmitted data.

tail circuit

A feeder circuit, which may be digital or analog, that provides an access line to a digital or analog network.

UL

Underwriters Laboratories. A laboratory established by the National Board of Fire Underwriters that tests equipment, materials, and systems that may affect insurance risks, with special reference to fire dangers and other hazards to life.

V.25 bis

Automatic calling and answering command set including the ability to work with async, bisync, and HDLC devices. Provides a small subset of the functions of the Hayes Standard AT Command Set.

V.35

CCITT standard for trunk interface between a network access device and a packet network that defines signaling for data rates greater than 19.2 kbps.

VT 100

A non-intelligent terminal or terminal emulation mode used for asynchronous communications. Used to configure the ADTRAN SMART 16 Shelf.

Index

A

- alarm indication 24
- answer
 - AT command 97
 - call 94
- answering call 95
- anti-stream 50
 - AT command 50, 98
 - factory default 50
 - time 100
- AT commands 11, 69, 77, 97–98
 - answer 97
 - anti-stream 50
 - auto answer enable/disable 98
 - clear to send (CS) 49, 97
 - clock source 37
 - clock source select 98
 - data format 44
 - data set ready (SR) 54, 97
 - control during test 98
 - data terminal ready (DTR) option 97
 - data terminal ready (TR) 52
 - dial number 97
 - DTE
 - data format 97
 - rate 40, 98
 - echo command 97
 - EIA local loopback (LLB) 59
 - EIA remote loopback (RLB) 60
 - flow control 97
 - front panel 98
 - go online 97
 - hang up 97
 - initiate remote configuration 98
 - LLB control 98
 - loop rate select 98
 - network address 98
 - network type 97
 - password
 - control 98
 - entry 98
 - verify 98
 - phone number 62
 - power up user profile 98
 - re-execute command 97
 - reset 97
 - restore factory options 97
 - result code display 97
 - result code from 97
 - RTS-CTS delay 98
 - S register
 - read 97
 - write to 97
 - scrambler control 98
 - scrambler on/off 41
 - secondary rate 56
 - serial number 98

- test commands 97
- test pattern 98
- test timeout 58
- transmit clock 46, 98
- user profile 97
- view current configuration 97

- AT password control 100
- auto answer enable/disable
 - AT command 98
- auxiliary EIA-232 25

B

- back space character 100

C

- call disconnect 95
- cancel 21, 24
- carriage return character 100
- carrier detect (CD) 24, 51, 100
- check telco line 95
- clear to send (CS) 24, 48–49, 100
 - AT command 97
 - AT commands 49
- clock source 37
 - AT command 98
- clocking 108
- command echo 100
- configuration 10
 - dial backup 61–62
 - DTE options 39
 - local 27
 - network options 31
 - remote 27
 - test options 57–60
- configuration (CONFIG) 20
- configuration local (CNL) 14
- configuration menu 29
- configuration remote (CNR) 15
- connector

- EIA-232 105
- connector type 43
 - factory default 43
- customer service 4, 5

D

- data buffering 108
- data format 44
 - AT commands 44
 - factory default 44
- data invert option 42
- data mode 94
- data rates 107
- data set ready (SR) 96
 - AT commands 54
 - factory default 54
- data set ready (SR) control during test
 - AT command 98
- data terminal ready 96
- data terminal ready (TR)
 - AT commands 52
 - factory default 52
- DBU connection 92
- DDS network status 94
- default configuration profiles 99–101
- Diagnostics 108
- dial 20
- dial backup
 - configuration 61–62
- dial number
 - AT command 97
- dial options 27, 67–68
- dial up operation 99
- dialing 94
- dialing options 108
- digital data service (DDS) 1, 37
- down arrow 21, 24
- DSU operational status 94
- DSU to modem interconnect 103
- DTE & loop (LL) 79

DTE command mode 94
 DTE command option 45
 DTE connectors 25
 DTE data connection 8
 DTE data format 100
 AT command 97
 DTE interface 25, 69
 DTE interface parameters 27
 DTE interfaces 107
 DTE only 83
 DTE options 27
 DTE rate 39, 96, 100
 AT Commands 40
 factory default 39
 DTE rate same as the network 39
 DTE rate select
 AT command 98
 DTE rates 107
 for 56 kbps loop rate with no second-
 ary 40
 DTE status 96
 DTR command timeout 100
 DTR option
 AT command 97
 DTR recognize delay 100

E

echo command
 AT command 97
 EIA local loopback (LLB) 59
 AT commands 59
 EIA remote loopback (RLB) 60
 AT commands 60
 EIA-232 connector 105
 auxiliary 10
 pin assignments 8, 10
 EIA-232 interface 1
 enter 21, 23
 environment 109

escape character 100
 escape guard timer 100
 exit test 71
 external clock 46, 105

F

flow control 97
 front panel
 AT command 98
 enable/disable 100
 function keys 21

G

go online
 AT command 97

H

hang up
 AT command 97

I

incoming call 94
 initiate remote configuration
 AT command 98
 installation 5–17
 INV 14
 INVBL 14
 INVBM 14
 INVCU 14
 INVPS 14
 INVPV 14

L

LB enable/disable
 AT command 98
 LCD window 23
 LED
 description 24
 line feed character 100

- line interfaces 108
- line requirements 108
- LLB control
 - AT command 98
- local configuration 27
- local loopback 69, 96
- local unit
 - test 77
- long code 100
- loop only (RT) 81
- loop rate 21, 31, 100
 - AT command 98

M

- main menu 19, 20, 24, 71
- manual command 27, 63–65
- menu structure 19
- menu traversal 21, 22
- modem tail circuit
 - application 103
- modem tail circuit application 46, 103

N

- network
 - interface connection 7
 - interface parameters 27
- network address 34
 - AT command 98
- network options 21, 27, 31–37
- network rate 96
- network type
 - AT command 97
- no frame sync 95
- no Rx signal 94
- no wink from CO 95
- numeric keypad 23

O

- OOS/OOF from net 95

- open loop 94
- operating modes 107
- operation 19–25, 69–92

P

- password control
 - AT command 98
- password entry
 - AT command 98
- password verify
 - AT command 98
- phone number 61
 - AT command 98
 - AT commands 62
- pin assignments
 - auxiliary EIA-232 connector 10
 - line 1 connector 7
 - primary EIA-232 connector 8
 - primary V.35 connector 9
- point-to-point operation 42, 99
- power 109
- power cord 25
- power switch 25
- power up 6
- power up user profile
 - AT command 98
- primary DTE 8
- primary EIA-232 25
- primary V.35 25

Q

- quick 24

R

- rate adapting 95
- RDL
 - enable/disable 101
- re-execute command
 - AT command 97

- read S register 97
- rear panel 25
- receipt inspection 5
- receive data 24
- receiver sensitivity 108
- remote command 15
- remote configuration 27
 - AT commands 35, 36
 - enable/disable 35, 100
- remote loopback 69, 96
- request to send 24
- reset
 - AT command 97
- restore factory options
 - AT command 97
- result code 100
- result code display 97
- result code from
 - AT command 97
- return material authorization (RMA) 4

S

- S register
 - read 97
 - write 97
- scrambler control
 - AT command 98
- scrambler mode 100
- scrambler on option 42
- scrambler on/off 41
 - AT commands 41
 - factory default 40
- secondary channel 25, 55
 - connection 10
 - rate 100
 - services 25
- secondary rate 55–56
 - AT commands 56
 - factory default 55
- self test 89

- serial number
 - AT command 98
- shift 24
- short code 100
- specifications 107
- SR option 100
- SR options
 - AT command 97
- status 20
- store user profile
 - AT command 97
- SW56 abort call timer 100
- synchronous operation 69

T

- telco jack 25
- temperature 109
- test 20
 - DTE only 83
 - loop only 81
 - self 89
 - test pattern 87
- test commands 77
 - AT commands 97
- test from telco 95, 96
- test menu 72
- test mode manual 24
- test options 27
 - configuration 57–60
- test pattern 87
 - AT command 98
- test pattern type 100
- test timeout 57, 101
 - AT commands 58
- TR option 100
- transmit clock 46, 105
 - AT command 46, 98
 - timing source 100
- transmit data 24
- troubleshooting new installs 75

U

- unit dialing options 27
- unit test options 27
- up arrow 21, 24
- user profiles 27

V

- V.25 bis commands 12, 69
 - asynchronous option 13
 - bi-sync option 13
 - SDLC option 12
- V.35 connector 8, 9
 - pin assignments 9
- VALA 14
- view current configuration
 - AT command 97

W

- warranty 4
- write to S register 97

Product Support Information

Presales Inquiries and Applications Support

Please contact your local distributor, ADTRAN Applications Engineering, or ADTRAN Sales:

Applications Engineering	(800) 615-1176
Sales	(800) 827-0807

Post-Sale Support

Please contact your local distributor first. If your local distributor cannot help, please contact ADTRAN Technical Support and have the unit serial number available.

Technical Support	(888) 4ADTRAN
-------------------	---------------

Repair and Return

If ADTRAN Technical Support determines that a repair is needed, Technical Support will coordinate with the Return Material Authorization (RMA) department to issue an RMA number. For information regarding equipment currently in house or possible fees associated with repair, contact RMA directly at the following number:

RMA Department	(205) 963-8722
----------------	----------------

Identify the RMA number clearly on the package (below address), and return to the following address:

ADTRAN, Inc.
RMA Department
901 Explorer Boulevard
Huntsville, Alabama 35806

RMA # _____