PROGUARD800[™] SERIES

Installation Manual for Exchanging the HA810





20302_20090408 • HA810™ © ALL RIGHTS RESERVED HAIBRAIN If you follow the installation procedure mentioned below, you should not hear a siren. Just to be sure, we recommend you to wear hearing protection during the installation. This to prevent hearing impairment.

Quick replacement of your HA810 X-10 HA Module (PGHA810)

This manual is meant to replace your PGHA810 in an already working ProGuard800 without having to read the regular installation manual completely. Just the necessary operations are explained in this manual. For safety warnings and a complete understanding of your ProGuard800 set please refer to the installation- and user manual.

Requirements for the installation

- Screwdriver, slot, blade size 0,6 x 5,0 mm Screwdriver, slot, blade size 0,5 x 3,0 mm
- ProGuard800 set consisting of:
 - Control panel
 - ProGuard HA810 X-10 HA Module(HA810)

Switching off the siren

- 1. Press ✓ followed by your installer code (default 1111).
- 2. Now enter 9155 (the display shows: 5.WIRED SIREN ENABLED).
- 4. Press ✓ for confirmation.
- 5. Press × 4 times to leave the installation menu.

Opening the ProGuard800 control panel

- 1. Disconnect the ProGuard800 from the mains.
- 2. Push the little pins at the bottom side of the central unit gently with a screwdriver as shown on the picture and move the screwdriver up.



3. Remove the front of the central unit. You will see that the front is connected to the backside with two fasteners and the flat-cable of the keyboard.

Removing the back-up battery

- 1. Remove the back-up battery by pushing the bottom side of the clip and disconnect the white connector.
- 2. Retain the battery and the clip well. They will be replaced in the panel later.



Removing the old HA810

- disconnect the green connector at the right on the main board by pulling it up carefully.
- 2. disconnect the white connector at the HA810 board by pulling it up carefully.
- 3. Remove the white protection cab by pushing it to the right and then pulling it up.
- 4. Put the small screwdriver in the position like on the picture and push the black nock at the top right side with your other hand. The print will come up a little.
- 5. Do the same for the other nock at the bottom right side.
- 6. Now you can lift up the HA810 completely.
- Loosen the 2 crews of the blue connecting block on the HA810 and remove the 2 blue wires.

Installing the new HA810

- 1. Install the 2 blue wires on the new HA810.
- 2. Put the HA810 in its place by first locating the left side and then pushing the right side in place. (push the 2 black nocks at the right)
- 3. Connect the white and green connector.
- 4. Put back the white protection cab.
- 5. Place the battery back in the panel and connect the connector.

ProGuard800[™] HA810





6. Close the panel.

Turning on ProGuard800

- Put the plug in the socket. 1.
- The display now shows: DISARMED SYSTEM TROUBLE (it is 2. normal for the panel to show this notification). The green power supply indicator will flash.

Setting date and time

- Press ✓ followed by your installer code (default 1111). 1.
- 2. Press 7 ✓ ✓.
- 3. Now enter the correct time followed by \checkmark .
- Now enter the correct date followed by \checkmark . 4.
- Press × 3 times to leave the installation menu. 5.

Checking the HA845

The Find Modules function runs a diagnostic test that identifies the modules and keypads that are connected to the system bus. With this information, the system knows which add-on modules should be present, enabling supervision for those modules.

To run the Find Modules test:

From the Programming menu, select Initialize, find Modules [975]; the 1. system prompts you for confirmation.

Press \checkmark to confirm; the system begins to search for the connected modules. At the end of the search, the modules that are present are displayed and the system asks if you want to save the displayed list. Press \checkmark ; the list is saved.



 \mathcal{M} If a connected module is not included in the list, check the wiring connections and run this test again.

Activating the siren

When you have installed all sensors, you can re-activate the internal siren of the ProGuard800 if desired.

- 1. Press ✓ followed by your installer code (default 1111).
- 2. Press 9155 now (the display now shows: **5.WIRED SIREN DISABLED**).
- 3. Press ➤ now (the display now shows: **5.WIRED SIREN ENABLED**).
- 4. Press ✓ to confirm.
- 5. Press × 4 times to leave the installation menu.



If you open the housing of the panel or one of the sensors, the siren will now always be activated. You can de-activate it by entering your user code on the panel or pressing the key with the open padlock on the KR814 remote control.

We refer to your installation manual for further configuration possibilities of your ProGuard800 and to your user manual for the daily use of your ProGuard800.

Copyrights

Copyright and all other proprietary rights in the content (including but not limited to model numbers, software, audio, video, text and photographs) rests with Haibrain B.V. Any use of the Content, but without limitation, distribution, reproduction, modification, display or transmission without the prior written consent of Haibrain is strictly prohibited. All copyright and other proprietary notices shall be retained on all reproductions.

