

INSTALLATION AND WIRING



In This Chapter...

Safety Guidelines	4-2
Introduction	4-3
EA9-T6CL-R and EA9-T6CL Cutout Dimensions	4-4
EA9-T8CL Cutout Dimensions	4-5
EA9-T10CL Cutout Dimensions	4-6
EA9-T12CL Cutout Dimensions	4-7
EA9-T15CL Cutout Dimensions	4-8
Mounting Clearances	4-9
EA9-T15CL Derating.....	4-10
Wiring Guidelines	4-11
Agency Approvals.....	4-11
Marine Use	4-11
Providing Power to the Touch Panel	4-12
DC Wiring Diagram.....	4-12
AC Wiring Diagram	4-12
C-more LED Status Indicators	4-13

Safety Guidelines



NOTE: Products with CE marks perform their required functions safely and adhere to relevant standards as specified by CE directives provided they are used according to their intended purpose and that the instructions in this manual are adhered to. The protection provided by the equipment may be impaired if this equipment is used in a manner not specified in this manual. A listing of our international affiliates is available on our Web site: <http://www.automationdirect.com>

4



WARNING: Providing a safe operating environment for personnel and equipment is your responsibility and should be your primary goal during system planning and installation. Automation systems can fail and may result in situations that can cause serious injury to personnel or damage to equipment. Do not rely on the automation system alone to provide a safe operating environment. You should use external electromechanical devices, such as relays or limit switches, that are independent of the PLC application to provide protection for any part of the system that may cause personal injury or damage. Every automation application is different, so there may be special requirements for your particular application. Make sure you follow all national, state, and local government requirements for the proper installation and use of your equipment.

Plan for Safety

The best way to provide a safe operating environment is to make personnel and equipment safety part of the planning process. You should examine every aspect of the system to determine which areas are critical to operator or machine safety. If you are not familiar with control system installation practices, or your company does not have established installation guidelines, you should obtain additional information from the following sources.

- NEMA — The National Electrical Manufacturers Association, located in Washington, D.C. publishes many different documents that discuss standards for industrial control systems. You can order these publications directly from NEMA. Some of these include:
 - ICS 1, General Standards for Industrial Control and Systems
 - ICS 3, Industrial Systems
 - ICS 6, Enclosures for Industrial Control Systems
- NEC — The National Electrical Code provides regulations concerning the installation and use of various types of electrical equipment. Copies of the NEC Handbook can often be obtained from your local electrical equipment distributor or your local library.
- Local and State Agencies — many local governments and state governments have additional requirements above and beyond those described in the NEC Handbook. Check with your local Electrical Inspector or Fire Marshall office for information.

Introduction


The installation and wiring of the **C-more®** touch panels requires selecting an appropriate location for the touch panel, laying out the cutout dimensions on the surface of the control cabinet that the panel will be mounted through, securing the touch panel with the provided mounting clips, tightening the screws to the appropriate torque rating to assure the gasket is sealing correctly, and finally connecting the appropriate power source to the touch panel.



NOTE: Each **C-more** touch panel is provided with a cutout template to make marking the proper cutout size on the surface of the control cabinet that the panel will be mounted through a simple task.

This chapter covers the proper mounting of the touch panel and connecting power. Once power is applied to the touch panel, the user will want to read Chapter 5 on the System Setup Screens in order to set the internal time and date for the panel, become familiar with the touch panel test features, and check memory options.

Mounting Clips - EA9-BRK

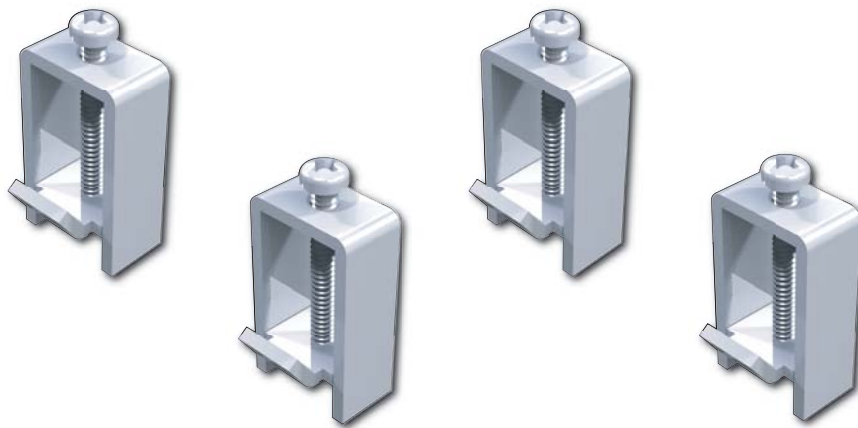


EA9-T6CL-R and EA9-T6CL Cutout Dimensions


The *C-more* 6" touch panels are mounted into a cutout through the control cabinet and secured with four (4) mounting clips. The mounting clips are provided with the touch panel. The mounting clips will insert into a series of slots around the rear perimeter of the touch panel. Each clip has a tab that will mate to a slot. The screw of each mounting clip needs to be tightened to the torque rating shown in the table below so that the gasket is compressed to form the proper seal between the panel and cabinet surface.

4

INCHES [MM]

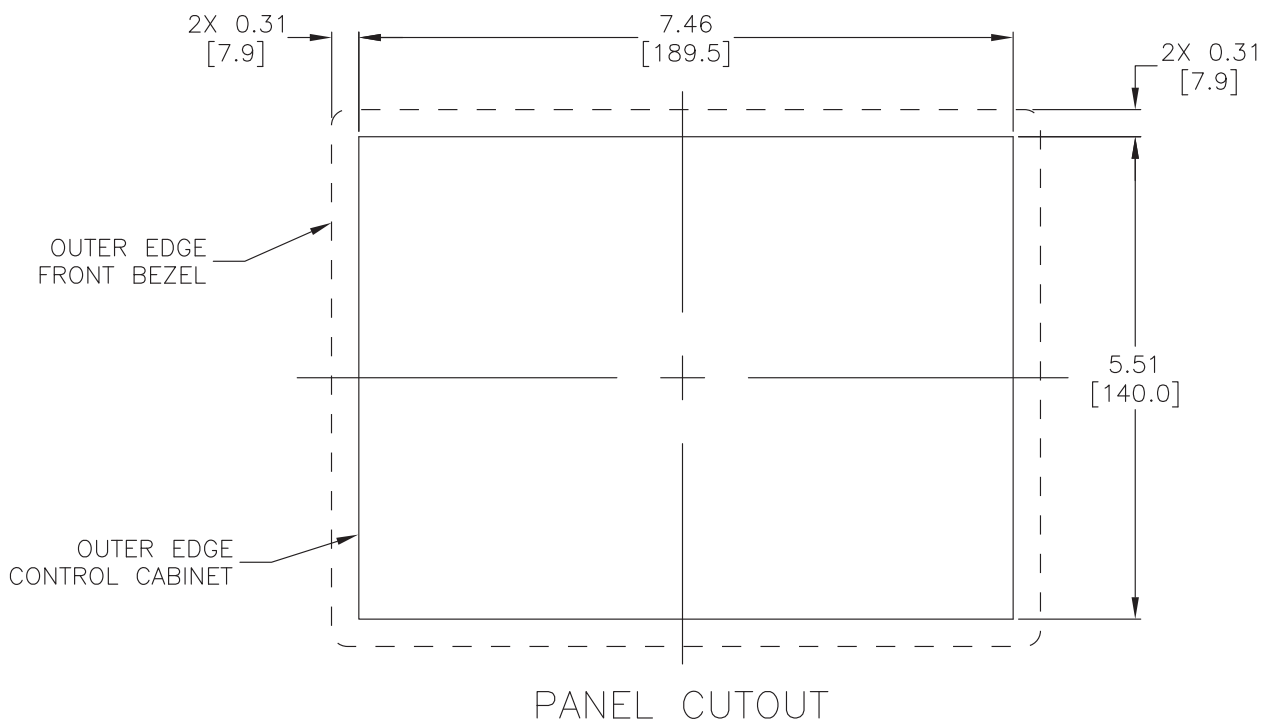


Enclosure Mounting Thickness Ranges and Mounting Clip Screw Torque

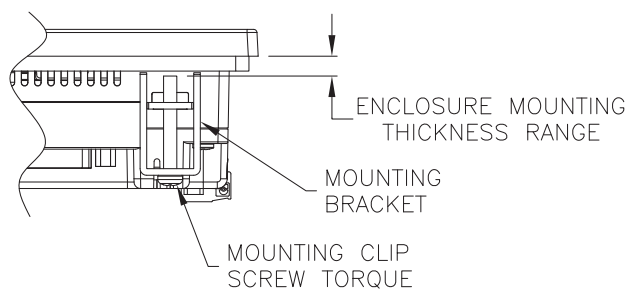


Touch Panel Size	Enclosure Thickness Range	Mounting Clip Screw Torque
6", 8", 10" and 12"	0.039 - 0.20 inch [1 - 5 mm]	63 - 77 oz-in [0.45 - 0.55 Nm]

EA9-T8CL Cutout Dimensions

The *C-more* 8" touch panels are mounted into a cutout through the control cabinet and secured with four (4) mounting clips. The mounting clips are provided with the touch panel. The mounting clips will insert into a series of slots around the rear perimeter of the touch panel. Each clip has a tab that will mate to a slot. The screw of each mounting clip needs to be tightened to the torque rating shown in the table below so that the gasket is compressed to form the proper seal between the panel and cabinet surface.

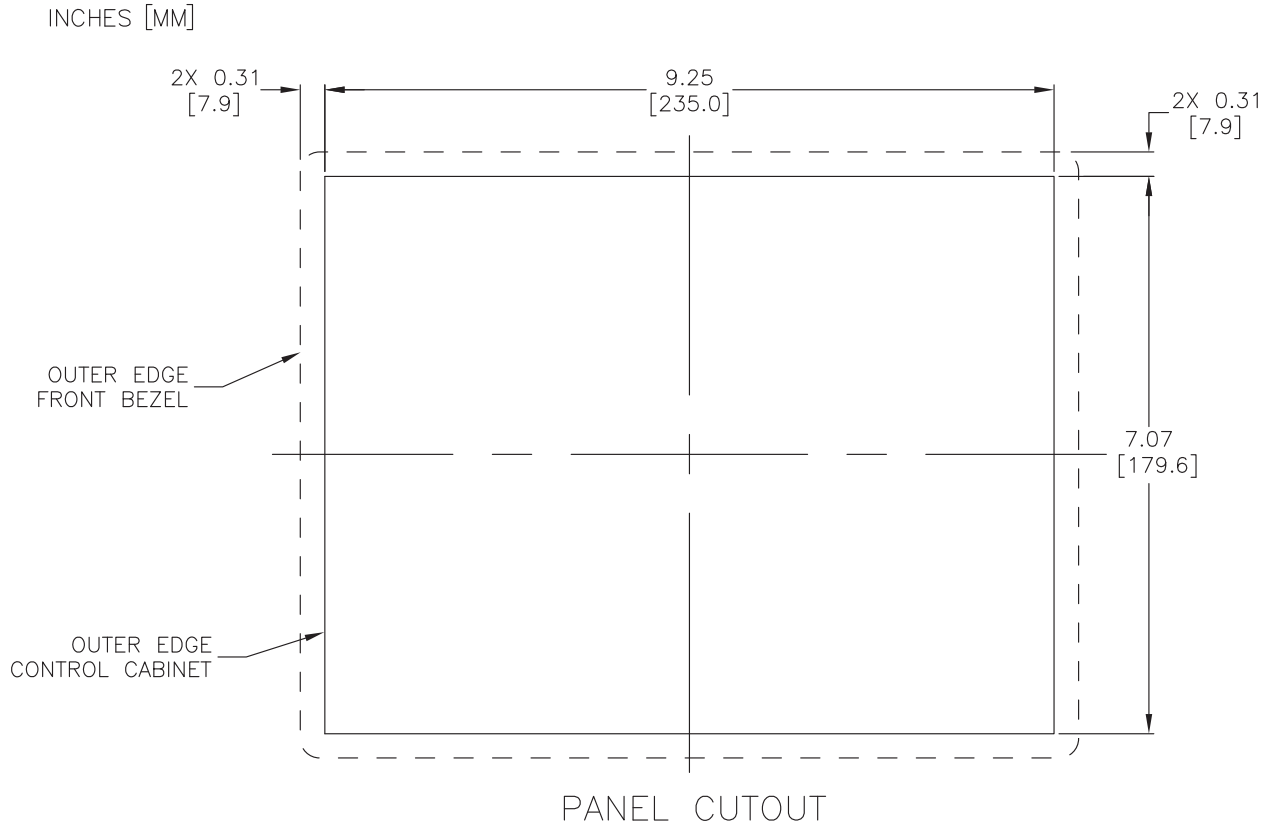

Enclosure Mounting Thickness Ranges and Mounting Clip Screw Torque

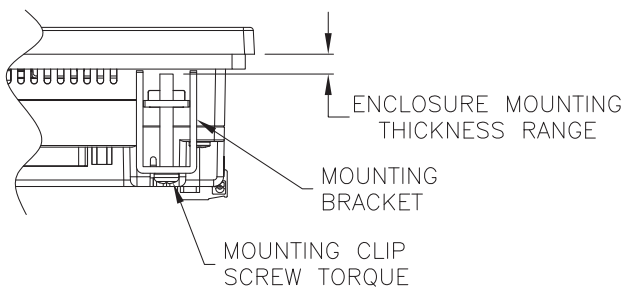


Touch Panel Size	Enclosure Thickness Range	Mounting Clip Screw Torque
6", 8", 10" and 12"	0.039 - 0.20 inch [1 - 5 mm]	63 - 77 oz-in [0.45 - 0.55 Nm]

EA9-T8CL Cutout Dimensions


EA9-T10CL Cutout Dimensions

The *C-more* 10" touch panels are mounted into a cutout through the control cabinet and secured with eight (8) mounting clips. The mounting clips are provided with the touch panel. The mounting clips will insert into a series of slots around the rear perimeter of the touch panel. Each clip has a tab that will mate to a slot. The screw of each mounting clip needs to be tightened to the torque rating shown in the table below so that the gasket is compressed to form the proper seal between the panel and cabinet surface.

4

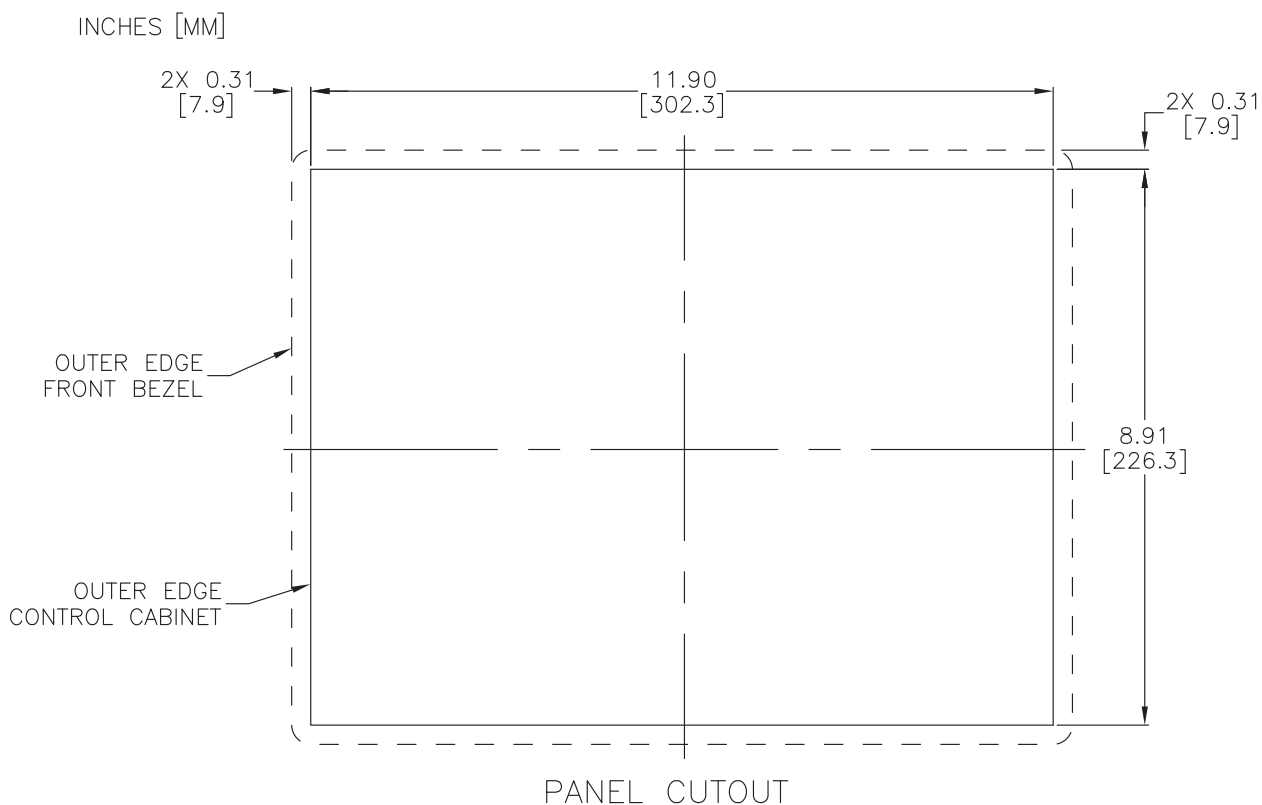


Enclosure Mounting Thickness Ranges and Mounting Clip Screw Torque

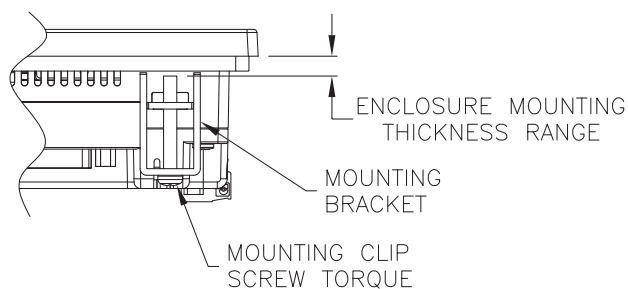


Touch Panel Size	Enclosure Thickness Range	Mounting Clip Screw Torque
6", 8", 10" and 12"	0.039 - 0.20 inch [1 - 5 mm]	63 - 77 oz-in [0.45 - 0.55 Nm]

EA9-T12CL Cutout Dimensions

The *C-more* 12" touch panels are mounted into a cutout through the control cabinet and secured with eight (8) mounting clips. The mounting clips are provided with the touch panel. The mounting clips will insert into a series of slots around the rear perimeter of the touch panel. Each clip has a tab that will mate to a slot. The screw of each mounting clip needs to be tightened to the torque rating shown in the table below so that the gasket is compressed to form the proper seal between the panel and cabinet surface.

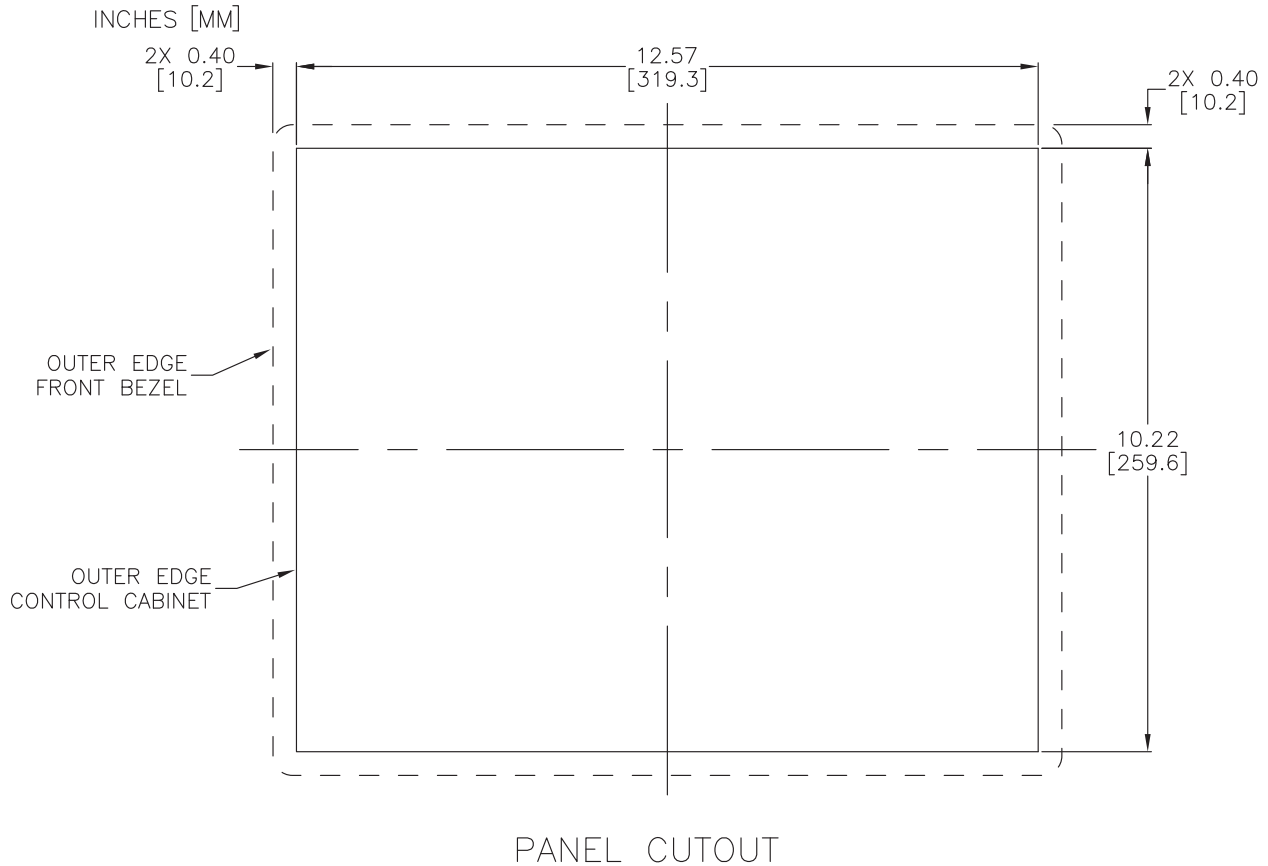

Enclosure Mounting Thickness Ranges and Mounting Clip Screw Torque

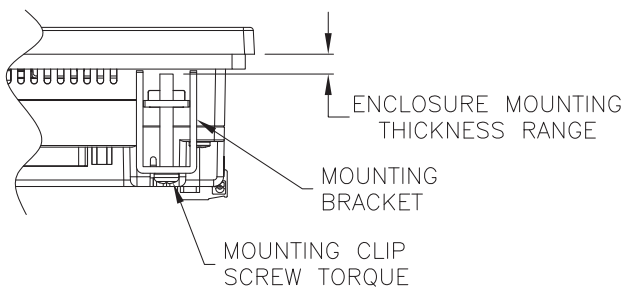


Touch Panel Size	Enclosure Thickness Range	Mounting Clip Screw Torque
6", 8", 10" and 12"	0.039 - 0.20 inch [1 - 5 mm]	63 - 77 oz-in [0.45 - 0.55 Nm]


EA9-T15CL Cutout Dimensions

The *C-more* 15" touch panels are mounted into a cutout through the control cabinet and secured with eight (8) mounting clips. The mounting clips are provided with the touch panel. The mounting clips will insert into a series of slots around the rear perimeter of the touch panel. Each clip has a tab that will mate to a slot. The screw of each mounting clip needs to be tightened to the torque rating shown in the table below so that the gasket is compressed to form the proper seal between the panel and cabinet surface.

4

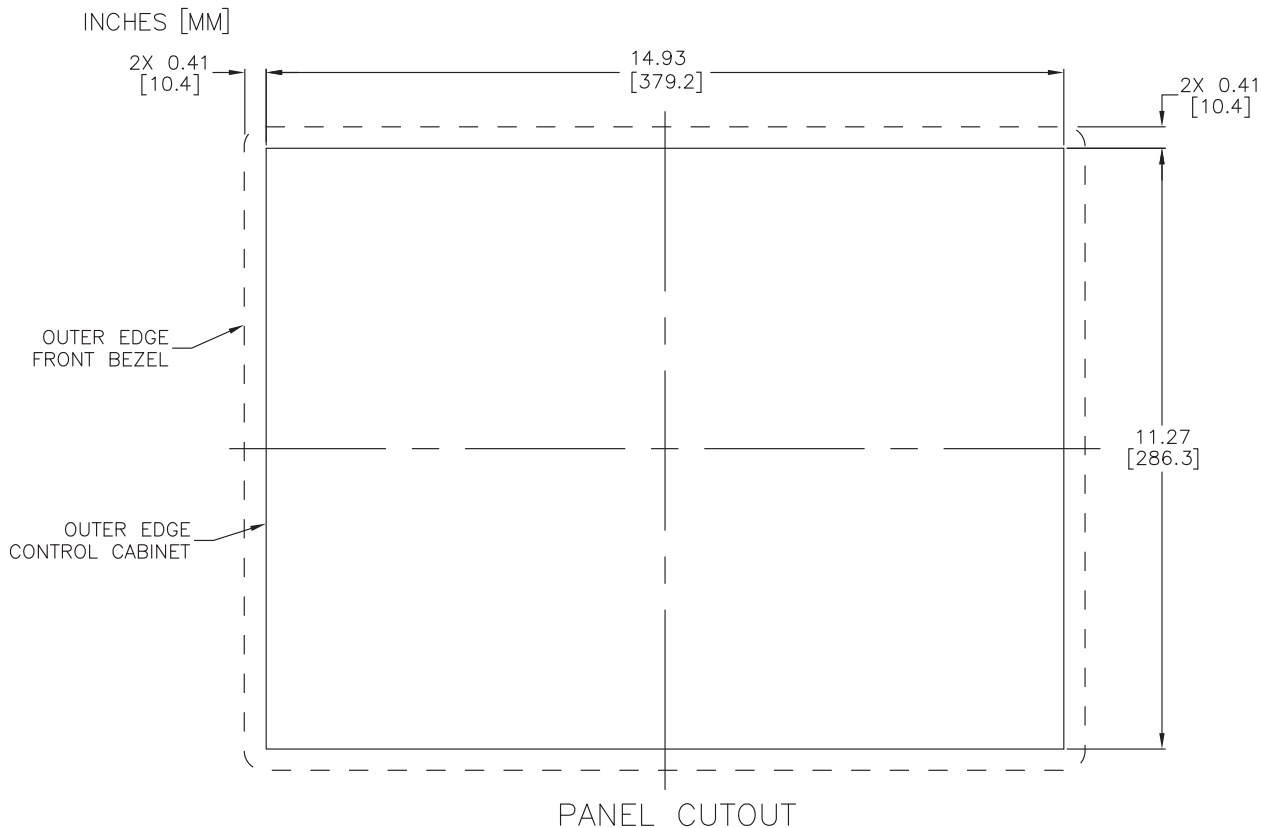


Enclosure Mounting Thickness Ranges and Mounting Clip Screw Torque

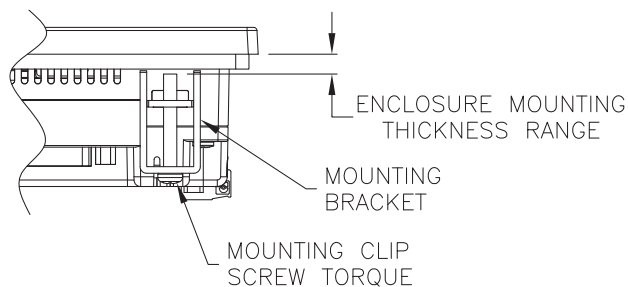

Touch Panel Size	Enclosure Thickness Range	Mounting Clip Screw Torque
15"	0.039 - 0.20 inch [1 - 5 mm]	92 - 106 oz-in [0.65 - 0.75 Nm]


Mounting Clearances

The following drawing shows the mounting clearances for the *C-more* touch panel. There should be a minimum of 4 inches of space between all sides of the panel and the nearest object or obstruction and at least 1.72 inches between the rear of the panel and the nearest object or obstruction.

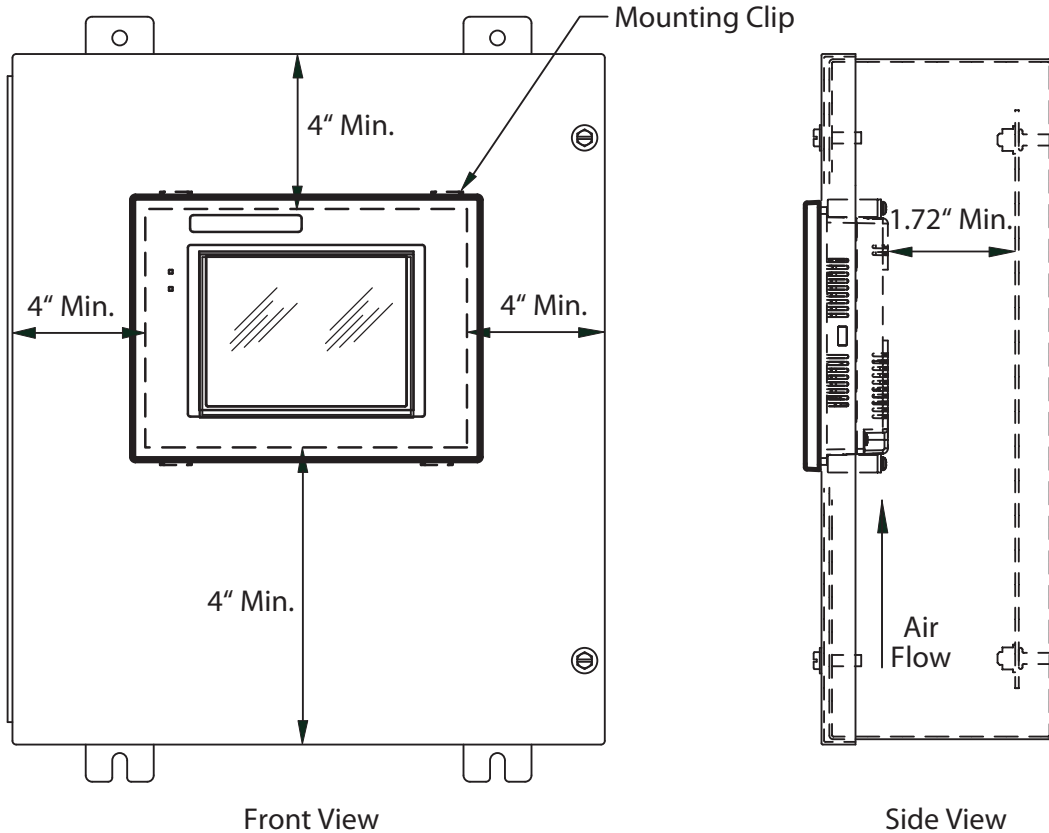

EA9-T15CL Derating

If EA9-T15CL is mounted off the vertical plane facing upward, the temperature shall be derated as shown below. Other panels may be mounted at any angle without derating consideration.

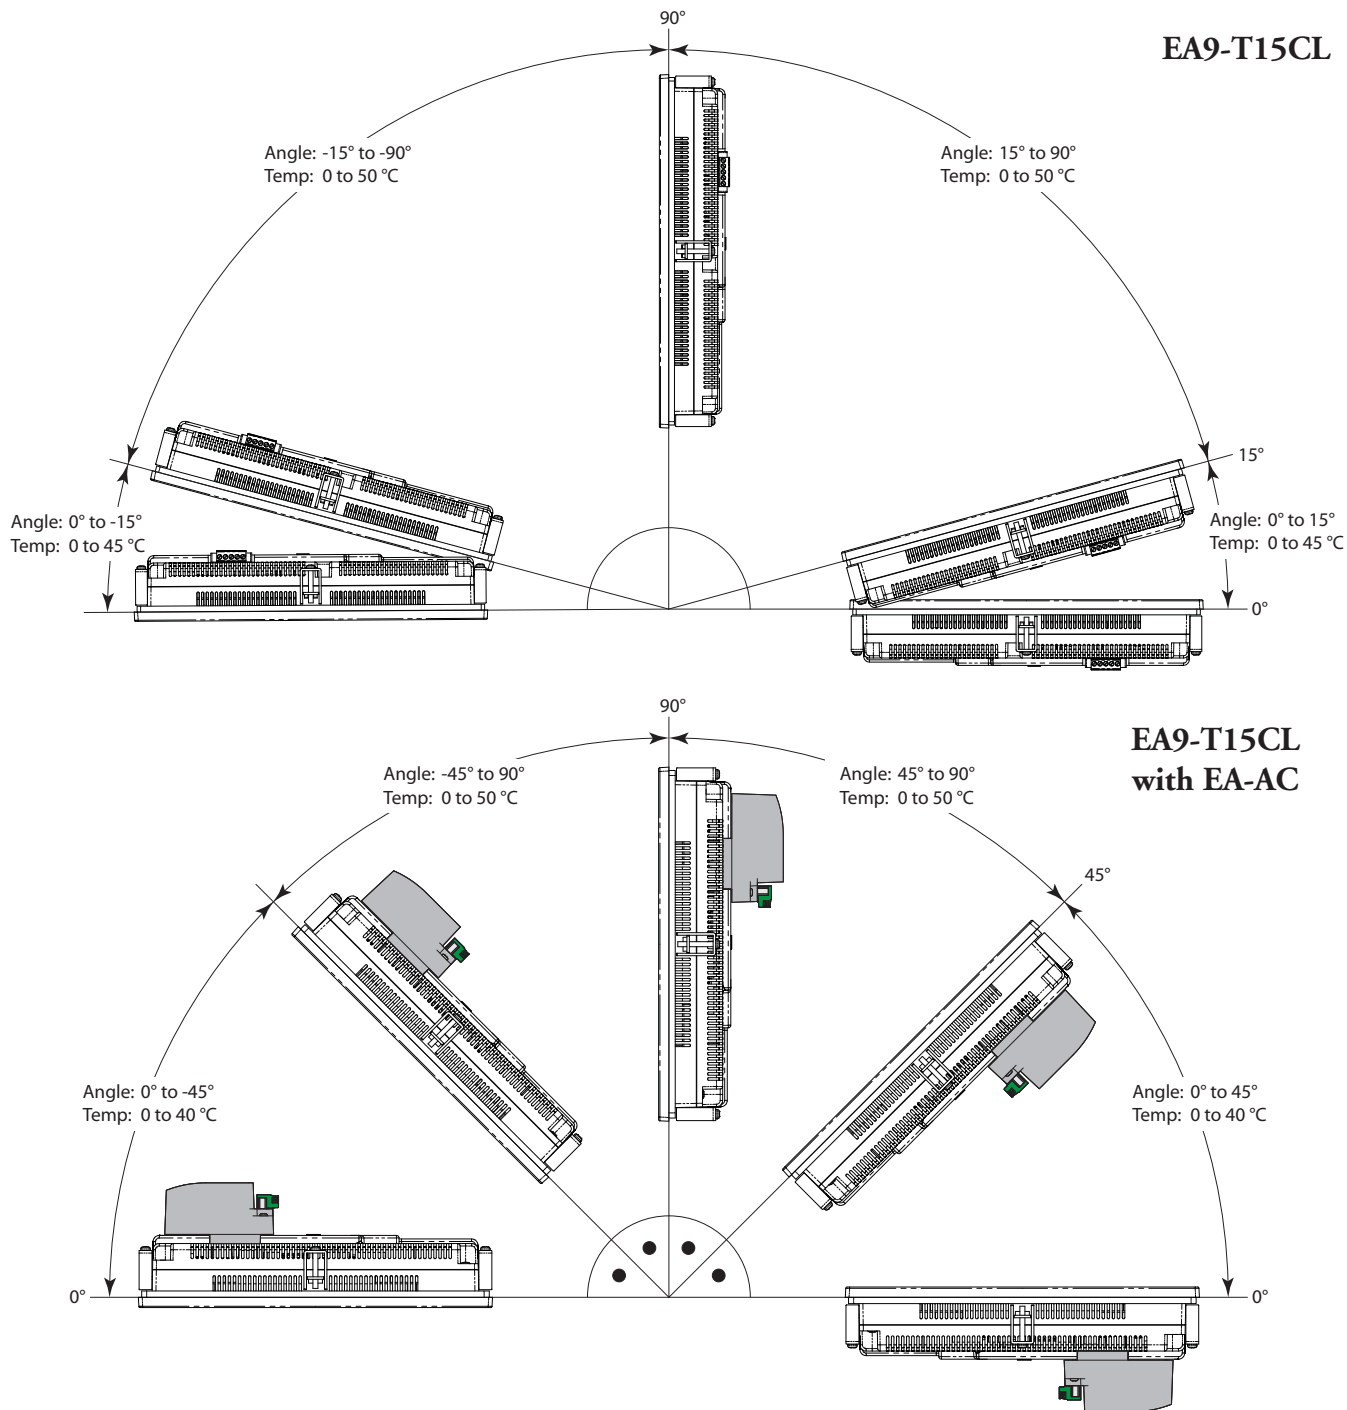

Wiring Guidelines



WARNING: To minimize the risk of potential safety problems, you should follow all applicable local and national codes that regulate the installation and operation of your equipment. These codes vary from area to area and it is your responsibility to determine which codes should be followed, and to verify that the equipment, installation, and operation are in compliance with the latest revision of these codes.

Equipment damage or serious injury to personnel can result from the failure to follow all applicable codes and standards. We do not guarantee the products described in this publication are suitable for your particular application, nor do we assume any responsibility for your product design, installation, or operation.

If you have any questions concerning the installation or operation of this equipment, or if you need additional information, please call technical support at 1-800-633-0405 or 770-844-4200.

This publication is based on information that was available at the time it was printed. At Automationdirect.com® we constantly strive to improve our products and services, so we reserve the right to make changes to the products and/or publications at any time without notice and without obligation. This publication may also discuss features that may not be available in certain revisions of the product.

Agency Approvals

Some applications require agency approvals for particular components. The *C-more* touch panel agency approvals are listed below:

- UL (Underwriters' Laboratories, Inc.)
- CUL (Canadian Underwriters' Laboratories, Inc.)
- CE (European Economic Union)

Marine Use


American Bureau of Shipping (ABS) certification requires flame-retarding insulation as per 4-8-3/5.3.6(a). ABS will accept Navy low smoke cables, cable qualified to NEC "Plenum rated" (fire resistant level 4), or other similar flammability resistant rated cables. Use cable specifications for your system that meet a recognized flame retardant standard (i.e. UL, IEEE, etc.), including evidence of cable test certification (i.e. tests certificate, UL file number, etc.).

Wiring Guidelines (cont'd)

Providing Power to the Touch Panel

- Connect a dedicated 12-24 VDC Class 2 power supply to the DC connector on the rear of the *C-more* touch panel. Connect the ground terminal to a proper equipment ground.
- or install a *C-more* AC/DC Power Adapter (EA-AC) to the rear of the touch panel and connect an AC voltage source of 100-240 VAC, 50/60Hertz, to its AC connector.
- then turn on the power source and check the LED status indicators on the front and rear of the *C-more* touch panel for proper operation. See the LED Status Indicator diagram on the next page for reference.


DC Wiring Diagram

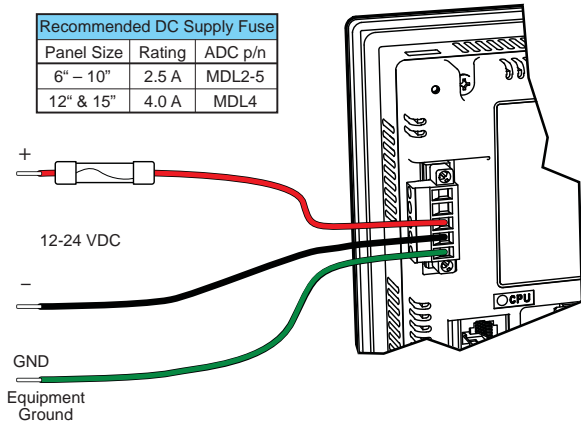

DC-CON Tightening Torque	
Power connector screw torque	70.4 oz-in (0.5 Nm)
Power connector mounting torque	56 oz-in (0.4 Nm)

Recommended DC Power Supply:
AutomationDirect Part No. PSC24-060


AC Wiring Diagram

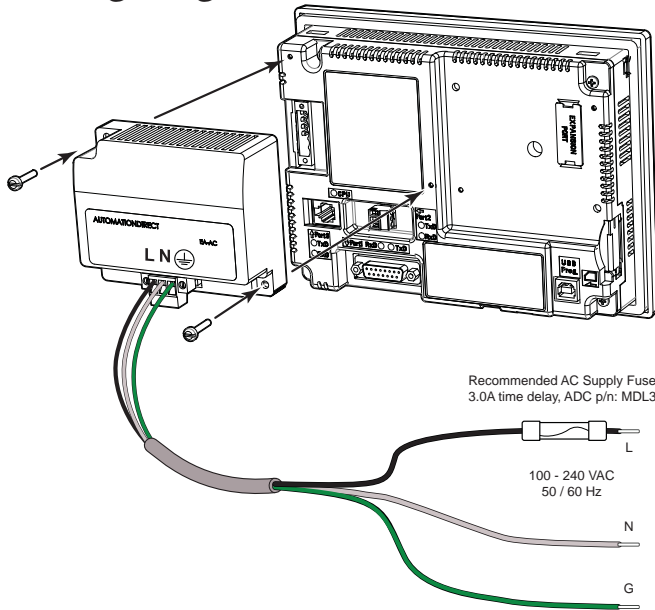


EA-AC Tightening Torque	
Power supply cable torque	71 - 85 oz-in (0.5 - 0.6 Nm)
Power connector mounting torque	71 - 85 oz-in (0.5 - 0.6 Nm)
Mounting flange screw torque	57 - 71 oz-in (0.4 - 0.5 Nm)

NOTE: Power Fault features of the EA-AC help protect data on an SD card during a power failure.

C-more LED Status Indicators

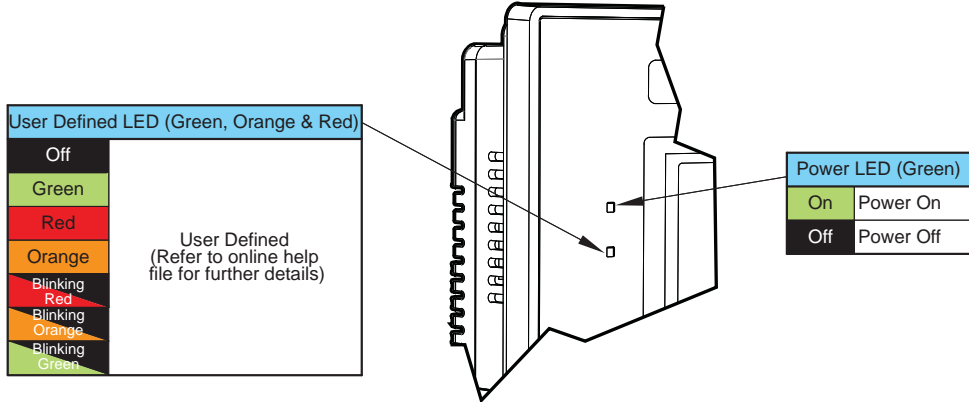

Front View

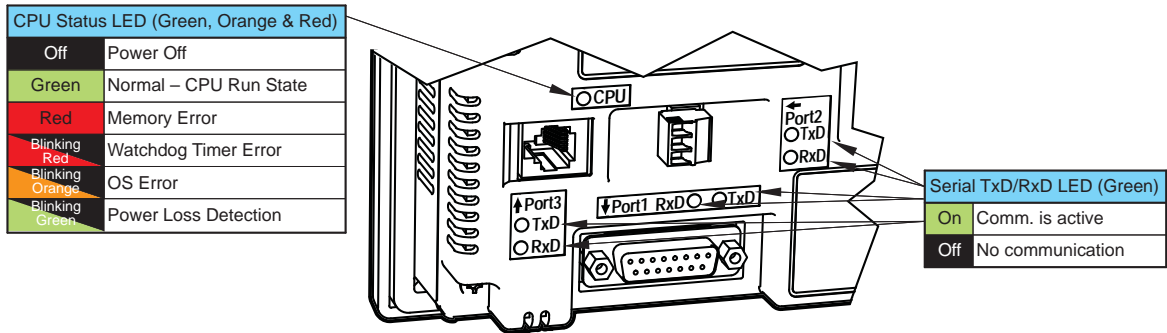

Rear View