

---

# User Manual

## **Streamer for DOS**

High Performance Data Acquisition Software for IBM PC, PC/XT, PC/AT and compatible Computer Systems.

Copyright © 1995 United Electronic Industries, Inc

All right reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form by any means, electronic, mechanical, by photocopying, recording, or otherwise without prior written permission.

First edition.

May 1994

May 1994 Printing

Information furnished in this manual is believed to be accurate and reliable; however no responsibility is assumed for its use, nor for any infringements of patents or other rights of third parties which may result from its use.

IBM, IBM PC/XT/AT and IBM PS/2 are trademarks of International Business Machine Corporation.

BASIC is a trademark of Dartmouth College.

Microsoft is a trademark of Microsoft Corporation.

---

# Table of Contents

## **Preface**

<b>1. Quick Start</b>	<b>1</b>
<b>2. Installation</b>	<b>3</b>
2.1. What you need to do	3
2.2. System Requirements	3
2.3. Installing Streamer for DOS	4
2.4. Starting Streamer for DOS	4
2.5. Navigating in Streamer for DOS	5
2.7. Configuring Streamer for DOS	6
2.9. Quitting Streamer for DOS	7
<b>3. Basic Operations</b>	<b>9</b>
3.1. Analog Input Port Configuration	9
3.2. Voltmeter	11
3.3. Sampling the data	11
3.4. Viewing the data	12
<b>4. Advanced Operations</b>	<b>15</b>
4.1. Digital Operations	15
4.2. Exporting Data	16
4.3. Saving and Recalling Configurations	17
4.4. Environment Settings	17
4.5. Other Useful Features	19



---

# Preface

This manual is written for users of the Streamer for DOS data acquisition program. It provides all the information required to successfully operate the software.

## What is Streamer for DOS?

---

Streamer for DOS is a simple yet powerful data acquisition package for the United Electronic Industries WIN-30 range of analog I/O boards. Streamer for DOS is entirely menu driven. Its capabilities are as follows:

- Data can be acquired from any one of the WIN-30 and WIN-3016 series of analog I/O boards. All gain and speed versions are supported. Multi-channel data acquisition is fully supported.
- Data is acquired directly to hard disk. The amount of data that can be acquired is limited only by available hard disk space.
- The acquired data can be displayed in a graphical form. Graphs can show any amount of data, irrespective of the available memory.
- Data files can be recalled later and the data written out in a number of formats for use in other programs.

## Structure of the manual

---

This manual is written in a tutorial form, and deals with each topic as you are likely to encounter it. There are four chapters:

- Chapter 1: Quick Start

This chapter is a one-page guide for the advanced user detailing how to immediately sample data.

- Chapter 2: Installation and Configuration.

This chapter guides you through the process of setting up Streamer for DOS to operate on your system and configuring it to operate with your data acquisition boards.

- Chapter 3: Basic Operations.

This chapter describes how you go about getting data into Streamer for DOS, displaying the data, and other useful features.

- Chapter 4: Advanced Operations.

This chapter describes the use of digital I/O, saving and recalling of configurations and data files, and gives information on exporting data from Streamer for DOS to a number of file formats for use in other programs.

## **What you need to know**

---

This manual assumes:

- That you have a WIN-30 or WIN-3016 series board, and have installed and tested it as described in chapter 1 of the board's user manual.
- That you are familiar with the basic measurement capabilities of the WIN-30 or WIN-3016 series board, and have read chapters 1, 2, 3 and 4 of the user manual.
- That you are familiar with the host PC that you are using, and basic DOS operations.

---

# Chapter 1

## 1. Quick Start

This chapter gives a one page quick start procedure for Streamer for DOS. This is intended for users that have experience of both DOS and data acquisition. The later chapters discuss these steps in more detail

The procedure is as follows:

- i. Install Streamer for DOS by running the INSTALL.EXE program on the Streamer for DOS distribution disk.
- ii. Change to the directory in which you installed Streamer for DOS and run STREAMER.EXE.
- iii. From the Options menu, chose Board..., and select the appropriate options from the resulting dialog box.
- iv. From the Analog menu, chose Configure..., and select the parameters of the data acquisition you want to perform.
- v. From the Analog menu select Sample or press F7. A dialog box will be displayed for you to select a file on disk to sample into.
- vi. Press OK. The channels that you selected will be sampled and a dialog box will display all the information about the sample.





---

# Chapter 2

## 2. Installation

This chapter explains how to install Streamer for DOS on your computer, the basics of using the menu system, and how to setup Streamer for DOS to suit your requirements.

### 2.1. What you need to do

---

Prior to acquiring and processing data under Streamer for DOS, you need to perform two steps:

- i. Install Streamer for DOS
- ii. Configure Streamer for DOS to use your data acquisition board.

### 2.2. System Requirements

---

Streamer for DOS requires the following hardware and software:

#### 2.2.1. Computer

IBM 386, 486 or compatible.

#### 2.2.2. Plug-in Board

WIN-30D, WIN-30DA, WIN-30DS, WIN-30DS/4, WIN-30PGL, WIN-30PGH, WIN-3016D, WIN-3016DA, WIN-3016DS, WIN-3016DS/4, WIN-3016PGL, WIN-3016PGH.

### 2.2.3. Operating System

MS-DOS (3.x, 4.x, 5.x, 6.x).

### 2.2.4. Memory

640K Ram.

### 2.2.5. Graphics Adapter

IBM Color/Graphics adapter (CGA); color or composite monitor, or

IBM Enhanced Graphics Adapter (EGA); any monitor, or

IBM Video Graphics Adapter (VGA); any monitor, or

IBM 8514; any monitor

### 2.2.6. Math coprocessor (Optional)

Streamer for DOS will make use of a maths coprocessor (80387), if installed.

### 2.2.7. Mouse (Optional)

Any mouse (or other pointing device) with a mouse (INT 33) driver can be used. Mouse installation is described in the next section.

## 2.3. Installing Streamer for DOS

---

Streamer for DOS is automatically installed on your hard disk by the installation program. It is not possible to install Streamer for DOS by copying files from the distribution diskettes.

To start the installation, insert Disk 1 of Streamer for DOS in drive A: and type the following:

```
A:INSTALL <enter>
```

The Streamer for DOS executable files will be copied to the selected directory.

## 2.4. Starting Streamer for DOS

---

To start Streamer for DOS, simply type:

```
STRMDOS <enter>
```

The screen in figure 2.1 will then be displayed.



Figure 2.1. Streamer for DOS start-up screen.

A welcome message will be displayed on the screen. This message will clear either after a predetermined time, or when you click the OK button on the dialog.

## 2.5. Navigating in Streamer for DOS

---

Streamer for DOS has a menu-driven interface that uses dialogs to display information and let you configure the software. The interface is DOS-based, but operates in a very similar manner to Microsoft Windows. You can operate Streamer for DOS with both the mouse and the keyboard.

- The mouse is the recommended input device for operating Streamer for DOS. Menus, direct entry boxes, option buttons, check boxes and command buttons are selected by clicking the left-hand button of the mouse with the cursor positioned over the button, check box, menu name etc. To move between the buttons, checkboxes, etc. using the keyboard press the Tab key to go to the next field and Shift-Tab to go to the previous field.
- Menus may also be opened by simultaneously pressing the Alt key and the highlighted letter of the desired menu. Menu item selections may then be made by pressing the first letter of the menu option. Once a menu has dropped down, you can also navigate through the menus using the cursor keys.

## 2.7. Configuring Streamer for DOS

The first thing to do in Streamer for DOS is to configure the board that you will be using. You need to setup the board -- base address, interrupts, DMA channels, A/D ranges, clock sources, etc. -- to suit your requirements.

When you select Board... from the Options menu the following dialog will be displayed:

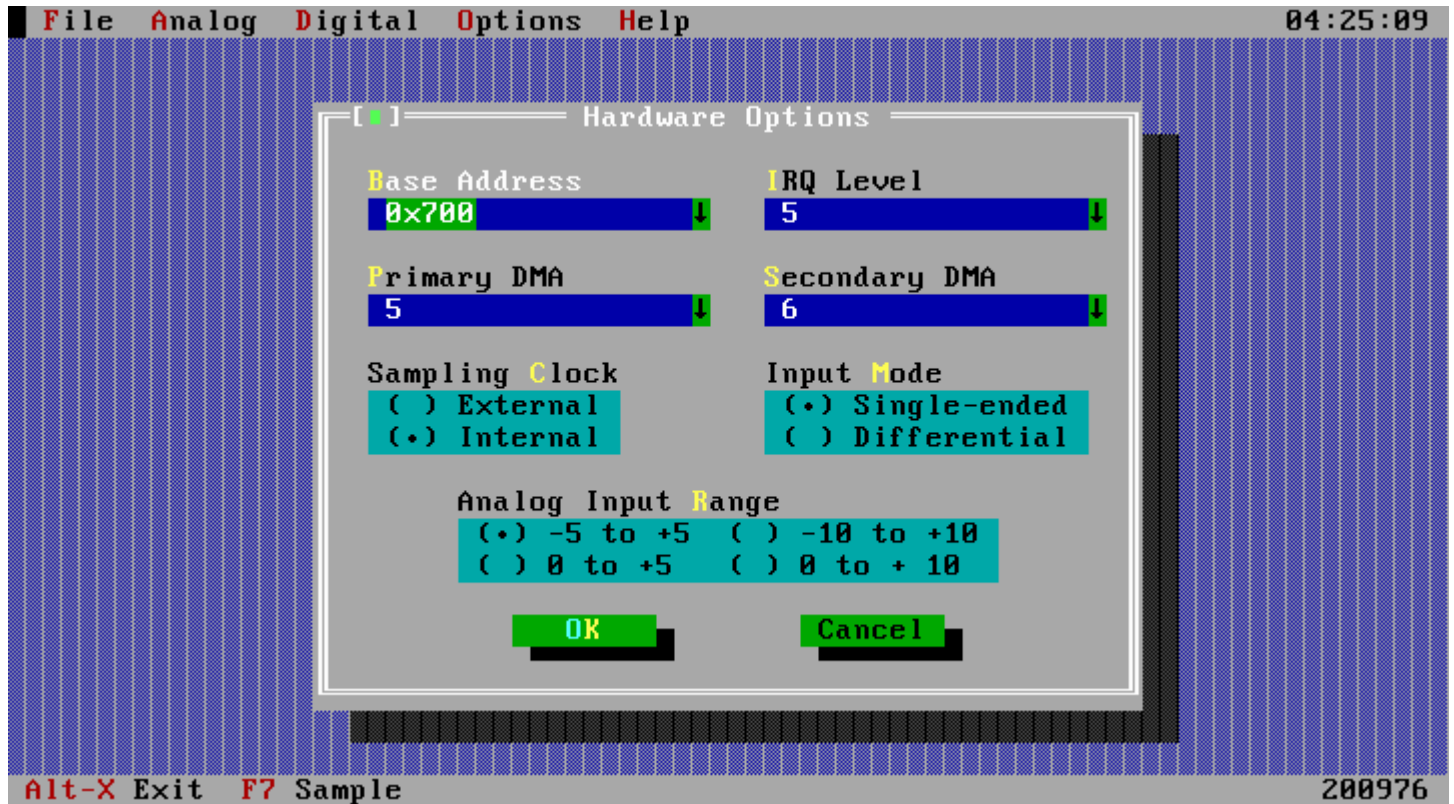


Figure 2.2. Board Configuration dialog.

### 2.8.1. Base Address

The base address is the only setting on the WIN-30 and WIN-3016 series boards that is not configurable via software. Select the base address at which the board is installed from the drop-down list to configure the board for use with Streamer for DOS. Note: The factory default is 0x700, and is always a good place to start if you are not sure of the current configuration of the board.

### 2.8.2. IRQ Level

The IRQ level is the interrupt number used to communicate with the board. Select a free interrupt from the drop-down list to configure the IRQ level of the board.

### **2.8.3. Primary DMA**

The primary DMA channel is used for dual-channel DMA transfers. Select an unused DMA channel from the drop-down list to set up the first part of the DMA channel settings.

### **2.8.4. Secondary DMA**

The secondary DMA channel is also used for dual-channel DMA transfers. Select an unused DMA channel from the drop-down list to set up the second part of the DMA channel settings.

### **2.8.5. Sampling Clock**

The sample clock used for timing and control when sampling can be either internally generated by the WIN-30 or externally generated by the data source. Select whether to use the internal clock with the radio buttons labeled Sampling Clock from this dialog.

### **2.8.6. Input Mode**

The analog input can be defined as either single-ended or differential. Select the correct option here from the radio buttons labeled Input Mode.

### **2.8.7. Analog Input Range**

The analog input range can be defined for the analog I/O sub-system by selecting the correct input range with the radio buttons marked Analog Input Range.

## **2.9. Quitting Streamer for DOS**

---

There are two ways to leave Streamer for DOS:

- Go to the File menu, then select Exit.
- Press <Alt-X>.



---

# Chapter 3

## 3. Basic Operations

This chapter discusses how to configure the analog I/O ports and sample data directly to disk. Graphical viewing of sampled data is also described. In order to perform these operations you must have installed and configured Streamer for DOS as described in chapter 2.

### 3.1. Analog Input Port Configuration

---

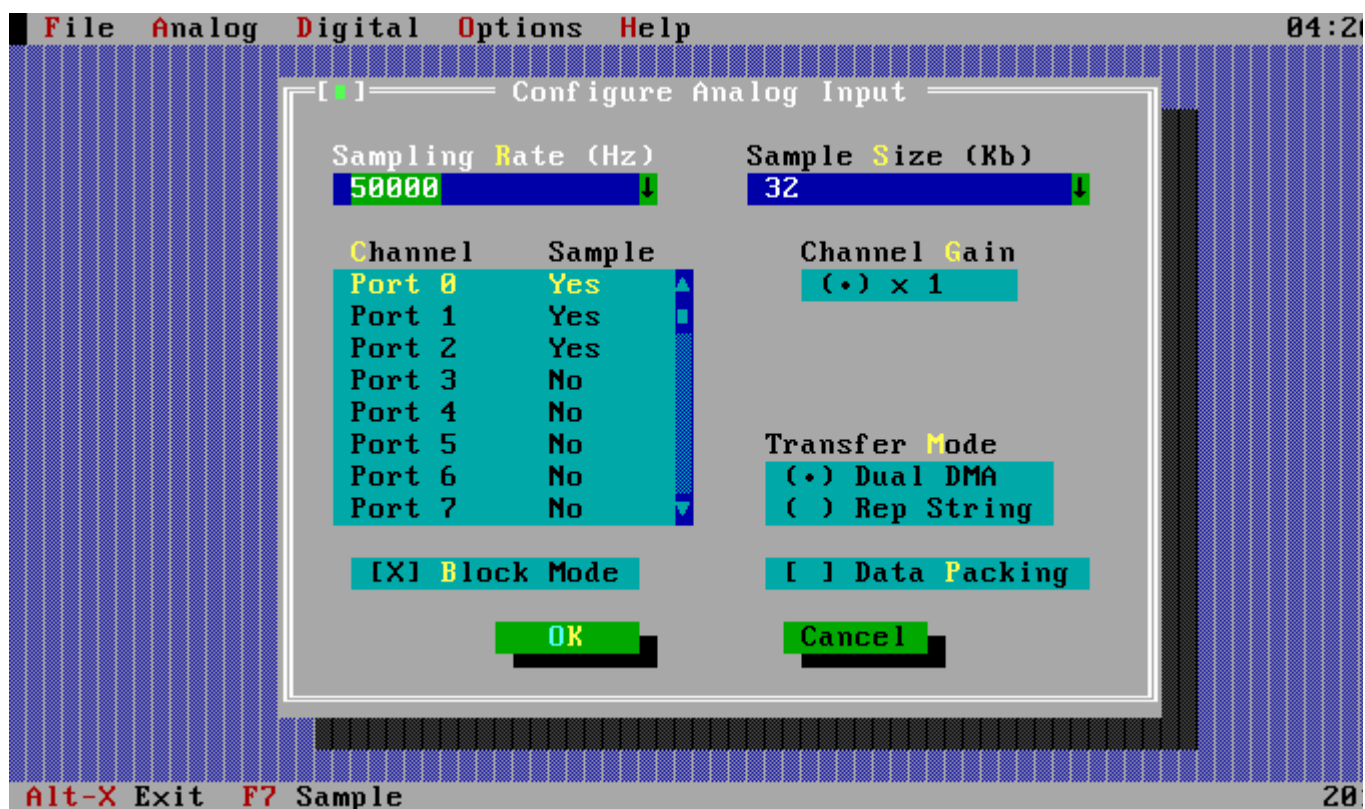


Figure 3.1. Analog Input Configuration dialog

Before you can sample data, you need to tell Streamer for DOS how to perform the operation; which channels to sample, at what frequency to sample them, etc. Select Configuration from the Analog menu to display the dialog in figure 3.1:

### **3.1.1. Sampling Rate**

A predefined A/D converter throughput may be selected from the dropdown list or a user defined value entered into the box provided.

The maximum possible sampling frequency depends on your board, the host PC, and the number of channels being sampled. If you attempt to sample at too high a rate, an error message will be displayed informing you of the failed sample attempt.

### **3.1.2. Sample size**

The streamer will sample any amount of data up to the maximum available disk space. Select the size of the file required here from the dropdown list or enter a custom size. All sizes are in KB (1024 bytes).

### **3.1.3. Channels to sample**

Select the channels to sample from the list box. Use the cursor keys to navigate up and down in the list box, press the <spacebar> key to toggle on and off the sampling of a channel, and press <insert> and <delete> to toggle all the channels on and off respectively.

### **3.1.4. Channel gain**

The WIN-30PG and WIN-3016PG series feature software programmable gain. The gain of each of the 16 input channels can be independently set to either 1, 2, 4 or 8 (WIN-30PGH and WIN-3016PGH), or 1, 10, 100 or 1000 (WIN-30PGL and WIN-3016PGL). Select the desired gain for the currently highlighted channel from the group of radio buttons labeled Channel Gain.

### **3.1.5. Transfer mode**

The WIN-30 and WIN-3016 series boards offer a choice of high speed data transfer options to the user. The first of these options is dual DMA channel “gap-free” operation utilizing bursting DMA transfers. This is useful when running under simple operating systems, such as DOS. When running Streamer for DOS under more advanced operating systems like Windows 3.1 and Windows NT it is preferable to use 32-bit Rep String operations as a transfer mode to improve efficiency. This transfer mode utilizes 32-Bit Rep String operations (REP INSD) via the 32-bit ‘phantom register’ available only on 386 and higher class processors, and offers improved efficiency under Windows NT and other 32-bit DOS extenders.

### **3.1.6. A/D Capture mode**

Either normal or block mode A/D capture may be selected. In normal mode one A/D conversion is performed on each clock pulse. In block mode, all selected channels are sampled on each clock pulse. For boards which do not support true simultaneous sampling, the entire block is converted at maximum throughput, so achieving near simultaneous sampling of all channels. For boards which do support true simultaneous sampling, selecting block mode enables this. This option is only applicable when more than one channel has been selected for capture.

### **3.1.7. Data packing**

Data packing can be used to maximize the efficiency of the data acquisition process. When data packing is enabled the WIN-30 or WIN-3016 series board will store four 12-bit samples in every 6 bytes of data streamed to disk. This is 30% more efficient than not using data packing, where every 6 bytes contain only 3 samples of 12 bits each.



## 3.2. Voltmeter

Often while sampling data it can be useful to quickly see what signals are currently being measured on the analog input lines. Streamer for DOS has a voltmeter which displays the values present on all of the board A/D channels. Selecting Voltmeter from the Analog menu will display a dialog similar to the following dialog:

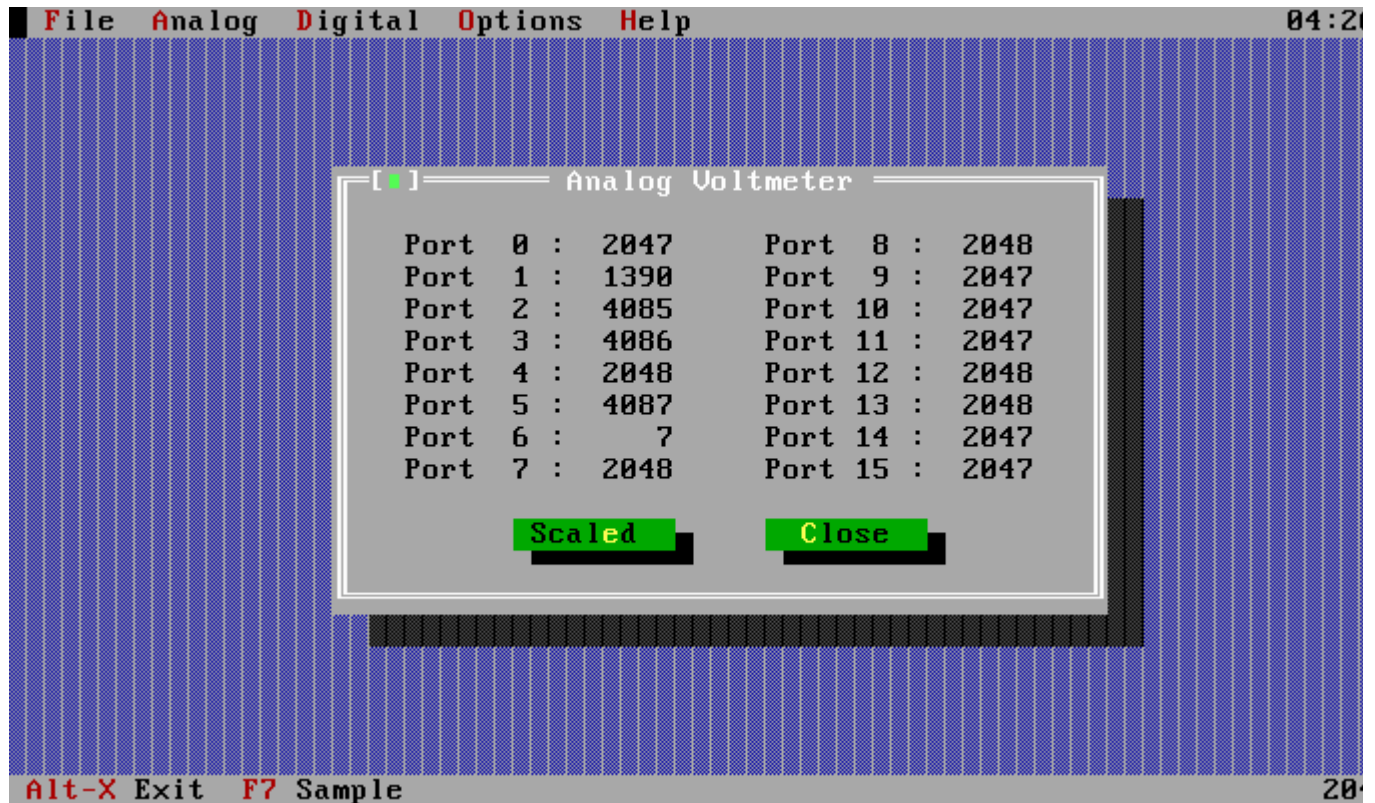


Figure 3.2. Analog Voltmeter dialog

The values being measured may be viewed as actual binary input codes or as scaled voltages. Press the 'Scaled' button to display scaled values. Press the Integer button to view the raw data. Press Close or click in the close box in the top left to close the dialog. Note: You don't have to close the voltmeter to continue working - you can still select menu options and use any other of the Streamer for DOS facilities while the voltmeter is displayed.

## 3.3. Sampling the data

In order to sample the data, press <F7>, or select the Get Input Sample option under the Analog menu. The data will be sampled and a dialog displayed on the screen containing information about the sample. A typical screen is shown in figure 3.3.

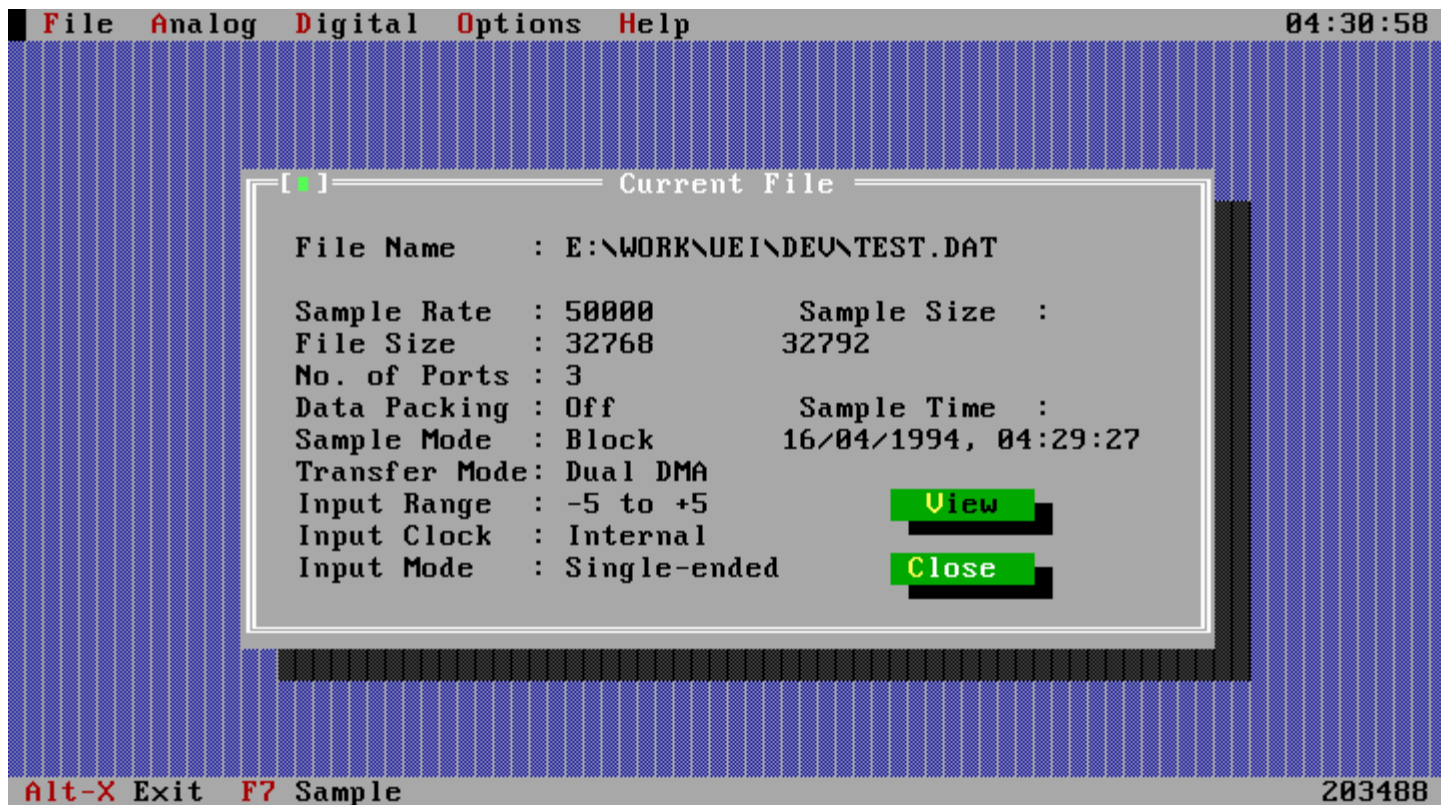


Figure 3.3. Typical Current File dialog

## 3.4. Viewing the data

In order to view the data that you have just sampled, click on the View button in the current file dialog or press <Alt-V>. Streamer for DOS has to summarize the data that was sampled before displaying it because the data files are unlimited in size and might not fit into physical memory. While summarizing the data a progress bar will inform you of how much of the data has been summarized. When finished Streamer for DOS will switch to graphics mode, display a set of axes and plot the summarised data. To toggle the display of a channel on and off, press the number from 0-9 and A-F associated with that channel. Press the <Grey+> key to turn on display of all the channels and the <Grey--> key to turn off display of all the channels. Click on the OK buttons or press <Enter> to end the display of the summarized data.

The data is summarized in two ways:

### 3.4.1 Minima & Maxima

The data is divided into a number of equal ranges, each representing a discrete time period. Within a range the data values are examined and the minimum and maximum values are extracted. When displaying the graph a vertical line is drawn between the minimum and maximum points to create a hi-low graph that indicates the range of values for a given channel.

### 3.4.2 Average

The data is divided into a number of equal ranges, each representing a discrete time period. Within a range the data values are examined and the average value is extracted. When displaying the graph the average values for each time period are plotted to show a summary of the channel's values.

---

# Chapter 4

## 4. Advanced Operations

### 4.1. Digital Operations

---

The digital menu allows data to be sent to or read from the digital I/O ports on the selected board. There are three options available:

#### 4.1.1. Digital I/O Port Configuration



Figure 4.1. Digital Configuration dialog

Selecting Configuration... from the Digital menu will display the dialog in figure 4.1.

Select a digital port from the list box using the mouse or the cursor keys. The spacebar or the left mouse button will toggle a digital port between input and output. Use <Ins> or <Del> to toggle all the digital ports to be input or output respectively.

### 4.1.2. Digital Input

Any digital port can be used for digital input. Select the port out of the list box and either press <Spacebar> or double-click with the left mouse button on the port number. Streamer for DOS will display a dialog showing you what the current value of the digital line requested.

### 4.1.3. Digital Output

Only digital ports expressly defined as output ports can be used for digital output. Select the port out of the list box and either press <Spacebar> or double-click with the left mouse button on the port number. Streamer for DOS will display a dialog prompting you for the value to output from the digital I/O port. Note: this value should be entered in decimal, and must be between 0 and 255.

## 4.2. Exporting Data

---

When a file is open selecting Save As from the File menu will display the following dialog:

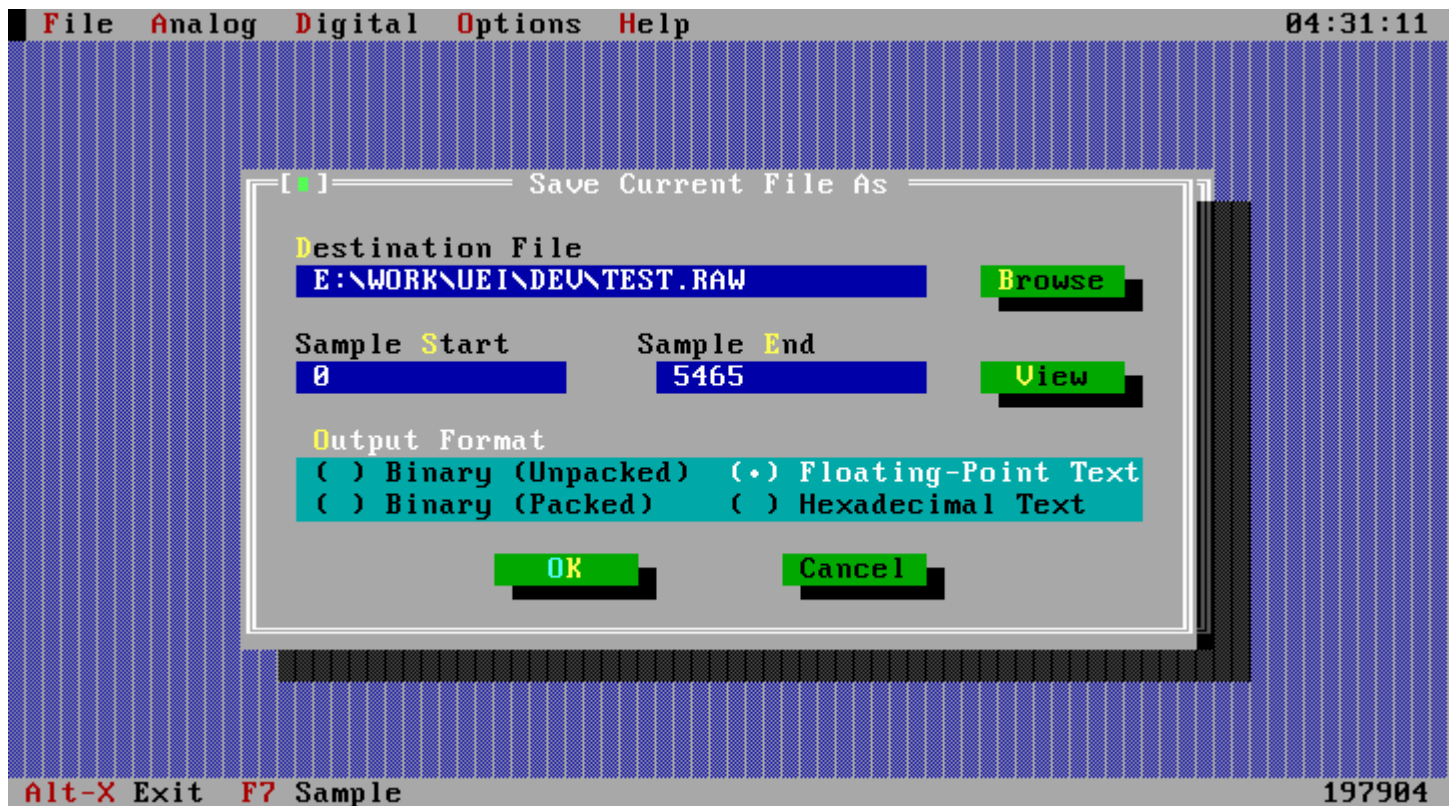


Figure 4.3. Save As (Export) dialog

This dialog gives you the opportunity to save the sampled data in a number of formats for export to other applications. Type a destination filename into the field labelled Destination Field or click on Browse to display a dialog to help you select an output file. Choose the Sample Start and Sample End to export only a certain range of the data, select an output file format from the radio buttons and choose OK. The data will be saved in one of four distinct data formats to the file of your choice.

### **4.2.1 Destination file**

Enter the name of the destination file here. Click on the Browse button or press <Alt-B> to display a dialog that will allow you to select a destination filename.

### **4.2.2 Sample Start and End**

One can limit which portions of the data are exported by entering the starting and ending positions to export between. Either enter the positions manually or click on the View button (or press <Alt-V>) to display the data graphically. While viewing the data use the left mouse button to select two points on the graph. Click on the OK button or press the <Enter> key to accept the range selected.

### **4.3.3 Output Format**

Select the desired format for the exported data.

## **4.3. Saving and Recalling Configurations**

---

Streamer for DOS can save its entire setup. If you save and then recall a setup, the entire program context, except for the data, will be restored to what it was.

On start-up, Streamer for DOS looks for a file called DEFAULT.CFG in the current directory. If this is found, the settings in it are automatically loaded.

In order to save a set-up, proceed as follows :

- i. Go the Options menu.
- ii. Select the Save... option. The program will prompt for a filename.
- iii. Enter the filename, and press <enter> or click on the OK button.

Setups can be loaded by the Load... option in the Options menu, or automatically as described above.

## **4.4. Environment Settings**

---

Selecting Environment... from the Options menu will display the following dialog:

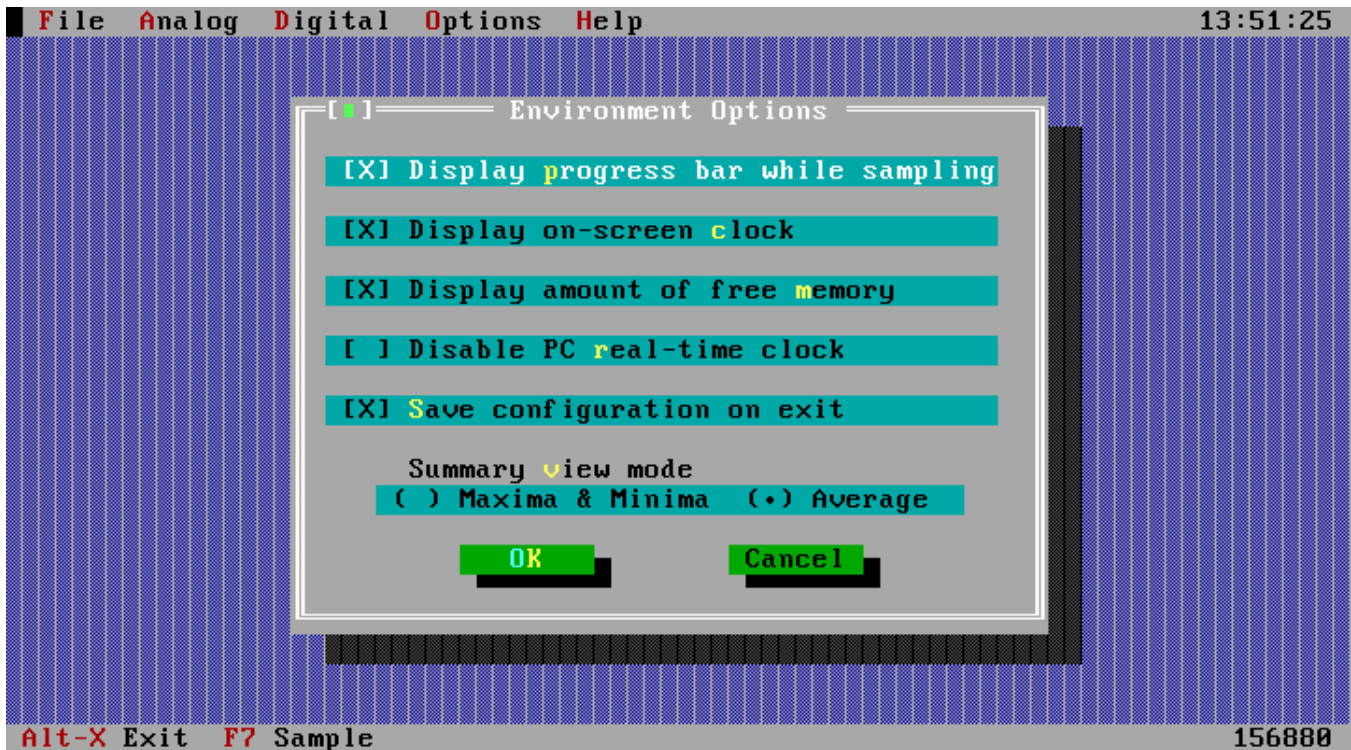


Figure 4.3. Environment Settings dialog

### 4.3.1. Display progress bar

Clear this check box to turn off all visual representation of sample progress when sampling. The progress bar is useful to determine how much space is left in the file being sampled into, but can impact efficiency if sampling at a very high rate.

### 4.3.2. Display clock

Streamer for DOS always shows the current system time in the top right corner of the screen. Clear this check box to disable this display of the current time.

### 4.3.3. Display memory

Streamer for DOS always shows the amount of free memory in the bottom right corner of the screen. Clear this check box to disable this display of the free memory.

### 4.3.4. Disable clock

Clear this check box to disable the computer's internal clock. This can be used for sampling where efficiency is of the utmost importance and the real-time clock in the PC is decreasing the maximum sample rate.

### 4.3.5. Save configuration

By default Streamer for DOS will save its entire configuration when exiting to maintain all the user options selected during a session. By clearing this check box you can disable this feature. Once disabled, use the procedure described in section 4.2 to save and load configurations manually.

### 4.3.6. View mode

In order to graphically view sampled data larger than physical memory Streamer for DOS summarizes the data using one of two methods. Select the summarizing method you wish to use when viewing data by selecting one of these two radio buttons.

## 4.5. Other Useful Features

---

### 4.5.1. DOS Prompt

Often you may want to perform DOS file management to set aside enough space on the hard drive to sample into. You do not need to leave Streamer for DOS to do this - simply select DOS Shell... from the File menu and you will be placed in DOS. When ready to return to the streamer, type:

**EXIT <enter>**

This will place you back in the streamer exactly where you were before going to DOS.