

Oster®

WARRANTY CARD

© 2015 Sunbeam Products, Inc. doing business as Jarden Consumer Solutions. All rights reserved. Distributed by Jarden Consumer Solutions of India Private Limited, Unit B-204, Universal Business Park, Off Saki Vihar Road, Chandivali Farm Road, Andheri (E) Mumbai 400 072, India. 2 Year Limited Warranty - see inside for details. Sunbeam Products, Inc. and Jarden Consumer Solutions of India Private Limited are subsidiaries of Jarden Corporation (NYSE: JAH).
1-800-102-6300

www.oster.in

Model No. : _____

Date of Purchase : _____

Dealer's Stamp : _____

Printed in PRC

P.N. 9100410000268 Rev. B
GCSTGS5011-049_15EM3
GCDS-OST40574-JC

Oster®



MODEL **GCSTGS5011-049**

INSTRUCTION MANUAL
GARMENT STEAMER
PLEASE READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety instructions should always be followed, including the following:

 
1. **READ ALL INSTRUCTIONS BEFORE USING THE GARMENT STEAMER.**
2. The garment steamer should always be turned to the off position “O” before plugging or unplugging from outlet. Never yank cord to disconnect from outlet; grasp plug and pull to disconnect.
3. Before connecting the garment steamer, make sure the voltage in your outlet is the same as the voltage indicated on the appliance’s rating label. Use it with wall receptacle only.
4. To protect against risk of electrical shock, do not immerse the power cord, plug or the garment steamer in water or other liquid.
5. Never use the garment steamer if you have wet hands.
6. This appliance should not be used by children.
7. Never leave the garment steamer unattended while it is turned on.
8. Unplug from outlet while not in use.
9. Burns may occur by touching hot parts: such as the nozzle ceramic faceplate, the nozzle bristle brush, the flexible hose, the hot water or the steam.
10. **DO NOT** turn the nozzle ceramic faceplate upside down since hot steam coming out of the nozzle steam vents may cause burns if exposed to the face, arms or body.
11. **DO NOT** bend, step on, or kink the 1.5 m Flexible hose.
12. **DO NOT** operate garment steamer with a damaged cord or if the garment steamer has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the garment steamer. Take it to an Authorized Service Center for examination and repair. Incorrect reassembly can cause a risk of electric shock when the garment steamer is used.
13. **DO NOT** use it outdoors.
14. **DO NOT** let the power cord come in contact with hot surfaces.
15. This garment steamer is intended for household use only.
16. Use the garment steamer only for the purpose intended.
17. **DO NOT** leave garment steamer unattended while using it. Be careful; if you leave the garment steamer unattended, always turn it off, disconnect the unit from the electric outlet and place the nozzle up right in the nozzle holder.
18. Repairs to the appliance may only be carried out by trained personnel. As a result of incorrect repairs considerable dangers for the user may result. Please contact an Authorized Service Center in the event of repairs being necessary.
19. Always disconnect the garment steamer from the wall socket when filling it with water or emptying it out.

20. Avoid overfilling the Water Tank.
21. In order to avoid overloading the circuits, never use another appliance with high wattage on the same circuit.
22. The manufacturer is not liable for any damages, which are caused by using the appliance incorrectly or for any other purpose than that intended.
23. If an extension cord is absolutely necessary, a cord with the same amperage or higher than that of your Garment Steamer should be used. Cords rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.
24. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
25. Close supervision is necessary when any appliance is used by or near children, or incapacitated individuals.
26. Do not fill hot water into the water tank, this would deform the water tank.
27. Always operate the appliance on a flat and level surface only.

THIS PRODUCT IS FOR HOUSEHOLD ONLY

SAVE THESE INSTRUCTIONS



DESCRIPTION OF THE APPLIANCE

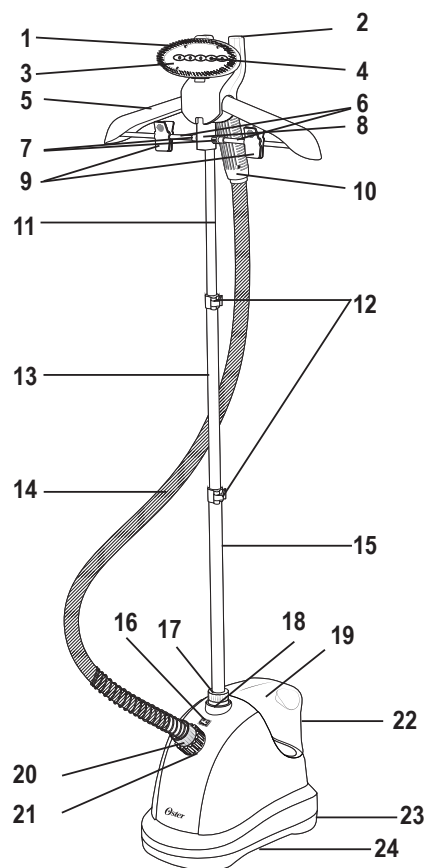

- | | |
|---|--|
| 1. Nozzle Bristle Brush | 15. Lower Rod |
| 2. Nozzle Holder | 16. On/Off "I/O" Switch |
| 3. Nozzle Ceramic Faceplate | 17. Rod-Locking Nut |
| 4. Nozzle Steam Vents | 18. Rod Receptacle |
| 5. Collapsible Hanger | 19. Removable 1.8-Liter Water Tank |
| 6. Hanger Shafts | 20. Hose Connector |
| 7. Hanger Locking/Unlocking Fasteners | 21. Hose Receptacle |
| 8. Hanger Tab (contains the tab cavities) | 22. Water Tank Cap (located under the Removable 1.8-Liter Water Tank, not shown) |
| 9. Hanger Clips | 23. 4 Wheels |
| 10. Nozzle Handle | 24. Drainage Plug (located under the unit, not shown) |
| 11. Upper Rod | |
| 12. Two Rod-Locking Latches | |
| 13. Middle Rod | |
| 14. 1.5-Meter Flexible Hose | |

ASSEMBLING THE GARMENT STEAMER

  1. Remove all parts from the packaging.
2. Remove any plastic bags and stickers from the parts.
3. Place unit housing on the floor sitting on its wheels.
4. Attach the rod into the rod receptacle on the unit. Make sure the rod-locking nut is loose. To make it loose, untighten it by turning it counterclockwise.
5. Once the rod is inserted, tighten the rod-locking nut by turning it clockwise until rod is tightly secured in place.
6. Unlock the two rod-locking latches and raise the rods to your desired height. Secure the rod into place by locking the rod-locking latches located on the lower and middle rods.
7. Insert the hose connector into the hose receptacle by aligning the tabs in the hose connector with the grooves located on the hose receptacle. Once inserted, turn the connector counterclockwise until it is locked in place.
8. Raise the two arms of the collapsible garment hanger and fit the tips of the two hanger shafts into the tab cavities (located on the hanger tab) and then slide the hanger locking/unlocking fasteners all the way to lock the hanger shafts in place.
9. Place the nozzle on the nozzle holder.
10. The unit is now assembled.

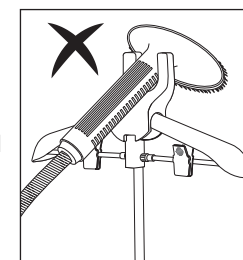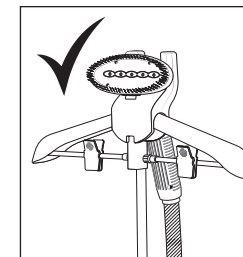

OPERATING INSTRUCTIONS

Filling with water:

1. Remove the water tank from the unit.
2. Turn the water tank cap counterclockwise to open it.
3. Fill it with water.
4. Place cap back onto water tank and tighten it by screwing it clockwise.
5. Place the water tank back in the unit ensuring it fits tightly in place.
6. Your garment steamer is now ready to use.

 
How to use:

1. Make sure the water tank is filled with water.
2. Hang the garment you wish to steam on the unit hanger.
3. Plug it into the appropriate electrical outlet. Make sure cord is unwrapped from bottom of the unit.
4. Turn the On/Off switch to On "I".
5. Leave the nozzle for about 60 seconds or in its holder until it starts to release steam.
6. Remove nozzle from holder and apply it closely moving it along the areas you wish to steam.
7. Repeat the process as many times until you achieve the desired result.
8. When you are done, place nozzle back in its holder (see the "ASSEMBLING THE GARMENT STEAMER" section) to ensure it is placed properly in the rest position.
9. Turn on/off switch to the off "O" position.
10. Unplug unit and let it cool.

NOTE: Switch off the unit when the water tank gets empty.

CAUTION: THE UNIT RELEASES HOT STEAM SO PLEASE MAKE SURE TO HANDLE THE NOZZLE CAREFULLY AND AWAY FROM ANY BODY PARTS AND OTHER PEOPLE AND OBJECTS. BE PARTICULARLY CAREFUL TO NOT POINT THE NOZZLE TO YOUR FACE.

DO NOT OPERATE UNIT WITHOUT HAVING THE HOSE PROPERLY CONNECTED TO THE RECEPTACLE LOCATED ON THE UNIT. IT CAN CAUSE BURNS DUE TO HOT WATER. TO CONNECT THE HOSE, INSERT AND TWIST INTO THE COLLAR AS

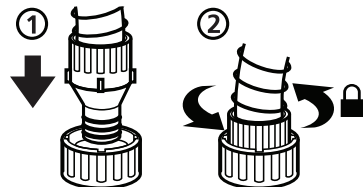

PER BELOW ILLUSTRATIONS:

CAUTION: WE RECOMMEND USING PERSONAL HANGER WHEN STEAMING GARMENTS THAT CANNOT BE OPENED SUCH AS POLOS AND T-SHIRTS TO AVOID COVERING NOZZLE HOLDER COMPLICATING NOZZLE AND GARMENT REMOVAL. (TURN OFF THE UNIT WHEN REMOVING THE GARMENT FROM THE BUILT IN OR PERSONAL HANGER. BE VERY CAREFUL WHEN REMOVING GARMENTS FROM THE BUILT- IN HANGER OR PERSONAL HANGER AS THE NOZZLE FACEPLATE AND BRISTLE BRUSH ARE VERY HOT).

CLEANING AND MAINTENANCE

1. Unplug unit from electrical outlet and let it cool down completely.
2. Do not immerse unit or any of its parts in water. The only part that can be washed with water is the water tank and its cap (if needed).
3. Remove water tank and dispose of water.
4. Remove any lint that might get trapped on the bristle brush.
5. Wipe unit and nozzle faceplate with a damp smooth cloth
6. To dispose of any remaining water inside the unit, remove the rod and the hose and take unit to the sink. Remove the water tank. Remove drainage plug located under the unit by unscrewing it counterclockwise and dispose of any remaining water through the drain. **CAUTION: ENSURE UNIT IS UNPLUGGED.**
7. Please do not pour any flavor into the water.
8. After using the appliance, please place it to some dry and dust free location.

The scale from tap water may build-up on the major parts of the steamer over time. Descale your steamer regularly by the following steps:

1. Fill the water tank with solution of 700ml of white vinegar and 700ml of water.
2. Switch on the steamer to operate and let the steam to release.
3. Empty the vinegar solution from the water tank and rinse with clean water.
4. Fill the water tank with clean water and then operate normally.

PROBLEMS AND SOLUTIONS

PROBLEM	POTENTIAL CAUSE	SOLUTION
Unit is no working	• Electric circuit breaker is down or unit is not connected to a working outlet.	• Make sure unit is properly plugged in to a working outlet. • If unit still does not work, take it to the nearest Authorized Service Center for examination and repair.
Hose is making a loud noise and low steam is being generated	• Hose might be bent or kinked blocking the steam flow during operation.	• Straighten hose and let steam flow back freely.
Water is dripping from / through the nozzle	• You are not steaming in an upright position. • The nozzle is damaged.	• Ensure to use the nozzle in an upright position. • Take unit to an Authorized Service Center to have the nozzle replaced.
Water and steam is dripping between hose connector and hose receptacle	• Hose is not tightly attached. • Sealing ring is damaged.	• Screw in connector tightly to the hose receptacle. • Take unit to an Authorized Service Center to replace the sealing ring.
Water is flowing out of the water tank	• Water tank is broken/cracked or has a hole.	• Take unit to an Authorized Service Center to replace the water tank for a new one.
Water inside tank is hot	• Water pipe is clogged.	• Clean up the deposits.
Steam flow is lower than usual	• Low pressure is being generated due to low voltage. • Water tube is clogged.	• Check electric circuit. • Clean up the deposits.
No steam is being released, but power indicator light is on	• Steam generator is broken. • Some electronic component may be broken.	• Take unit to an Authorized Service Center for examination and repair.
Water is flowing backwards and leaking out from the water inlet	• Water pipe may be kinked.	• Clean up the deposits.

WARRANTY

Jarden Consumer Solutions of India Private Limited (hereinafter referred to as "JCS") warrants that, for a period of two (2) years from the date of purchase of this product as evidenced in the cash memo ("Warranty Period"), this product will be free from defects in material and workmanship (the "Warranty"). Please preserve the warranty card and the cash memo of the product duly stamped and signed by the dealer, as this will be required for any claims under this Warranty.

- The rights and benefits under this Warranty are additional to your statutory rights, which are not affected by this Warranty.
- During the Warranty Period, JCS, at its sole choice, will either repair or replace this product or any component of the product found to be defective free of cost through (the dealer from whom the product was purchased or through the service center listed in the card – business people to confirm), provided that:
 - JCS is promptly informed of the defect;
 - The product has not been altered in any way or subjected to misuse or repair by the person other than a person authorized by JCS;
 - This Warranty, duly filled, stamped and signed by the dealer is made available.
- The Warranty provided herein is towards the original purchaser and is not transferrable to any third party.
- Any repaired or replaced product will be warranted on these terms for the remaining portion of the Warranty in the country where the product was purchased.
- Liability for consequential loss or damage is neither accepted nor is it implied.
- This Warranty is in lieu of all others expressed or implied and does not cover the following:
 - a. If product was use in any manner other than the intended use.
 - b. If the product has not been used according to the instruction manual/user's manual, included with the product.
 - c. If the defects are caused by improper use or reckless use.
 - d. If the product was altered or repaired by anyone other than those authorized by JCS.
 - e. If installation of the product is not done as per the printed instructions provided along with the product.
 - f. If the defects are caused by fire, flood, and other act of god.
 - g. If the defects are caused by use of incorrect current or voltage or faulty electric power supply.
 - h. Normal wear and tear of parts and accessories resulting from regular use.
 - i. Damage resulting from transportation, accidents, mishandling or negligence on the part of the consumer.
 - j. The following part/components:
 - Broken glass or ceramic parts
 - Light bulb
 - Accessories
 - k. If the product is put to industrial or commercial use.
 - JCS will not be responsible for any delay in servicing due to non-availability of any components or due to reasons beyond the control of JCS.
 - Any failure of the product to perform any purpose other than the intended purpose shall not be considered as a default under this warranty.
 - In any event, if JCS becomes liable for damages incurred in connection with these presents, then the liability of JCS will be limited to the amount equal to the sale invoice amount paid by you.

Waste electrical products should not be disposed off with household waste. Please recycle where facilities exist.

AUTHORIZED SERVICE CENTERS

Region	State	City	Name	Address	Contact Person	Contact No.
East	West Bengal	Kolkata	Jeeves Consumer Services Pvt Ltd	356, Jodhpur Park, Kolkata - 700068	Someswar Basu	(033) 40012100
	West Bengal	Kolkata	Southern Service	6/19A, Prince Anwarshah Road, Poddar Nagar, Kolkata - 700068	Subrata Manna	(033) 24729651 / 65488822
	West Bengal	Kolkata	Baishanu Service Care	55D, Adaya Nath Saha Road, Lake Town, Near Jaya Cinema, Kolkata - 700048	Piyush Nandan	(033) 40664210
	West Bengal	Howrah	Time n Service	37 & 38, Mohenath Lane, Salkia, Howrah - 711106	Tapas Hazra	(033) 65639720
	West Bengal	Hooghly	DNP Enterprises	52, Sahaganj Main Road, PO. Sahaganj, Near Bandel Station, Hooghly - 712104	Indrajit Bag	(0) 9163668360
	West Bengal	Barrackpore	Balaji Enterprise	4/E/A Barasat Road, Barrackpore, Dist. North 24 Parganas, Near 15 No. Rail Gate, Barrackpore - 700122	Pradip Kr Ghosh	(033) 25451224
	West Bengal	Siliguri	S D Electronics	Deys Lodge, 138/69/57, Nazrul Sarani, Ashrampara, Siliguri - 734001	Arup Dey	(0353) 2526028
	West Bengal	Asanol	Yes Service	Hutton Road, Near Mahal Banquet Marriage Hall, Asansol - 713301	Sarfaraz Ahmed	(03228) 2280029
	Assam	Guwahati	Multi Track Services	G S Road, Ground Floor, Bora Service Station, Ulubari, Guwahati - 781007	Kallol Dutta	(0361) 2457296

AUTHORIZED SERVICE CENTERS

North	Delhi	Delhi	Jeeves Consumer Services Pvt Ltd.	# E-10, Arya Samaj Road, School Road, Uttam Nagar, Delhi - 1100059	Md Khalid Pervez	(011) 45785915
	Delhi	Delhi	Jeeves Consumer Services Pvt Ltd.	R-32, 2nd Floor, Vikas Marg, Shakarpur, Opp. Heera Sweets, Metro Pillar # 46, Delhi - 1100092	Manjeet Singh	(011) 47754764
	Delhi	Delhi	S T Services	M-131, 1st Floor, Guru Harkrishan Nagar, Paschim Vihar, New Delhi - 110041	Vipin Yadav	(011) 32958438 / 45586987
	Haryana	Gurgaon	Jeeves Consumer Services Pvt Ltd.	4/18 A, 1st Floor, Laxmi Garden, Behind Police Chowki, Khandasa Road, Gurgaon-122001	Karamvir Fogaat	(0124) 4073434
	Haryana	Faridabad	Jeeves Consumer Services Pvt Ltd.	5H-49, 1st Floor, NIT Faridabad -121001	Manoj Kumar Panwar	(0129) 4163003
	Uttar Pradesh	Noida	Jeeves Consumer Services Pvt Ltd.	1st Floor, Above Punjab ATM, Sector-22, Chaura More Main Road, Near Oriental Bank of Commerce, Opp.Rajkiya Inter College, Noida, U.P - 201301	Devender Singh	(0120) 4162644
	Uttar Pradesh	Lucknow	Swastik Customer Care	A-1/3, SEC-H Aliganj, Near Kendriya Bhawan, Lucknow - 226020	Uma Shankar Mishra	(0522) 3298003 / 4102581 / 4102582
	Uttar Pradesh	Kanpur	Shubham Electronics	192, Manohar Nagar Barra -3, Opp Deepshika Guest House, Kanpur - 208027	Suman Gupta	(0512) 2283394 / 2602029
	Uttar Pradesh	Agra	Sai Electronics	25/113, Gandhi Nagar, Agra - 282 003	Ajay Singhal / Sunil	(0562) 3297005
	Haryana	Ambala	Telecare	Old Hospital Road, Bara Thakur Dwara, Opp. Polytechnic, Ambala City - 134003	Devinder Sharma	(0171) 25567369
	Haryana	Sonapat	Saibaba Enterprises	House No. 1510, Sector - 15, Sonapat - 131001	Pramod Sharma	(0130) 6411206
	Haryana	Karnal	Jeeves Consumer Services Pvt Ltd.	Shop # 50, Ground Floor, Mayapuri, Rajiv Gandhi Marg/ Near Raj Palace, Meeraghathi Chowk, Karnal - 132001	Neeraj Sharma	(0184) 4022201
	Punjab	Mohali	Jeeves Consumer Services Pvt Ltd.	# SCF-4, Basement, The High Land Society, NAV, Baltana, Zirakhpur, Mohali-140603	Shiv Dhanda	(0176) 2652574
	Punjab	Ludhiana	Jeeves Consumer Services Pvt Ltd.	Shop # 18B, Dhyan Singh Commercial Complex, Opp. Bus Stand, Ludhiana - 141001	Gurbeer Singh	(0161) 2444002
	Punjab	Jalandhar	Jeeves Consumer Services Pvt Ltd.	EH-31, Laddowali Road, Opposite Gurudwara, Jalandhar - 144001	Ashok Kumar	(0181) 2221707
	Punjab	Amritsar	Keerat Electronics	Naraingarh Bazar, Shaheed Bhagat Singh Road, Chheharta, Amritsar - 143 001	Sukhdeep / Mantreet Singh	(0183) 2450095
	Himachal	Shimla	Suvidha Electronics	Mehta Niwas, Ground Floor, Near Himfead Building, B C S, New Shimla - 171009	Rajesh Kumar	(0) 9816457886
	Himachal	Mandi	Kuldeep Electro Care	Neear FCI Godown, Kehanwal Road, Ram Nagar, Mandi - 175001	Kuldeep Singh	(01905) 222140 / 329574
	Rajasthan	Jaipur	Jeeves Consumer Services Pvt Ltd.	A-79, Subash Nagar Shopping Centre, Jaipur - 302016	Vipendra Singh	(0141) 4035102

AUTHORIZED SERVICE CENTERS

West	Maharashtra	Mumbai	S P Services	Shop No. 10, Abdul Sattar Compound, Fitwala Road, Opp. Satguru Darshan Bldg., Near Railway Station, Elphinstone Road (West), Mumbai - 400013	Palsingh Panyari	(022) 24326726 / 24312623
	Maharashtra	Mumbai	Jeeves Consumer Services Pvt Ltd.	Plot No 27/5, Pawani Chowk, Opp Mulund Darshan Building, Mulund Colony, Mulund (W), Mumbai - 400082	Ramesh Yadav	(022) 65288597
	Maharashtra	Mumbai	Jeeves Consumer Services Pvt Ltd.	Shop No.1-1A, Ground floor, Kirti Co-Op Housing Society, Ramachandra Extn Lane, Near Movie Time, Evershine Nagar, Malad(W), Mumbai-400064	Murali Joshi	(022) 65278590
	Maharashtra	Pune	Jeeves Consumer Services Pvt Ltd.	No. 337, Sai Leela, 1st Floor, Datt Wadi, Mhasoba Chowk, Pune - 411030	Saket Dubey	(020) 24321679
	Maharashtra	Nagpur	Technic Services	Khare Building, Hanuman Lane, Sitabuldi, Nagpur - 440 012	Dilip Panda	(0712) 2550076
	Maharashtra	Chandrapur	Suvidha Electronics	No. 1, Devt Appartment, Church Road, Hanuman Nagartukum, Chandrapur - 442401	Subash Deashkar	(07172) 258966 / 256453
	Maharashtra	Kolhapur	Sikir Mobiles	1492 C Ward, Laximpuri, Opp. TATA Brand Stores, Kolhapur - 416001	Sukir Bakare	(0) 9372555011
	Maharashtra	Aurangabad	Emperor Services	S-5,Manik Arcade Kalda Corner, Opp Chowbey Hospital, Chetna Nagar, Aurangabad -31005	Mr. Willy Bento Colaco	(0240) 2350606
	Maharashtra	Nashik	Harsha Electronics	3, Talak Complex, Rachna Vidyalaya Road, Sharanpur Roda, Nashik - 422002	Pravin Patil	(0) 9422254240
	Goa	Salcete	Jolly Enterprises	Shop # G-2, 78/A Nuvem Enclave, Along NH-17 Highway, Belloy Nuvem, Salcete - 403604	John Gonzanalves	(0832)2791800
	Gujarat	Ahmedabad	Jeeves Consumer Services Pvt Ltd.	No. 37, Om Tower, Near Star Bazar, Jodhpur Cross Road, Satellite, Ahmedabad - 380015	Girish Parmar	(079) 40080485
	Gujarat	Baroda	Uday Refrigeration	G/3 Nandanvan Complex, Atma Jyoti Ashram Road, Behind Citizen Society, Ellora Park, Baroda	Shailesh	(0265) 6590948
	Gujarat	Surat	Sadgurudev	Shop No. L/6, Shankutal Complex, Beside Sangvi Tower, Near Gujarat Gas Circle, Adajan Patia, Surat - 395009	Manoj Rana	(0261) 6540417
	Gujarat	Rajkot	PC Systems	4-Sardar Nagar (West), Tagore Road, Near Astron Circle, Rajkot-360001	Manoj Gohil	(0281) 2480479
	Madhya Pradesh	Indore	Cool Home Refrigeration	LG-70, Trade Centre, 18, South Tukogunj, Indore- 452 001	Husain Anjum	(0731) 4076404
	Madhya Pradesh	Bhopal	Jeeves Consumer Services Pvt Ltd.	Ward no 47, Goyal Vihar, Ground floor, Flat no-G-1, 31-C, Zone-2, MP Nagar, Bhopal	Ram Ashish Prasad	(0755) 4059310

AUTHORIZED SERVICE CENTERS

Tamil Nadu	Chennai	Jeeves Consumer Services Pvt Ltd.	New No.3,Old No.1-A, Sripuram,2nd Lane,Royapetah, Chennai-600014	Dinesh Kumar	044-42632371
Tamil Nadu	Chennai	G C Services	Old No. 12, New No. 37, 1st Floor, Saitanna Naichen Street, Nehru Timber Market, Choolai, Chennai - 600112	Naval R	(044) 26690084 / 42822868
Tamil Nadu	Coimbatore	V K Engineering	108-A/92, West Ponnurangam Road, Ground Floor (Near Telephone Exchange), R.S.Puram, Coimbatore - 641002	Selvadurai	(0422) 2541172
Pondicherry	Pondicherry	Bestronics	49, Saint Theresa Street, Pondicherry - 605001	B Jayashankar	(0) 9443728020
Andhra Pradesh	Hyderabad	Jeeves Consumer Services Pvt Ltd.	Flat No. 205, Karan Centre, Opp. IBP Petrol Pump and Karan Hotel, Park Lane, S.D.Road, Near Paradise Circle, Secunderabad - 500003	Kumararajan	(040) 64591168
Andhra Pradesh	Vijaywada	Jeeves Consumer Services Pvt Ltd.	Door No.25-10-10A,G.S.Raju Road,Gandhi Nagar, Near Gymkhana Road, Vijayawada - 520003	Rahamatullah Gouse Khan	(0866) 6591168
Karnataka	Bangalore	Jeeves Consumer Services Pvt Ltd.	No. 126, 1st Floor, 8th Main J.P.Nagar, 3rd Phase, Bangalore - 560078	Ramesh Kumar	(080) 41209331
Karnataka	Bangalore	Jeeves Consumer Services Pvt Ltd.	First Floor, Khan Bldg, 7 & 8th Cross, Jakkasandra Extension, Bangalore - 560032	Surulivel	(080) 25520424
Karnataka	Mangalore	Jeeves Consumer Services Pvt Ltd.	1st Floor, Quadra compound, Bejai,kapikad,,Kavoor Road, Mangalore -575004	Divakar Shetty	(0824) 2213699
Karnataka	Mysore	Jeeves Consumer Services Pvt Ltd.	No.1095, 1st Floor, C&D Block, Lalithadri Road, Kuvempunagar, Mysore - 570023	Venkatesh.S.Kulkarni	(0821) 4191094

South

NOTE

NOTE