




HANDLEIDING

Joy Sport Concept

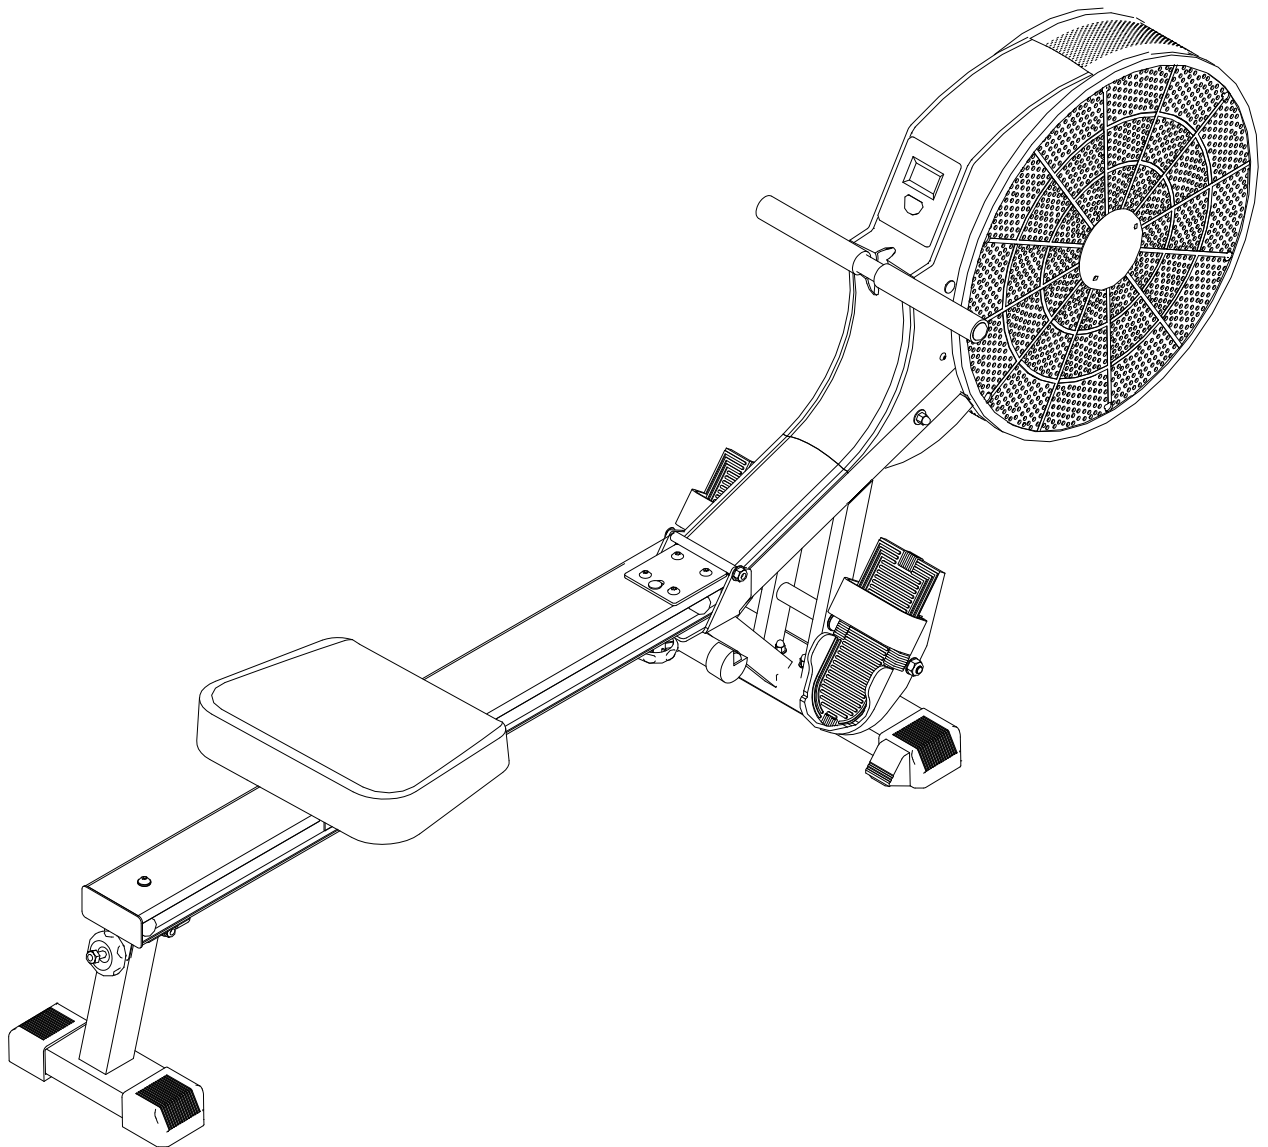

**Gelieve deze handleiding te lezen voor het monteren van uw Concept II.
Bewaart u deze handleiding goed voor eventuele bijbestellingen van
onderdelen.**

Joy Sport Importeur

Fitness-Import
Timmermannsweg 46
5813 AP Ysselsteyn (LB)
info@joysport.nl
www.joysport.nl

Geachte klant,

Wij feliciteren u met de aankoop van dit **JOY SPORT** product.
Tevens wensen wij u veel sportplezier toe met uw goede keuze.
Volg aandachtig de montage handleiding.
Mocht u nog vragen hebben dan helpen wij u graag verder.

Garantie,

Deze garantie geldt gedurende 12 maanden voor elke fabricagefout aan uw **JOY SPORT** product die door een **JOY SPORT** dealer werd verkocht.

Wanneer u garantie claimt biedt **JOY SPORT** de mogelijkheid om naar eigen goeddunken het defecte apparaat of het betreffende onderdeel te herstellen of te vervangen.

De transportkosten van en naar onze werkplaats worden uitgesloten van deze garantie, en zijn dus voor rekening van de bezitter van het product.

Wanneer u aanspraak wenst te maken op garantie gaat u met het aankoopbewijs naar de dealer waar u uw product heeft gekocht.

De dealer zal uw claim dan verder afhandelen.

Garantie uitsluitingen,

De garantie geldt niet voor: de normale slijtage, de gevolgen van een ondeskundige handeling, of beschadiging door de koper of door derden zelf, en defecten die aan extreme omstandigheden te wijten zijn.

De garantie kan ook niet worden geclaimd wanneer de originele constructie of uitrusting werd gewijzigd, of wanneer geen originele **JOY SPORT** onderdelen voor de reparatie werden gebruikt.

De fabrikant kan niet verantwoordelijk gesteld worden voor schade, verlies of kosten, direct of indirect ten gevolg van gebruik van dit apparaat.

Fitness-Import
Timmermannsweg 46
5813 AP Ysselsteyn (LB)
info@joysport.nl
www.joysport.nl

Montage

Het monteren van Uw roeier

Volg deze instructies aandachtig bij het monteren van Uw concept II.


Gereedschap wat nodig is bij het afmonteren van UW roeier (Niet inbegrepen).



Verstelbare sleutel




Hamer

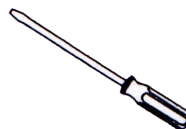

Schroevendraaier



Tang

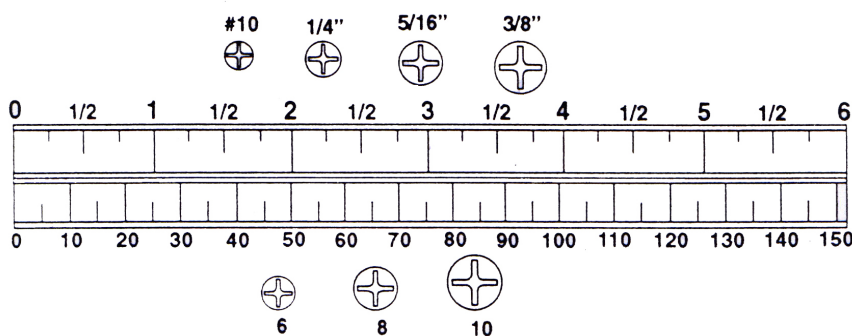


Plaats de bouten en schroeven naast de liniaal om te zien welke U nodig heeft.

Onderdelen overzicht



 
Inbusbout



Slotbout



 Kruiskop bout



Parker



Borgmoer




Ring



Moer

Controle lijst

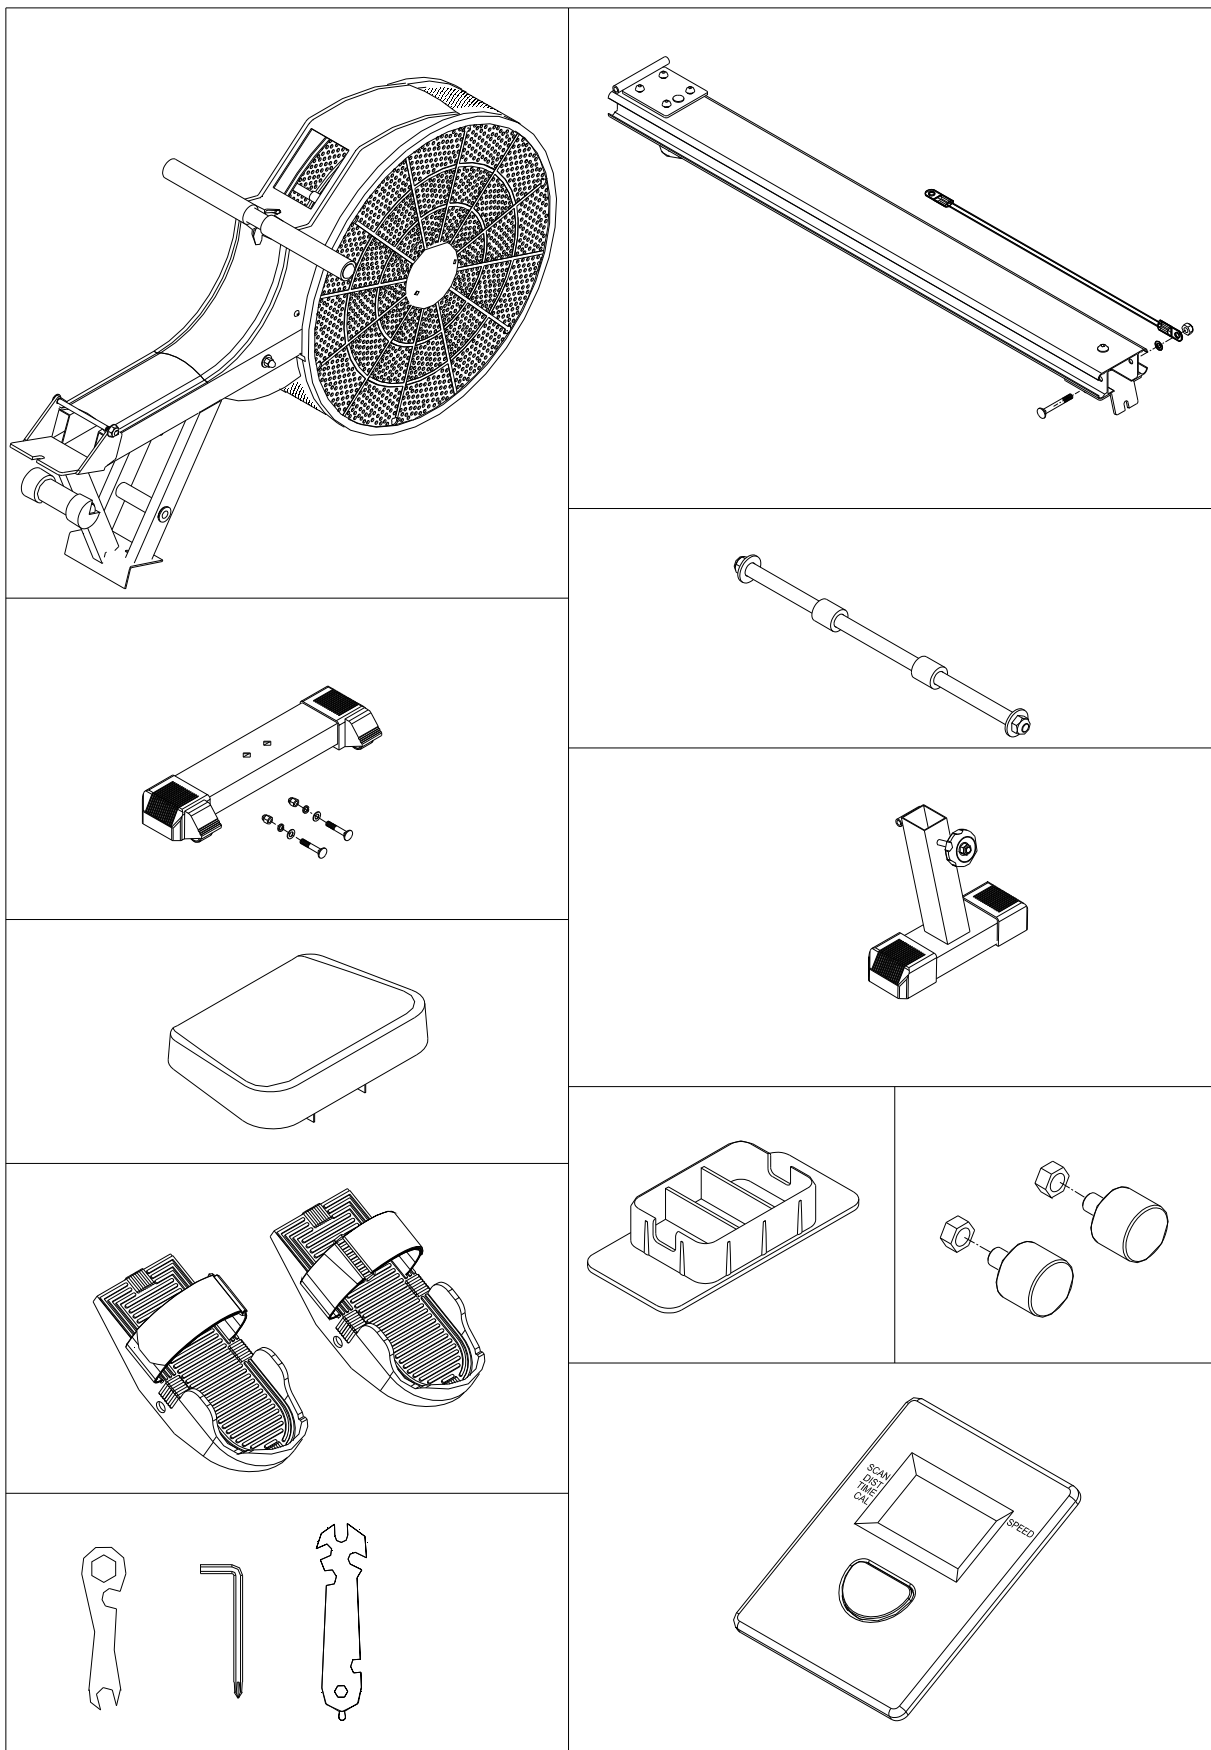


Montage instructies

Stap 1

Montage van de voor stabilisator

a). Monteer de voor stabilisator (2) op het hoofdframe (1) En zet het vast met twee bouten (60), twee ringen (6) , twee veerringen (65) en twee moeren (66).


BELANGRIJK: Zorg er voor dat U alle bouten en moeren goed vast zet.

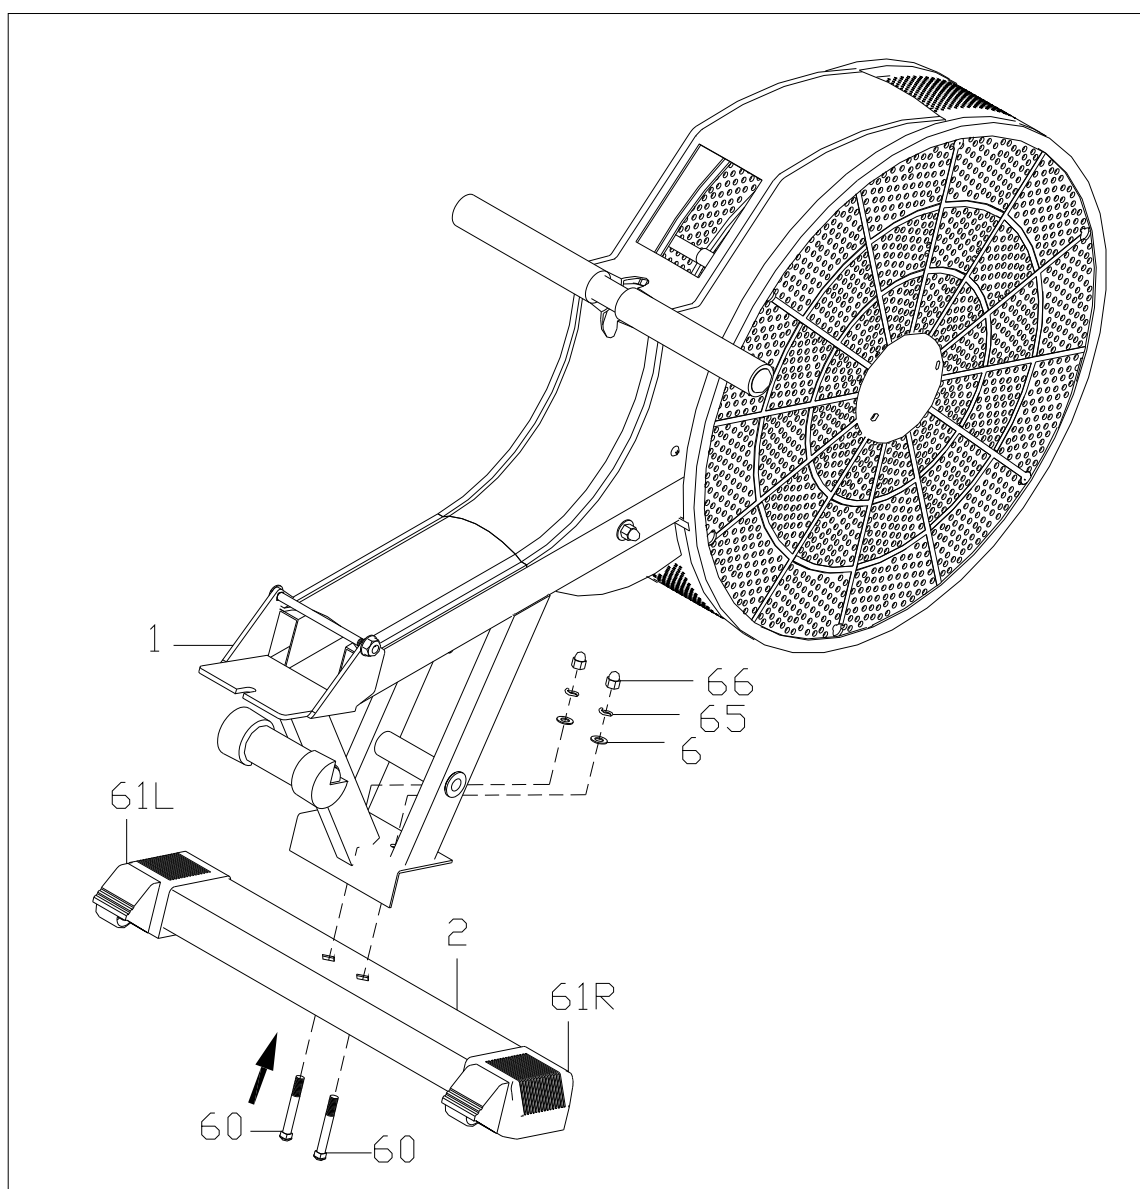

Stap 2

Montage van de zitting geleider.


- a) Monteer de zitting geleider (29) op de houder (32) aan het hoofdframe (1) gebruik hiervoor bout (34) , ring (6) en borgmoer. (5) om dit vast te zetten.
- b) Doe nu de zitting geleider omhoog (29) en maak het elastiek koord vast (19) aan het nylon koord (50) let wel op wikkel het nylon koord maar 1 keer om het wiel, en doe daarna de zitting geleider (29) weer omlaag.

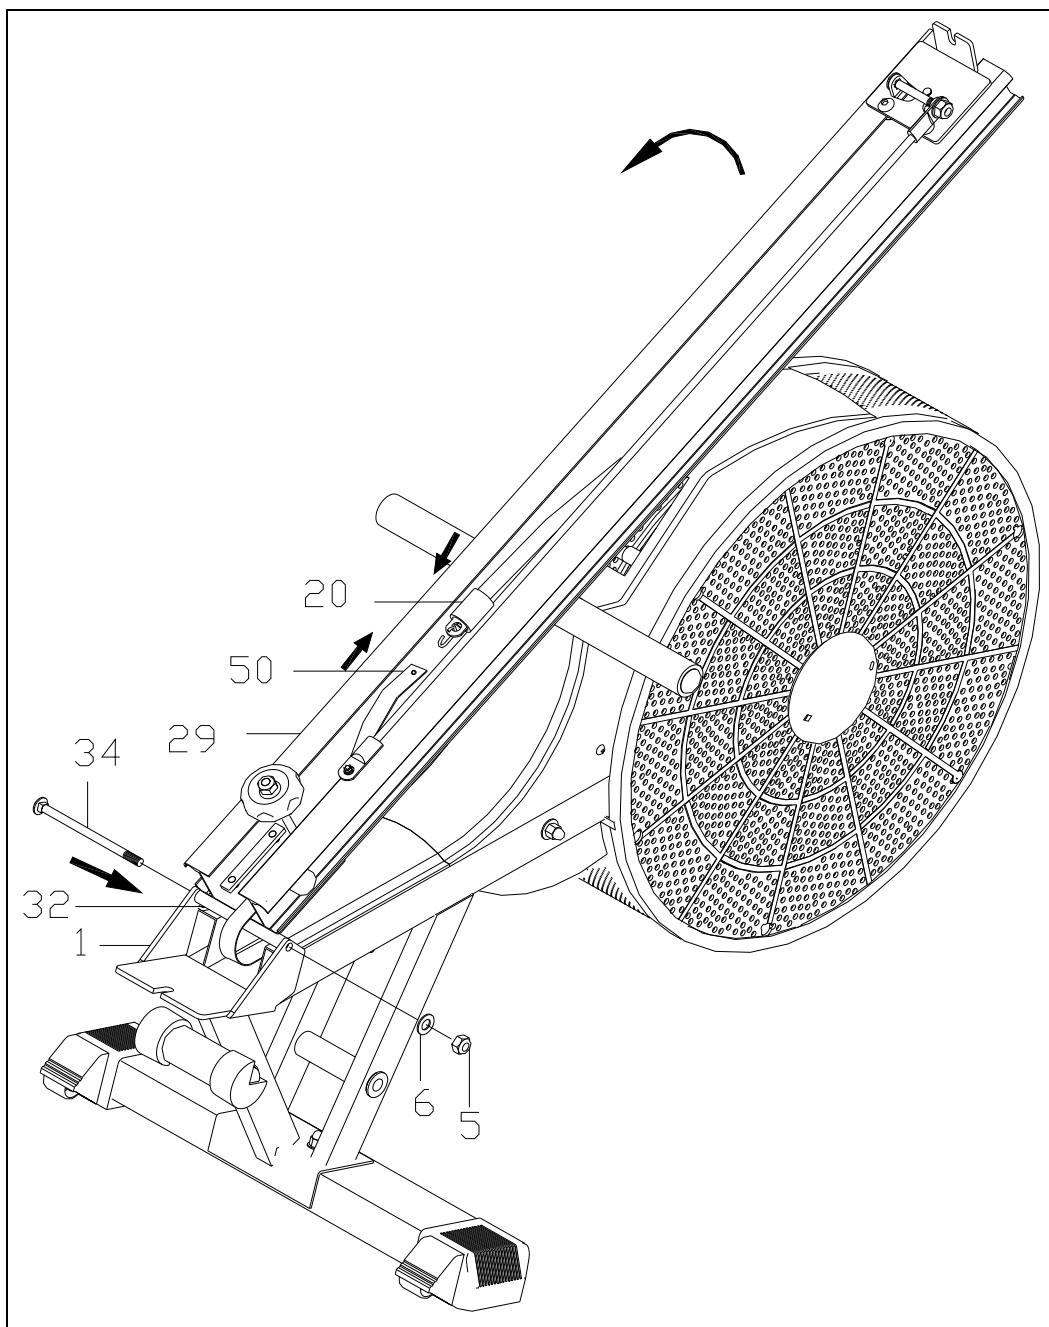

Stap 3

Montage van de achter stabilisator


- a). Monteer de achter satbilisator (3) op de zitting geleider (29) Gebruik bout (9), ring (6) , borgmoer (5) om dit vast te zetten, draai hierna de knop (7) vast.

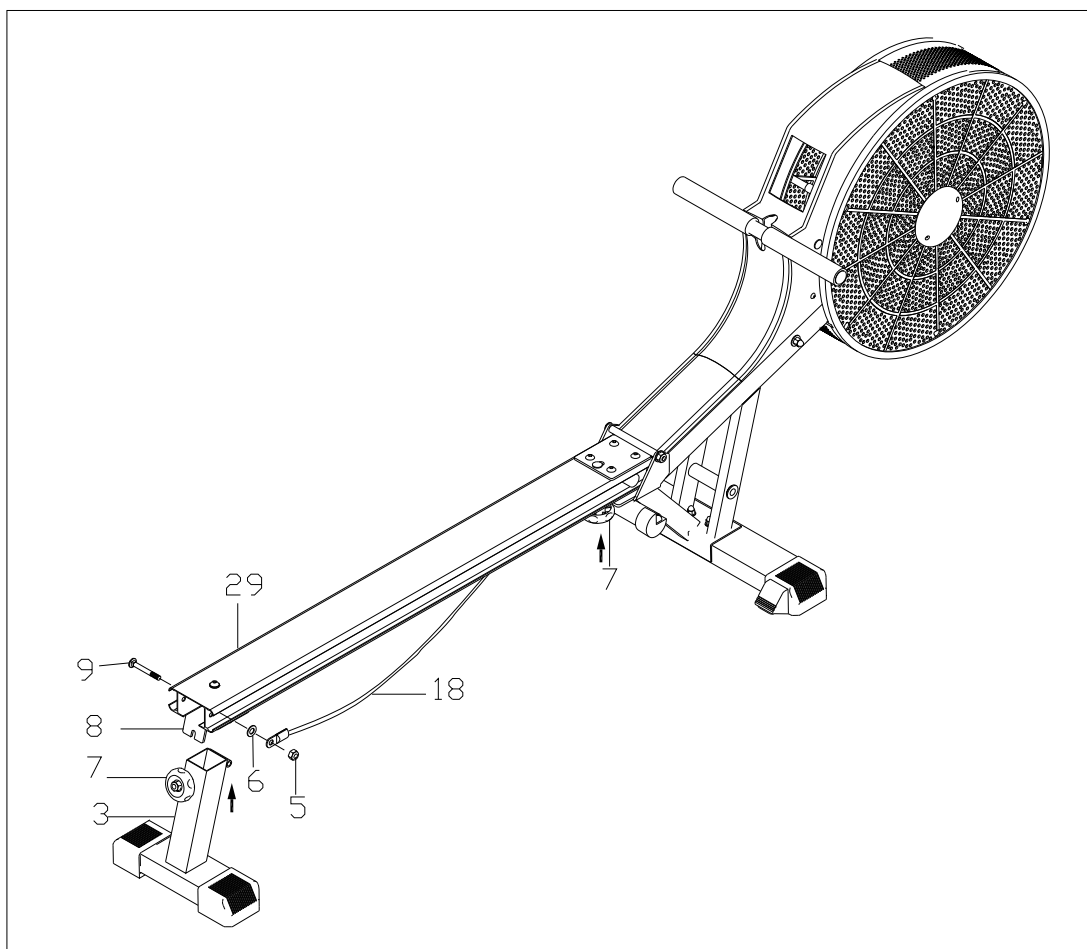

Stap 4

Montage van de pedalen


- a) Monteer de pedal as door het mainframe (1).
- b) Monteer de pedalen (37) en de pedal busjes (36) op de pedal as (42) (pedal busjes en pedalen) vast zetten met ringen (36) en borgmoeren (35).
- c) Plaats kabeltje (72) in de computer (71), druk nu de computer (71) in de daarvoor bestemde houder (73).

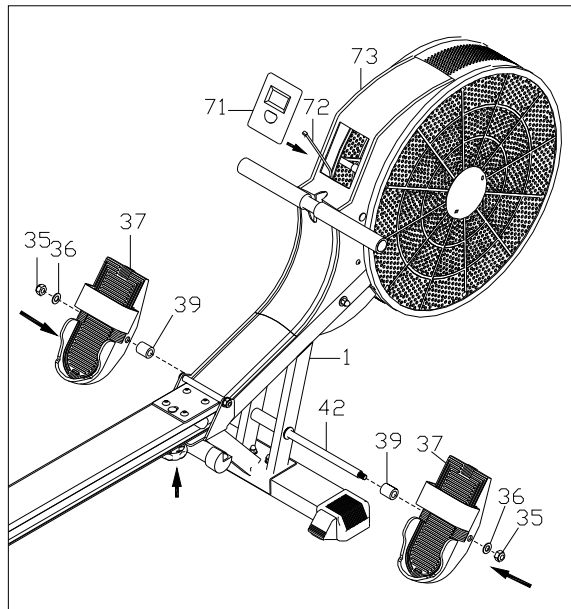


Stap 5

Montage van de zitting.


- a) Monteer de zitting (28) op de zitting geleider (29).
- b) Monteer de aanslag dopjes (13) in het einde van de zitting geleider (29).
- c) Monteer de beschermkap (12) in de achterkant van de zitting geleider (29).

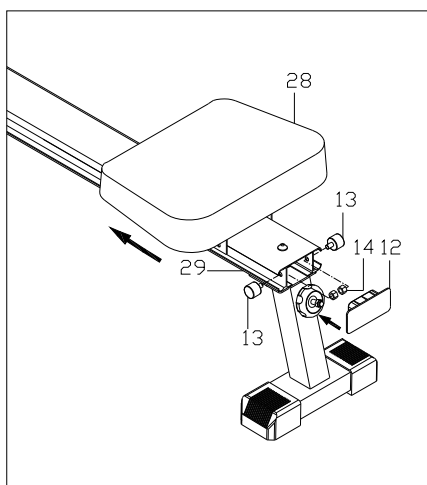

Onderdelen overzicht

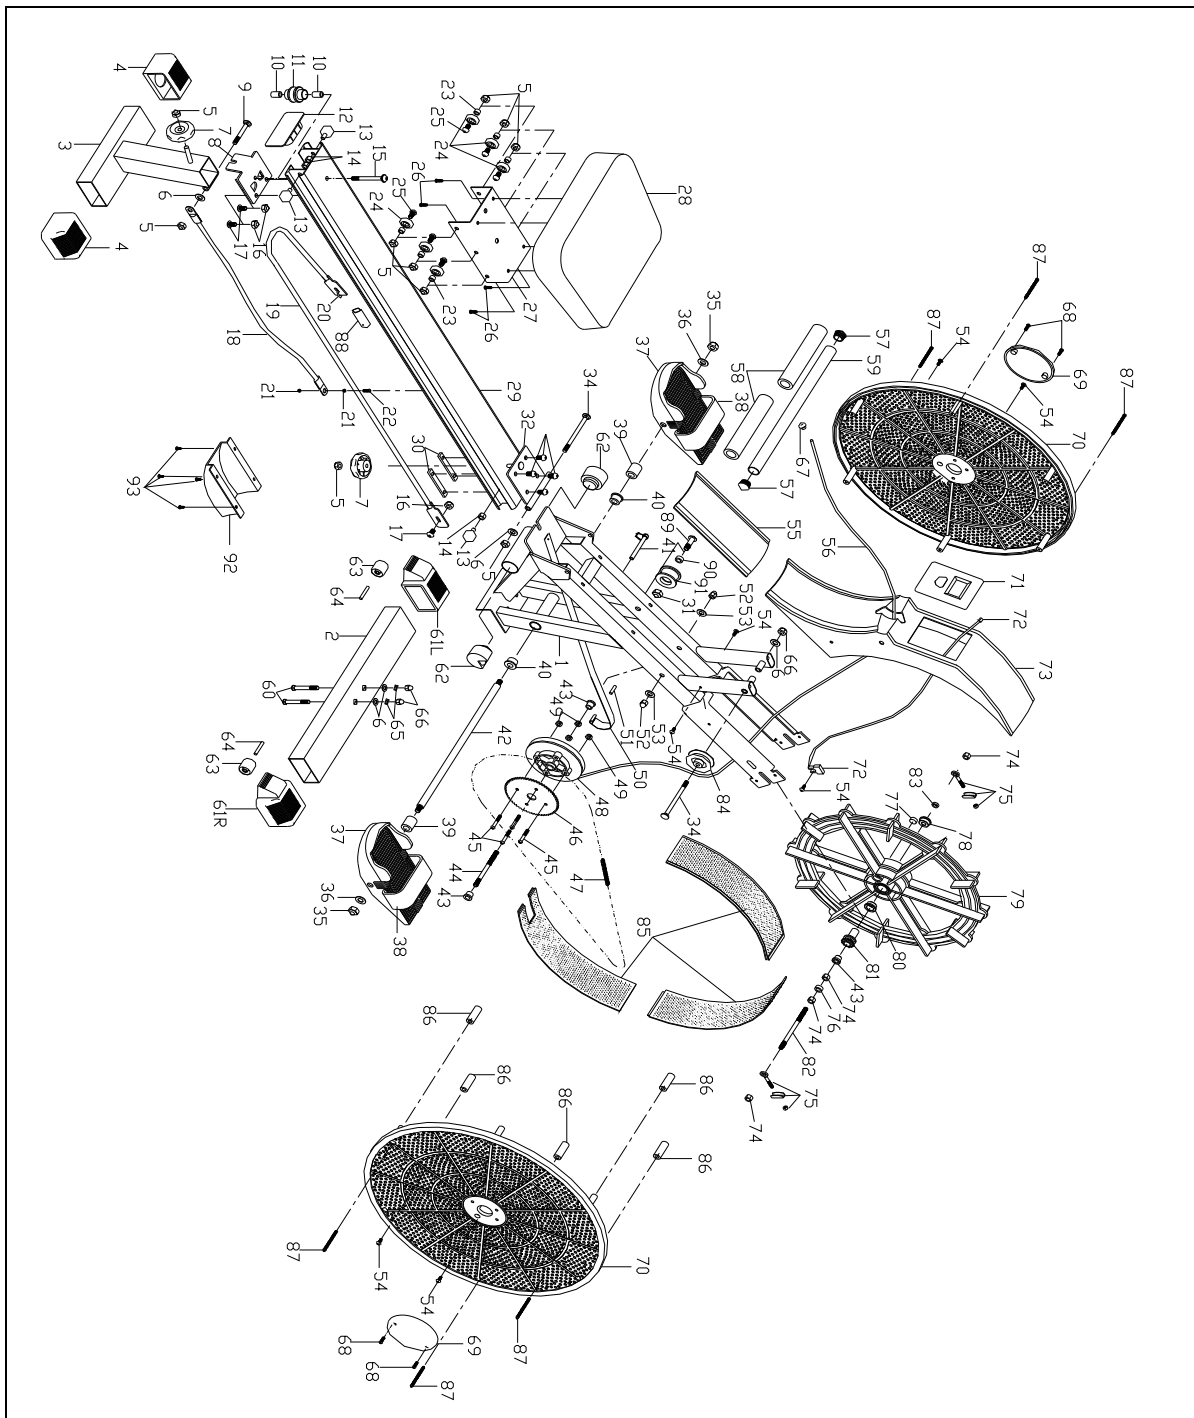

Opklapbaar maken

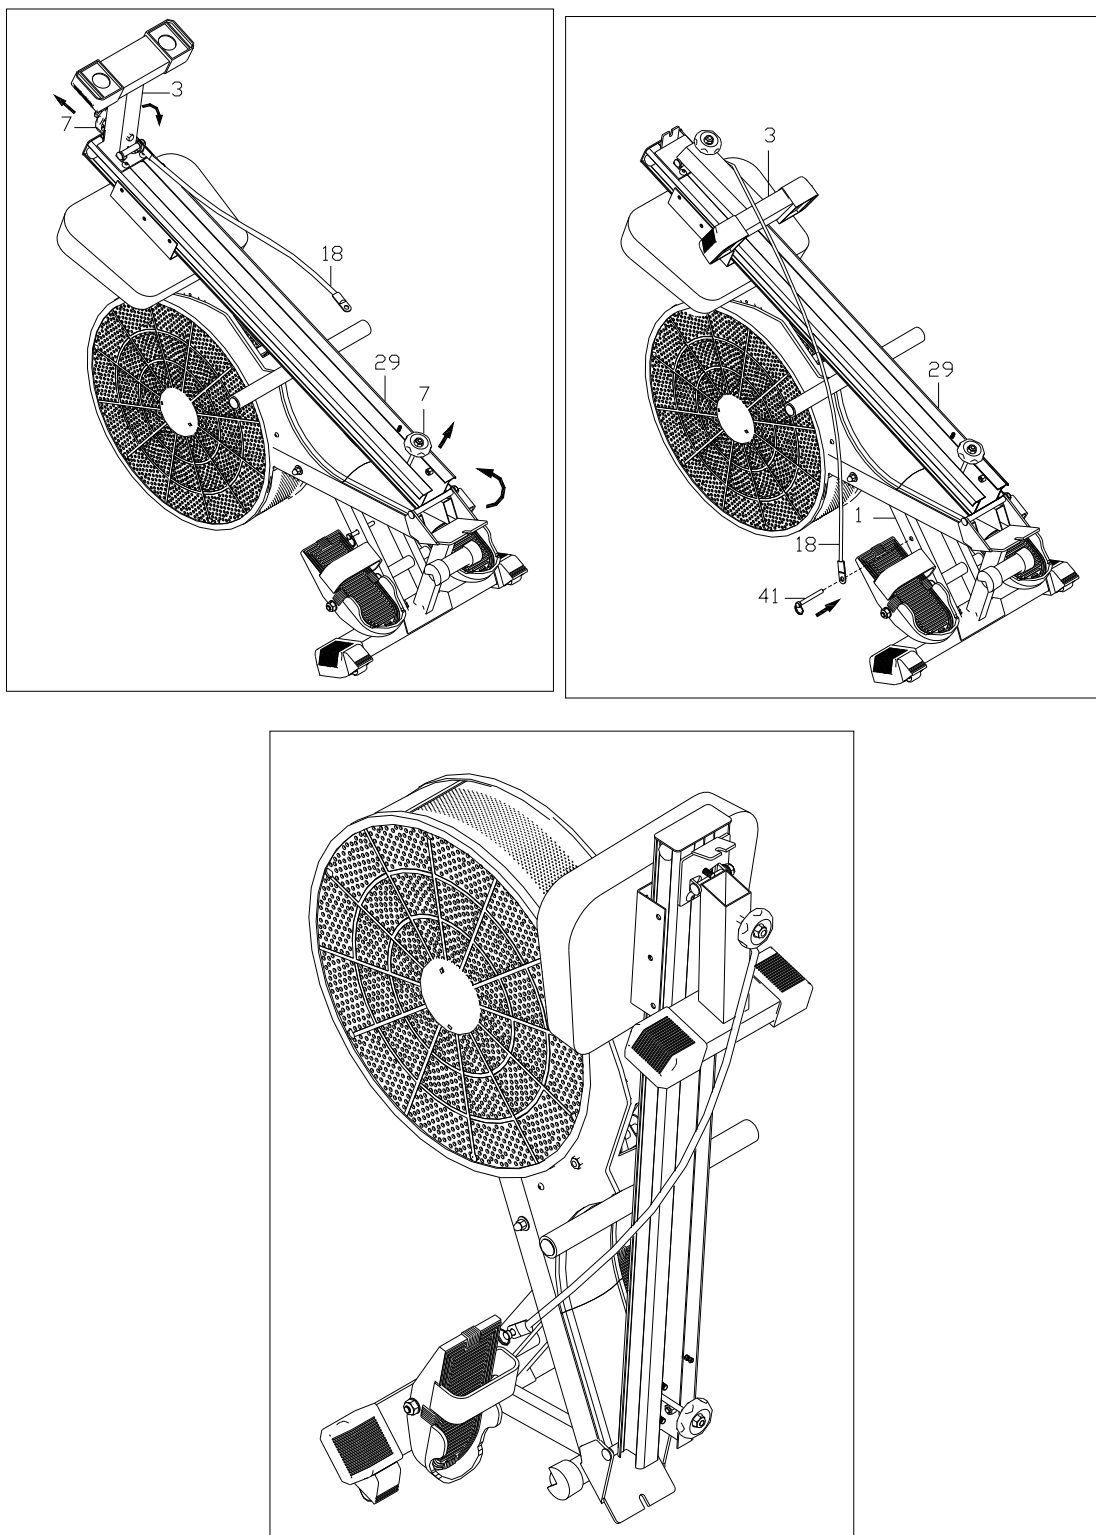

Onderdelen lijst


NR	Beschrijving	Aantal	NR	Beschrijving	Aantal
1	Hoofdframe	1	48	Pulley	1
2	Voor stabilisator	1	49	Borgmoer M6x1.0px6H	4
3	Achter stabilisator	1	50	Nylon koord	1
4	Achter stabilisator kapje	2	51	Koord geleider	1
5	Borgmoer M8x1.25Px8H	10	52	Moer 3/8"x26Wx17.6H	2
6	Ring $\phi 16 \times \phi 8.4 \times 1.0t$	5	53	Ring $\phi 26 \times 11 \times 2.0t$	2
7	Knop M8	2	54	Schroef M5x15L	7
8	Achter stabilisator houder	1	55	Beschermkap	1
9	Slotbout M8x1.25Px72L	1	56	Trektouw	1
10	Afstand busje $\phi 13 \times \phi 8.4 \times 20H$	2	57	Afdichtdopje	2
11	Elastiek geleider	1	58	Foam	2
12	Beschermkap	1	59	Stuur	1
13	Aanslag dopjes $\phi 25 \times M8 \times 13L$	3	60	Bout M8x1.25Px55L	2
14	Moer M8x1.25Px6H	3	61R/L	Voor stabilisator kapje	2
15	Bout M8x1.25Px60L	1	62	Afdichtdop	2
16	Borgmoer M8x1.25Px6H	3	63	Voor stabilisator wieltje	2
17	Kruisschroef M6x1.0Px12L	3	64	Asje	2
18	Elastiek koord	1	65	Veerring M8	2
19	Elastiek koord	1	66	Moer M8x1.25Px15.5H	3
20	Haak	1	67	Dopje	1
21	Moer M6x1.0Px4H	2	68	Bout M4x16L	4
22	Kruisschroef M6x1.0Px20L	1	69	Beschermkap	2
23	Afstands busje $\phi 12 \times \phi 8.4 \times 8H$	6	70	Grote beschermkap	2
24	PU wieltje	6	71	Computer	1
25	Lager	6	72	Sensor	1
26	Kruisschroef M6x1.0Px12L	4	73	Computer beschermkap	1
27	Zitting houder	1	74	Moer 3/8"x26wx9H	4
28	Zitting	1	75	Vlieg wiel versteller	2sets
29	Zitting geleider	1	76	Afstandsbusje $\phi 16 \times \phi 10 \times 7t$	1
30	Houder	2	77	Magneet	1
31	Borgmoer M10x1.5px7H	1	78	Busje	1
32	Houder	1	79	Vlieg wiel	1
33	Bout M8x1.25Px15L	4	80	Busje	1
34	Bout M8x1.25Px135L	2	81	Lager	1
35	Borgmoer 3/8"x16Wx12H	2	82	As 3/8"x26Wx145L	1
36	Ring $\phi 21 \times \phi 11 \times 2.5t$	2	83	Moer 3/8"x26wx4H	1
37	Pedaal	2	84	GUIDER	1
38	Pedaalband	2	85	Vlieg wiel beschermkap	3
39	Plastic busje	2	86	Afstandsbusjes $\phi 15 \times \phi 8.2 \times 45L$	5
40	Afstandsbusje	2	87	Schroef M5x75L	6
41	Pen	1	88	Afstandsbusje	1
42	Pedaal as	1	89	Boet M10x1.5Px55L	1
43	Busje	3	90	Afstandsbusje $\phi 16 \times \phi 10 \times 11L$	1
44	As	1	91	Druk wiel	1
45	Schroef	4	92	Pulley beschermkap	1
46	Crank	1	93	Bout M4x12L	4
47	Ketting	1			

Computer handleiding

Het gebruik van Uw computer.

De computer geeft de volgende 5 functies weer. (Tijd, Snelheid, afstand, calorieverbruik en scan).


- 1) Snelheid kan weergegeven worden in miles of kilometers per uur.
- 2) Afstand kan weergegeven worden van 0.1 tot 9999 miles of kilometers.
- 3) Tijd wordt weergegeven in uren: minuten: seconden met een maximum van 23 uur: 59 minuten: 59 seconden.
- 4) Calorieverbruik wordt weergegeven van 1-9999 calorieën.
- 5) SCAN is de functie die om de 4 seconde U de gegevens zal tonen zoals tijd, afstand, snelheid en calorieverbruik.
- 6) De computer zal automatisch na 4 minuten uitschakelen als U de roeier niet gebruikt, ook zal de computer weer automatisch inschakelen als U de roeier weer in gebruik neemt.
 - 1) Houdt de knop 4 seconde vast om de computer te resetten.
 - 2) Als U de batterijen de eerste keer installeert zal de computer opstarten in scan mode.

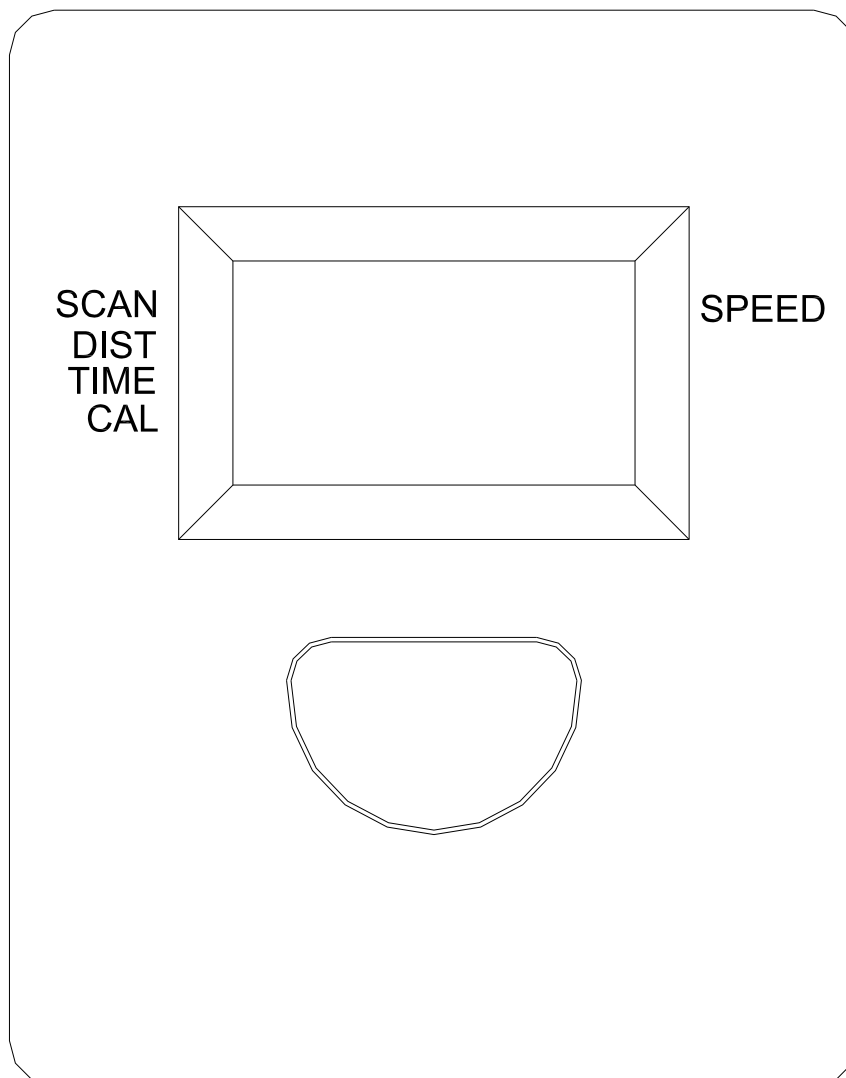



USER MANUAL

Joy Sport Concept

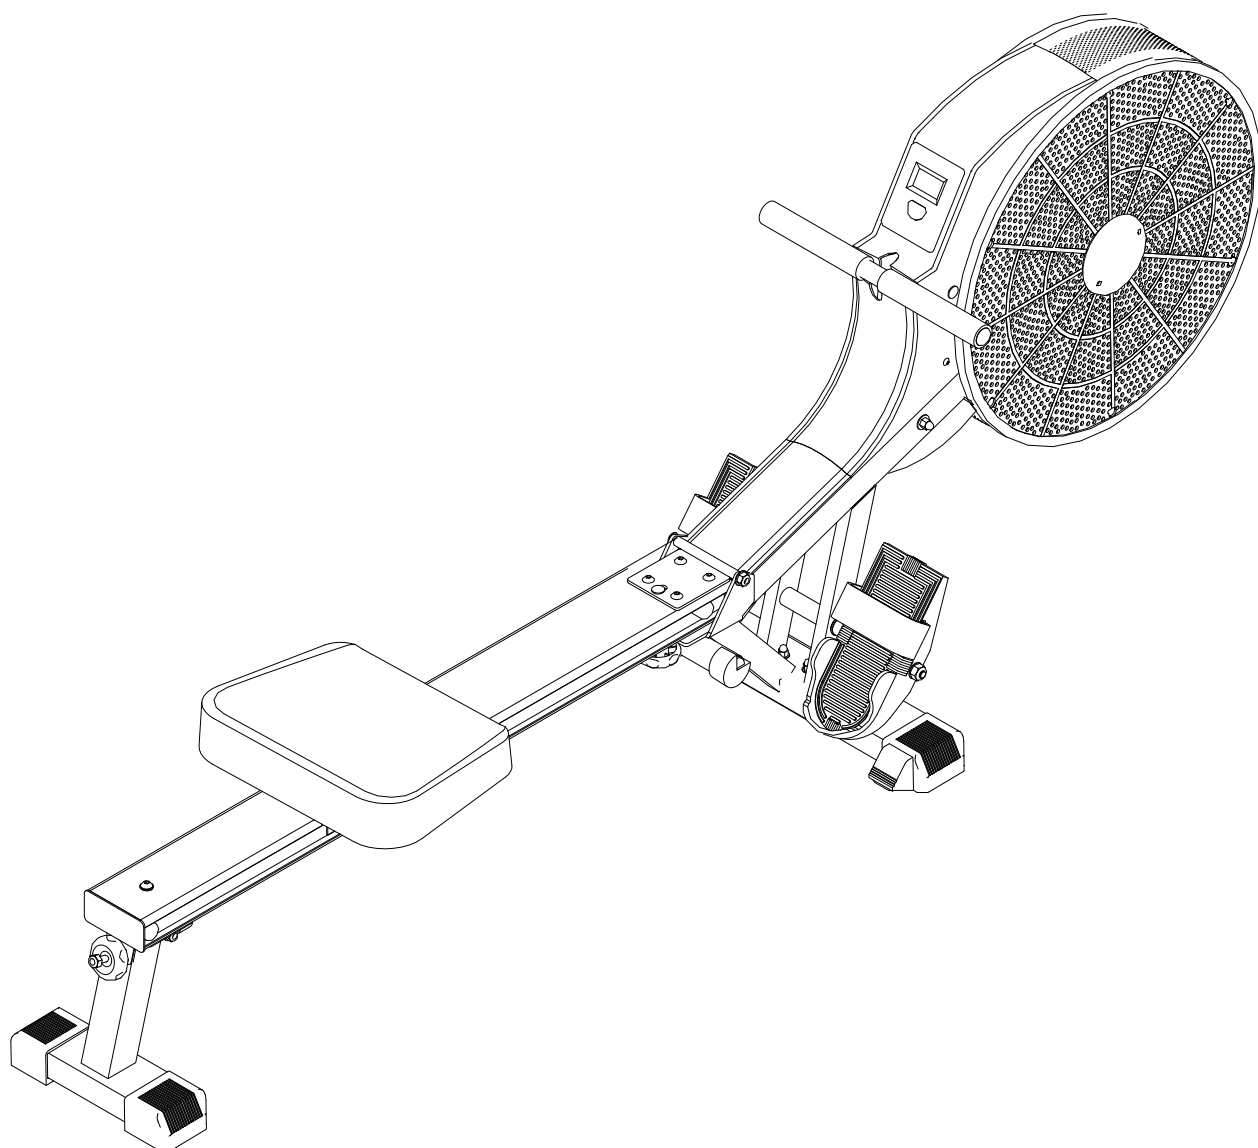

**PLEASE READ THIS MANUAL BROCHURE BEFORE ASSEMBLING THE
PRODUCT. KEEP THIS INSTRUCTION AS FUTURE REFERENCE.**

Joy Sport Importer

Fitness-Import
Timmermannsweg 46
5813 AP Ysselsteyn (LB)
info@joysport.nl
www.joysport.nl

Dear customer,

We want to thank you for having chosen a **JOY SPORT** product, and wish you a lot of fun and success during training with your **JOY SPORT** exercisers.

Please note and follow the enclosed safety and assembly instructions carefully.

If you have questions please do not hesitate to contact us.

Guarantee,

This guarantee covers all manufacturing and material flaws on **JOY SPORT** products purchased from an authorized **JOY SPORT** dealer for a period of 12 months from purchase.

If you wish to make a claim under the guarantee, **JOY SPORT** shall be entitled to repair or replace the defective unit or part at its discretion.

The owner of the unit must pay for the transport costs and any dealer's workshop costs.

To make a claim under the guarantee, take your guarantee card to your dealer.

The dealer will then take the necessary action.

If this is not possible, contact your national **JOY SPORT** importer.

The following are not covered by the guarantee : normal wear and tear and the consequences of improper treatment or damage caused by the purchaser or third persons and faults which are due to other circumstances.

Claims may not be made under the guarantee if modifications have been made to the original construction or equipment or if **JOY SPORT** original parts were not used to repair the unit.

In no event the manufacturer shall be liable for incidental or consequential losses, damages or expenses in connection with exercise products.

Fitness-Import
Timmermannsweg 46
5813 AP Ysselsteyn (LB)
info@joysport.nl
www.joysport.nl

ASSEMBLY

Assembling Your Air Bike

GENERAL

Remove all the parts of your rower from the carton and place them on the floor carefully.

Assembling your rower is simple!

Follow these instructions carefully and it should take you around 20-25 minutes.


TOOLS REQUIRED FOR ASSEMBLY (NOT SUPPLIED)




Adjustable Wrench




Hammer

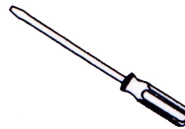

Phillips Screwdriver

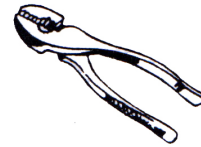

Pliers

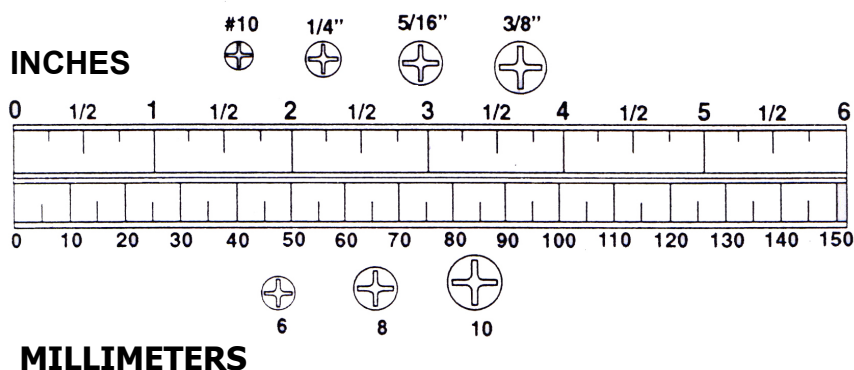


Place bolt or screw on ruler to find length in inches or millimeters. Place washer, end of bolt, or screw on circles to find size in inches or millimeters.


HARDWARE ILLUSTRATIONS



 
ALLEN
HEAD BOLT



CARRIAGE
BOLT

 

FLAT HEAD
MACHINE SCREW

 


SHEET
METAL SCREW



LOCKNUT














 FLAT
WASHER



CAPNUT

Check-List

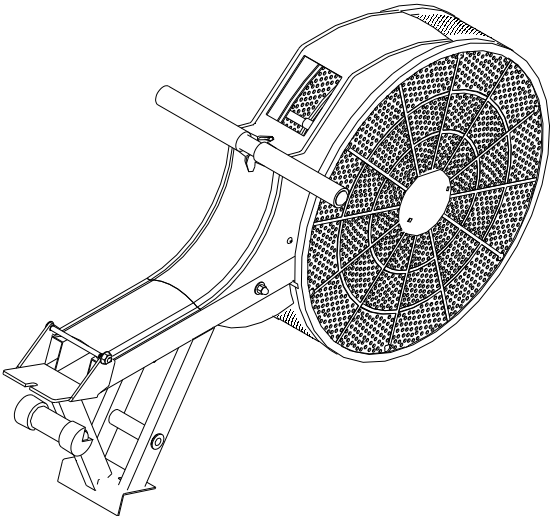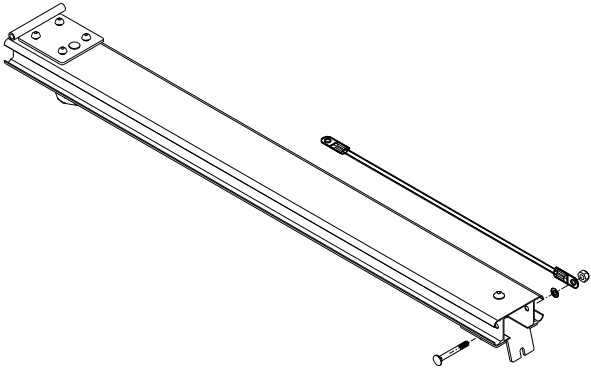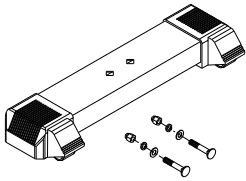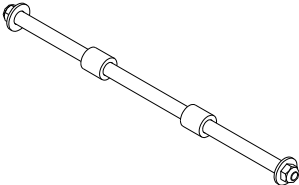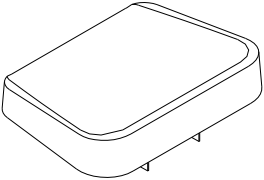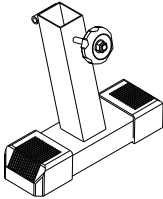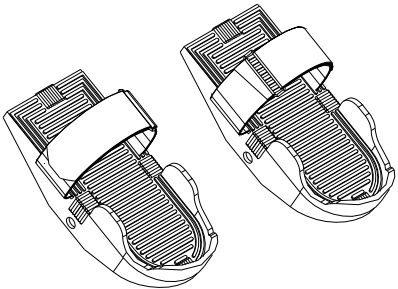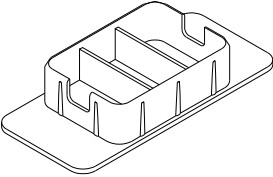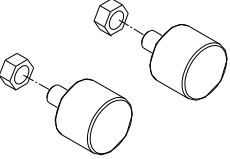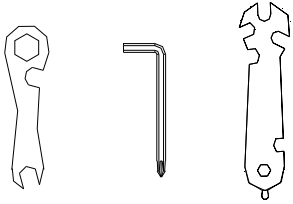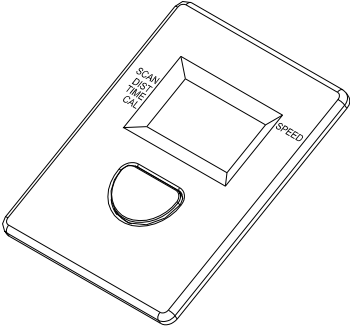
ASSEMBLY INSTRUCTIONS

Step 1

ATTACH THE FRONT STABILIZER

- a). Attach the **Front Stabilizer** (2) to the **Main Frame** (1) and secure, using two carriage bolts (60), two flat washers (6) ,two spring washers (65) and two capnuts (66) and tighten.


NOTE: Make sure our fasten the stabilizer with built in wheel.

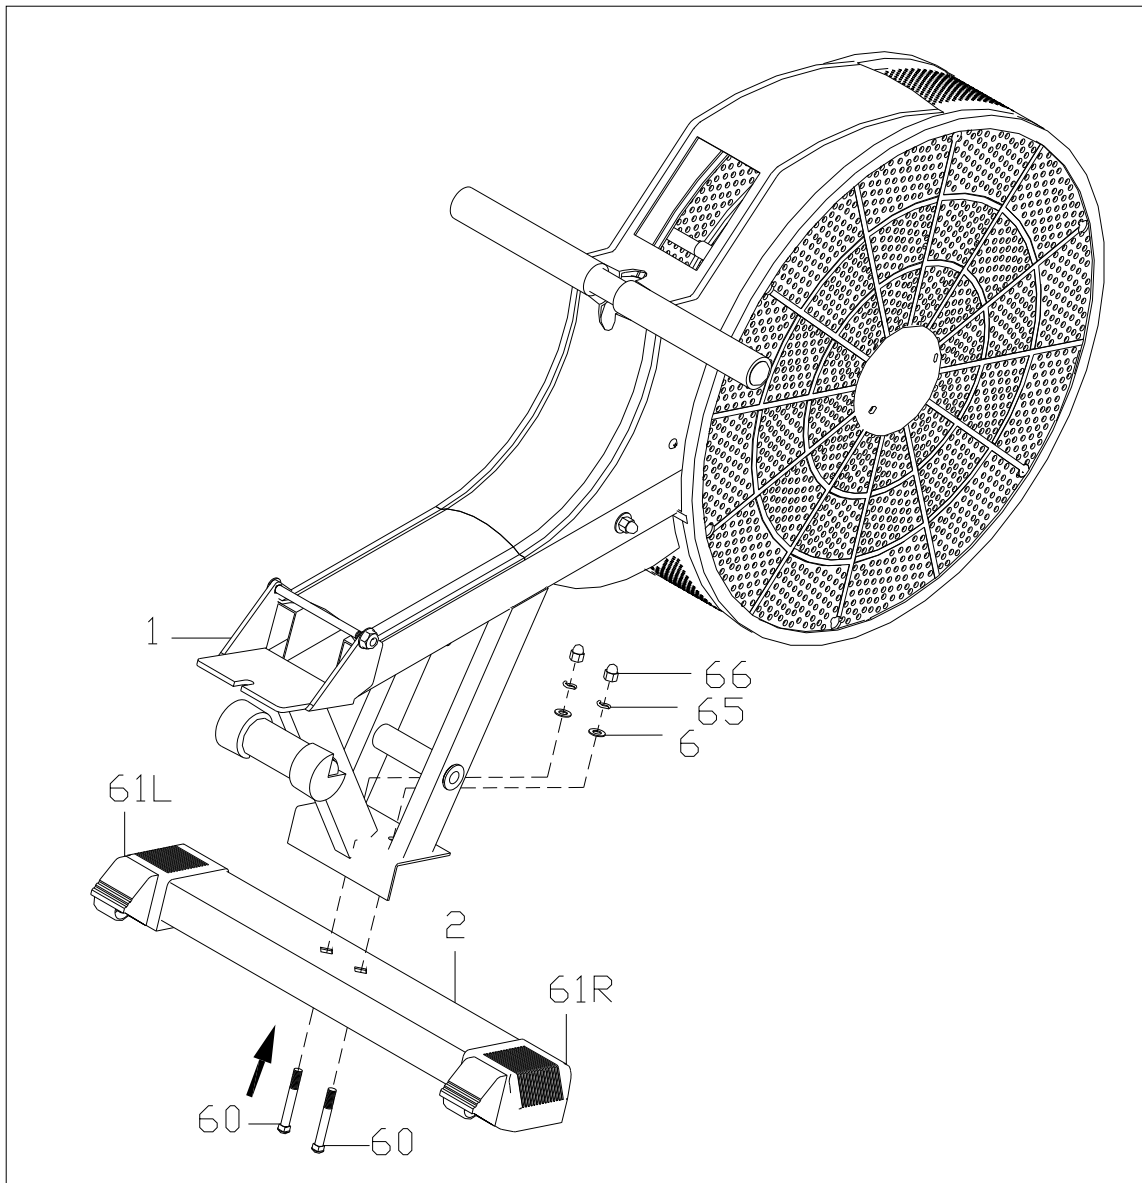

Step 2

ATTACH THE ALUMINUM TRACK


- a) Attach the **Aluminum Track** (29) with bracket (32) to the **Main Frame** (1) bracket and secure, using allen head bolt (34) , washer (6) and locknut. (5).
- b) Raise up the **Aluminum Track** (29) and connect the elastic cord (19) from the inside of the track (29) to the front strap (50) through the **Main Frame** (1) bracket with hook (20) then put the track (29) down.

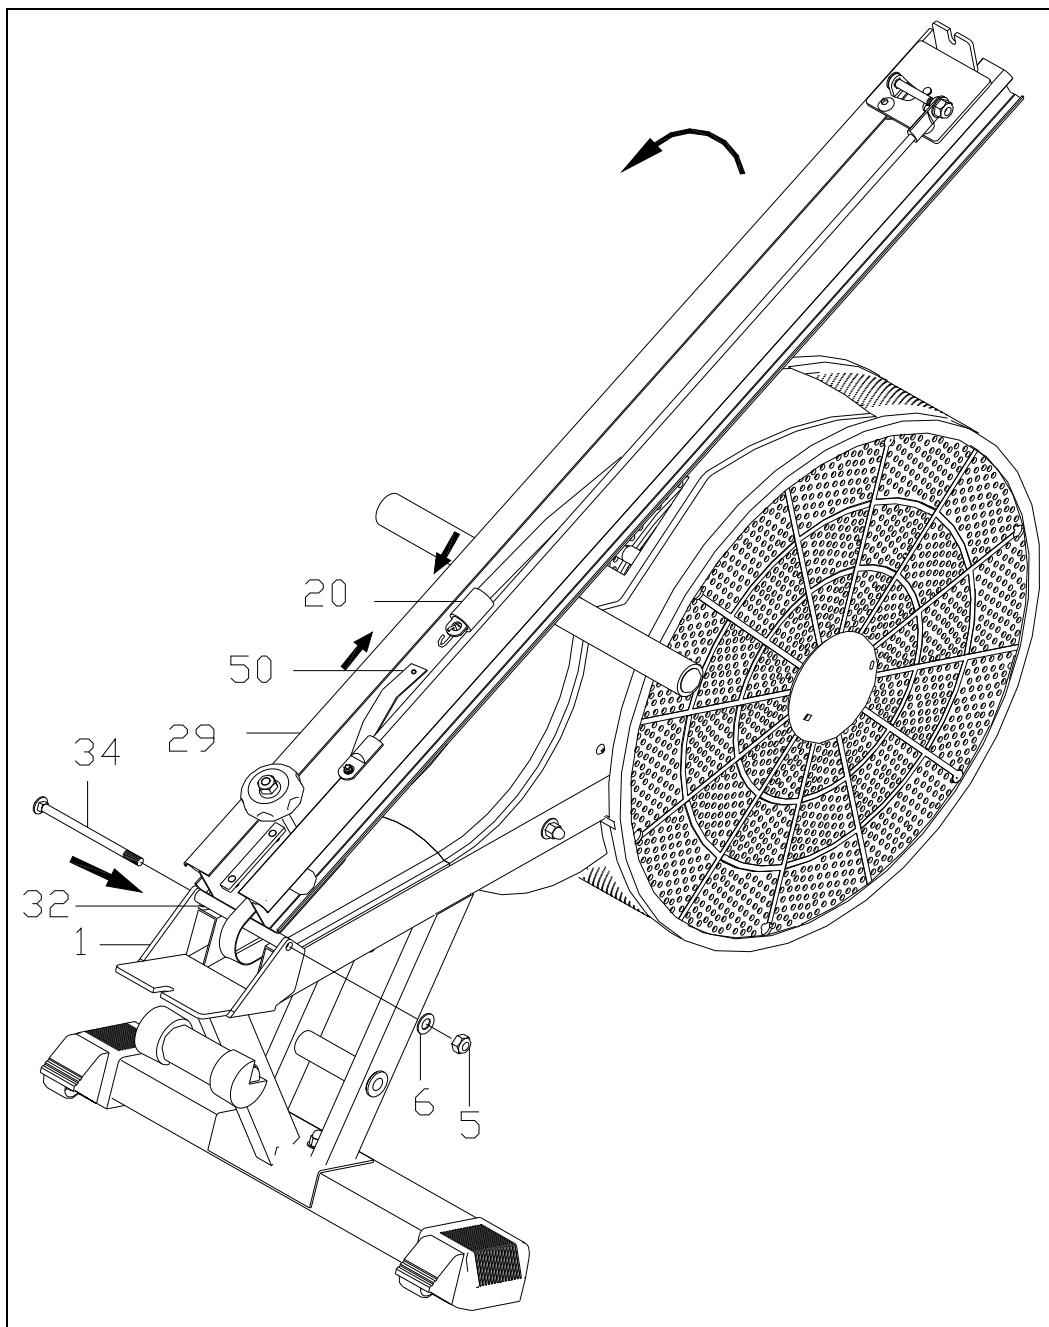

Step 3

ATTACH THE REAR STABILIZER


- a). Attach the **Rear Stabilizer** (3) to the **Rear Stabilizer Bracket** (8) and secure, using allen head bolt (9), washer (6) , locknuts (5) and rear adjustment knob (7) and tighten.

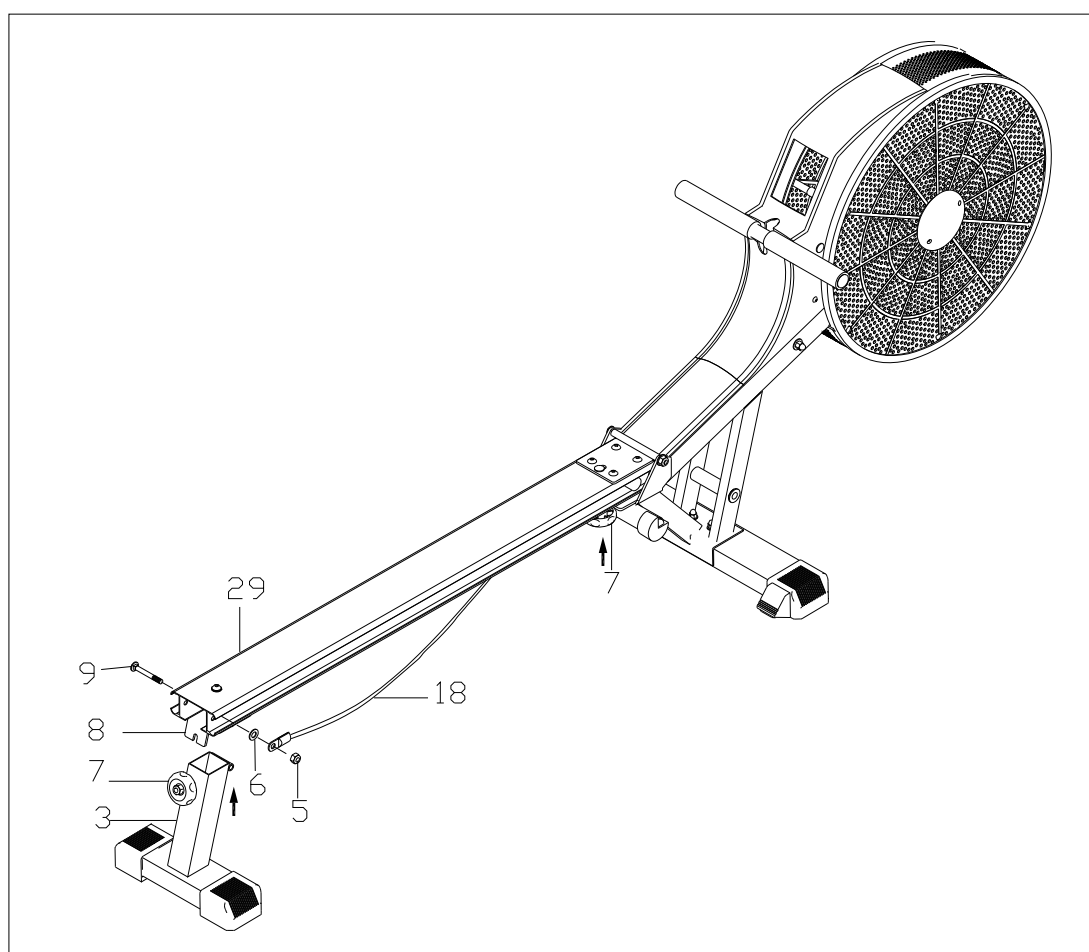

Step 4

ATTACH THE PEDALS


- Thread the pedal rod through the tube on the main frame (1).
- Slide the pedals (37) and spacers (36) onto the pedal axle (42) (spacer inside, the pedal) and fasten with washers (36) and locknuts (35).
- Connect the socket of sensor (72) to the plug of computer (71), then press the **Computer** (71) into position on the console (73).

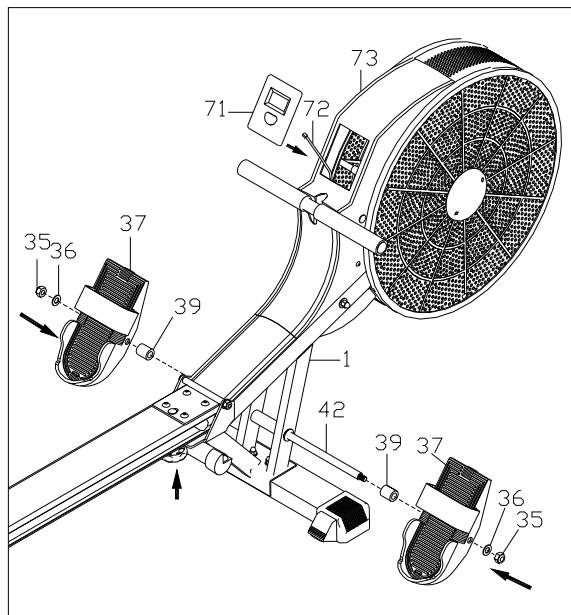


Step 5

ATTACH THE SEAT TO THE SEAT CARRIAGE



- Attach the **Seat** (28) onto the aluminum track (29) for both sides.
- Insert the end stoppers (13) to the end holes of track (29).
- Attach the track end cap (12) to the rear end of the aluminum track (29).

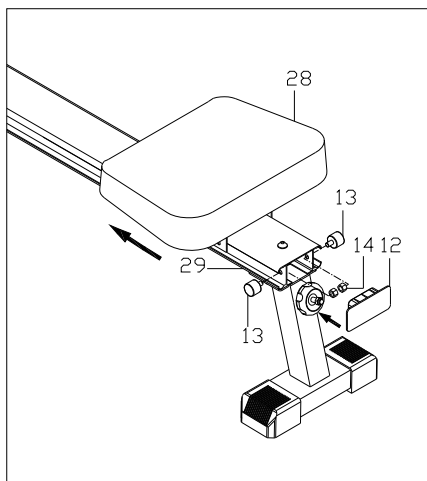

Explosion Drawing

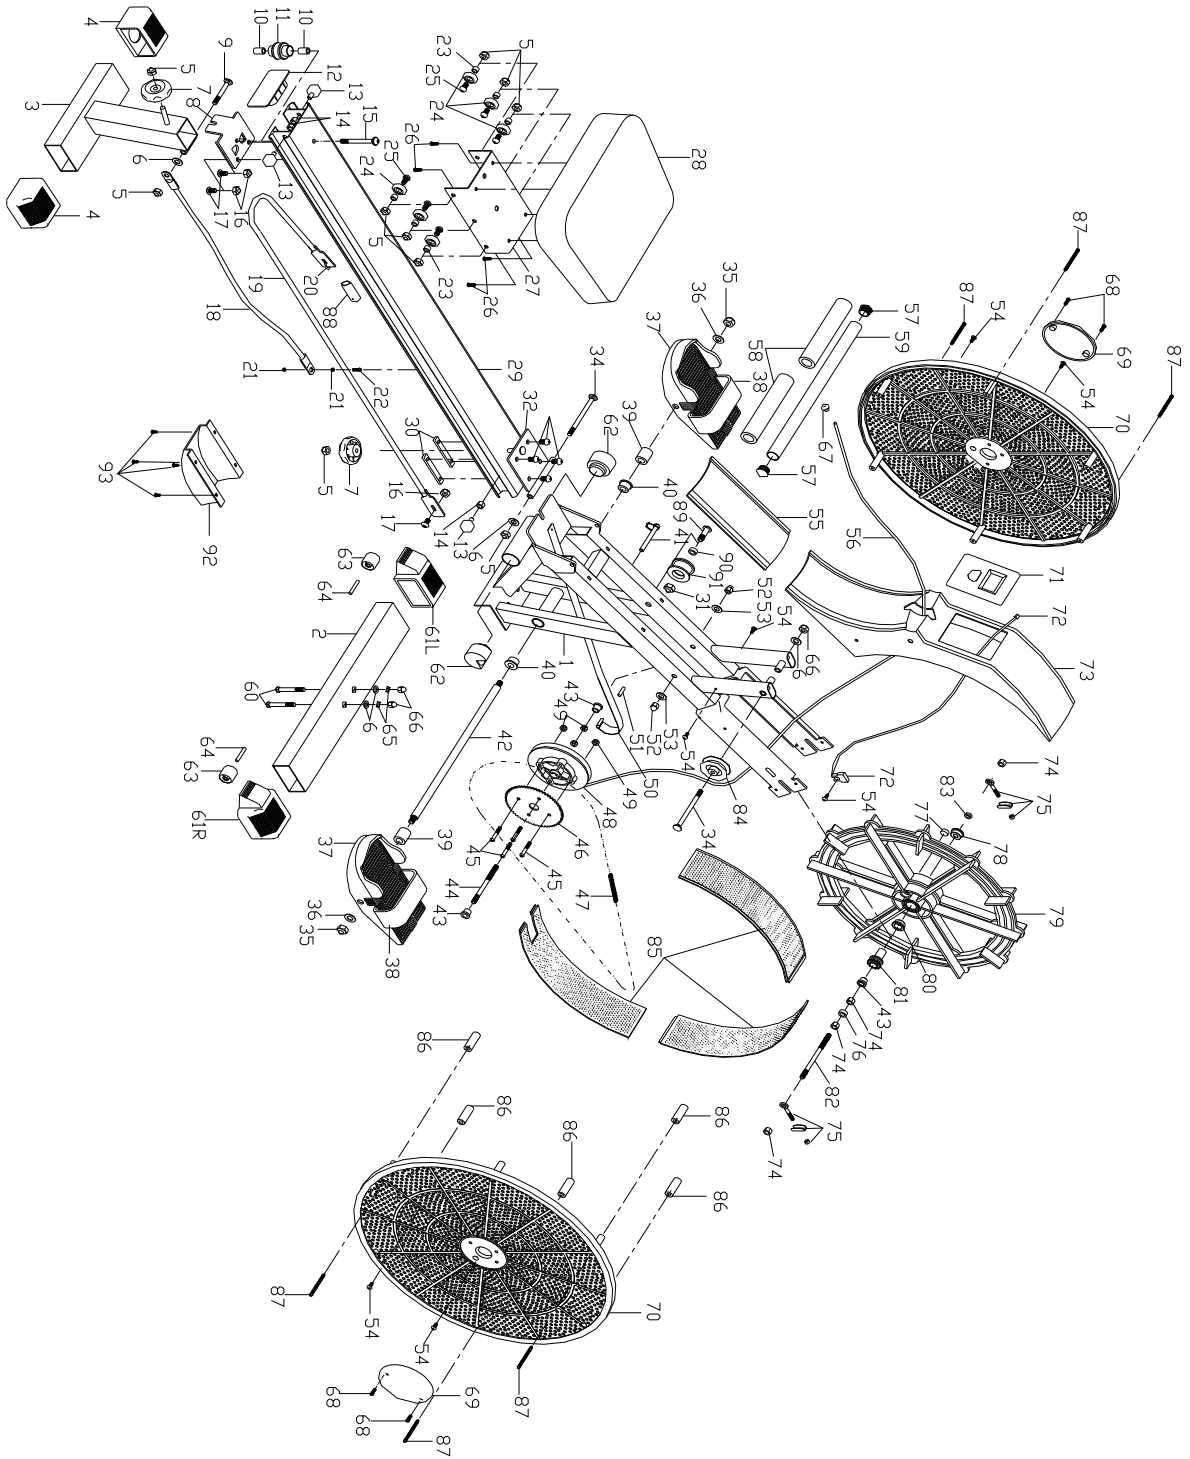

Assembly Instruction

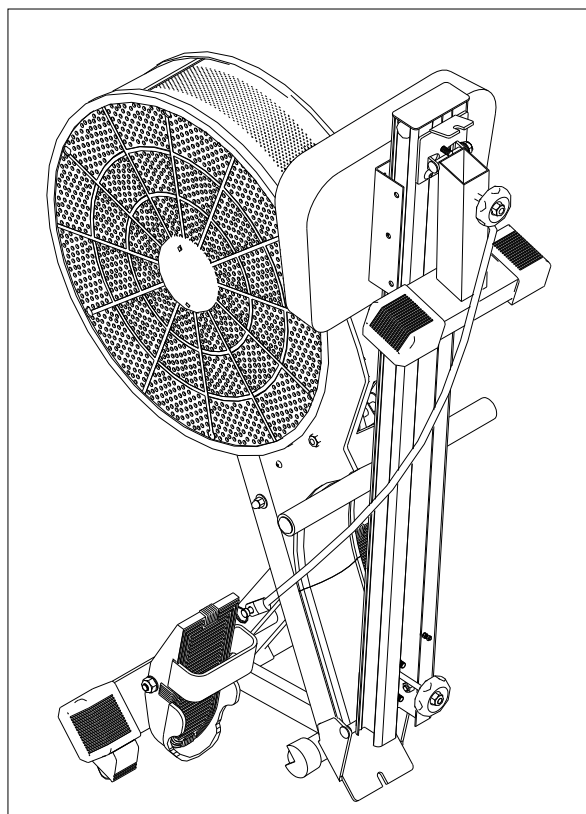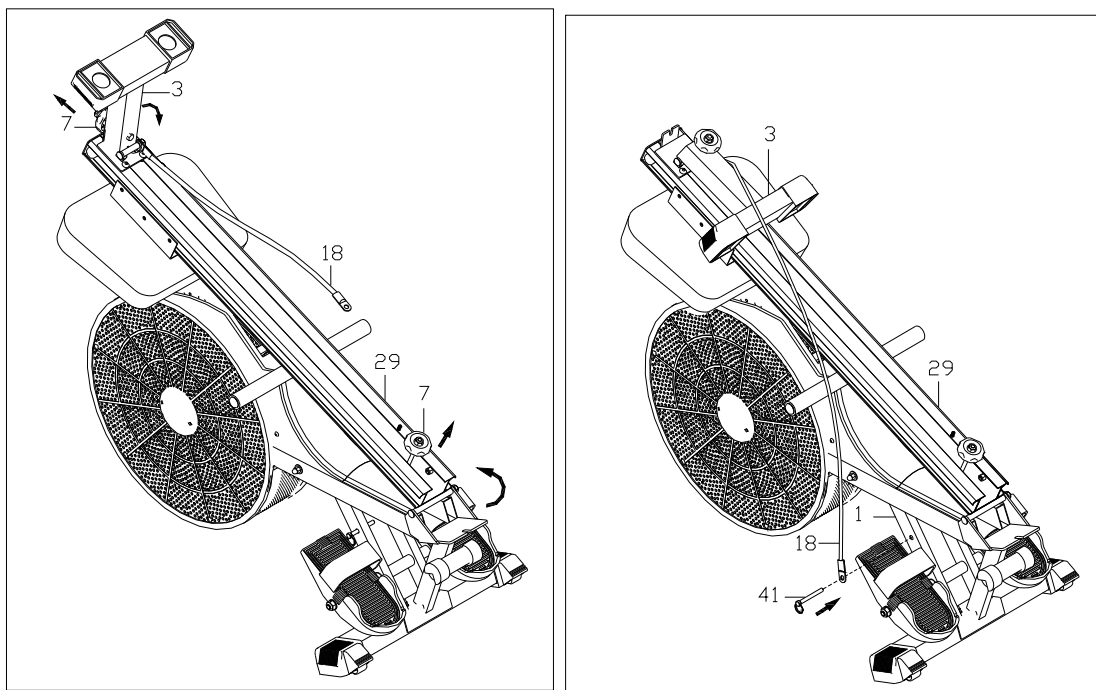

Part List

NO	Description	Q'ty	NO	Description	Q'ty
1	FRAME	1	48	PULLEY	1
2	FRONT STABILIZER	1	49	LOCK NUT M6x1.0px6H	4
3	REAR STABILIZER	1	50	STRAP	1
4	END CAP	2	51	BELT FIXER	1
5	LOCK NUT M8x1.25Px8H	10	52	CAP NUT3/8"x26Wx17.6H	2
6	FLAT WASHERφ16xφ8.4x1.0t	5	53	FLAT WASHERφ26x11x2.0t	2
7	KNOB M8	2	54	MACHING SCREW M5x15L	7
8	REAR STABILIZER FIXER	1	55	DECORATION COVER	1
9	ALLEN SCREW M8x1.25Px72L	1	56	ROPE	1
10	SPACERφ13xφ8.4x20H	2	57	END CAPφ1"	2
11	ELASTIC CORD FIXING WHEEL	1	58	FOAM	2
12	END CAP	1	59	HANDLEBAR	1
13	STOPPERφ25xM8x13L	3	60	CARRIAGE BOLT M8x1.25Px55L	2
14	NUT M8x1.25Px6H	3	61R/L	FOOT-CAP	2
15	ALLEN BOLT M8x1.25Px60L	1	62	FOOT-CAP	2
16	LOCK NUT M8x1.25Px6H	3	63	FOOT-CAP WHEEL	2
17	PHILIPS SCREW M6x1.0Px12L	3	64	FOOT-CAP WHEEL AXLE	2
18	ELASTIC CORD	1	65	SPRING WASHER M8	2
19	ELASTIC CORD	1	66	CAP NUT M8x1.25Px15.5H	3
20	C HOOK	1	67	FIXING PLUG	1
21	NUT M6x1.0Px4H	2	68	ROUND MACHINE SCREW M4x16L	4
22	PHILIPS SCREW M6x1.0Px20L	1	69	FAN COVER CAP	2
23	SPACERφ12xφ8.4x8H	6	70	FAB COVER	2
24	PU WHEEL	6	71	MONITOR	1
25	BEARING	6	72	SENSOR	1
26	PHILIPS SCREW M6x1.0Px12L	4	73	FRAME PROTECTING CAP	1
27	SEAT CARRIAGE	1	74	NUT3/8"x26wx9H	4
28	SEAT	1	75	FAN WHEEL ADJUSTOR M6x50L	2sets
29	ALUMINUM TRACK	1	76	SPACERφ16xφ10x7t	1
30	BRACKET	2	77	MAGNET	1
31	LOCK NUT M10x1.5px7H	1	78	BUSHING	1
32	CONNECTER	1	79	FAN WHEEL	1
33	ALLEN SCREW M8x1.25Px15L	4	80	BUSHING	1
34	ALLEN BOLT M8x1.25Px135L	2	81	ONE-WAY BEARING	1
35	LOCK NUT3/8"x16Wx12H	2	82	AXLE3/8"x26Wx145L	1
36	FLAT WASHERφ21xφ11x2.5t	2	83	NUT3/8"x26wx4H	1
37	PEDAL	2	84	GUIDER	1
38	PEDAL STRAP	2	85	FAN COVER SLEEVE	3
39	PLASTIC SLEEVE	2	86	PLASTIC SPACERφ15xφ8.2x45L	5
40	SPACER	2	87	ROUND MACHINE SCREW M5x75L	6
41	PIN	1	88	ELASTIC CORD SPACER	1
42	PEDAL AXLE	1	89	ALLEN BOLT M10x1.5Px55L	1
43	BUSHING	3	90	SPACERφ16xφ10x11L	1
44	AXLE	1	91	PRESSING WHEEL	1
45	SCREW M6x1.0Px30L	4	92	PULLEY COVER	1
46	CRANK	1	93	PHILIPS SCREW M4x12L	4
47	CHAIN	1			

COMPUTER MONITOR INSTRUCTIONS

Using Your Monitor:

Your MONIOR is designed to provide five functions (Tune, Speed, Distance, Calories and Scan).

- 1) SPEED can be displayed in either "Miles" or "KM" per hour.
- 2) DISTANCE is displayed from 0.1-9999 miles or km.
- 3) TIME is displayed in hours: minutes: seconds up to 23 hours: 59 minutes: 59 seconds.
- 4) CALORIES is displayed 1-9999 KCAL.
- 5) SCAN sequentially displays Times, Distance and Calories to help you monitor each function.
- 6) The monitor will shut off itself. If no movement is detected for 4 minutes.

To turn the monitor "ON"

- 1) Press the 'Mode/Reset' button for 2 seconds to clear the monitor.
- 2) The monitor will automatically turn on as you begin to pedal.
- 3) Initial start up will be in SCAN mode.

To Set Miles or Kilometers

- 1) Flip to switch on back of the monitor to desired setting.
- 2) Take one battery out from the case.
- 3) Now replace the battery back into the case.
- 4) Your monitor will be in the mode of measurement selected.

To View "Time" Only

- 1) Selectively press the "Mode/Reset" button until "D" appears in the display.
- 2) You are now in "Time" function. The "SCAN" function has ben disengaged.

To View "SPEED"

- 1) Speed is automatically displayed as you begin to pedal.

To View "Distance" Only

- 1) Selectively press the "Mode/Select" button until "D" appears in the display.
- 2) You are now in "Distance" funtion. The "SCAN" function has been disengaged.

To view "CALOEIES" Only

- 1) Selectively press the "Mode/Reset" button until "C" appears in the display.
- 2) You are now in "DISTANCE" function. The "SCAN" function has been disengaged.
- 3) Caloris are calculated based on the speed of pedaling and the duration of the time-Calories burned will automatically stop when you stop pedaling.

To View by Using "SCAN"

- 1) Selectively press the "Mode/Reset" button until "{}" appears in the display.
- 2) You are now in "SCAN" MODE.
- 3) You may also reset your monitor at any time by pressing and holding the "Mode/Reset" button. This will automatically place you in "SCAN" mode.

To Reset your Monitor

- 1) To reset or clear your monitor, simply press and hold the "Mode/Reset" button for 2 seconds.
- 2) Your monitor is now reset and all functions will appear as zero until you begin your workout.

