




DRUID LCD 2x

Electric Fence Energizer

Installer Manual

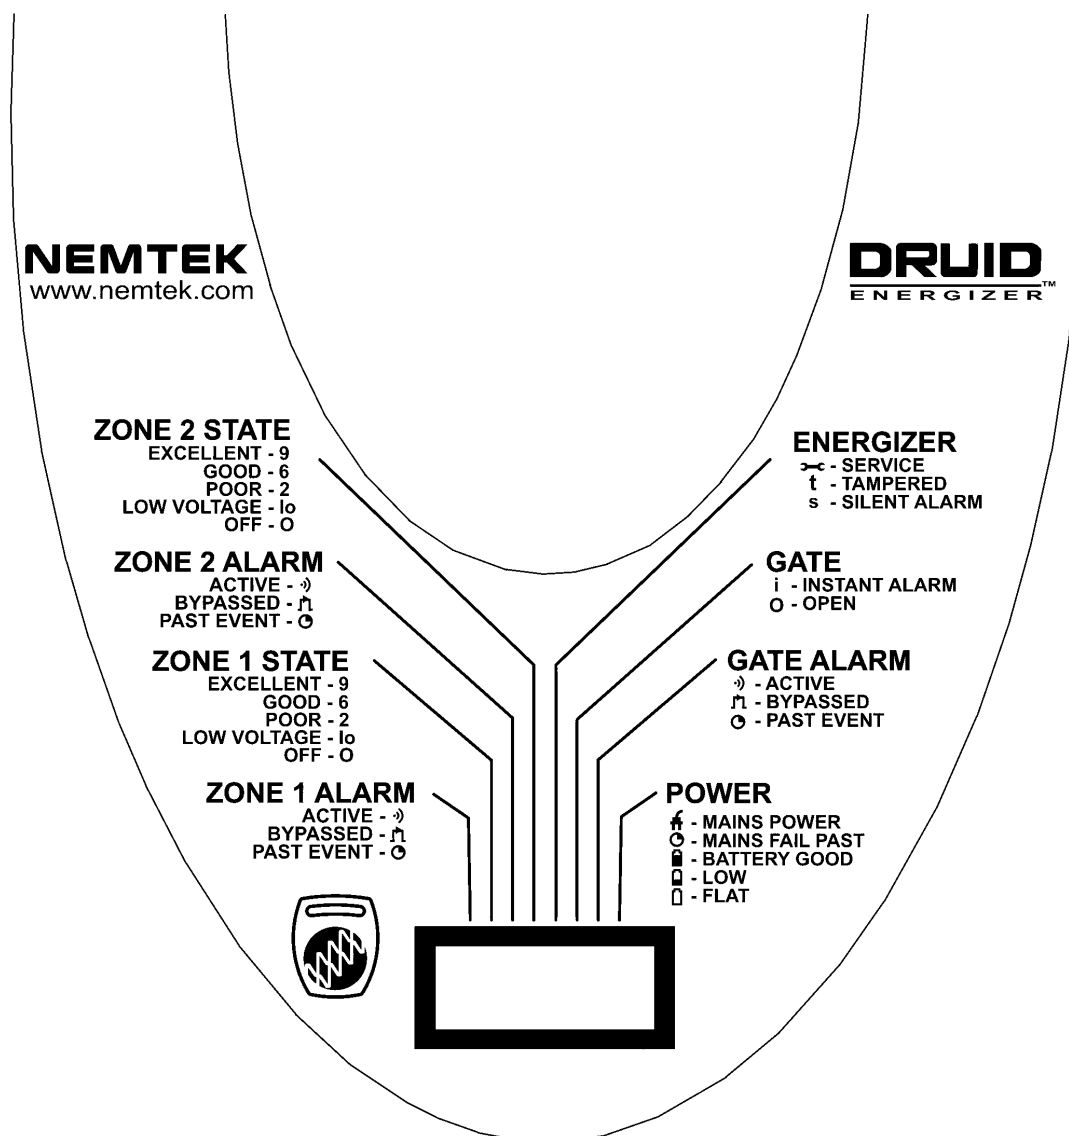

Introduction & disclaimer	3
Nemtek group outlets	4
Foreword	5
Mounting & battery replacement	6
PC Board replacement	7
Connections and configuration	8
Fence wiring diagrams	9
Creating a 4 zone installation	10
Detailed service indicators & Fuses	11
Installation notes	12
Programmable options	13 – 22
Appendix	23
Programmable options summary	26
Document revision history	27

INTRODUCTION

The DRUID LCD is a battery (12V 7AH nominal) operated energizer suitable for connection to mains (AC 100V-240V, 50-60Hz).

The batteries to be used are rechargeable lead-acid batteries. Non-rechargeable batteries must not be used. The lead-acid batteries require venting and it is imperative that the energizer be situated in a well-ventilated area.

A new fully charged battery will typically provide in excess of 24 hours backup. Backup time will vary with fence condition though.

Electric fencing can be lethal. Please avoid entanglement\entrapment hazards (See APPENDIX at the end of this manual) and warn the user to avoid head contact with the fence.

DISCLAIMER

NEMTEK Holdings (Pty) Ltd or any of its subsidiary companies does not guarantee that the operation of the product will be uninterrupted or totally error free.

Energizer specifications may be altered without prior notification.

The installer is referred to the definitions and general requirements in the Appendix.

The installer must take into consideration the applicable municipal laws concerning the installation of electric fences. General guidelines are available, or refer to the website: <http://www.nemtek.com>. International standards can be viewed at <http://www.iec.ch> and South African standards on <http://www.sabs.co.za>.

NEMTEK GROUP OUTLETS**NEMTEK (Head Office)**

Tel: +27 (0)11 462 8283
Fax: +27 (0)11 462 7132

Units 4 & 5, 64 Vervoer Street
Kya Sand, Randburg
Johannesburg

NEMTEK (Edenvale)

Tel: +27 (0)11 453 1970
Fax: +27 (0)11 453 1858

Meadowdale Park
Cnr. Dick Kemp & Herman Roads
Meadowdale, Edenvale

NEMTEK (Cape Town)

Tel: +27 (0)21 386-3742
Fax: +27 (0)21 386-5573

27B Concord Crescent
Airport City
Cape Town

NEMTEK (Nelspruit)

Tel: +27 (0)13 752-2187
Fax: +27 (0)13 752-2188

Unit 1, 8 Waterfall Ave
Riverside Industrial Park
Nelspruit

NEMTEK (KwaZulu Natal)

Tel: +27 (0)31 701-2125
Fax: +27 (0)31 701-3728

Unit 1, Devon Park
11 Devon Road
Pinetown

Website: www.nemtek.com
E-mail: nemtek@nemtek.com

Manufactured in South Africa

FOREWORD

The DRUID LCD 2x energizer should ideally be operated by means of a remote keypad to obtain access to the many energizer features and receive the greatest protection. It can however be operated by means of a Nemtek tab or external switch.

The energizer includes many user and installer settings. These will be retained in the event of total power loss. i.e. the battery is exhausted during a prolonged mains failure.

The energizer can be configured as a master only 2 zone installation, or as a master and slave networked 4 zone installation. Only a master energizer can communicate with keypads and other devices present on the keypad bus.

A set of jumpers positioned above each of the three energizer relays, allow the relay contacts to be configured as either wet (providing 12V nominal power) or dry (potential free) contacts.

The energizer display will light with a blue (OFF), green (all is OK), yellow (alarm in history or other medium priority event) or red (active alarm condition exists) background to announce the energizer's state at a glance and from a distance.

The DRUID LCD energizer incorporates an advanced and patented fence voltage regulation, arc detection and avoidance system. What this means is, the fence energy is maintained at a higher level than would normally be possible using a conventional energizer on the same fence, when factors such as poor or damaged insulators, wet insulators after a rain storm, or salt build up on insulators (at the coast) prevent the fence from supporting a high voltage. A conventional energizer will push all available energy through any arcing that may occur across the insulator, thus reducing the fence's effectiveness. The DRUID LCD energizer however will detect the arcing and then attempt to operate the fence at a voltage just below that at which arcing occurs, thus maintaining higher energy levels on the fence and improving the effectiveness of the fence. Nemtek is the inventor and patent holder of this innovative technology.

MOUNTING AND BATTERY REPLACEMENT

STEP 1:

Disconnect mains. Open the lid after removing the two cap screws. Unplug the battery terminals if connected.

STEP 2:

Remove screws and battery bracket

STEP 3:

Remove battery

*Dispose of old battery according to legal requirements. Do not replace with a non-rechargeable battery!

STEP 4:

Drill 4 x 8mm holes for mounting the unit. Four nail-in anchors are supplied with the unit. Insert the plastic sleeve of the nail in anchor from the inside of the box and then hammer the screw in with a screw driver and hammer.

NB: Always insert the plastic sleeve from the inside of the box!

STEP 5:

Insert battery with the positive terminal to the top.

STEP 6:




Place the battery bracket back (with plastic offsets at the top) and fasten the screws into place.

STEP 7:

Connect battery wires. Close the lid by hooking the top of the lid in first and then fasten the bottom down with the two cap screws. Apply mains power to the unit.

Note:

Energizer to be mounted vertically against a flat surface, in a well ventilated area. Avoid prolonged exposure to direct sunlight.

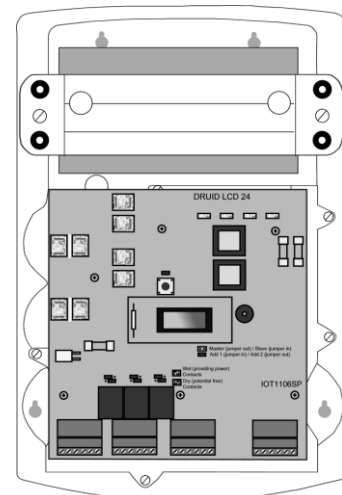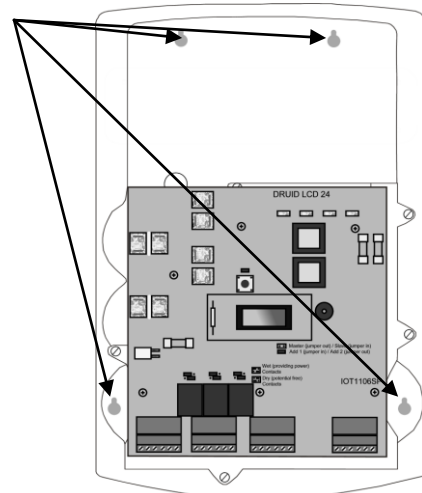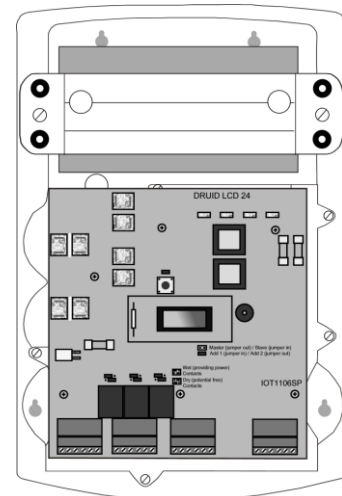

PC BOARD REPLACEMENT

STEP 1:

Disconnect mains power and the battery terminals if connected.

STEP 2:

Remove all five connectors, C1 – C5.

STEP 3:

Remove the six screws, S1 – S6.

STEP 4:

To remove the PC Board, gently pull the PC Board away from the mounting plate, unplugging it from the connectors beneath it. There are four spade connectors beneath the PC Board at the top of the board and a box connector beneath and near the bottom of the board.

STEP 5:

To replace the PC Board, first align the box connector near the bottom of the PC Board and then align the four spade connectors at the top of the PC Board, and gently press the PCB down into place.

STEP 6:



Re-insert and tighten the six screws.

STEP 7:

Reconnect the five connectors to the PC Board.

STEP 8:

Reconnect the battery terminals and apply mains power.

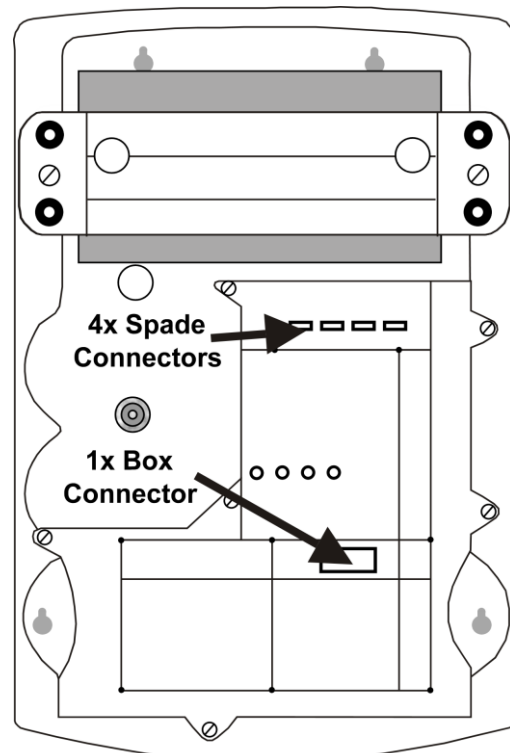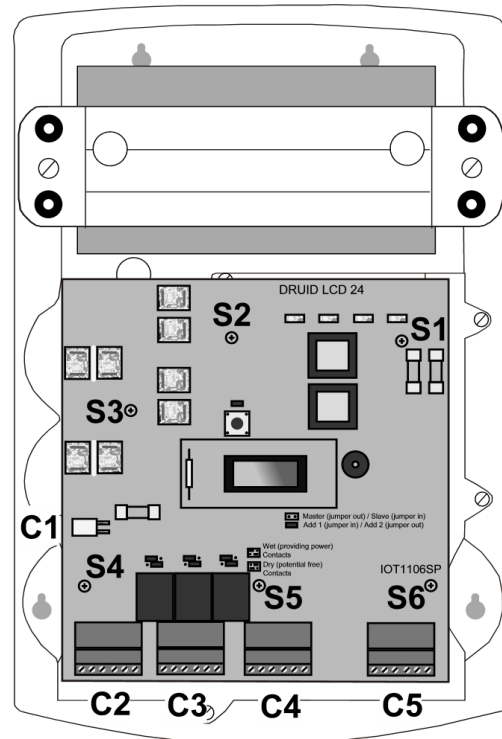

CONNECTIONS

Gate Switch
(Normally closed)

External On/Off Switch for
Zone 1

External On/Off Switch for
Zone 2

12V DC Strobe Light for
Zone 2

12V DC Strobe Light for
Zone 1

20W max 12V DC
Siren

Radio alarm not to be
powered from energizer!


Panic Switch
(Normally closed)

High/Low voltage switch
for Zone 1

High/Low voltage switch
for Zone 2


A maximum of two
Nemtek Druid 4-Zone
keypads, two expansion
cards and 100m of comms
cable can be connected.

A total of two energizers
can be networked.
See; Creating a 4 zone
installation, later on in this
manual.

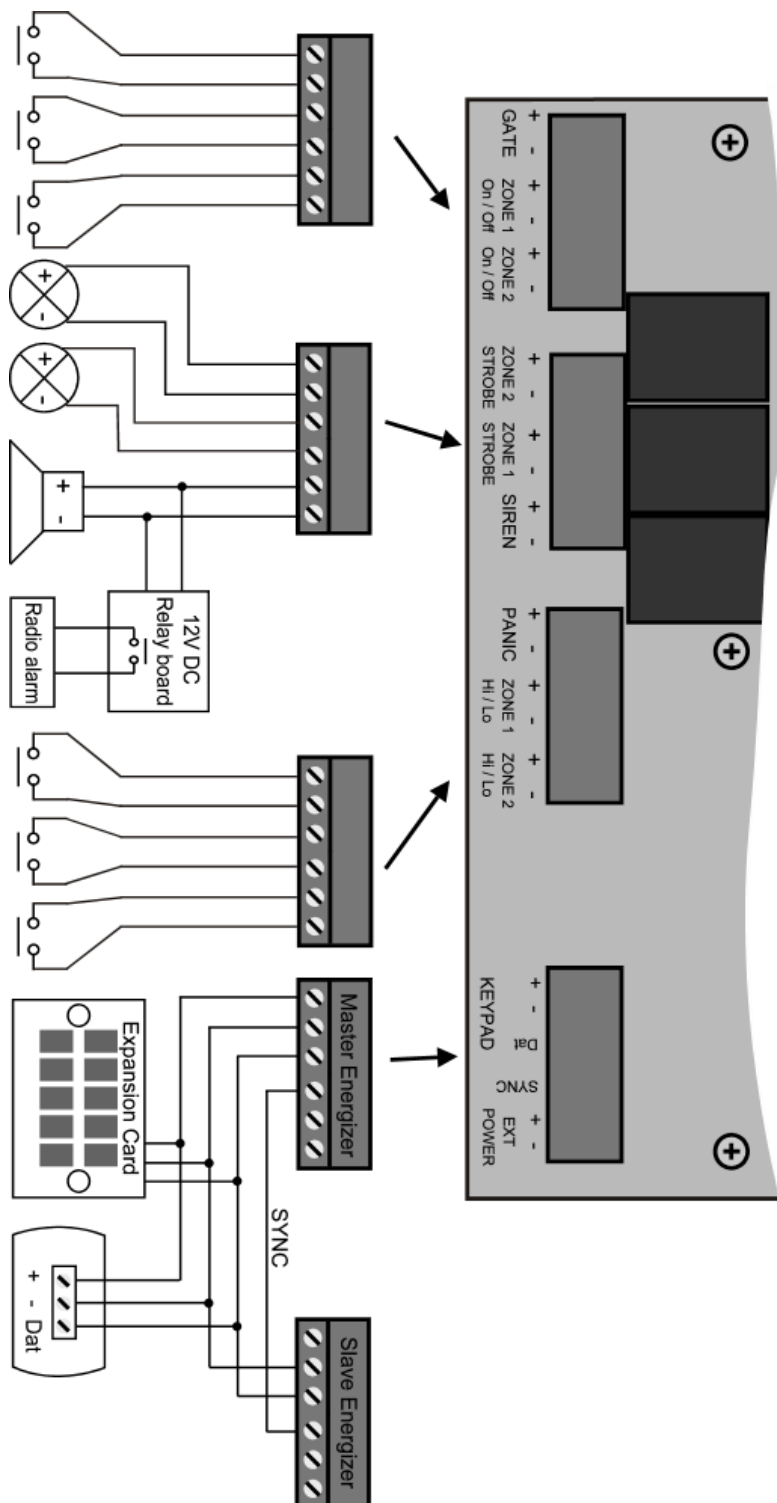


FENCE WIRING DIAGRAMS


Live wire connection

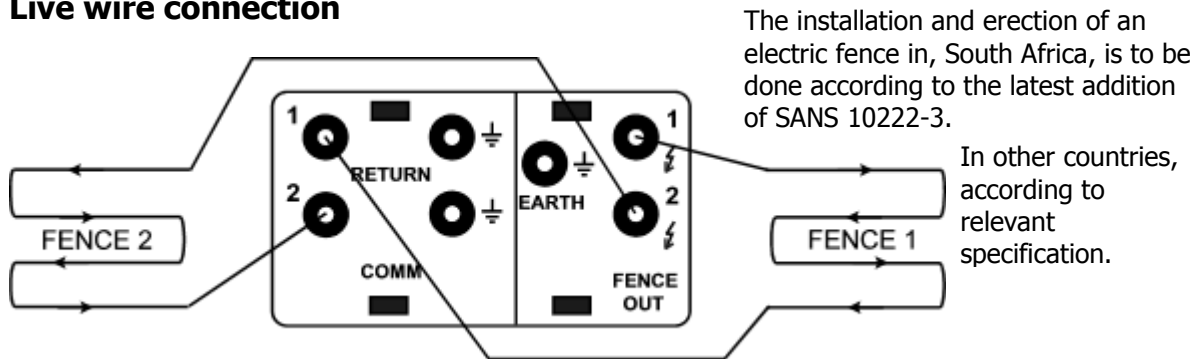

Earth wire connection with earth loop monitoring (preferred)

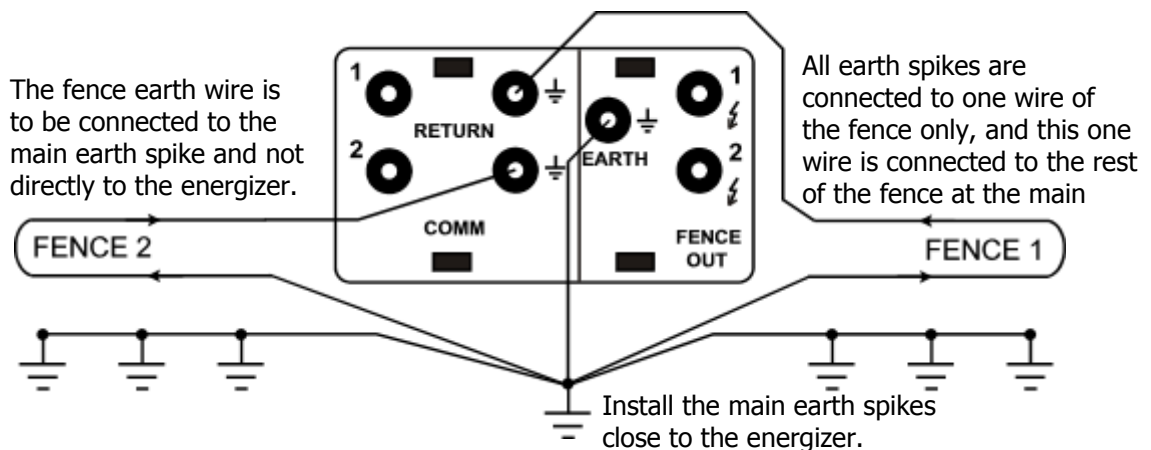

Earth wire connection with no earth loop monitoring

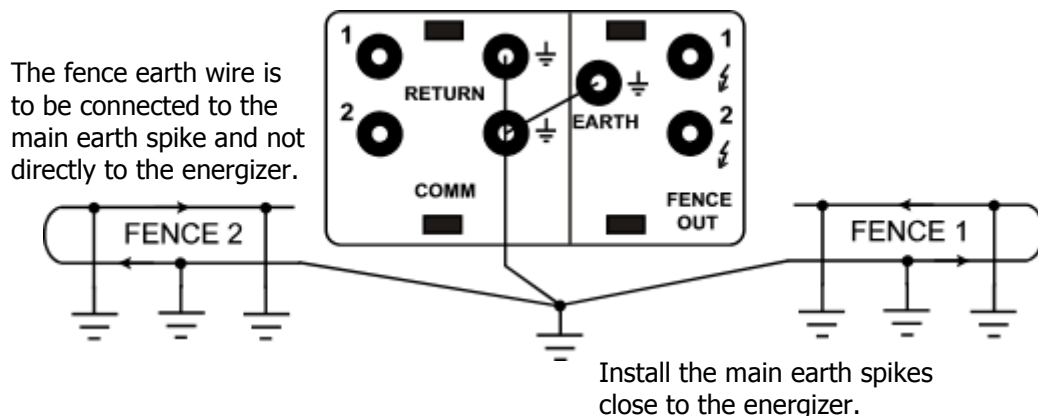

CREATING A 4 ZONE INSTALLATION

Using two DRUID LCD 2x energizers, a four zone installation can be created. With four zones, a property owner can identify the location of an attempted intrusion to a greater degree of accuracy. For example, the front, back, left and right side of the property can each be a unique zone.

To create a four zone system, two DRUID LCD 2x energizers need to be networked over the keypad bus. Three wires in total need to be wired correctly between the two energizers. The system ground (-V) wire, the data wire (DAT), and the synchronization wire (SYNC).

One energizer must be configured as a master, and the other energizer configured as a slave. An energizer is configured by means of a Master/Slave jumper on the energizer main PCB, just below the LCD display. A master energizer will have the jumper absent, and a slave energizer must have the jumper inserted.

Each energizer must also have an address jumper set. This address controls how the two zones of the energizer display on the keypad. The address jumper is immediately below the Master/Slave jumper on the energizer main PCB.

Jumper present is address 1, which will show as zones 1 & 2 on the keypad. Jumper absent is address 2, which will show as zones 3 & 4 on the keypad.

Lastly, the master needs to be informed whether a slave energizer is connected creating a four zone system or if it is a master only two zone system. This is so that a communication failure (service alarm) can be generated should the slave energizer not respond to the master's request for information, and so that the keypad can be dealt with correctly as either a two or four zone installation.

The SLAVE ENERGIZER PRESENT setting is set by first entering installer mode, and then entering installer code 5001*#. Further details of this code can be found in this manual under the PROGRAMMABLE OPTIONS section.

Note:

Please read the section, KEYPAD ZONE FOCUS, in the Druid LCD User Manual Rev1.2 or later. This section explains how to direct keypad input to a specific zone, or to all zones simultaneously. Installer PROGRAMMABLE OPTIONS which are zone focus specific will have the following text appear below the programmable option later in this manual.

"*Can be directed to a specific zone, using KEYPAD ZONE FOCUS."


DETAILED SERVICE INDICATORS

When the energizer front cover is opened while displaying a service condition (spanner symbol), if the service condition is still present, further information will be displayed indicating the cause of the service condition as listed below.

- A = Aux fuse blown
- I = Fence interference detected
- S = High voltage boost circuit failure, SCR failure or rapid triggering
- B = Battery fuse blown, battery fault or not connected
- N = Slave energizer communication failure
- V = Output high voltage sense error
- F = High voltage boost circuit control loss

FUSE DESCRIPTION AND FAULT SYMPTOMS

All fuses are of the "fast blow" type with a 2A rating.

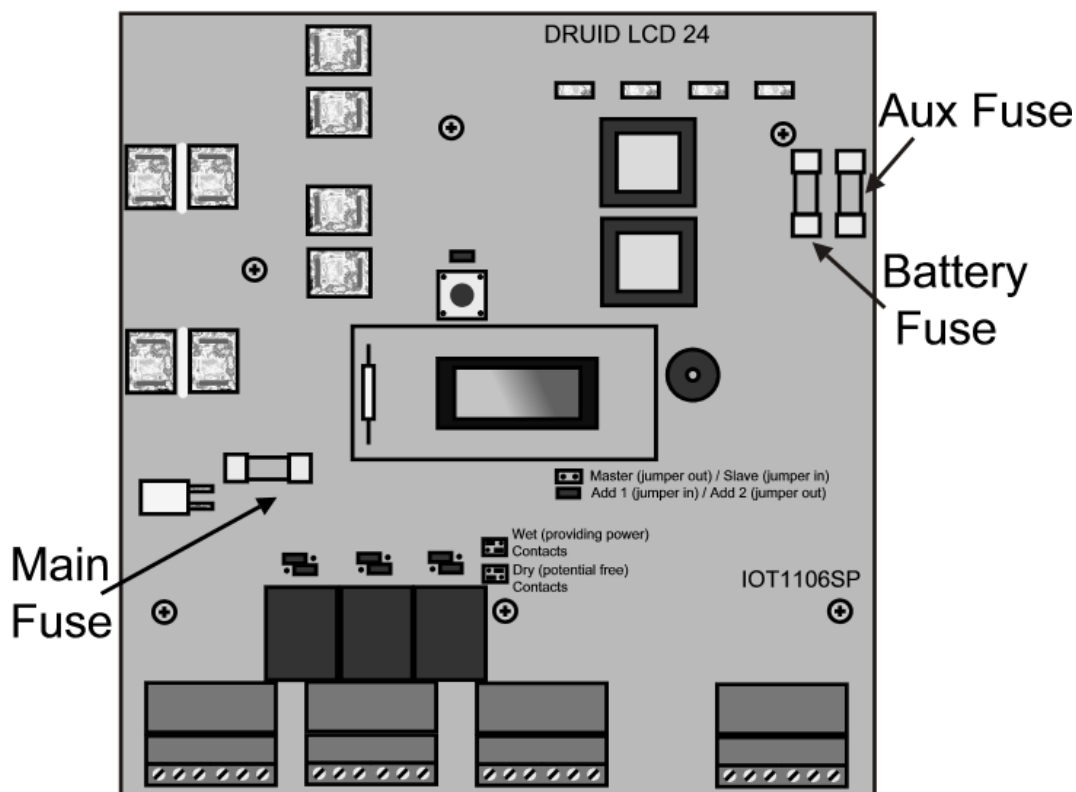

Main Fuse:

Energizer displays a battery symbol, and not the mains power symbol (plug).

Battery Fuse:

Energizer does not operate when mains power is disconnected.

Aux Fuse:

The Siren and strobes do not function.

INSTALLATION NOTES

- Keep the wires to the fence separate from the keypad, gate, siren, strobe and mains wiring.
- Do not try and modify the energizer. Any unauthorized modifications will null and void the warranty and possibly render the unit illegal.
- If the external On/Off facility is used, the wire between the remote switch and the energizer can be up to a 100m in length. The switch contact must be open for the fence to be energized.
- A remote receiver can obtain 12VDC from the keypad bus. Current consumption must not exceed 0.1 Amps. This is not sufficient to supply power for an armed response transmitter.
- The siren and strobe lights together must not draw more than 1.8Amps.
- Never use the energizer battery to power a radio alarm transmitter or alarm panel.
- The wire between the magnetic gate switch and the energizer can be up to a 100m in length, but must not run parallel with any fence wires. The gate switch must be open circuit if the gate is open.
- The remote keypad cable must not exceed 100m in total length. Avoid running this cable parallel with any fence (high voltage) wires.
- You may connect a total of two keypads, one expansion card and one slave energizer to an energizer set to master.
- Use HT (high voltage) wire between the fence and energizer, including the earth wire. Never run these wires in the same conduit or through the same hole as the low voltage wiring.
- Always use ferrules or line clamps to connect two high voltage wires together. Avoid using dissimilar materials for connections like copper on steel.
- The fence must be earthed properly with three earth electrodes close to the energizer. The distance between the fence earth electrode and any other earth systems shall be not less than 2m for a security fence installation. (Typically a suburban property installation) , and 10m for an agricultural fence installation. (Typically a rural property installation.)
- When replacing the front of the energizer, hook the top in first while holding it an angle and then push it closed at the bottom. Fasten the lid down with the two cap screws.
- Always test the fence after installation for correct short and open-circuit alarming at various points along the fence.
- Do not use the energizer with non-rechargeable batteries.
- The energizer contains a sealed lead-acid battery that will vent to the atmosphere under certain conditions. For this reason it is imperative that the energizer be installed in a well ventilated area.
- Refer to the applicable laws concerning the installation of electric fences in your area.

PROGRAMMABLE OPTIONS

RESTORE FACTORY DEFAULTS

2 3 8 9 #

Returns the energizer configuration, including all PINs to their factory default values

Enter this code within 60s of powering the energizer on after complete power removal, i.e mains and battery power removal simultaneously.

ENTER PROGRAMMING MODE

__ __ __ __ __ __ * 0 #
INSTALLER PIN

Enables programming mode

Programmable options can only be changed once the energizer is placed into programming mode. The keypad will beep three times if the code is accepted. The factory default installer PIN is **012345**. Programming mode will timeout and exit after five minutes or upon entering the ***#** exit code.

CHANGE INSTALLER PIN

0 0 NEW INSTALLER PIN **__ __ __ __ __ __ #**

Changes the factory default six digit installer PIN to a new six digit PIN

SIREN ON TIME

0 1 m s *** #**

Sets the siren on (active) time

m = minutes, s = x10 seconds

Programmable range is **0101*#** (10s) to **0141*#** (4m:10s)

Factory default value is **0120*#** (2m:0s)

Siren active time is the amount of time that the siren will sound before automatically turning off, if not reset by the user.

SIREN OFF TIME

0 2 m s *** #**

Sets the siren off (inactive) time

m = minutes, s = x10 seconds

Programmable range is **0201*#** (10s) to **0241*#** (4min:10s)

Factory default value is **0230*#** (3min:0s)

Siren off time is the amount of time that the siren will be forced to remain off after having automatically timed out (siren on time) from a previous alarm condition.

EVENTS BEFORE RE-ARM TIMEOUT 0 3 0 ? * #

Sets the total unacknowledged events before the re-arm time comes into play

? = total events before re-arm time

Programmable range is **0301*#** (1 event) to **0307*#** (7 events)

Factory default value is **0303*#** (3 events)

See SIREN RE-ARM TIME below.

SIREN RE-ARM TIME 0 4 d h h m m * #

Sets the sirens re-arm time period

d = day, hh = x10 hours + hours, mm = x10 minutes + minutes

Programmable range is **0400001*#** (1min) to **0471402*#** (7d:14h:02min)

Factory default value is **0410000*#** (1d:00h:00min)

The re-arm time comes into play after the siren has sounded for the set number of events without being manually reset by the user. This is required by law to prevent an alarm from sounding indefinitely while the owner is not home to correct the alarm condition.

RELAYS ACTIVE OPEN 0 0 6 ? * #

Set the active state of all three relays on the energizer PCB.

? = 0 (relay closed when active) or 1 (relay open when active)

Factory default value is **0060*#** (relay normally open, closed on activation)

Typically used when the energizer is connected to an alarm system requiring a normally closed input.

STROBE LIGHT Z1 RELAY FUNCTION 0 0 1 ? * #

Selects between zone 1 strobe light only, or zone 1 & 2 combined function.

? = 0 (zone 1 strobe light) or 1 (zone 1 & 2 combined)

Factory default value is **0010*#** (zone 1 strobe light only)

The Z1 strobe light relay can be assigned to be active when an alarm is triggered on zone 1 only (0), or an alarm is triggered on either of zone 1 or zone 2 (1)

STROBE LIGHT Z2 RELAY FUNCTION 0 0 2 ? * #

Selects between zone 2 strobe light, or fence on/off indication.

? = 0 (zone 2 strobe light) or 1 (fence on/off indication)

Factory default value is **0020*#** (zone 2 strobe light only)

The Z2 strobe light relay can be assigned to be active when an alarm is triggered on zone 2 only (0), or to indicate when the fence is energized (1). Both zone 1 and zone 2 need to be active for the relay to indicate the fence is energized.

SIREN RELAY FUNCTION 0 0 3 ? * #

Selects between gate alarm, or energizer on/off indication, when in ALARM SENSOR MODE only.

? = 0 (gate alarm) or 1 (energizer on/off indication)

Factory default value is **0030*#** (gate alarm)

The siren relay can be assigned to be active when a gate alarm occurs (0), or to indicate when the fence is energized (1). Both zone 1 and zone 2 need to be active for the relay to indicate the fence is energized.

ALARM SENSOR MODE 4 0 8 ? * #

Enable or disable the energizer alarm sensor mode.

When this mode is active, the display will indicate "AlmSensr"

? = 0 (conventional energizer mode) or 1 (alarm sensor mode)

Factory default value is **4080*#** (conventional energizer mode)

When in alarm sensor mode, the strobe relays, regardless of STROBE LIGHT Z1/Z2 RELAY FUNCTION settings, will function as follows;

The Zone 1 strobe relay is active only as long as zone 1 is in alarm condition.

The Zone 2 strobe relay is active only as long as zone 2 is in alarm condition.

The siren relay by factory default will be active only as long as the gate is in alarm condition. If however the siren relay function has been altered using the SIREN RELAY FUNCTION, the siren relay will be active as long as both fence zone 1 and zone 2 are energized.

Additional status information can be obtained, such as, zone active, zone low voltage mode, zone check condition, mains fail, service and tamper conditions, by fitting an expansion card onto the keypad bus.

This mode is typically used when the energizer is connected to an alarm system and no user interaction with the energizer will take place. The energizer is thus treated as simply another alarm detecting sensor for the alarm panel.

GATE ALARM DELAY TIME**1 0 m s * #**

Sets the gate alarm delay time

m = minutes, s = x10 seconds

Programmable range is **1001*#** (10s) to **1041*#** (4min:10s)

Factory default value is **1010*#** (1min:0s)

The gate alarm will only sound once the gate has remained open for longer than the GATE ALARM DELAY time. The GATE ALARM INSTANT user code can be used to temporarily override this delay period, and the GATE ALARM BYPASS user code can be used to temporarily disable the gate alarm function.

GATE CHIME ON CLOSE**1 1 9 ? * #**

Enable or disable a gate close chime, only when gate chiming is enabled.

? = 0 (no chime on close) or 1 (chime on close)

Factory default value is **1190*#** (no chime on close)

The user can enable a gate chime notification using the GATE CHIME user code, as detailed in the Druid LCD User Manual. This GATE CHIME ON CLOSE installer code additionally enables chiming on closure of the gate as well.

INPUT TOGGLE SELECT**1 1 1 ? * #**

Selects toggling or direct on/off control of the fence.

? = 0 (direct control) or 1 (toggle control)

Factory default value is **1111*#** (toggle control)

With direct control, the fence is energized when the switch input is open circuit.

With toggle control, the fence operating state is toggled each time the switch input changes from a closed to open circuit.

FENCE CONDITION CHECK LEVEL**2 0 1 ? * #**

Sets the value at which the CHECK message will be displayed should the fence condition indicator reduce to or below this set value.

? = check level between 3 and 6

Programmable range is **2013*#** (3 = fair to poor) to **2016*#** (6 = good)

Factory default value is **2014*#** (4 = fair)

*Can be directed to a specific zone, using KEYPAD ZONE FOCUS.

FENCE STATE AT POWER ON**2 0 2 ? * #**

Sets the operating state that the fence is returned to after a complete power failure has ended.

? = 0 (off), 1 (on) or 2 (fence returns to on/off state at power loss)

Factory default value is **2022*#** (fence returns to on/off state at power loss)

A complete power failure occurs when the energizer shuts down due to the internal battery running flat during a prolonged mains power failure.

*Can be directed to a specific zone, using KEYPAD ZONE FOCUS.

FENCE INTERFERENCE ALARM**2 0 3 ? * #**

Enables or disables the fence interference detected alarm function.

? = 0 (disabled), 1 (enabled)

Factory default value is **2031*#** (enabled) for DRUID_18

Factory default value is **2030*#** (disabled) for DRUID_114

Fence interference may occur when a neighboring fence comes into contact with the fence been driven by this energizer or when criminals attempt to defeat the energizer fence alarm detection mechanism.

*Can be directed to a specific zone, using KEYPAD ZONE FOCUS.

FENCE HIGH POWER VOLTAGE**2 1 k v * #**

Sets the energizer output voltage during high power operation.

k = kilo volts, v = x100 volts

Programmable range is **2160*#** (6.0kV) to **2197*#** (9.7kV)

Factory default value is **2197*#** (9.7kV)

The fence condition indication value is affected by this value. Setting this value to a lower voltage will cause the fence condition indication to increase towards 9 (excellent) as the energizer works less hard to maintain the lower set voltage on the fence.

*Can be directed to a specific zone, using KEYPAD ZONE FOCUS.

FENCE HIGH POWER CHECK LEVEL 2 2 * #

Sets the value at which the CHECK message will be displayed should the fence return voltage reduce to below this set value when operating in high power mode.

k = kilo volts, v = x100 volts

Programmable range is **2230*#** (3.0kV) to **2260*#** (6.0kV)

Factory default value is **2240*#** (4.0kV)

The check level must always be set above the alarm level for the new setting to be accepted.

*Can be directed to a specific zone, using KEYPAD ZONE FOCUS.

FENCE HIGH POWER ALARM LEVEL 2 3 * #

Sets the value at which the BAD message will be displayed, and at which the alarm will sound should the fence return voltage reduce to or below this set value when operating in high power mode.

k = kilo volts, v = x100 volts

Programmable range is **2320*#** (2.0kV) to **2350*#** (5.0kV)

Factory default value is **2330*#** (3.0kV)

The alarm level must always be set below the check level for the new setting to be accepted.

*Can be directed to a specific zone, using KEYPAD ZONE FOCUS.

FENCE ALARM DELAY 2 5 ? ? * #

Sets the number of violating fence pulses that have to occur before the alarm is activated.

?? = number of pulses before alarm occurs

Programmable range is **2501*#** (1 pulse) to **2515*#** (15 pulses)

Factory default value is **2503*#** (3 pulses) for DRUID_18

Factory default value is **2507*#** (5 pulses) for DRUID_114

*Can be directed to a specific zone, using KEYPAD ZONE FOCUS.

FENCE LOW POWER VOLTAGE 2 7 * #

Sets the energizer output voltage during low power operation.

k = kilo volts, v = x100 volts

Programmable range is **2709*#** (0.9kV) to **2719*#** (1.9kV)

Factory default value is **2715*#** (1.5kV)

*Can be directed to a specific zone, using KEYPAD ZONE FOCUS.

FENCE LOW POWER ALARM LEVEL 2 8 * #

Sets the value at which the BAD message will be displayed, and the alarm will sound should the fence return voltage reduce to or below this set value when operating in low power mode.

k = kilo volts, v = x100 volts

Programmable range is **2805*#** (0.5kV) to **2815*#** (1.5kV)

Factory default value is **2808*#** (0.8kV)

*Can be directed to a specific zone, using KEYPAD ZONE FOCUS.

FENCE CONTROL ALGORITHM 3 0 1 * #

Sets the fence control algorithm.

? = 0 (conventional) or 1 (arc detection and avoidance)

Factory default value is **3011*#** (arc detection and avoidance)

Conventional control will output a maximum of 8kV onto the fence to reduce the risk of arcing across insulators. Setting the FENCE HIGH POWER VOLTAGE to a value greater than 8kV will not raise the output voltage beyond 8kV when using conventional control. For more information on arc detection and avoidance control, read the FOREWORD at the front of this manual.

*Can be directed to a specific zone, using KEYPAD ZONE FOCUS.

MAGNETIC SWITCH 4 0 1 * #

Enables or disables the magnetic switch.

? = 0 (disabled) or 1 (enabled)

Factory default value is **4011*#** (enabled)

When using a keypad, disable the magnetic switch to increase the level of security offered.

TAMPER ALARM 4 0 3 * #

Enables or disables the tamper alarm function.

? = 0 (disabled) or 1 (enabled)

Factory default value is **4031*#** (enabled)

When enabled, the tamper alarm will sound if the energizer front is opened while the fence is energized. The tamper symbol **t** will always be shown on the display, regardless of whether the tamper alarm is enabled or disabled.

SERVICE ALARM**4 0 4 ? * #**

Enables or disables alarming during a service condition.

? = 0 (disabled) or 1 (enabled)

Factory default value is **4041*#** (enabled)

DISPLAY INSTALLER TEL NUMBER**4 0 5 ? * #**

Enables or disables the displaying of the installers telephone number during a service condition.

? = 0 (disabled) or 1 (enabled)

Factory default value is **4050*#** (disabled)

When enabling this function, don't forget to set a new telephone number using the (10 digit new telephone number)# code below.

SHOW KEY PRESSES ON LCD**4 0 6 ? * #**

Enables or disables the displaying of keypad key presses on the energizer display.

? = 0 (disabled) or 1 (enabled)

Factory default value is **4061*#** (enabled)

For increased security when the energizer and keypad are far apart, it may be desirable to disable this function and so prevent the user PIN being read from the energizer display.

SOLAR POWERED INSTALLATION**4 0 7 ? * #**

Modifies the energizer operation for permanent battery operation.

? = 0 (disabled, requires mains power) or 1 (solar installation)

Factory default value is **4070*#** (disabled)

If the energizer is to be run permanently from battery power, which is typically the case when running a solar powered site, then enabling this function will prevent the energizer from reacting to mains power loss as an error condition.

MAINS FAIL CHIME**4 0 9 ? * #**

Enable or disable mains fail chime.

? = 0 (no chime on mains fail) or 1 (chime on mains fail)

Factory default value is **4091*#** (chime on mains fail)

The energizer and connected keypad will chime upon detecting mains failure, if enabled.

SLAVE ENERGIZER PRESENT

5 0 0 ? * #

Enable or disable whether a slave energizer should be present.

? = 0 (Master only 2 zone system) or 1 (Slave connected 4 zone system)

Factory default value is **5000*#** (Master only 2 zone installation)

The master energizer needs to be configured as to whether a slave energizer is connected, creating a four zone system, or if it is a master only two zone system. This is required so that a communication failure (service alarm) can be generated should the slave energizer not respond to the master's request for information, and so that the keypad can be dealt with correctly as either a two or four zone installation.

EXPANSION CARD CONFIGURATION

5 0 2 ? * #

Selects the configuration used in assigning a function to each of the ten relays and each of the four inputs on the expansion card.

? = configuration to select (contact NEMTEK for customized configurations)

Programmable range is **5020*#** to **5022*#**

Factory default value is **5020*#** (Configuration 0)

The expansion card address jumper must be set the same, as the energizer it is to control.

Configuration 0.

Relay 1 = Expansion card communication timeout.
Relay 2 = Zone 1 On/Off status.
Relay 3 = Zone 2 On/Off status.
Relay 4 = Zone 1 in low voltage mode.
Relay 5 = Zone 2 in low voltage mode.

Relay 6 = Mains fail.
Relay 7 = Battery low or Service alarm.
Relay 8 = Zone 1 in "Check".
Relay 9 = Zone 2 in "Check".
Relay10 = Energizer tamper state.

Input 1 = Zone 1 On / Off control.
Input 2 = Zone 2 On / Off control.

Input 3 = Zone 1 Low / High voltage select.
Input 4 = Zone 2 Low / High voltage select.

Configuration 1.

Relay 1 = Expansion card communication timeout.
Relay 2 = Zone 1 On/Off status.
Relay 3 = Zone 2 On/Off status.
Relay 4 = Zone 1 in low voltage mode.
Relay 5 = Zone 2 in low voltage mode.

Relay 6 = Zone 1 in "Check".
Relay 7 = Zone 2 in "Check".
Relay 8 = Mains fail, battery low, service, tamper.
Relay 9 = Zone 1 in alarm.
Relay10 = Zone 2 in alarm.

Input 1 = Zone 1 On / Off control.
Input 2 = Zone 2 On / Off control.

Input 3 = Zone 1 Low / High voltage select.
Input 4 = Zone 2 Low / High voltage select.

Configuration 2.

Relay 1 = Expansion card communication timeout.
Relay 2 = Zone 1 On/Off status.
Relay 3 = Zone 2 On/Off status.
Relay 4 = Zone 1 in low voltage alarm.
Relay 5 = Zone 2 in low voltage alarm.

Relay 6 = Mains fail.
Relay 7 = Battery low, service alarm.
Relay 8 = Zone 1 high voltage alarm.
Relay 9 = Zone 2 high voltage alarm.
Relay10 = Tamper.

Input 1 = Zone 1 high voltage activate.
Input 2 = Zone 2 high voltage activate.

Input 3 = Zone 1 low voltage activate.
Input 4 = Zone 2 low voltage activate.

MASTER ENERGIZER PASSIVE SYNC 5 0 3 ? * #

Sets whether a master energizer should actively drive, or passively listen to the SYNC signal.

? = 0 (Master with active SYNC) or 1 (Master with passive SYNC)

Factory default value is **5030*#** (Master with active SYNC)

In a single energizer installation, the energizer provides its own timing pulse.

For a number of master energizers to all pulse together in a synchronized fashion, this code allows the switching of an energizer from active sync to passive sync.

In passive sync mode the energizer monitors the sync input for a sync pulse and sets its timing according to this sync pulse. The sync pulse can come from another master energizer set to active sync, via the keypad bus directly, or via a network, or the pulse could also be provided from a Nemtek GPS module. The GPS module extracts absolute time from the network of satellites making up the global position system (GPS).

The advantage of using a Nemtek GPS sync module is that any number of D24 energizers can be synchronized over vast distances without any physical network connections between the energizers.

To create a network of synchronized energizers using one of the energizers as the timing master, first enter this code into all energizers excepting one. You need to leave exactly one master energizer with an active SYNC, to which all passive SYNC masters will synchronize, once connected together.

To connect the energizers together, from the keypad/networking connector, wire the synchronize line (SYNC) of all energizers together, and wire the negative line (-) of all energizers together.

LARGE NETWORK TOPOLOGY 5 0 4 ? * #

Switches the large network topology from daisy chain to multi drop.

? = 0 (Daisy chain) or 1 (Multi drop)

Factory default value is **5040*#** (Daisy chain)

See the "D24 RS485 Network card" manual for further information on network topologies.

LARGE NETWORK ADDRESS**5 1 _ _ * #**

Sets the address of an energizer connected in a large network.

Programmable range is **5101*#** (Address 1) to **5132*#** (Address 32)

Factory default value is **5100*#** (No address)

A maximum of 32 energizers can be networked together using network cards. The factory default address of 0 is a broadcast address which allows an energizer to be found on a new network, but for the network to operate correctly the energizer must finally be assigned an address in the range of 1 to 32.

SET INSTALLER TEL NUMBER**_ _ 10 Digit Installer Tel Number _ _ #**

Sets the telephone number to be displayed during a service condition.

The telephone number must be exactly 10 digits long and the displaying of this number must be enabled, as the factory default is to not display this number. (See code **4051*#**)

EXITING PROGRAMMING MODE*** #**

Exits programming mode.

APPENDIX

Basic definitions

- **Electric Fence:**
A barrier which includes one or more electric conductors, insulated from earth, to which electric pulses are applied by an energizer
- **Connecting Lead:**
An electric conductor, used to connect the energizer to the electric fence or the earth electrode
- **Electric Security Fence:**
A fence used for security purposes which comprises an electric fence and a physical barrier electrically isolated from the electric fence
- **Public Access Area:**
Any area where persons are protected from inadvertent contact with pulsed conductors by a physical barrier
- **Pulsed Conductors:**
Conductors which are subjected to high voltage pulses by the energizer
- **Secure Area:**
An area where a person is not separated from pulse conductors below 1,5m by a physical barrier

General requirements for electric security fences

Electric fences shall be installed and operated so that they cause no electrical hazard to persons, animals or their surroundings.

Electric fence constructions which are likely to lead to the entanglement of animals or persons shall be avoided, as entrapment can be lethal.

An electric fence shall not be supplied from two different energizers or from independent fence circuits of the same energizer.

For any two different electric fences, each supplied from a different energizer with independent timing, the distance between the wires of the two electric fences shall be at least 2.5m. If this gap is to be closed, this shall be affected by means of electrically non-conductive material or an isolated metal barrier.

Barbed wire or razor wire shall not be electrified by an energizer or placed physically close to an electric fence as these circumstances can create a lethal entanglement/entrapment hazard.

Any part of an electric fence which is installed along a public road or pathway shall be identified at frequent intervals by prominently placed warning signs securely fastened to the fence posts or firmly clamped to the fence wires. The size of the warning signs shall be at least 100mm x 200mm. The background colour of both sides of the warning plate shall be yellow. The inscription on the plate shall be in black.

The warning sign shall typically appear as depicted in the figure below. The inscription shall be indelible, inscribed on both sides of the warning plate and have a height of at least 25mm.



Warning signs shall be placed at;

- each gate
- each access point
- intervals not exceeding 10m
- adjacent to each sign relating to chemical hazards for the information of emergency services.

Gates in electric security fences shall be capable of being opened without the person receiving an electric shock.

Connecting leads that are run inside buildings shall be effectively insulated from the earthed structural parts of the building. This may be achieved by using insulated high voltage cable.

Connecting leads that are run underground shall be run in a conduit of insulating material or else insulated high voltage cable shall be used. Care shall be taken to avoid damage to the connecting leads due to external factors.

Connecting leads shall not be installed in the same conduit as the mains supply wiring, communication cables or data cables.

Connecting leads and electric fence wires shall not cross above overhead power or communication lines.

Mains supply wiring shall not be installed in the same conduit as signaling leads associated with the electric security fence installation.

Where an electric security fence passes below bare power line conductors, the highest metallic element shall be effectively earthed for a distance of not less than 5m on either side of the crossing point.

Crossings with overhead power lines shall be avoided wherever possible. If such a crossing cannot be avoided, it shall be made underneath the power line and as nearly as possible at right angles to it.

If connecting leads and electric fence wires are installed near an overhead power line, the clearances shall not be less than those shown in the table below.

<u>Power Line Voltage</u>	<u>Clearance</u>
Equal or less than 1kV	3 meter
Greater than 1kV, but equal or less than 33kV	4 meter
Greater than 33kV	8 meter

If connecting leads and electric fence wires are installed near an overhead power line, their height above the ground shall not exceed 3m.

This height applies either side of the orthogonal projection of the outermost conductors of the power line on the ground surface, for a distance of

- 2m for power lines operating at a nominal voltage not exceeding 1kV
- 15m for power lines operating at a nominal voltage exceeding 1kV

Electric security fences and their ancillary equipment shall be installed, operated and maintained in a manner that minimizes danger to persons, and reduces the risk of persons receiving an electric shock unless they attempt to penetrate the physical barrier, or are in a secure area without authority. Exposed conductive parts of the physical barrier shall be effectively earthed.

A spacing of 2.5m shall be maintained between non insulated electric fence conductors or non insulated connecting leads supplied from different energizers. This spacing may be less where conductors or connecting leads are covered by insulating sleeving, or consist of insulated cables, rated to at least 10kV.

This requirement need not apply where the separately energized conductors are separated by a physical barrier, which does not have any openings greater than 50mm.

A vertical separation of not less than 2m shall be maintained between pulsed conductors fed from different energizers.

Ensure that all ancillary equipment connected to the electric security fence circuit provides a degree of isolation between the fence circuit and the supply mains equivalent to that provided by the energizer. Protection from the weather shall be provided for the ancillary equipment unless this equipment is certified by the manufacturer as being suitable for use outdoors, and is of a type with a minimum degree of protection IPX4.

PROGRAMMABLE OPTIONS SUMMARY

RESTORE FACTORY DEFAULTS	2 3 8 9 #
ENTER PROGRAMMING MODE	(6 digit installer PIN) * 0 #
CHANGE INSTALLER PIN	0 0 (new 6 digit installer PIN) #
SIREN ON TIME	0 1 m s * #
SIREN OFF TIME	0 2 m s * #
EVENTS BEFORE RE-ARM TIMEOUT	0 3 0 ? * #
SIREN RE-ARM TIME	0 4 d h h m m * #
RELAY ACTIVE OPEN	0 0 6 ? * #
STROBE LIGHT Z1 RELAY FUNCTION	0 0 1 ? * #
STROBE LIGHT Z2 RELAY FUNCTION	0 0 2 ? * #
SIREN RELAY FUNCTION	0 0 3 ? * #
GATE ALARM DELAY TIME	1 0 m s * #
GATE CHIME ON CLOSE	1 1 9 ? * #
INPUT TOGGLE SELECT	1 1 1 ? * #
FENCE CONDITION CHECK LEVEL	2 0 1 ? * #
FENCE STATE AT POWER ON	2 0 2 ? * #
FENCE INTERFERENCE ALARM	2 0 3 ? * #
FENCE HIGH POWER VOLTAGE	2 1 k v * #
FENCE HIGH POWER CHECK LEVEL	2 2 k v * #
FENCE HIGH POWER ALARM LEVEL	2 3 k v * #
FENCE ALARM DELAY	2 5 m s * #
FENCE LOW POWER VOLTAGE	2 7 k v * #
FENCE LOW POWER ALARM LEVEL	2 8 k v * #
FENCE CONTROL ALGORITHM	3 0 1 ? * #
MAGNETIC SWITCH	4 0 1 ? * #
TAMPER ALARM	4 0 3 ? * #
SERVICE ALARM	4 0 4 ? * #
DISPLAY INSTALLER TEL NUMBER	4 0 5 ? * #
SHOW KEY PRESSES ON LCD	4 0 6 ? * #
SOLAR POWERED INSTALLATION	4 0 7 ? * #
ALARM SENSOR MODE	4 0 8 ? * #
MAINS FAIL CHIME	4 0 9 ? * #
SLAVE ENERGIZER PRESENT	5 0 0 ? * #
EXPANSION CARD MAPPING	5 0 2 ? * #
MASTER ENERGIZER PASSIVE SYNC	5 0 3 ? * #
LARGE NETWORK TOPOLOGY	5 0 4 ? * #
LARGE NETWORK ADDRESS	5 1 ? ? * #
SET INSTALLER TEL NUMBER	(10 digit installer tel number) #
EXITING PROGRAMMING MODE	* #

DOCUMENT REVISION HISTORY

1 May 2012, Rev 1.0 First release.

11 June 2012, Rev 1.1 (added more expansion card configurations)

25 September 2013, Rev 1.2 (added codes 51??*# and 504?*#)