



User Manual

MEDIA PLAYER ENCLOSURE

MODEL:

CL-ENCL68

CL-ENCL68-EUK



www.peerless-av.com

CONTENTS

General Safety Precautions	3
Notice	5
Relevant Information	5
System Installation And Electrical Requirements	6
Electrical Code	6
Power Source	6
Set Up Instructions	7
What's In The Box	7
Cable Entry/Exit.....	8
Installation Of Media Player	9
Media Player Setup	9
Seal The Media Player Enclosure	9
Mounting The Media Player Enclosure (Optional).....	10
Powering Up The Media Player Enclosure.....	10
General Care Instructions	10
Product Specifications	11
Warranty	12

GENERAL SAFETY PRECAUTIONS

Read before operating equipment

Thank you for purchasing our product. Before using it, please read this user manual carefully and follow the instructions correctly for safe operation. Please keep this manual handy for future reference. Also, please be sure to always include this user manual in the packaging when transferring or transporting this product to a different location.

CAUTION:

These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

 

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not defeat the safety purpose of the polarized or grounding- type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
6. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
7. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, does not operate normally, or has been dropped.
8. Only use attachments/accessories specified by the manufacturer.
9. In case of emergency such as fire or electric shock caused by the product, immediately contact 911 or proper emergency police/fire service agencies in your country.
10. Follow instructions for wall, shelf or ceiling mounting as recommended by the manufacturer.
11. Use properly rated power voltage. Use of non-rated voltage may cause fire, electric shock and severe damages to the product.
12. Under any circumstances, do NOT modify or disassemble this product as it may cause fire, electric shock, or severe damages to the product. Also, any unauthorized modifications made to the product automatically void product warranty.
13. Never touch antenna lines, wires, if applicable, power cables or power plugs in such circumstances as lightning and thunder as it may cause electric shock.
14. Any severe physical impact on the product may cause certain components to fall out of place within and break, which may cause fire or electric shock. In such event, do not operate the product. Contact the manufacturer for support.
15. Periodically clean dust off the power plug, to keep it clean and dry, ensuring proper and safe operation of the product.
16. Do NOT destroy, process, or place the product close to any heating device; do NOT bend or twist power cords, power plugs, cables, or wires with excessive force; do NOT place any heavy object on the product as all of the above may cause damages to the product and result in fire or electric shock.
17. Do NOT touch power plugs with wet hands.
18. Always make sure to plug in the power plug firmly and completely. Incompletely placed power plugs may cause fire or electric shock due to built up heat emission.
19. Do NOT use any non-rated power sockets or power strips with many other devices jointly plugged in. The wire of non-designated capacity may cause fire due to built up heat emission. Try to use a single, directly dedicated and rated GFI power socket for the product for safe operation.

20. In case of product malfunction or unusual events such as electrical burning smell, smoke, or loss of content signals on TV/Display due to internal overheating, immediately turn off and unplug the power and contact the manufacturer.
21. Do NOT install the product at such unstable locations as moving objects, constantly vibrating props, or uneven surfaces. Improper installation may cause products to fall off. Follow mounting instructions properly for safe operation of the product.
22. Do NOT install the product near any poisonous gas or chemically unstable atmosphere as it may cause fire.
23. Do NOT install the product near any strong magnetic or electrical current field. It may cause fire, electric shock, or severe damages to the product. The product may not be subject to any electromagnetic radiation, causing deterioration of content picture quality.
24. Do NOT leave any fire source, such as candles, close to or on the product as it may be a cause for fire or damages to the product.
25. Do NOT move or transport the product with any cables (power cables, content connectivity cables) plugged in to the source devices. Damages may occur to the cables, plugs, or jointing connectors of the cables due to forcible bending and stress, which may cause damages to the waterproof seal of the product, making it subject to fire, electric shock, or shorted circuit.
26. When unplugging, always grab the plugs of power cords or cables. Improper pulling of the cords or cables may cause damages to the waterproof seal of the product, making it subject to fire, electric shock, or shorted circuit.
27. Do NOT use any other power cords or connection cables than what is provided with the product or from the manufacturer directly. Use of untested, unauthorized, or substituted power cords or connection cables may be a cause for malfunction, fire, electric shock, or severe damages to the product. Also such use of improper or undesignated power cords or connection cables will void product warranty.
28. Always leave the Power Off when plugging or unplugging the power cords or connection cables to avoid electric shock or damages to the product.
29. Do NOT use any chemical such as paint thinner or benzene to clean the product's exterior. It may cause scratches on the surface, erasing proper indications, identification labels, or instructions on the exterior, which may be a cause for misuse and improper operation of the product.

Notice

CAUTION: Please use the power cord provided with this product in accordance with the table. If a power cord is not supplied with this equipment, please contact your supplier. Only plug equipment into receptacles with GFI.

IMPORTANT: Peerless-AV is not responsible for any issues created by water present at the plug/receptacle insertion point.

Plug Type:	North America	European
Plug Shape:		
Region:	USA/Canada	Europe
Voltage:	AC 120V	AC240V

 
Relevant Information

Be sure to keep record of your products model number for future reference

SYSTEM INSTALLATION AND ELECTRICAL REQUIREMENTS

Electrical Code

Note: To the display system installer: This reminder is provided to call attention to Article 820-44 of the National Electric Code that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the facility. Outlet shall be installed near the equipment and shall be easily accessible.

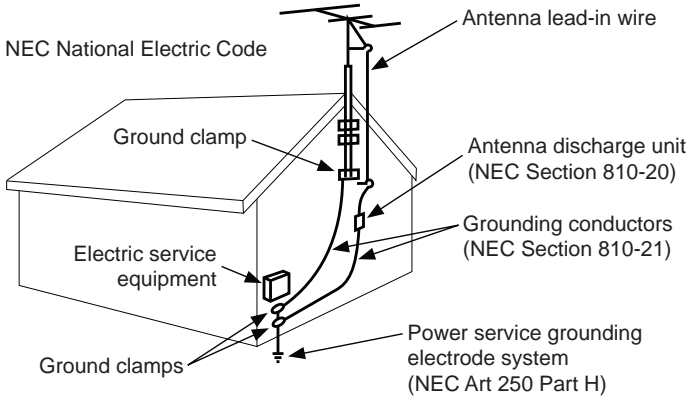

Note: Installation shall incorporate UL Listed external surge protection rated 2500 Vpk or less, for 150 to 300 Vac mains, installed in accordance with Article 285 of ANSI/NFPA 70 or applicable local codes.

Power Source

The product must be connected to a main socket outlet with a protective earthing connection.

The main plug is used as the disconnect device and shall remain readily accessible.

This product operates on 100-240 volts 60 Hz, AC current. Insert the power cord into a 120 volts 60 Hz outlet. Never connect the product to direct current or anything other than the specified voltage.

To prevent electric shock from the product, do not use with an extension cord, receptacle, or other outlet unless the blades and ground terminal can be fully inserted to prevent blade exposure.

CAUTION: Double pole/neutral fusing (ISO 3869. No 5036)

SET UP INSTRUCTIONS

Important:

1. When routing cables through the cable entry make sure that the cables are formed in such a way as to remove any stress on the connectors.
2. Installation shall be in accordance with the applicable parts of Chapter 8 of ANSI/NFPA70.

What's In The Box

 
Media Player Enclosure

4 M8 Screws

User Manual

Cable Entry/Exit


1. Flip the Media Player Enclosure over and unscrew the 4 screws on the metal base plate. Remove the metal base plate.

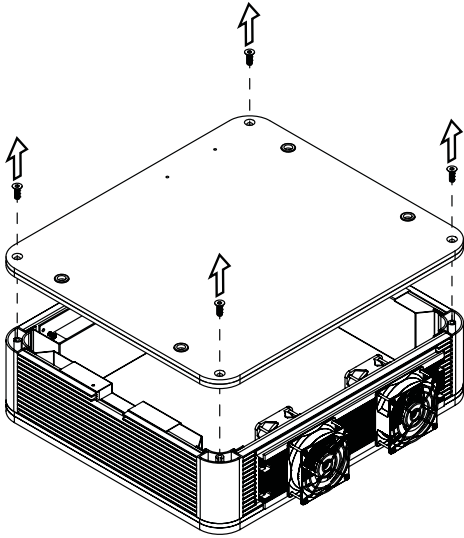

2. Run the cable(s) for the Media Player through the cable entry points on the Media Player Enclosure as shown.


Note: It is suggested to only use one of the cable entry points.

 Note: Do not run the Media Player's power cord through the entry points. The power cord will be installed later.

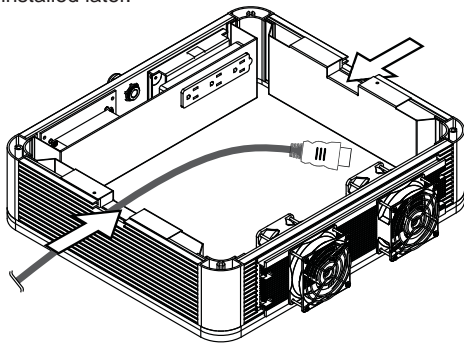


3. Realign the metal base plate on the Media Player Enclosure. Reinstall the 4 screws into the metal base plate while making sure the wires are fully sealed (Cables should be completely surrounded by compressible foam gaskets and gasket block).

 Note: Ensure that the base plate is reinstalled in the proper orientation.

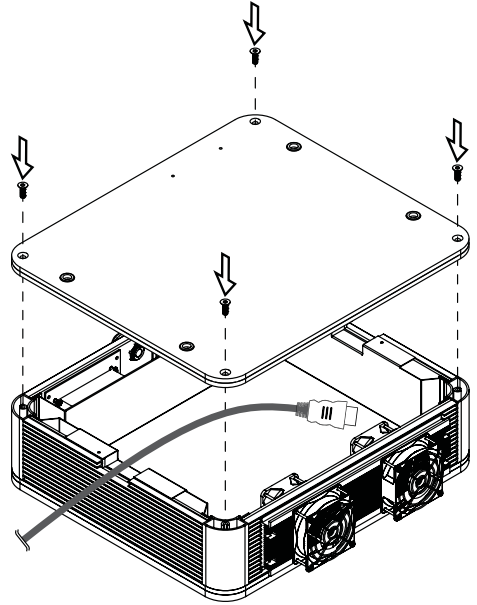

Installation Of Media Player

 1. Flip the Media Player Enclosure back over so that it is right side up. Unscrew the 8 screws on the plastic top of the Media Player Enclosure. Remove the plastic top.

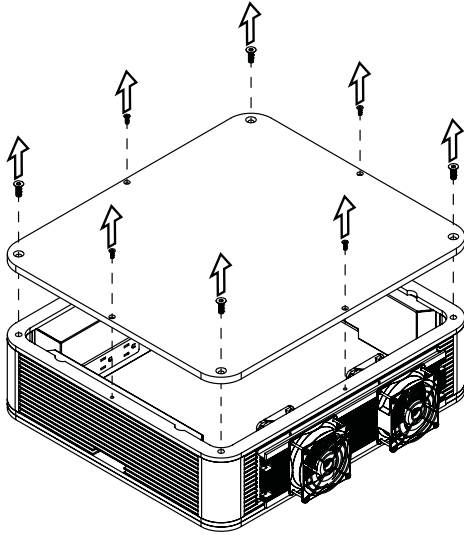

2. Peel off one sticky side of the 4 Velcro pieces (provided). Attach the 4 Velcro pieces to the bottom corners of the Media Player (sold separately).
3. Place the Media Player where it will be positioned inside the Media Player Enclosure and make sure the Media Player will have enough clearance for wiring.
4. Peel off the other sticky side of the Velcro and attach the Media Player to the metal base plate of the Media Player Enclosure. Press firmly for a few seconds.

Media Player Setup

1. Plug the Media Player into the power outlet inside the Media Player Enclosure.
2. Connect cables to Media Player.

 
Sealing The Media Player Enclosure

Note: It is recommended to plug in all electronics to confirm power and connections are correct and Media Player is functioning properly prior to final closing and mounting of the Media Player Enclosure.

Note: If mounting the Media Player Enclosure, completely seal the Enclosure prior to mounting.

1. Realign the plastic top on the Media Player Enclosure. Reinstall the 8 screws into the plastic top on the Media Player Enclosure

Note: Ensure that the base plate and plastic top are reinstalled in the proper orientation.

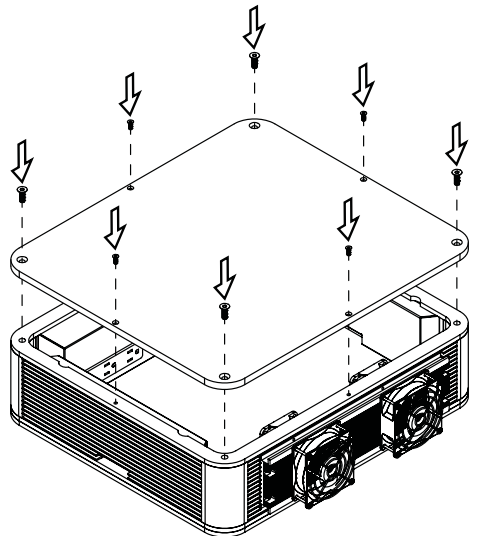


Mounting The Media Player Enclosure (Optional)

It is best to mount the Media Player Enclosure using a display wall mount. To mount the Media Player Enclosure use the four M8 screws (provided) to attach the mount (sold separately) to the Media Player Enclosure. The Media Player Enclosure mounts like a display by using the four mounting holes on the metal base plate.

Mounting solution is not included with the unit and is sold separately. Peerless-AV provides a variety of all-weather mounting solutions. Contact your Peerless-AV representative for all-environment mounting solutions.

 
For your safety, only mount with an UL listed wall mount bracket that supports the weight of the Media Player Enclosure and any hardware. When mounting the Media Player Enclosure outdoors or in harsh environments, only use wall mounts that are designed to resist water, rust and wind.

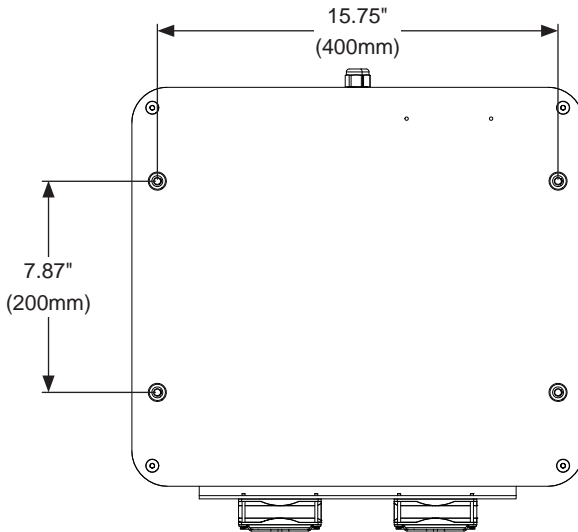

Powering Up the Media Player Enclosure

Only plug into an electrical outlet that has a GFI receptacle. If you run an extension cord, make sure it is an outdoor rated cord and plug. Insure that is placed safely and out of the way of people and animals.

 Plug the power cord from the Media Player Enclosure into the electrical outlet and be sure that it is connected properly.

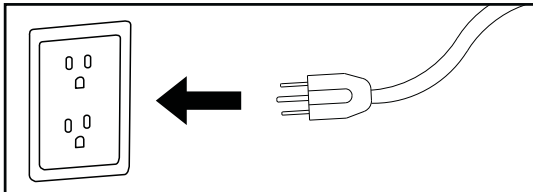

Power on all components to ensure proper functionality.

General Care Instructions


Keep items away from the Media Player Enclosure fans.

PRODUCT SPECIFICATIONS

Specifications subject to change without notice.

Display	
Temperature Ranges	-40° F to 124° F
Power Cord Length	8 ft
Usable Internal Space	14.29" x 10.70" x 4.00"

 Product Dimensions

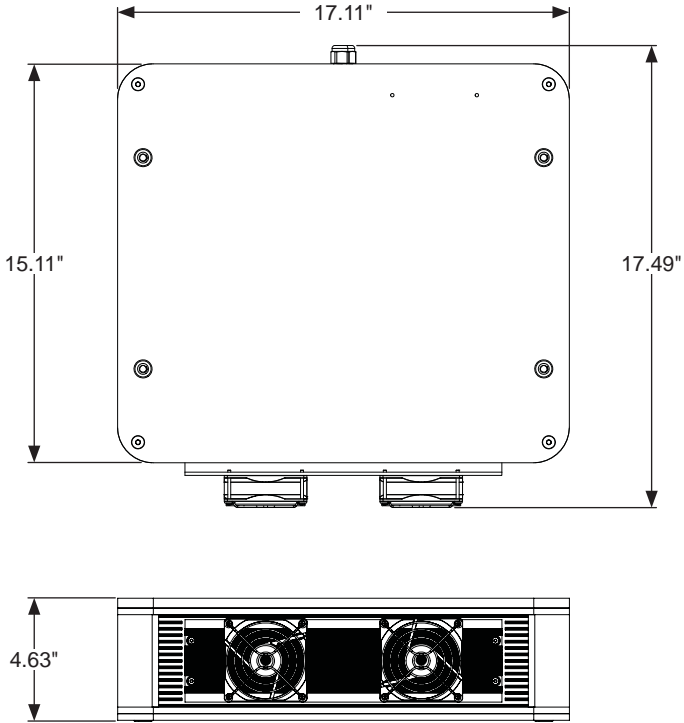

TWO YEAR PARTS & LABOR LIMITED WARRANTY

The Peerless-AV Outdoor TV/Display is warranted to be free of defects in material and workmanship from the time of purchase by the original owner. If this product is found and proved to be defective under the terms and conditions of this warranty, Peerless-AV will repair or replace defective parts with new and/or reconditioned parts at no charge for the parts and labor to the original owner, subject to the terms and conditions of this Limited Warranty.

This Limited Warranty covers failures due to defects in material or workmanship that occur during normal residential or commercial use as follows:

1. Parts – the warranty period for parts are: two (2) years from the date of original purchase. During the applicable Limited Warranty period for parts, defective parts will be replaced at no charge. Parts used for the replacement will be warranted for the remainder of the original warranty period for those parts.
2. Labor – the warranty period for labor is: two (2) years from the date of original purchase. During the applicable Limited Warranty period for labor, Peerless-AV will provide the labor for warranty repair at no charge for a period of two (2) years from the date of original purchase.
3. Original owner must provide verification of the date of purchase when requesting Limited Warranty Services. A copy of the original Dated Sales Receipt is required together with the product to obtain service under this Limited Warranty. Product Registration at the time of purchase is required.
4. All repairs must be performed by a Peerless-AV Authorized Service Provider.
5. Customer is responsible for returning (including any freight and shipping costs) defective unit to a Peerless-AV Authorized Service Provider. If the product is found to have no defects, the customer will be responsible for return shipping costs as well.

THIS LIMITED WARRANTY DOES NOT COVER:

- Shipping damage.
- Damage caused during customer unpacking, and/or removal of packing materials.
- Damage due to improper, incorrect or insufficient AC voltage.
- Damage due to power surges or lightning strikes.
- Damage which results from fire, flood, lightning, tornado, hurricane, large hail, extremely gusty winds, sand storms, vandalism, terrorism or other acts of nature.
- Any unit which has been modified or damaged due to improper installation or failure to obey the operating instructions provided in the User Manual.
- Any failure, loss, damage or personal injury due to accident, neglect, misuse, abuse, improper operation, improper maintenance, improper storage, alteration to the unit, or failure by the consumer to follow operating instructions provided in the User Manual.
- Any owner other than the original owner.
- Any unit purchased from an unauthorized seller.
- If the original product serial number has been removed, defaced or tampered with in any way.
- Any transportation charges incurred in connection with warranty services.
- Indirect, consequential, or special damages, except as required by federal or state laws.
- Any unit tampered with, modified, adjusted or repaired by any party other than the Peerless-AV Authorized Service Provider.
- Any cosmetic damages to the surface or exterior that has been defaced or faded, or caused by normal wear and tear or exposure to chemicals, acid rain, large hail or adverse weather conditions.
- Because the TV/display cabinet and components are hand-assembled and altered, we do not cover minor cabinet blemishes or minor scratches to the exterior of the unit.
- Picture quality when installed in direct sunlight and uncovered where sun is shining directly on screen.
- Any damage, scratches or blemishes to the screen and/or exterior cabinet due to end-user cleaning.
- Dirty air waves, and/or unusual signal interference due to weak signal from multi-wire runs or weak signal from cable or satellite service providers or unusual signal interference or lack of distance when using the Digital Wireless Video/Audio Package.
- Return shipping when no defect is found.

Peerless-AV and its representatives or agents shall in no event be liable for any general, indirect or consequential damages arising out of or caused by the use of or the inability to use this product.

This warranty is made in lieu of all other warranties, expressed or implied, and all other liabilities on the part of Peerless-AV. Any other warranties, including the warranties of merchantability and fitness for a particular purpose are hereby disclaimed by Peerless-AV and its representatives and/or agents.

The laws of some states do not allow exclusion of implied warranties; therefore, this warranty shall be deemed modified to be consistent with such laws. This Limited Warranty gives you specific legal rights. You may also have other rights that vary from state to state.

All warranty inspections and repairs must be performed by Peerless-AV or its authorized service representations.

Customer Care: 800.865.2112 or 630.375.5100

The logo for Peerless-AV features the word "peerless" in a bold, lowercase, red sans-serif font. To its right, the letters "AV" are enclosed in a red outline, with a registered trademark symbol (®) to the upper right of the "V".

Peerless-AV
2300 White Oak Circle
Aurora, IL 60502
Email: tech@peerlessmounts.com
Ph: (800) 865-2112
Fax: (800) 359-6500
www.peerless-av.com

© 2015, Peerless Industries, Inc.