QUICK START GUIDE

MXH-BT600E BLUETOOTH WIRELESS HEADPHONE






PLEASE READ THIS QUICK START GUIDE COMPLETELY BEFORE OPERATING THIS UNIT COMPLETE MANUAL, WARRANTY AND PAIRING INSTRUCTION AVAILABLE AT WWW.MAXELL.EU

WHAT'S INSIDE?

Bluetooth headphone USB to Micro-USB charging cable 3.5mm to 3.5mm audio cable Quick Start Guide

LOCATION OF CONTROLS

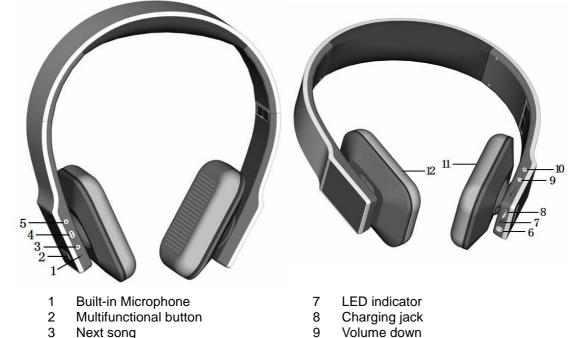

- Pause/play 4
- 5 Last song
- Line-in jack 6

- 10 Volume up 11
- Right headphone
- Left headphone 12

GET STARTED

Turing the MXH-BT600E ON/OFF

- 1. In standby mode, press and hold the Multifunctional button for 3-5 seconds until a beep sound is heard to turn the unit ON, the Indicator LED will flash blue 3 times.
- 2. To turn the unit OFF, press and hold the Multifunctional button for 3 seconds until a beep sound is heard. Don't forget to turn off the Bluetooth feature on your phone or multimedia player.

Pairing the MXH-BT600E

Prior to using the headset for the first time, you have to pair it with a Bluetooth-enabled cell phone. The pairing procedures are subject to different models of cell phones. Please refer to your cell phone user's manual for further information. The general pairing procedures are as follows:

- 1. Keep your headset and phone within 1 meter when pairing;
- Press and hold the MULTIFUNCTIONAL button for about 8 seconds to pair MXH-BT600E when it is off. The LED will flash red and blue alternatively. Your Bluetooth enabled device can scan and connect to "MXH-BT600E"
- 3. After successfully connecting, the blue LED flashes twice every 4 seconds or flashes three times every 4 seconds.

OR

- 4. Plug 3.5mm audio cable from your device to the headphone.
- 5. Music playing through cable is available with MXH-BT600E.

Remarks:

If pairing is failed, please turn off the headset first and then re-pair according to steps 1~3 mentioned above.

After pairing is successful, the headset and the mobile phone will remember each other, they will not need to re-pair next time.

Every time the headset is turned on, it will connect to the last connected device automatically. If you want to pair it with other devices, please turn off the Bluetooth function of last connected devices first and pair the headset with the new device according to steps $1 \sim 3$ mentioned above.

HEADPHONE OPERATION & SPECIFICATION

For detailed function explanation, pairing instructions, and specification. Please download the complete manual at <u>www.maxell.eu</u>

Note: The specification may be change at any time without advance notice. Maxell reserve the rights for any modification of this product.

CARE AND MAINTENANCE

BATTERY Note and Care

Do not burn or bury batteries.

Do not puncture or crush.

Do not disassemble.

Li-Polymer batteries must be recycled. Do not dispose of in the trash.

Use only chargers rated for Li-Polymer cells. Be sure the charger's voltage and current settings are correct for the battery pack being charged.

Charge batteries on a fireproof surface and away from flammable items or liquids.

Batteries should NEVER be left unattended while charging. Only adults should charge the batteries or give well instruction to children for charging.

Follow the manufacturer's instructions for charging the product and do not charge longer than recommended. Unplug the charger when the charging is complete or not in use.

MXH-BT600E Headphone Note and Care

∕!\

Use it in the temperature range of -10 $^{\circ}~$ C to 40 $^{\circ}~$ C.

Avoid operating your unit under direct sunlight or in hot, humid or dusty places.

Keep your unit away from heating appliances and sources of electrical noise such as fluorescent lamps or motors.

Don't try to disassemble the product as it may get damaged.

Don't let it fall down onto the floor or other hard surfaces. The internal circuit might get damaged.

Don't scratch the surface with sharp things.

Cleaning the unit

To prevent fire or shock hazard, disconnect your unit from the USB port of power source when cleaning.

The finishing on the unit may be cleaned with a dust cloth. Be careful when cleaning and wiping the plastic parts. Never allow any water or other liquids to get inside the unit while cleaning.

Note: The headphone is not magnetically shielded and may cause color distortion on the screen of some TVs or video monitors. To avoid this, you may need to move the unit further away from the TV or monitor if an unnatural color shifts or image distortion occurs.