

## POWER ADJUSTMENT

Your Andis clipper has been adjusted to line voltage at the factory. However, because of voltage variations it may be necessary to adjust the power setting for your area. If the power adjustment is off, you will usually notice a “clatter”, when the clipper is on or introduced into the hair. (It is normal for your clipper to “clatter” for an instant when initially turned on).

### TO ADJUST YOUR CLIPPER

1. Oil the blades (Diagram I).
2. The power screw is located in the lower part of the housing opposite the switch (Diagram E).
3. Turn your clipper on.
4. Using a standard screwdriver that fits the slot, turn the power screw clockwise until the clipper clatters continuously. Then turn the screw counterclockwise carefully until the clatter ceases.
5. Your clipper is now adjusted to its optimum power setting.

### Power Adjustment

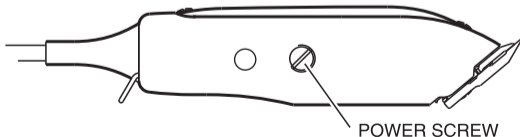


Diagram E