



Quick Start

Any person who participates in or assists in skateboarding assumes the know and unknow inherent risks in skateboarding activities and is legally responsible for all damages, injury or death to himself or herself or other persons or property which result from these activities. Wear a helmet and protective skateboard riding gear at all times. This includes elbow and kneepads, protective eyewear, long pants and long shirts / outerwear protection. The user of this product and the adult supervisor assumes all risks associated with its use. Riding a Maverix Skateboard may involve risks of serious injury or death due to loss of control, a collision or a fall. This Quick Start only resumed a part of the User Manual. It is your responsibility to fully read and understand this User Manual.

How to change pre-set performance level

(Speed and acceleration rate)

Always start your experience on the default setting: Low speed

Comment changer de niveau de performance

(Niveau de vitesse et accélération)

Toujours faire votre premier essai au niveau initial à la livraison: basse vitesse

Additional information: please read your user manual

 
1-Turn off remote



2- Remove 9 volts Battery from bottom of remote



3- A little switch is place behind the battery.
Select level:
3-Low speed
2-Medium speed
1-High speed



4- Replace battery and cap
Turn On the remote to synchronized new signal to your board.



1- Éteindre la manette

2- Retirer la pile 9 volts du compartiment

3- Un petit commutateur est placé derrière la pile. Choisir une des trois positions:
3- vitesse basse
2- vitesse moyenne
1- Vitesse maximal

 
4- Remplacer la pile et fermer le compartiment. Remettre la manette en fonction pour synchroniser votre nouveau niveau.

Information additionnelle: veuillez lire votre manuel de l'utilisateur

Important: When synchronizing your remote, make sure you are at least 10' from other Maverix.

Important: Lorsque vous synchronisez votre manette assurez-vous d'être à plus de 3mètres (10') d'une autre planche Maverix

Note: do not remove foil tape.
It is your antenna



Note: Ne pas retirer le revêtement d'aluminium.
C'est votre antenne.





Quick Start

Safety; Use secure and appropriate lifting and battery loading techniques. Ask for help if it is too heavy for you to manipulate.

How does it work?

Remote The wireless remote control regulates the speed of your Maverix Skateboard. Pulling the trigger toward you will accelerate the board. Releasing the lever will return it to the near-neutral position, and allow you to coast downhill. Pushing the trigger away from you will engage braking.

Quick start;

Note; When synchronizing skateboard to remote; do it apart and one at a time, so there is no confusion into frequencies. Once remote and skateboards are synchronized, they are communicating exclusively together.

Step 1. Check that you are on the **low speed mode** (see instructions below).

Select your speed level (in remote's handle)

Three speed positions are available under the 9 volts battery as follows;

- Position 1; Maximum speed
- Position 2; Medium speed
- Position 3; **Low speed**

Always start your experience on Position 3; Low speed. Once familiar with the control, you can pass to higher speed.

Make sure the power button on your Maverix electric skateboard (switch located on front of the battery) is set to 'ON' and the power of the remote is set to 'O' (off).

Step 2. Get on the board, connect your safety leash and make sure to have a comfortable and adequate position before starting. (The chest straight, the knees slightly bent, the body weight slightly forward...)

Step 3. Without putting your finger on the trigger, turn on your remote control, setting the knob to "I" or "II" if you want to use the remote control light.

Step 4. Lightly squeeze the trigger in order to make your Maverix skateboard gain speed.



Quick Start

Step 5. Slightly push the trigger forward in order to brake.

Step 6. Be sure you are thoroughly familiar with all the features and controls discussed in the manual before you ride your Maverix electric skateboard.

Know your limits and ride within them.

*****Each times you change your settings, you need to reprogram your skateboard. To do so, put the remote at « Off / O» position, and then turn it back to « ON / I or II ». It will then send a new signal to the board with its new speed level.*****

Charging the battery;

In order to charge your Maverix, the charger (provided) plugs into an ordinary outlet (120 volts), and into the battery block below the deck.

The batteries are fully charge when the light on the charger turns from red to green.

Caution; When the light turns green, disconnect the charger from the battery and the wall outlet. If the battery remains in charge too long, you may damage the charger and battery.