

LOWRY

2000 Watt Convection Heater



Model number: GSCH1

Please read these instructions carefully and keep them for future reference

Contents

	Page
Unpacking your appliance.....	2
Safety instructions.....	3
Feature diagram.....	6
Base assembly.....	7
Wall mounting.....	8
Using your appliance.....	10
Cleaning and care.....	13
Problem solving.....	14
Connection to the mains supply.....	15
Guarantee.....	16

Unpacking your Appliance

Before you use your appliance

1. Remove all the packaging.
2. Check the appliance after unpacking for any visual damage such as:
 - Misaligned or damaged cabinet parts
 - Damage to the controls
 - Damage to the plug or cable
 - If you can see any damage **do not use the Appliance**

The appliance should not be used if it has been dropped or there are any visible signs of damage.

This appliance must be placed on a solid stable surface, away from walls, cabinets, furniture, curtains, etc. Position the appliance with minimum spacing of 100cm from the top and sides, and 150cm free space in front



WARNING: In order to avoid overheating, do not cover the appliance.

Safety instructions

When using electrical appliances, basic safety precautions should always be observed, including the following:

- Read all instructions.
- Check that the your mains voltage corresponds with the rating on the appliance.
- The appliance must not be left unattended while it is connected to the mains supply.
- Do not touch hot surfaces. Use the handle or the controls.
- To protect against electrical shock do not immerse cord, plug, or appliance in water or other liquid. Do not operate with wet hands.
- Do not let the cord hang over the edge of a worktop, table etc. or touch hot surfaces.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.
- The use of accessory attachments not recommended by the appliance manufacturer may cause fire, electric shock or injury.
- This appliance must not be immersed
- To disconnect remove the plug from the mains outlet. Do not pull the plug out by the cord.

Safety instructions

- Never remove parts from the appliance, such as the feet, screws and so on.
- Never use the appliance near a bath, shower or a swimming pool.
- Never place flammable objects or clothing on top of the appliance.
- Allow a 100cm safe area around the appliance on the top and sides and a 150cm safe area at the front.
- Never use the appliance in a room with explosive gas such as petrol, or while using any kinds of flammable glues, sprays or solvents.
- Prevent overheating of the appliance by keeping the air inlets and outlets clean and free of anything that may cause blockage. Check all inlets and outlets from time to time for accumulated dust. DO NOT COVER.
- Do not place any part of your body near the air inlet, outlet or on the fins ,to avoid personal injury, electric shock or fire.
- If overheating should occur, the built-in overheating safety device will shut the appliance off.
- Do not insert any foreign objects into the grill.
- Keep all grills clear of any draped fabric or curtains.

Safety instructions

- The appliance must not be located immediately below a mains socket. Do not use the appliance with a programmer, timer or any other device that switches the appliance on automatically. A fire risk exists if the appliance is covered or positioned incorrectly.
- Do not operate this appliance for anything other than its intended use.
- This appliance is not intended for commercial use

 
This product is intended for household use only. Do not use outdoors.
This product is only intended for heating and cooling.

Warning: it is hazardous for anyone other than a competent person to carry out any service or repair operation which involves the removal of a cover which gives protection against exposure to electrical parts.

Warning: children should not use this appliance. Close supervision is necessary when any appliances are used near children.

Warning: this appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to make sure that they do not play with the appliance.

Feature diagram

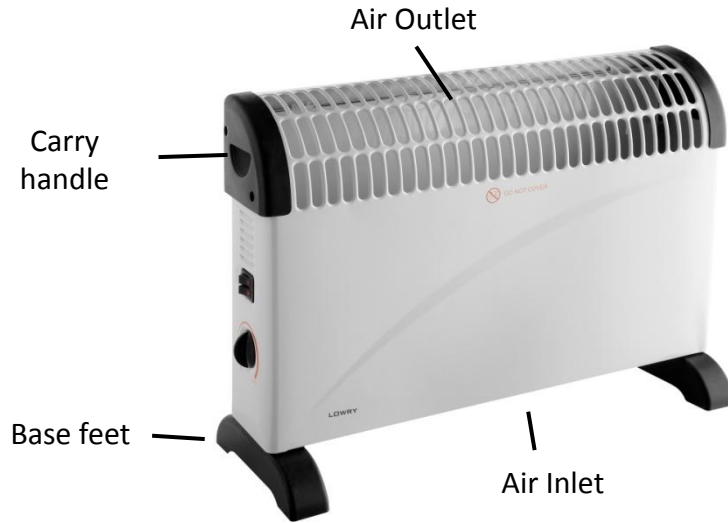

Power setting



Thermostat Control



 
Warning - Do not touch hot surfaces, do not block openings or cover appliance.

Base assembly



Before using the heater, the feet (supplied separately in the carton), must be fitted to the unit.



These are to be attached to the base of the heater using the 4 self-tapping screws provided, taking care to ensure that they are located correctly in the bottom ends of the plastic mouldings

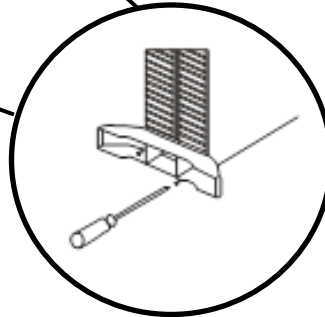

Wall mounting the heater


- Caution:**
- there should be a distance of at least 40 cm between the lower part of the appliance and the floor.
 - the feet must be removed before mounting the appliance on the wall.

  Measure the distance between the two slots situated at the back of the appliance (see picture A). Mark the distance on the wall where the heater will be mounted. Hold the brackets facing inwards (see picture B) and on the wall mark the centre for the screws, through the holes in the brackets. Drill two holes in the centre marks and insert a plug in each hole you just drilled. Place the brackets facing the holes as indicated on picture B and attach them in this position with the screws supplied. The section of the bracket sticking out should align with the slots in the heater.

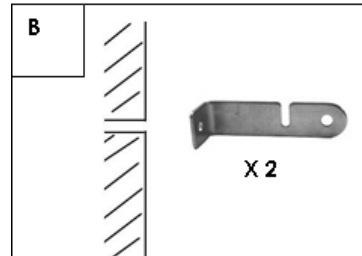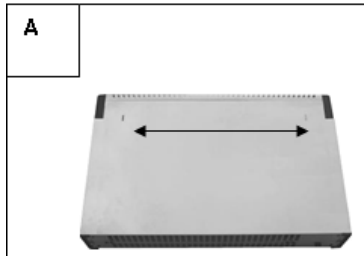

Wall mounting the heater

 Before attaching the appliance on the brackets, attach the two other brackets underneath the appliance as indicated in picture C.

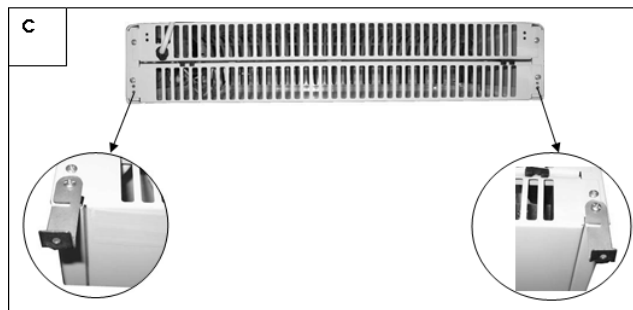

Attach the appliance on the wall. To do so, hold it in such a way that the slots are facing the brackets; insert the appliance halfway onto the brackets until the appliance can go down into the grooves of the brackets.

As soon as the appliance is positioned correctly, take a pencil and mark a dot in the hole of each bracket situated underneath the appliance.

 
Then take off the appliance by proceeding the other way around compared to point 4 above.

Drill a hole in the wall on each dot you just marked and insert a plug in each hole.

Attach the appliance back on the wall as indicated in point 4, insert screws through the brackets underneath the appliance and tighten without forcing.

Using your Appliance

1. Before connecting your appliance to the mains socket, position the appliance upright on the floor away from curtains, furniture or wall coverings.
2. Insert the mains plug into a suitable 13Amp mains socket.
3. Turn the Power Control to the '750W' or '1250W' position. The appliance has 2 built in heating elements . You can select one or both heating elements.

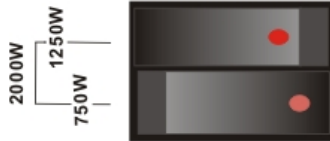

Power Control Position

OFF - Power OFF

750W - Low heat

1250W - Medium heat

2000W - High heat

Using your Appliance

4. Turn the **Thermostat Control** to the to the desired position. It is recommended to select the highest position to pre heat the appliance. It will take 5 -10 minutes for the appliance to fully heat up. Please note, this appliance will not operate if the thermostat has been set too low.

Thermostat Control
Turn clockwise from 'MIN' ' to
'MAX' position



5. A small amount of smoke may be produced during first time use or when the appliance has not been used for a long period of time, this is normal and will quickly disappear.
6. When the room reaches the desired temperature, turn the **Thermostat Control** slowly anti clockwise until the appliance goes off with a 'click' sound. The heating elements will temporarily go off.

Using your Appliance

7. If the room temperature falls below the desired temperature, the heating elements will turn on again until the room temperature reaches the desired temperature.

Safety Protective Devices

The appliance is fitted with an over heat protection system.

1. Overheat protection - the power to the heating elements will automatically cut off if the temperature of the heating elements exceeds a certain limit. In the event of overheating, the heater will stop operating. Switch the appliance off and allow it to completely cool. The appliance will then resume operating as normal.

Cleaning and care

WARNING: Electrical Shock Hazard.

Before you clean the appliance, disconnect the mains plug from the wall socket.

- Allow the appliance to cool down completely before cleaning.
- Do not immerse cord, plug or appliance in any liquid or allow moisture to come into contact with electrical parts.
- Clean the outer surface using a moist cloth and wipe over with a dry, soft cloth.
- Do not use harsh detergents, abrasives or spray on cleaners.
- Don't allow water to seep into the openings or come into contact with electrical connections.
- Allow sufficient drying time before operating again.
- Clean the air inlets and outlets regularly with a vacuum cleaner using the brush attachment (with a regular use, at least twice a year).
- When the appliance is not in use. We recommend that, the heater is re-packed in its original packaging and stored in a cool, dry place.

Problem Solving

My appliance does not work when I turn it on

1. Check that your appliance is plugged in and the power is turned on at the mains socket.
2. Try another mains socket
3. Check the appliance is in an upright position.
4. Check that the thermostat setting has not been set too low.
5. If the appliance still doesn't work, do not try to repair it yourself.

If your appliance power is automatically cut off, follow the step below:

1. Unplug your appliance from the mains socket and allow it to completely cool down.
2. Inspect your appliance. Clean the air inlet and air outlet with a vacuum cleaner if necessary. If there are any signs of physical damage (e.g. melting, or burning of the case), do not attempt to use the appliance. Please leave all maintenance work to qualified personnel.
3. Plug in the appliance and switch it on again. If it cuts off again, move the appliance to a better ventilated location.

Connection to the mains supply

 
WARNING- THIS APPLIANCE MUST BE EARTHED

This appliance is designed to operate from a mains supply of AC 220V – 240V ~50Hz.

Check that the voltage marked on the product corresponds with your supply voltage.

This product is fitted with a 13A plug complying with BS1363 and is fitted with an appropriate fuse complying with BS1362. Always replace the fuse with one of the same rating. If the plug is unsuitable for your mains socket or needs to be replaced, please note the following:

Important: The wires in the mains lead must be connected as per the following diagram -

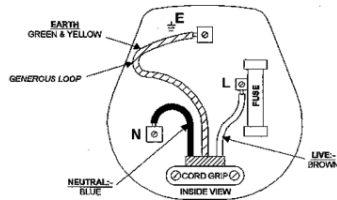

Always ensure that the plug cord grip is fastened correctly.



If your appliance is supplied with a non-rewireable plug, you will find that it incorporates a fuse, the value of which is indicated either on the base of the plug or on the fuse carrier. Always replace the fuse with one of the same rating. If you need to remove the plug, cut it from the mains lead and dispose of it. Never attempt to re-use this plug or insert it into a socket outlet, as there is a very great risk of an electric shock.

Rated voltage: AC 220V – 240V ~50Hz

Power consumption: 1800 - 2000W

Guarantee

This product is guaranteed for 12 months from the date of the original purchase. If any defect arises due to faulty materials or workmanship the faulty product must be returned to the place of purchase.

Refund or replacement is at the discretion of the store.

The following conditions apply:

- The product must be returned to the retailer with the original proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide and any other instructions for use which has been supplied.
- It must be used for domestic purposes only and for its intended use.
- This guarantee does not cover wear and tear, damage, misuse or consumable parts.

This does not affect your statutory rights.

For Customer
Services please call
01204 664 081
Opening times:
Monday - Friday
9am until 5pm

Revision 1



This symbol is known as the 'Crossed-out wheeie bin Symbol'. When this symbol is marked on a product/batteries, it means that the product/batteries should not be disposed of with your general household waste. Only discard electrical/electronic/battery items in separate collection schemes, which cater for the recovery and recycling of materials contained within. Your co-operation is vital to make sure the success of these schemes and for the protection of the environment. For your nearest disposal facility, visit www.recycle-more.co.uk or ask in store for details.

We reserve the right due to possible changes to design to alter the instruction manual without prior notice.