


VERSATILE BASE SERIES

VB-1000 CONTROLLER USER MANUAL

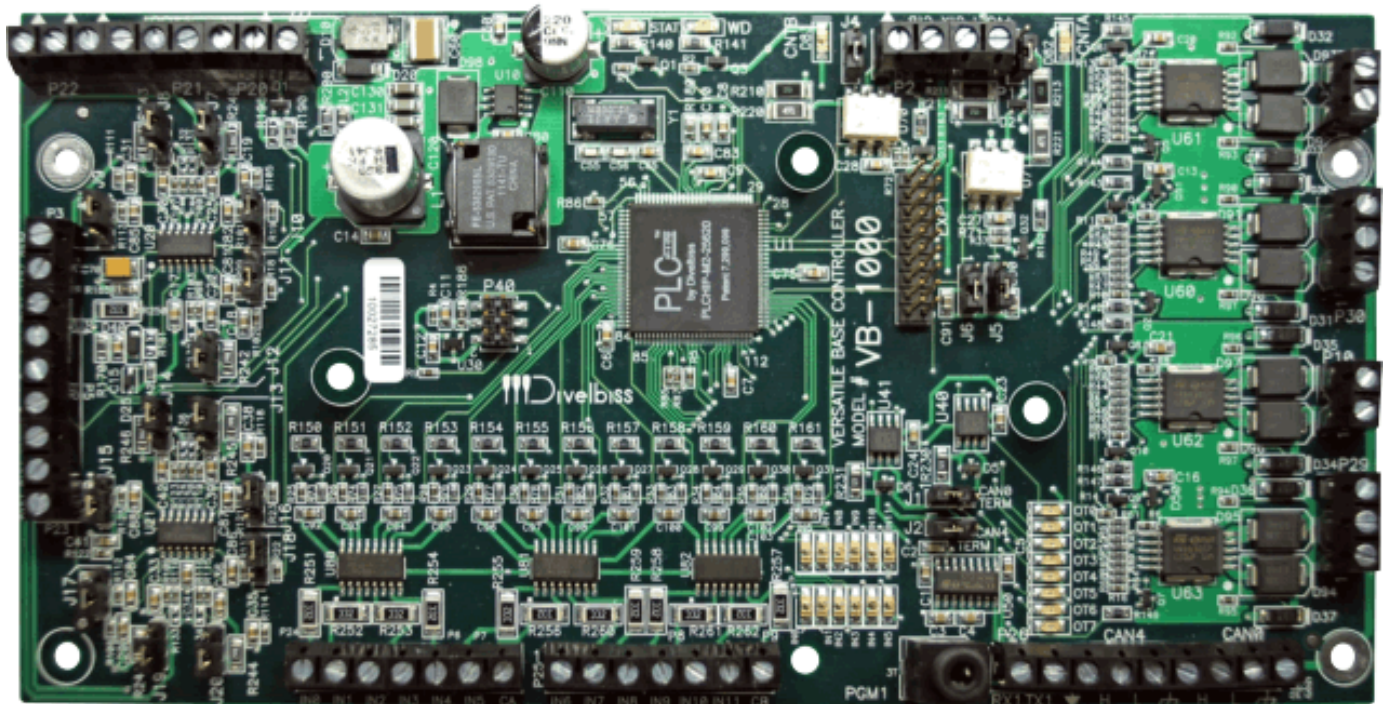

Revision: 0

Manual Contents

Getting Started

How to Use this Manual	3
Configuring the VB-1000 Target in EZ LADDER Toolkit.....	4
Loading the VB-1000 Controller's Kernel.....	4
Getting to Know the VB-1000 Layout and Connections.....	6
VB-1000 Configuration Jumper Summary	8

VB-1000 Features

Programming Port	10
Watchdog LED	11
Programmable LED	11
Input Power	11
Mounting	12
Digital Inputs.....	13
High Speed Counter / General Purpose Inputs.....	13
Digital Outputs.....	16
Pulse Width Modulation Outputs.....	17
Analog Inputs.....	19
General Purpose RS232 Serial Port.....	21
CAN Networking Ports	21
VB-1000 Target Setting Options.....	22
Expansion Options.....	22
VB-1000 Specifications	23

WARNING!!

The VB-1000, as with other programmable controllers must not be used alone in applications which could be hazardous to personnel in the event of failure of this device. Precautions must be taken by the user to provide mechanical and/or electrical safeguards external to this device. This device is **NOT APPROVED** for domestic or human medical use.

Getting Started

This section explains how to read this manual and understand the symbols and information that it contains.

To begin using your VB-1000 Controller, you will need to follow these steps:

- Install EZ LADDER Toolkit if not already installed (not included).
- Configure the VB-1000 Controller in the EZ LADDER Toolkit Project Settings.
- Connect the Input Power.
- Using purchased or self-made cable, connect the Programming Port.
- Write a ladder diagram program or use a sample program provided on the EZ LADDER CD.
- Install the VB-1000 Kernel if this is a new unit from the factory.
- Download and run the program on the VB-1000 Controller.

Refer to the appropriate sections of this manual for details on the above items.

How to Use this Manual

In this manual, the following conventions are used to distinguish elements of text:

BOLD	Denotes labeling, commands, and literal portions of syntax that must appear exactly as shown.
<i>italic</i>	Used for variables and placeholders that represent the type of text to be entered by the user.
SMALL CAPS	Used to show key sequences or actual buttons, such as OK, where the user clicks the OK button.

In addition, the following symbols appear periodically in the left margin to call the readers attention to specific details in the text:



Warns the reader of a potential danger or hazard associated with certain actions.



Appears when the text contains a tip that is especially useful.



Indicates the text contains information to which the reader should pay particularly close attention.

All Specifications and Information Subject to Change without Notice

Configuring the VB-1000 Target in EZ LADDER Toolkit

Before you can program and use the VB-1000 Controller, it must be configured as a target within the EZ LADDER Toolkit. For help with installing or using EZ LADDER, please refer to the EZ LADDER User Manual.

1. In EZ LADDER, from the File Menu at the top, click **PROJECT** then **SETTINGS**. This will open the Project Settings Window. Select **VB-1000** as the target from the choices. Refer to Figure 1.1. Verify the Port is correct and the baud rate is 57600.

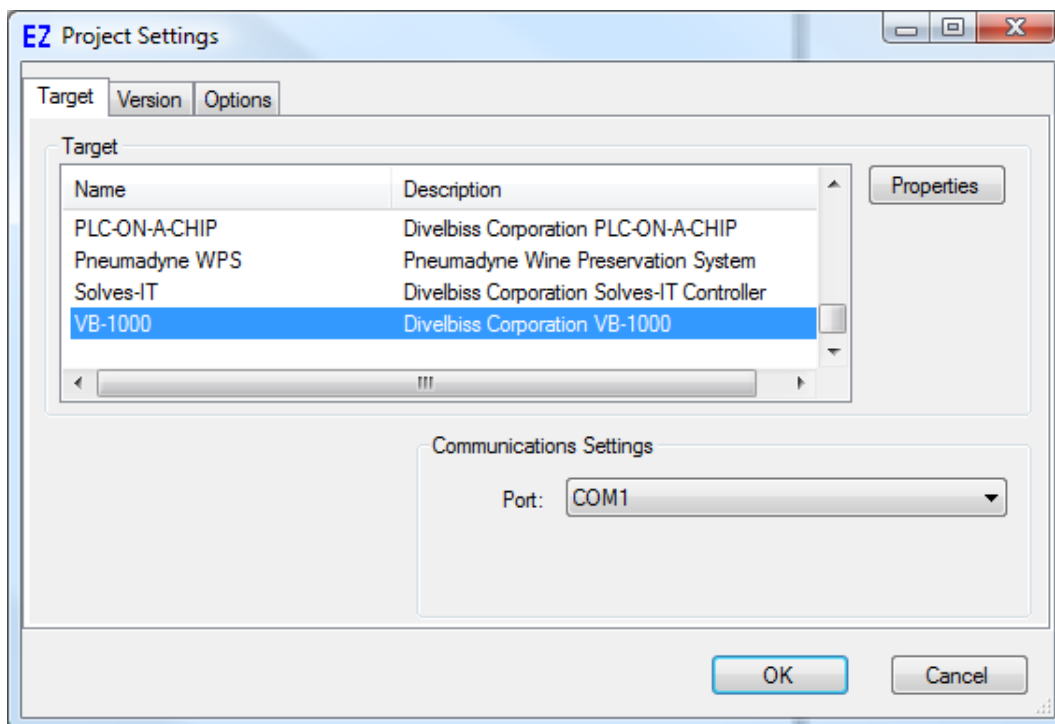


Figure 1.1 - Project Settings Window

2. Click **OK**. This will close the Project Settings Window, saving the VB-1000 as the target for this ladder diagram project.


Loading the VB-1000 Controller's Kernel


**THE VB-1000 WILL NOT FUNCTION UNLESS
THIS STEP (KERNEL LOADING) IS COMPLETED.**


The kernel is the firmware for the controller and to provide greater flexibility and reliability, VB-1000 controllers are factory shipped **without** a kernel. If this is a new unit from the factory, it will be necessary to load the kernel before a ladder program can be downloaded. If the kernel is already loaded, this step is not required. To upgrade a kernel, see the EZ LADDER User's Manual.

To install the VB-1000's kernel:

 1. Verify the target has been configured (see *Configuring the VB-1000 Target in EZ LADDER Toolkit*).
2. Connect the Programming cable(s) from the computer to the VB-1000. See *Programming Port* in the *VB-1000 Features* section.
3. Create a small one-rung program with a normally open (direct contact) and an output tied together. You may also open a pre-existing program for the VB-1000. EZ LADDER version 1.0.4.4 and later includes a sub-directory (...EZ LADDER\Kernel Install Start Programs\)\which has starter programs for each target to load the kernel. Choose **GetStarted_VB-1000.dld**.

4. Click the  (Compile) button

 
5. Click the  (Monitor) button to change from the 'Edit' to 'Monitor' Mode.

6. Click the  (Connect) button to connect to the target. A dialog will appear automatically when no kernel is loaded. If this dialog does not appear, click **PROJECT** then **BOOTLOADER**.


7. Click the **BROWSE** button and select the target's kernel (by part number) located by default at C:\Program Files\EZ Ladder\Kernel\

The following are kernel names and descriptions:

<u>File Name</u>	<u>Description</u>	<u>To be Used on (Part number)</u>
VB_1000.dat	Kernel for VB-1000	VB-1000 (plus VB-1000 with VBEX-XXXX Expansion)

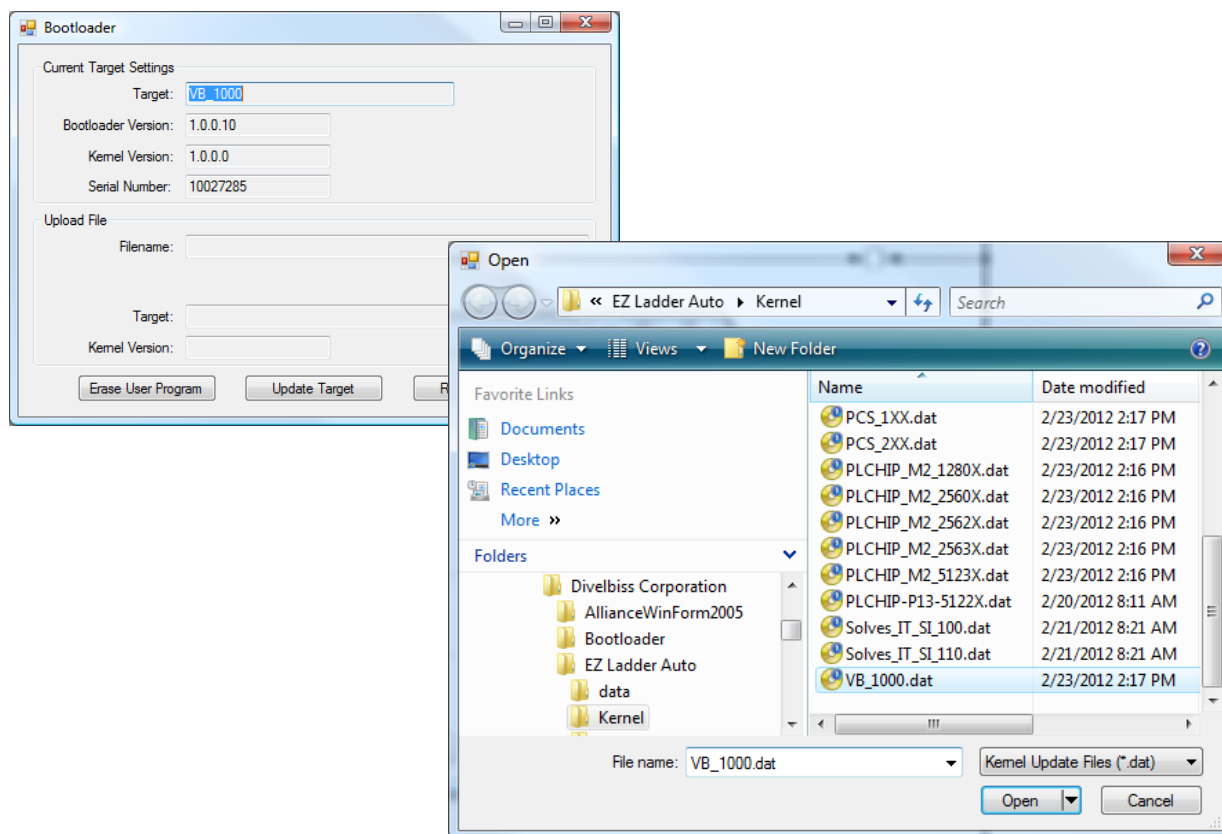

8. Click the **OPEN** button to finish the kernel selection. Make sure the correct kernel is chosen.
9. Click the **UPDATE TARGET** button to install the kernel.

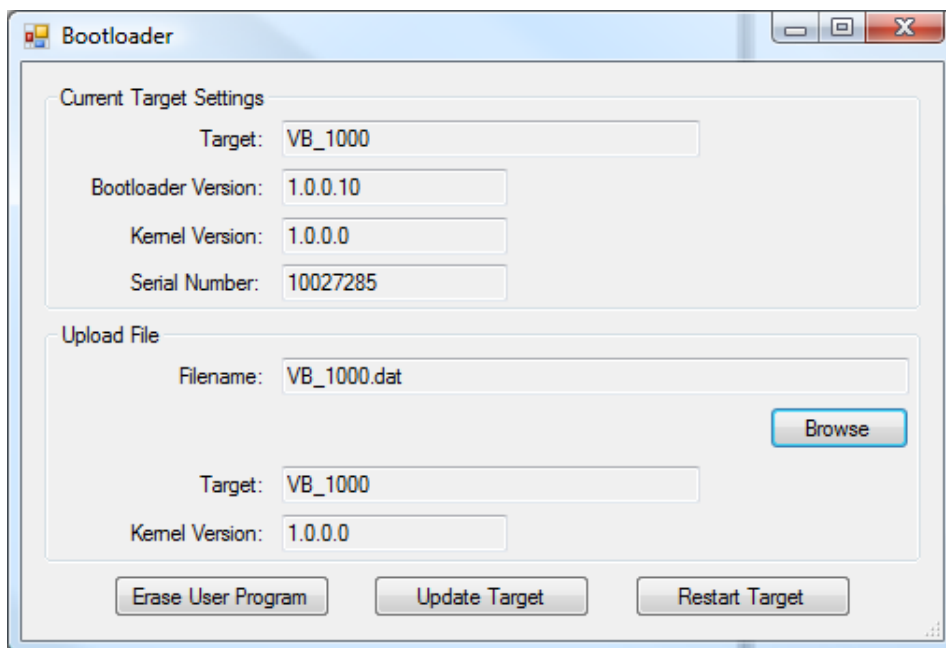


10. A dialog box will appear to show the status of the kernel installation. This could take a couple of minutes to install.
11. When the dialog windows close, the installation is complete. The VB-1000 is ready to use and may be connected to and programs may be downloaded.

Getting to Know the VB-1000 Layout and Connections

The VB-1000 Controller is designed to provide powerful programmable features in versatile, open-board format. All real world connections to the VB-1000 (except the programming port) are via 5mm terminal blocks located near the printed circuit board's edge.

Refer to Figure 1.2, it illustrates the VB-1000 Controller's basic layout and locations for connections and configuration jumpers.

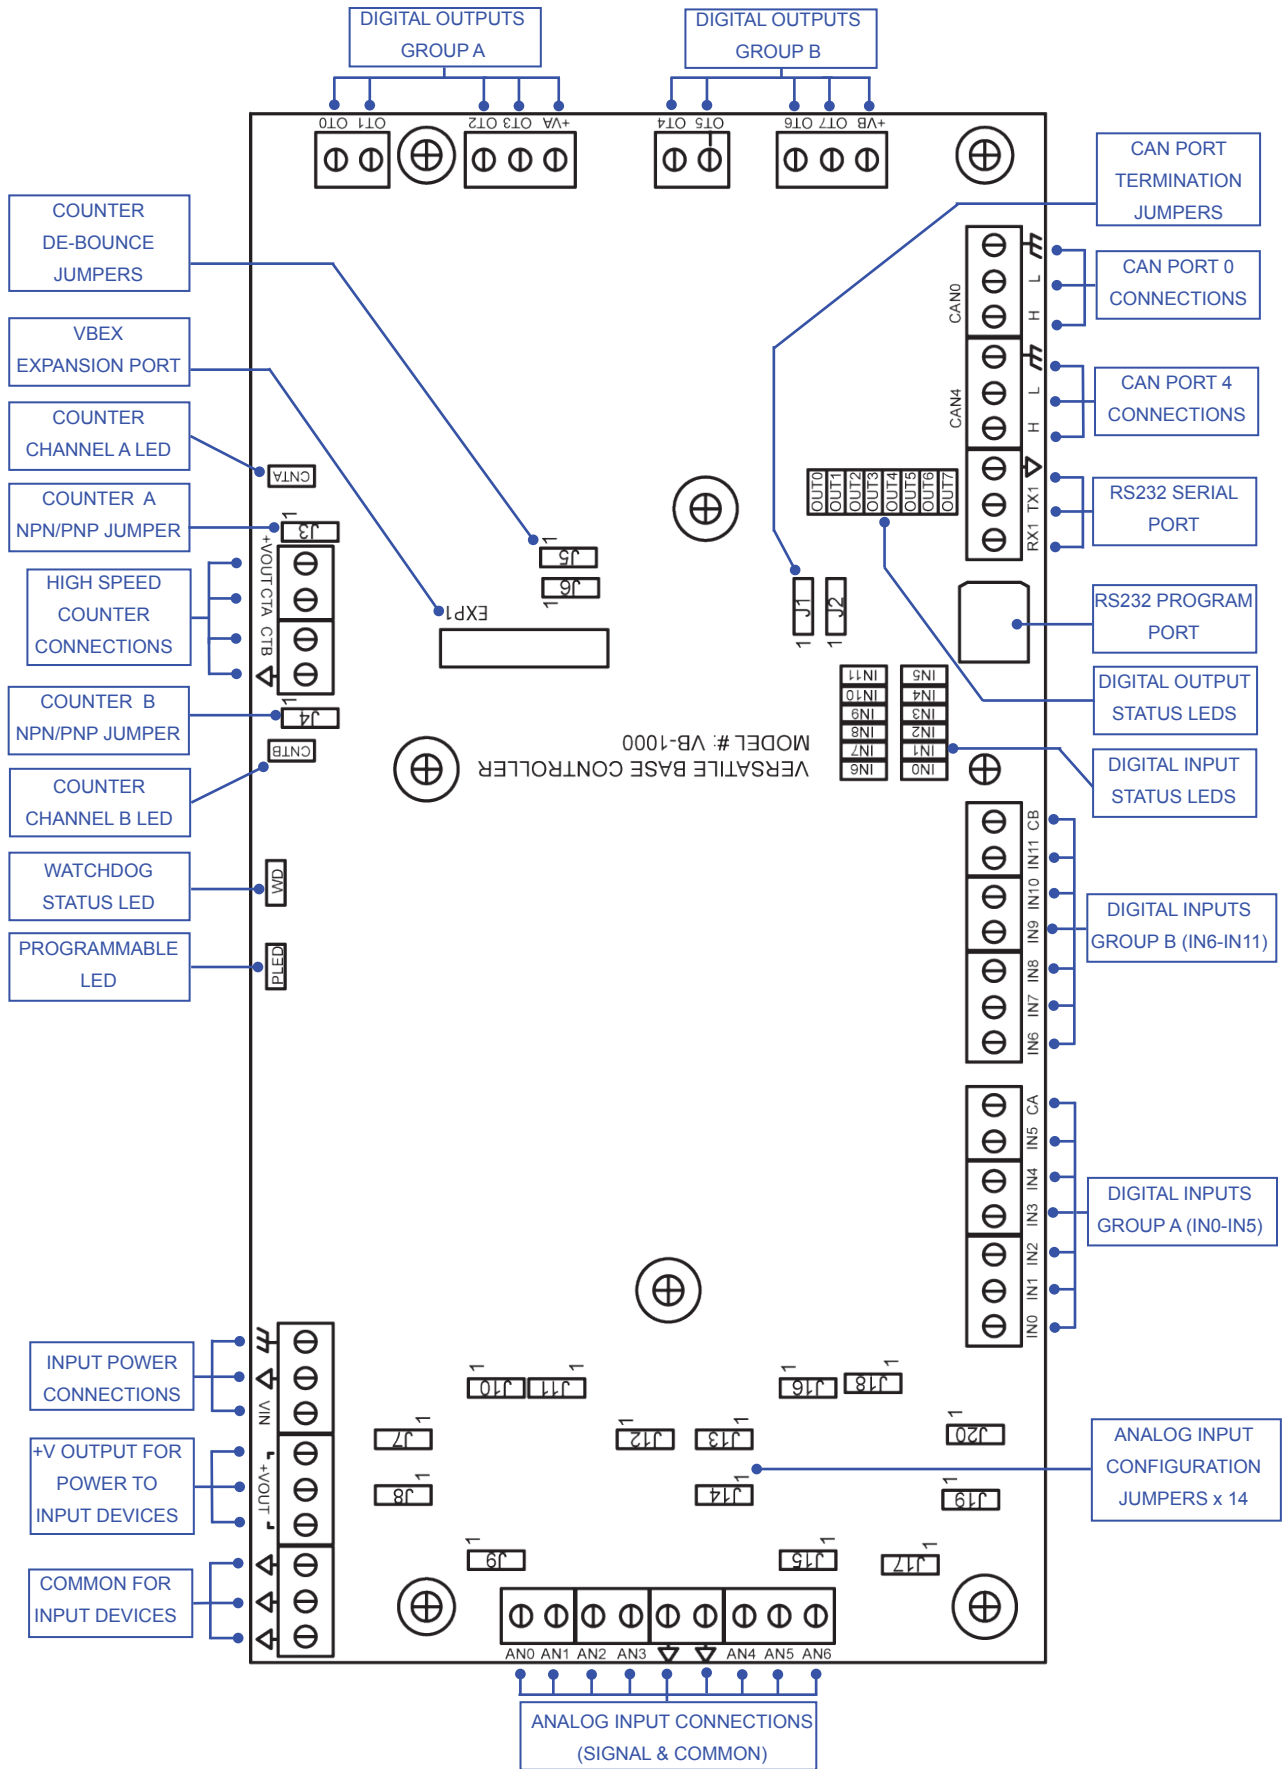

VB-1000 Configuration Jumper Summary


As the VB-1000 Controller is designed to provide powerful programmable features in versatile, open-board format; on-board option jumpers must be configured for proper operation. Below is a summary of the jumper settings found on the VB-1000 controller. Each of these jumpers and their specific operational characteristics is detailed in later sections of this manual.

J1, J2: CAN PORT TERMINATION JUMPERS		
Jumper ID	Shunt Installed Pin 1 to Pin 2	Shunt Installed Pin 2 to Pin 3
J1	CAN Port 0 with NO Termination Resistor	CAN Port 0 with 120 Ω Termination Resistor
J2	CAN Port 4 with NO Termination Resistor	CAN Port 4 with 120 Ω Termination Resistor

J3-J6: HIGH SPEED COUNTER INPUTS CONFIGURATION JUMPERS		
Jumper ID	Shunt Installed Pin 1 to Pin 2	Shunt Installed Pin 2 to Pin 3
J3	Counter Channel A Configured for NPN (1.5K Ω P/U)	Counter Channel A Configured for PNP
J4	Counter Channel B Configured for NPN (1.5K Ω P/U)	Counter Channel B Configured for PNP
J5	Counter Channel A De-bounce Enabled	Counter Channel A De-bounce Disabled
J6	Counter Channel B De-bounce Enabled	Counter Channel B De-bounce Disabled

J7-J20: ANALOG INPUTS CONFIGURATION JUMPERS		
Jumper ID	Shunt Installed Pin 1 to Pin 2	Shunt Installed Pin 2 to Pin 3
J7	Analog Input 1 (AN1) Configured for 0-20mADC	Analog Input 1 (AN1) Configured for Voltage
J8	Analog Input 2 (AN2) Configured for 0-20mADC	Analog Input 2 (AN2) Configured for Voltage
J9	Analog Input 2 (AN2) Configured for 0-10VDC	Analog Input 2 (AN2) Configured for 0-5VDC
J10	Analog Input 1 (AN1) Configured for 0-10VDC	Analog Input 1 (AN1) Configured for 0-5VDC
J11	Analog Input 0 (AN0) Configured for 0-10VDC	Analog Input 0 (AN0) Configured for 0-5VDC
J12	Analog Input 0 (AN0) Configured for 0-20mADC	Analog Input 0 (AN0) Configured for Voltage
J13	Analog Input 5 (AN5) Configured for 0-20mADC	Analog Input 5 (AN5) Configured for Voltage
J14	Analog Input 6 (AN6) Configured for 0-20mADC	Analog Input 6 (AN6) Configured for Voltage
J15	Analog Input 6 (AN6) Configured for 0-10VDC	Analog Input 6 (AN6) Configured for 0-5VDC
J16	Analog Input 5 (AN5) Configured for 0-10VDC	Analog Input 5 (AN5) Configured for 0-5VDC
J17	Analog Input 3 (AN3) Configured for 0-10VDC	Analog Input 3 (AN3) Configured for 0-5VDC
J18	Analog Input 4 (AN4) Configured for 0-10VDC	Analog Input 4 (AN4) Configured for 0-5VDC
J19	Analog Input 3 (AN3) Configured for 0-20mADC	Analog Input 3 (AN3) Configured for Voltage
J20	Analog Input 4 (AN4) Configured for 0-20mADC	Analog Input 4 (AN4) Configured for Voltage

Jumper Example: Pull Jumper as shown and install from Pins 1 to 2 or Pins 2 to 3 based on setting required.

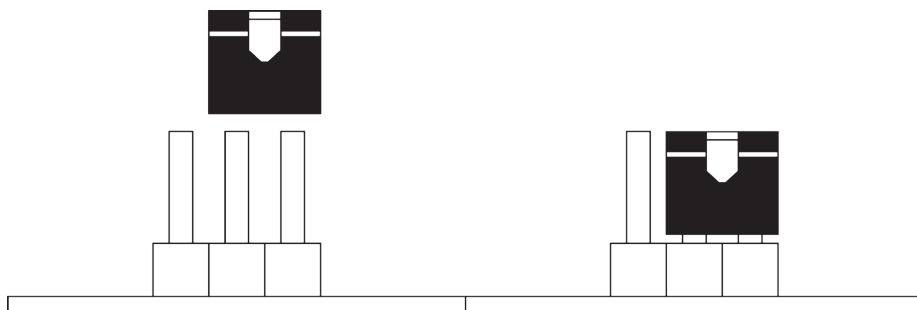

VB-1000 Features

This section explains the Versatile Base, Model 1000 (VB-1000) hardware features, options and information regarding EZ LADDER Toolkit for basic operation.

Programming Port

The VB-1000 is programmed using its Programming Port (PGM1). This RS232 serial port is only to be used for programming using Divelbiss EZ LADDER Toolkit software. This is not a general purpose port and may not be used in any other capacity than programming the controller itself.

The Programming Port defaults to:

Baud:	57600
Parity:	None
Data Bits:	8
Stop Bits :	1

An SI-PGM programming cable (purchased separately) is required to establish communications between EZ LADDER Toolkit and the VB-1000 controller. This cable connects to a standard 9-pin RS232 Serial port on a computer and plugs into the VB-1000 PGM1 port using a standard phono-jack connection. Figure 2-1 illustrates this connection.

It is important that cable plugged into PGM1 is seated properly (plugged in as far as it will go). Failure to insure this connection may result in communication errors or failure to establish communication between the VB-1000 controller and EZ LADDER Toolkit.

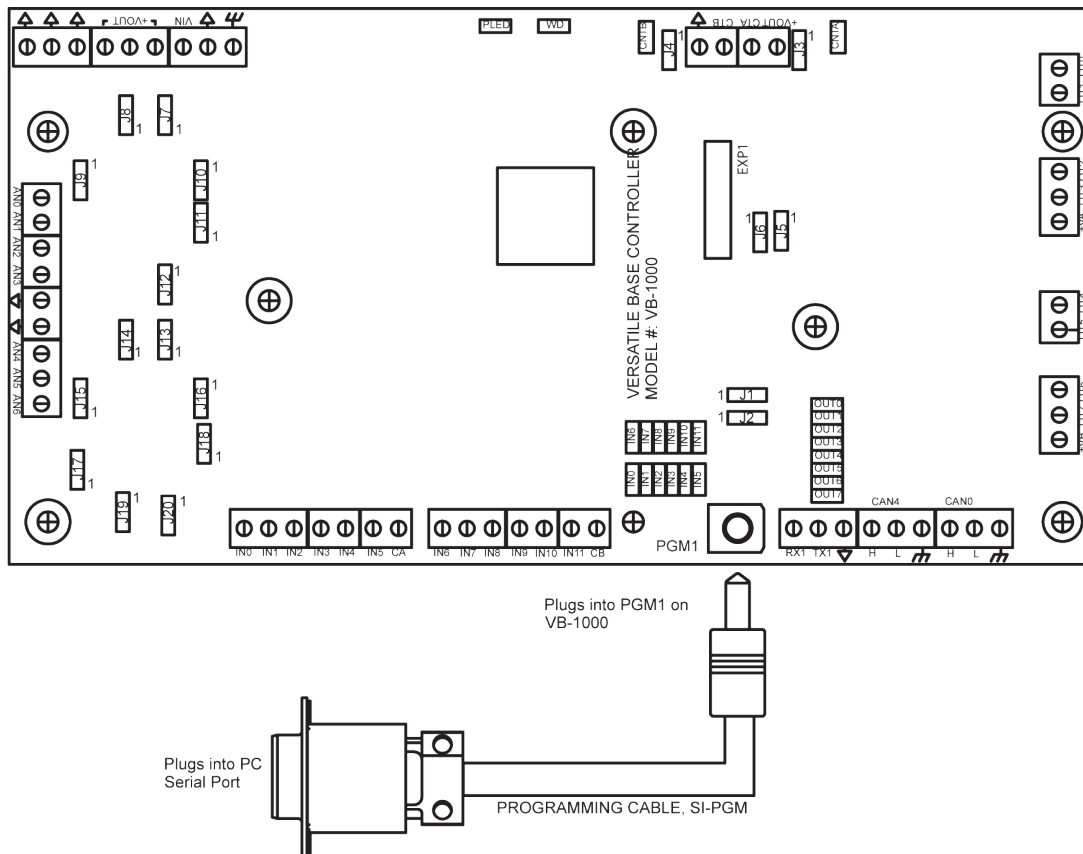


Figure 2.1 - Programming Port Connection

Watchdog LED



The operating status of the VB-1000 can be determined by the Watchdog LED. When the Watchdog LED is flashing at a slow rate, approximately once per second, then there is no ladder program executing. When the Watchdog LED is flashing at a fast rate (several times per second), a program has been loaded and it is executing.

If the Watchdog appears to be flickering at a very fast rate, the Kernel is not running. Either the kernel needs to be installed or the controller reset to restart the kernel if it is installed.

Should the Watchdog LED not flash at all, first check the input power. If the input power is correct and there is still no Watchdog LED, contact Divelbiss Technical Services.

Programmable LED

The VB-1000 provides a user-programmable status LED. This LED is programmed in the ladder diagram by using the PLED variable that is automatically created when the target is selected. The programmer may utilize this LED as desired.

Input Power



The VB-1000 is powered using 8-32VDC. The main power terminals (VIN, ↓) provide power for the controller logic only. Additional terminals are provided for supplying power for digital input and digital outputs. Refer to Figure 1.2 for identifying terminals and terminal locations on the VB-1000. Refer to the *VB-1000 Specifications* section of this manual for input current requirements.

While the digital I/O have separate terminals for power, if using the same power supply for logic and digital I/O, make sure it is sized appropriately to handle the output loads.

The input power can be monitored in the ladder diagram via an internal power monitor (analog input). This analog input is accessed in the ladder diagram by using the PMON variable that is automatically created when the VB-1000 target is selected. This PMON variable represents the raw analog input value of the input power.

This value must be scaled before it is used in a ladder diagram program. The following is an example ladder diagram program to read the PMON input and scale it for actual input voltage. Refer to Figure 2.2.

PMON: Power Monitor Analog Input (Integer) - Automatically created
 R_AN2: Variable used to store converted value of PMON as a real variable type. This is required for calculations.
 R_Temp: Variable used to temporarily store values (real variable type) during calculations.
 AinScale: Variable used to store maximum analog input scale value (real variable type). The default value = 1023.0
 MaxScale: Variable used to store the maximum input voltage scale (real variable type). The default value = 40.0
 InputV: Scaled analog input representing Input Voltage (real variable type)

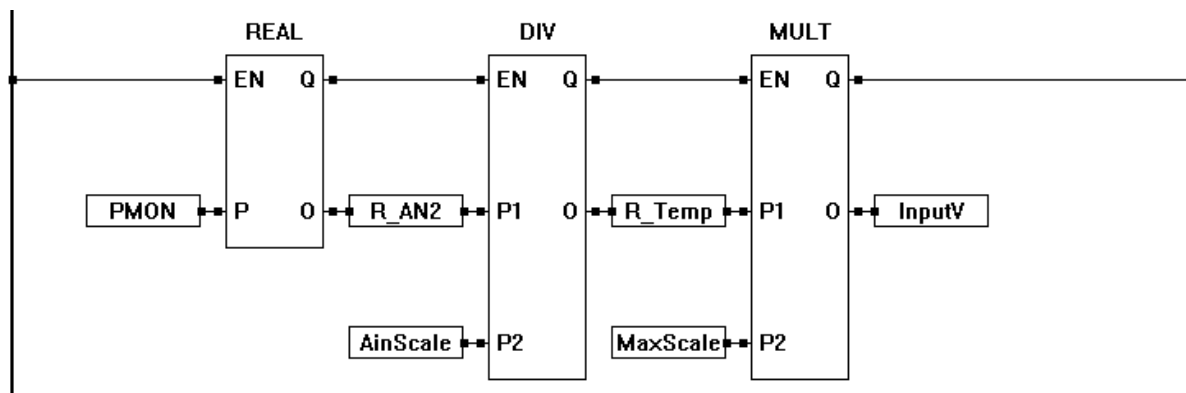


Figure 2.2 - Scaling the Power Monitor Analog Input

Mounting

The VB-1000 is designed to be sub-plate mounted using standoffs and screws (purchased separately). #6 hardware should be used for each of the four mounting holes provided. Refer to Figure 2.3 for mounting hole dimensions and locations.

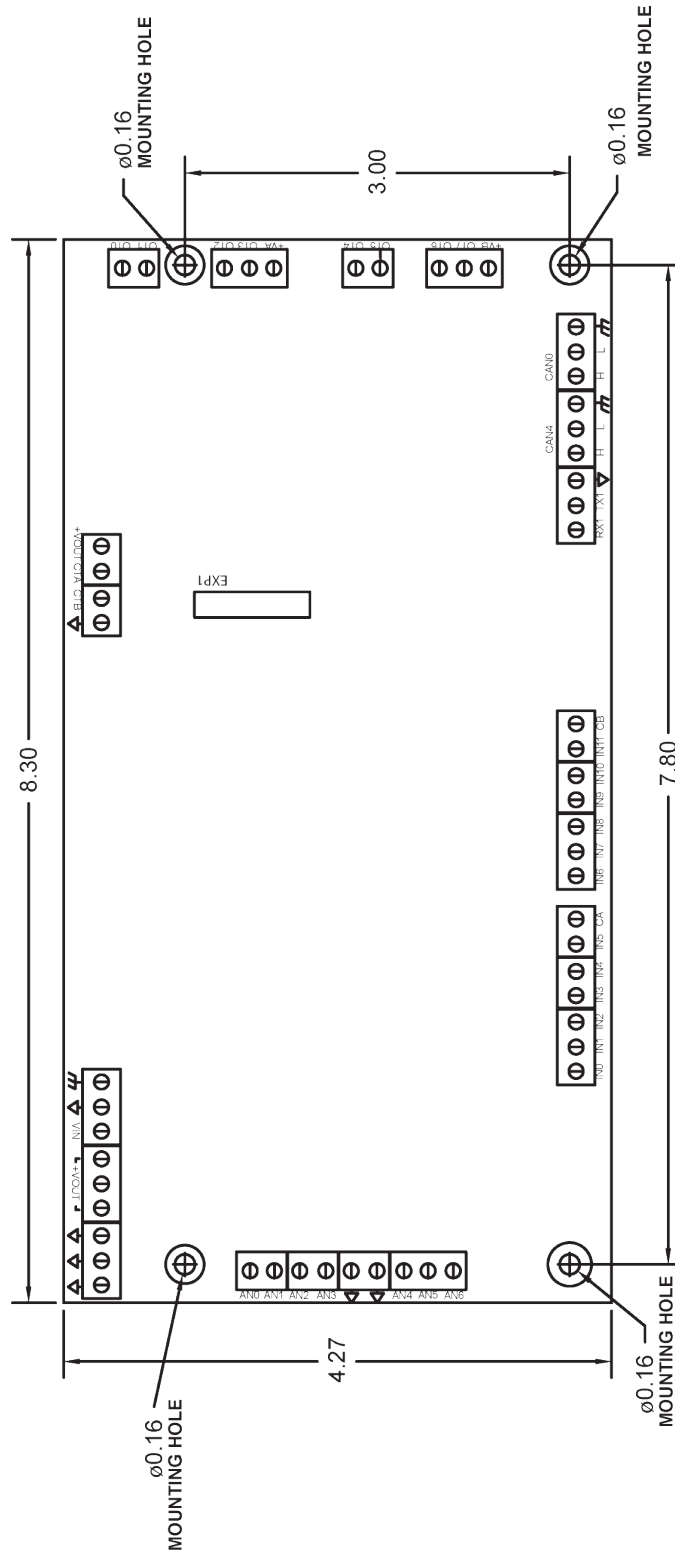


Figure 2.3 - VB-1000 Mounting

Digital Inputs

The VB-1000 provides two groups with 6 digital inputs in each group. Each input group (IN0-IN5 and IN6-IN11) may be wired as either sinking or sourcing. They are identified in EZ LADDER Toolkit and this manual as IN0 through IN11. EZ LADDER Toolkit automatically creates these variables when the VB-1000 is selected as the target. Each digital input can accept an input voltage of 8-32VDC. The presence of this voltage on an input will result in the input being read as TRUE in the ladder diagram. Each of the digital inputs are optically isolated and have on-board de-bounce circuitry.



Digital Input Group Wiring

Each digital input group may be wired as a group as sinking or sourcing. Group A (IN0-IN5) uses the CA terminal as it's common. Group B (IN6-IN11) uses the CB terminal as it's common. Refer to Figure 2.4 for typical digital input connections.

A positive voltage or ground may be connected to the CA or CB terminals as required for sinking or sourcing. By connecting the CA/CB terminals to ground and switching a signal (positive voltage) through an external device into the INx inputs, the group is configured as sinking. By connecting the CA/CB terminals to a positive voltage and switching the ground through an external device into the INx inputs, the group is configured as sourcing.

To read a digital input status in a ladder diagram, place and connect the appropriate contact for your needs. The DIRECT CONTACT and INVERTED CONTACT functions are used to read digital inputs in the ladder diagram. When placing the contact, verify you select the correct input address (IN0 - IN11) from the provided drop-down menu.

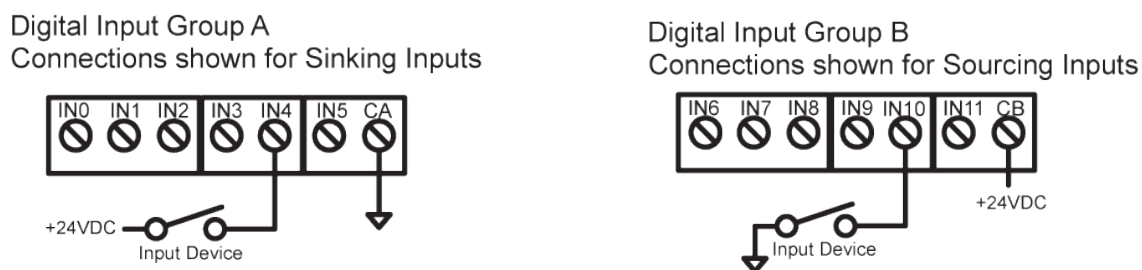


Figure 2.4 - Typical Digital Input Connections

High Speed Counter / General Purpose Inputs

In addition to the twelve (12) digital inputs, the VB-1000 also provides two high speed counter inputs. These two inputs may be used in the ladder diagram program as standard digital inputs using contacts (CTA and CTB) or as high speed counter inputs using the CNTRTMR function. Each digital input can accept an input voltage of 8-32VDC and is optically isolated. Refer to Figure 2.5 for typical connections. Figure 2.6 represents the actual high speed counter input circuitry. The +VOUT terminal is provided to connect the power terminal of pulse devices to the input power of the controller. The ↓ terminal is used as common for the pulse devices.

Use as General Purpose Inputs

When using either of the two high speed counter inputs (terminals CTA and CTB) as standard digital inputs, the actual input is read in the ladder diagram program by contacts. To read a digital input status in a ladder diagram, place and connect the appropriate contact for your needs. The DIRECT CONTACT and INVERTED CONTACT functions are used to read digital inputs in the ladder diagram. When placing the contact, verify you select the correct input (CTA or CTB) from the provided drop-down menu.

Use as High Speed Counter Inputs

When using either of the two high speed counter inputs (terminals CTA and CTB) as high speed counter inputs, the count is read in the ladder diagram program using the CNTRTMR function block. When placing this block, ensure the correct counter channel is selected from the provided drop-down menu (Channel 0 = CTA, Channel 1 = CTB).

Input De-bounce



When using the High Speed Counter inputs as general purpose inputs (CTA or CTB), jumpers (J5, J6) have been provided to enable or disable a hardware de-bounce. Typically, when using the inputs as general purpose inputs, the de-bounce should be enabled and when using the inputs as high speed counter inputs, the de-bounce should be disabled. With de-bounce enabled, high speed counting will be limited as the input frequency is limited. Figure 2.7 illustrates the de-bounce jumper configurations of J5 and J6.

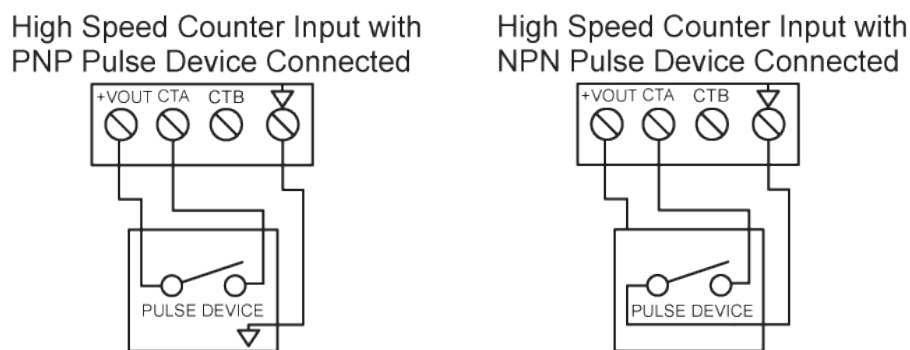


Figure 2.5 - Typical High Speed Counter Input Connections

NPN / PNP Input Configuration



The High Speed Counter Inputs CTA and CTB may be configured to interface to NPN or PNP input devices as shown in Figure 2.5. When configured for PNP, the input device sources the power to the counter input. When configured for NPN, the counter input is pulled to common and an internal pull-up resistor is enabled on the counter input.

Counter Configuration Jumpers

All the features described for enabling the de-bounce or configuring for NPN / PNP operation are listed below. Refer to Figure 1.2 in the *Getting to Know the VB-1000 Layout and Connections* in the Getting Started section of this manual for actual jumper locations and pin number identification.

J3-J6: HIGH SPEED COUNTER INPUTS CONFIGURATION JUMPERS		
Jumper ID	Shunt Installed Pin 1 to Pin 2	Shunt Installed Pin 2 to Pin 3
J3	Counter Channel A Configured for NPN (1.5K Ω P/U)	Counter Channel A Configured for PNP
J4	Counter Channel B Configured for NPN (1.5K Ω P/U)	Counter Channel B Configured for PNP
J5	Counter Channel A De-bounce Enabled	Counter Channel A De-bounce Disabled
J6	Counter Channel B De-bounce Enabled	Counter Channel B De-bounce Disabled

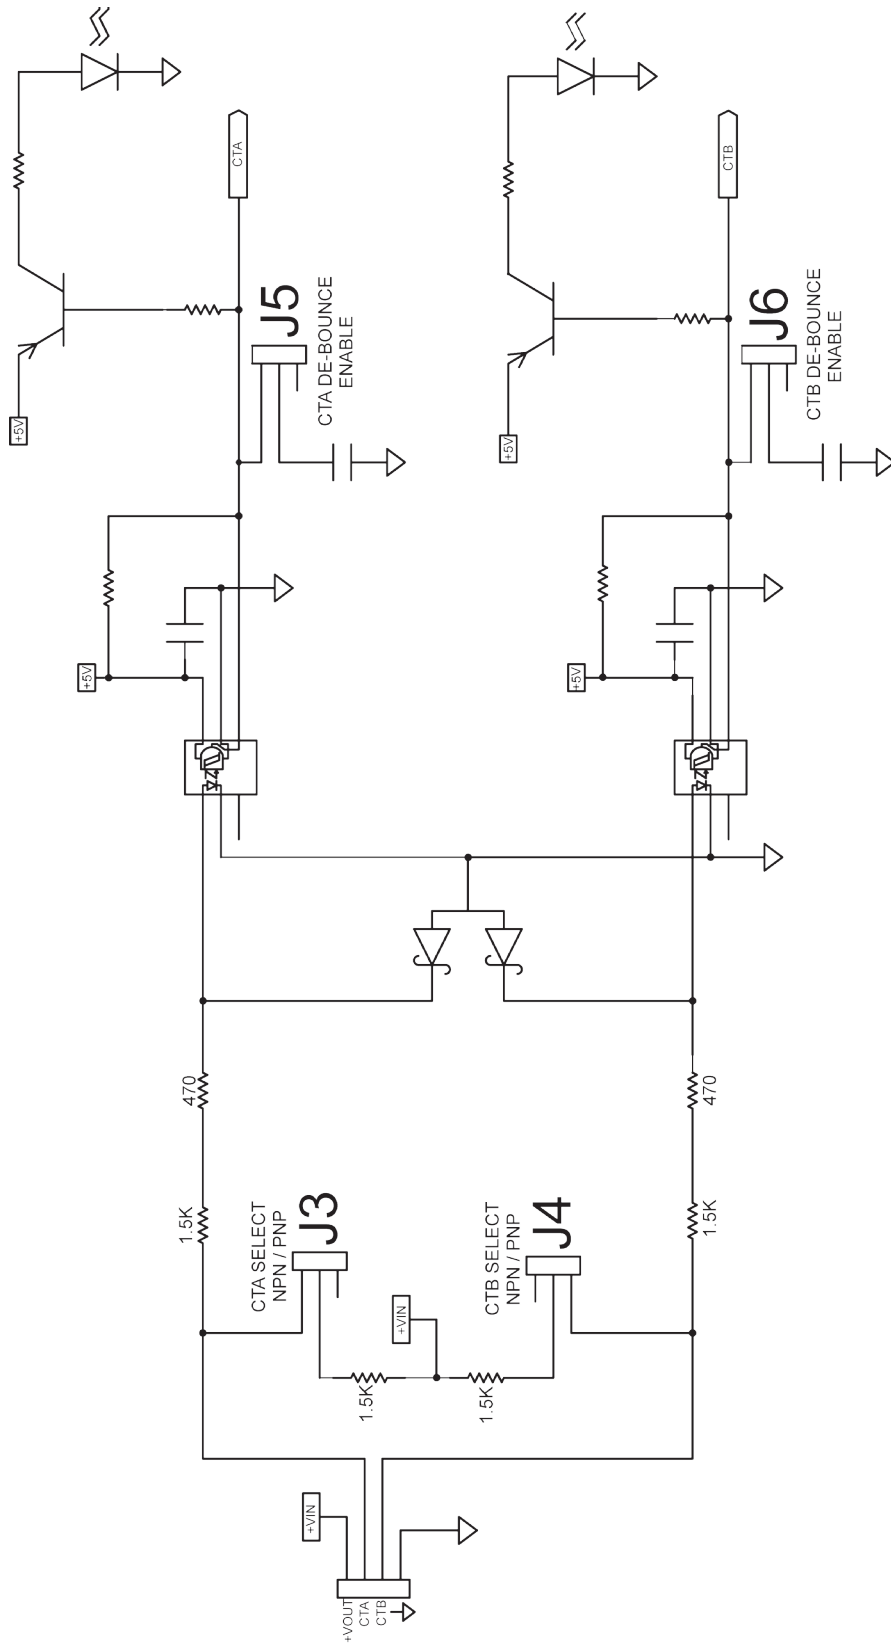


Figure 2.6 - High Speed Counter Input Circuitry

Digital Outputs

The VB-1000 includes 8 on-board digital outputs. They are identified in the EZ LADDER Toolkit and this manual as OT0 - OT7 and these variables are automatically created when the VB-1000 is selected as the target. These outputs are sourcing, therefore an energized output will source an output voltage equal to the controller input voltage. Refer to Figure 2.7 for typical output connections.

The outputs are divided into two groups of four outputs each. Group A consists of OT0 - OT3 while Group B consists of OT4 - OT7. Each output group requires an external power connection and source to supply power for the outputs. Group A power is supplied by the +VA terminal while Group B power is supplied by the +VB terminal. The +VA and +VB terminals and output groups allow for output loads to be controlled at different voltages. Independent and different supply voltages (8-32VDC) may be connected to +VA and +VB individually.

+VA and +VB may be connected to different voltages, but the power supplies connected must have the same common (ground) as the VB-1000. Failure to use the same common for the +VA, +VB and VIN may cause unwanted operation and may cause damage to the VB-1000.

Each output can drive a load up to maximum current rating listed in the specifications section (resistive) and includes an automatic over-current shutdown safety. In the event an over current condition exists, the output will shut down. This shut down condition is reset when the output is turned off (set to false) in the ladder diagram.

Each output requires a minimum load to operate correctly. Depending upon the device connected to an output, a minimum load resistor may be required. If the output is ON or true regardless of the ladder diagram program, connect a 470Ω to 1KΩ load from the output to input power common.

Each digital output may be configured and used as a digital output or as a Pulse Width Modulation (PWM) output. Each output may only be used as either digital output or PWM output only. For information on using digital outputs as PWM outputs, refer to the *Pulse Width Modulation Outputs* Section of this manual.

To control a digital output in a ladder diagram, place and connect the appropriate coil for your needs. The DIRECT COIL and INVERTED COIL functions are used to control digital outputs in the ladder diagram. When placing the coil, verify you select the correct output address (OT0 - OT7) from the provided drop-down menu.

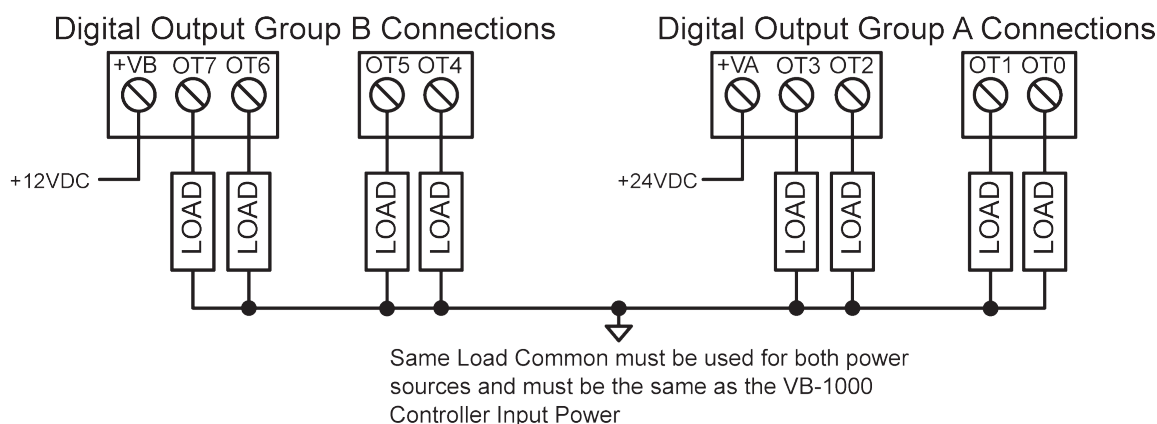


Figure 2.7 - Typical Digital Output Connections

In addition to controlling the outputs, the status of each digital output may be *monitored* for an OK or Fault status. When the VB-1000 target is configured in EZ LADDER, 8 status variables are created automatically, identified (STAT0 - STAT7). These variables indicate the status of the output and may be used in the program as any boolean variable (DIRECT CONTACT or INVERTED CONTACT). A High or True condition indicates that the output is functioning properly while a Low or False condition indicates a fault condition of the output (open load or overload). This condition is only valid when the output is turned on in the ladder diagram program.

Pulse Width Modulation Outputs

As previously noted, the VB-1000 includes 8 on-board digital outputs that may be configured individually and exclusively as either digital outputs or pulse width modulation outputs; therefore, each output may only be used as either digital output or PWM output.

Before Pulse Width Modulation outputs may be used in the ladder diagram, the Pulse Width Modulation Properties must be configured in EZ LADDER Toolkit.

To Configure Pulse Width Modulation (PWM) Outputs in EZ LADDER Toolkit:

1. In EZ LADDER, from the File Menu at the top, click **PROJECT** then **SETTINGS**. This will open the Project Settings Window. The VB-1000 was previously selected.
2. Click the **PROPERTIES** button. The VB-1000 Properties Window will open. Refer to Figure 2.8.

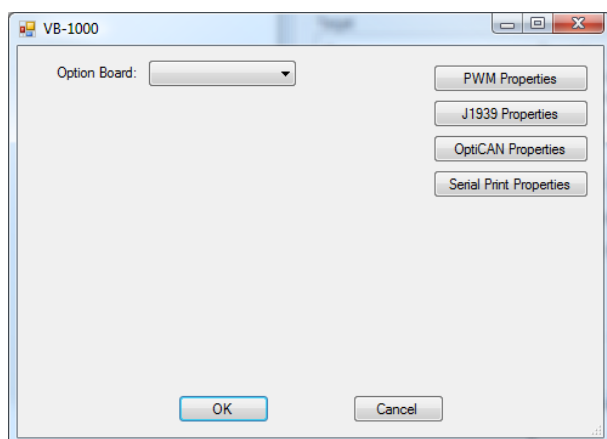


Figure 2.8 - VB-1000 Properties Window

3. Click the **PWM PROPERTIES** button. The PWM Properties Window will open. Refer to Figure 2.9.

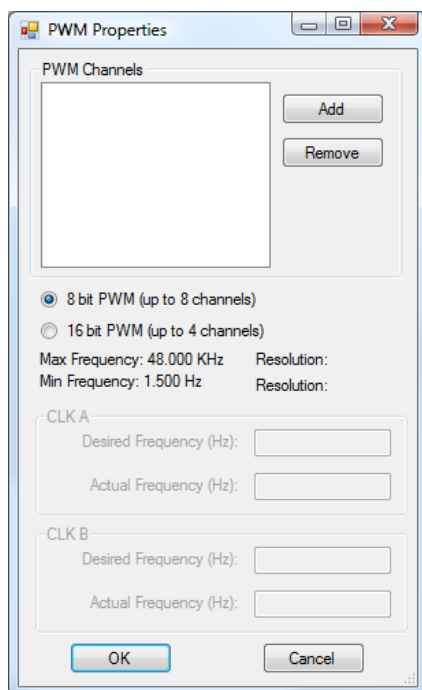


Figure 2.9 - PWM Properties Window



4. Click the **ADD** button in the PWM Properties window.
5. In the ADD PWM dialog, select the channels to install. To select multiple PWM channels, hold the CTRL key while clicking on the channel. Refer to Figure 2.10.

The channels are as follows:

Digital Output 0 (OT0) = PWM 0
 Digital Output 1 (OT1) = PWM 1
 Digital Output 2 (OT2) = PWM 2
 Digital Output 3 (OT3) = PWM 3

Digital Output 4 (OT4) = PWM 4
 Digital Output 5 (OT5) = PWM 5
 Digital Output 6 (OT6) = PWM 6
 Digital Output 7 (OT7) = PWM 7

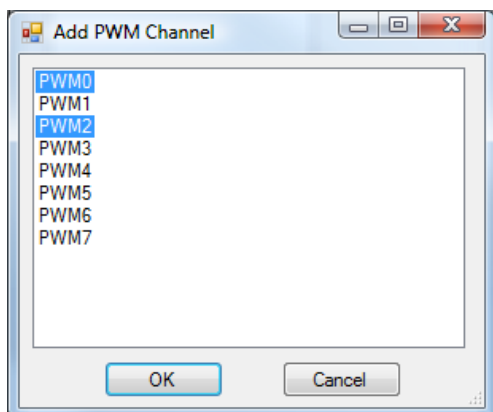


Figure 2.10 - ADD PWM Window

6. Click **OK** to close the ADD PWM dialog. The next step is configuring the frequencies.
7. Enter the desired frequency for Clock A and Clock B (if installed). The VB-1000 has 8 available PWM Channels. These channels are either controlled with Clock A or Clock B. This allows two different PWM frequencies. The Minimum and Maximum frequencies are displayed in the PWM Properties dialog. The frequency for Clock A and Clock B must be in this range. Refer to Figure 2.9.



Due to limitations of hardware, the Desired Frequency and Actual Frequency may vary. The Actual Frequency will be the closest attainable frequency to the entered Desired Frequency.

8. Click **OK** to close the PWM Properties Window. Click **OK** to close the VB-1000 Properties Window and click **OK** to close the Project Settings Window.



With the Pulse Width Modulation Outputs configured in EZ LADDER, they can now be used in the ladder diagram project. The PWM channel(s) are controlled in the ladder diagram by the PWM and PWM_FREQ function blocks. For each PWM channel required, a PWM function block is required. Typically, PWM Outputs operate at a set frequency while the Duty Cycle is adjusted to vary the output. The Duty Cycle is a variable input to the PWM function block. In the event the frequency must be changed during operation, the PWM_FREQ function block is used. Refer to the EZ LADDER Toolkit User's Manual for more detail regarding function blocks and variables.



When configuring any output (OT0 - OT7) to be used as a PWM output, the automatically created boolean variable used for controlling the output as a digital output is automatically removed. Likewise, when an output (OT0 - OT7) configured for PWM is removed from the PWM Properties, the digital output boolean variable is re-created automatically. An output cannot exist in the ladder diagram as a PWM output and Digital output simultaneously.

Whether used as PWM or Digital Outputs, OT0 - OT7 have the same characteristics and typical connections. See Figure 2.7.

Analog Inputs



The VB-1000 provides 7 on-board, 10-bit resolution analog inputs. Each analog input will accept an input of 0-5VDC, 0-10VDC or 0-20mADC. The analog input ranges and types are configured using jumpers (J7 - J20). These jumpers should be configured for the correct inputs prior to actually connecting the analog inputs. Analog Input 7 (AN7) is the input power monitor and cannot be used as an external analog input. Refer to the *Input Power Section* in the Getting Started section of this manual for more details on AN7.

Each analog input is represented in the EZ LADDER Toolkit ladder diagram using variables labeled AN0 - AN6. These variables were created automatically when the VB-1000 target was selected in the Project Settings Window.



Each variable (AN0- AN6) will represent the actual voltage or current reading on the input (based on the range and type) as an integer number (0-1023). To use the analog input reading, place the appropriate analog input variable as an input to function blocks.

Figure 2.12 represents the internal analog input circuits and dip switch settings.

Analog Configuration Jumpers

Each of the analog inputs (AN0 - AN6) have two individual configuration jumpers. These jumpers determine the type of analog input and the range of operation. For each analog input, one jumper determines if the analog input is configured for current (0-20mADC) or voltage (0-5VDC/0-10VDC). The second jumper determines the range of operation when configured for voltage (0-5VDC or 0-10VDC). Refer to Figure 1.2 in the *Getting to Know the VB-1000 Layout and Connections* in the Getting Started section of this manual for actual jumper locations and pin number identification.

J7-J20: ANALOG INPUTS CONFIGURATION JUMPERS		
Jumper ID	Shunt Installed Pin 1 to Pin 2	Shunt Installed Pin 2 to Pin 3
J7	Analog Input 1 (AN1) Configured for 0-20mADC	Analog Input 1 (AN1) Configured for Voltage
J8	Analog Input 2 (AN2) Configured for 0-20mADC	Analog Input 2 (AN2) Configured for Voltage
J9	Analog Input 2 (AN2) Configured for 0-10VDC	Analog Input 2 (AN2) Configured for 0-5VDC
J10	Analog Input 1 (AN1) Configured for 0-10VDC	Analog Input 1 (AN1) Configured for 0-5VDC
J11	Analog Input 0 (AN0) Configured for 0-10VDC	Analog Input 0 (AN0) Configured for 0-5VDC
J12	Analog Input 0 (AN0) Configured for 0-20mADC	Analog Input 0 (AN0) Configured for Voltage
J13	Analog Input 5 (AN5) Configured for 0-20mADC	Analog Input 5 (AN5) Configured for Voltage
J14	Analog Input 6 (AN6) Configured for 0-20mADC	Analog Input 6 (AN6) Configured for Voltage
J15	Analog Input 6 (AN6) Configured for 0-10VDC	Analog Input 6 (AN6) Configured for 0-5VDC
J16	Analog Input 5 (AN5) Configured for 0-10VDC	Analog Input 5 (AN5) Configured for 0-5VDC
J17	Analog Input 3 (AN3) Configured for 0-10VDC	Analog Input 3 (AN3) Configured for 0-5VDC
J18	Analog Input 4 (AN4) Configured for 0-10VDC	Analog Input 4 (AN4) Configured for 0-5VDC
J19	Analog Input 3 (AN3) Configured for 0-20mADC	Analog Input 3 (AN3) Configured for Voltage
J20	Analog Input 4 (AN4) Configured for 0-20mADC	Analog Input 4 (AN4) Configured for Voltage



It is recommended that analog input jumper settings be configured prior to connecting the analog input. In addition, when configuring for 0-20mADC (current), the voltage selector jumper (0-5V or 0-10V) should be set for 0-5VDC (or pin 2 to pin 3). Failure to configure prior to connecting or improper configuration may result in incorrect readings or even damage to the VB-1000 controller.

Analog Input Connections

Each of the analog inputs are single-ended connections (they all use the same common, the same as the VIN). A single terminal is provided for each analog input labeled ANx, where x represents the analog input number. Two \blacktriangledown terminals are provided as a convenient common return point. If the device connected to an analog input requires a + voltage, you must provide this externally or using the +VOUT terminals located near the controller's input power terminals. Figure 2.11 illustrates the typical connections for analog inputs. Figure 2.12 illustrates the analog input circuitry. It is recommended to use twisted-pair, shielded wire when connecting devices to the analog inputs. Earth ground is typically only connected at one end of the shielded wire.

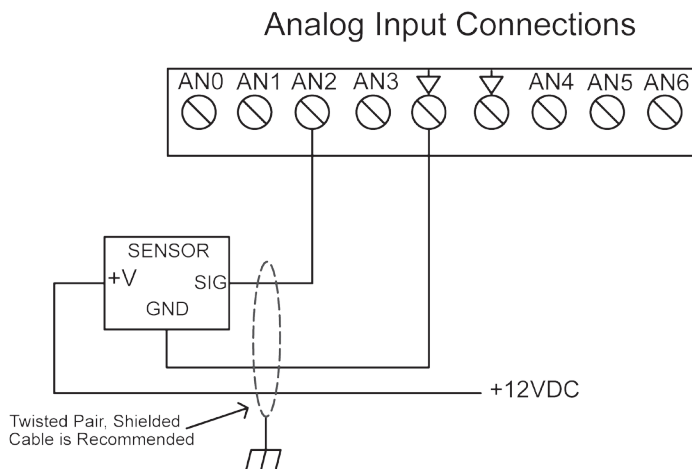


Figure 2.11 - Analog Input Connections

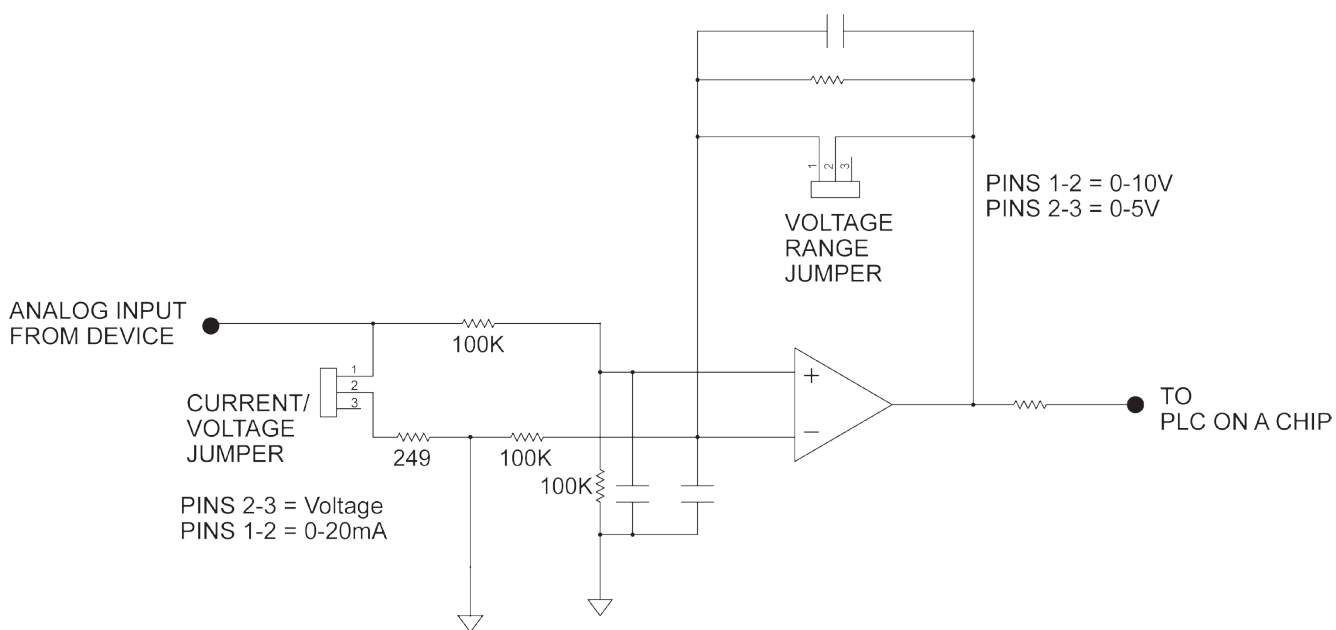


Figure 2.12 - Typical Analog Input Circuit

General Purpose RS232 Serial Port

The VB-1000 includes an RS232 serial port (COM1). This serial port is a general purpose serial port that supports serial printing. This port may also be used to communicate to a Modbus Master Device (the VB-1000 is a Modbus Slave). At this time, the general purpose serial port is an output device only as there is no software support to read a serial input.



COM 1 is wired using the provided terminal RX1, TX1 and ↓. These terminals are located along with the CAN communication port terminals. Refer to Figure 1.2 in the *Getting to Know the VB-1000 Layout and Connections* in the Getting Started section of this manual for actual terminal locations. Ensure that TX and RX are swapped between the VB-1000 and the serial communication device.



COM 1 supports Modbus and the SERIAL_PRINT function block. Before COM 1 may be used, it must be configured to Serial Print or as Modbus Slave Port in the Project Settings.

To configure COM 1 as a Modbus Slave, click **PROJECT** then **SETTINGS**. Click the **MODBUS** button in the Project Settings Dialog. The Modbus Setup dialog will open. Using the check box, enable Modbus. Configure the Modbus settings required to communicate to the Modbus Master. Click **OK** to save and close the Modbus Setup and click **OK** to close the Project Settings.

To configure COM 1 to serial print, click **PROJECT** then **SETTINGS**. Click the **PROPERTIES** button in the Project Settings Dialog. The VB-1000 Properties dialog will open. Click the **SERIAL PRINT PROPERTIES** button. The Serial Properties dialog will open. Configure the serial settings required to communicate to device connected to COM 1. Click **OK** to save and close the Serial Properties, click **OK** to close the VB-1000 Properties and click **OK** to close the Project Settings.

CAN Networking Ports

The VB-1000 provides two on-board CAN bus interface ports. These CAN ports may be used for additional communications and networking including SAE J1939 and the Delivbiss proprietary OptiCAN Network.

The on-board CAN ports are CAN 0 and CAN 4 respectively. To use the VB-1000's CAN ports as either SAE J1939 or OptiCAN, it will be necessary to configure certain parameters. These parameters are configured from the VB-1000 Properties Window in the Project Settings. As these settings vary greatly and are software based only, please refer to the EZ LADDER Toolkit User's Manual for details on configuring, using and implementing CAN port networking including all relevant function blocks for J1939 and OptiCAN.

The CAN ports should be wired according to established practices for CAN networks. Figure 2.13 illustrates typical CAN Port connections. The VB-1000 provides 3 terminals for each CAN port (H, L and earth ground). The CAN HI should be connected to the H terminal. The CAN LOW should be connected to the L terminal. The Shield should be connected to the earth ground terminal (only one end of the shield should be connected to earth ground). Refer to Figure 1.2 in the *Getting to Know the VB-1000 Layout and Connections* in the Getting Started section of this manual for actual terminal locations.

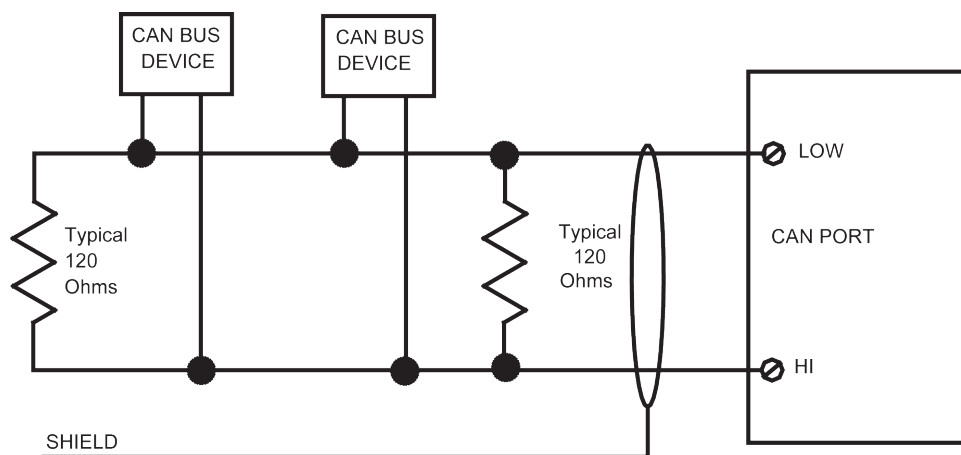


Figure 2.13 - Typical CAN Port Connections

As shown in Figure 2.13, when devices are at the end of the communications lines, 120 ohm terminating resistors are required for correct functionality. The VB-1000 includes optionally enabled terminating resistors for each CAN port (0 and 4). The terminating resistors are enabled and disabled using jumpers (J1 and J2). Figure 2.14 illustrates the on-board terminating resistor jumper option. Refer to Figure 1.2 in the *Getting to Know the VB-1000 Layout and Connections* in the Getting Started section of this manual for actual jumper locations.

J1, J2: CAN PORT TERMINATION JUMPERS		
Jumper ID	Shunt Installed Pin 1 to Pin 2	Shunt Installed Pin 2 to Pin 3
J1	CAN Port 0 with NO Termination Resistor	CAN Port 0 with 120 Ω Termination Resistor
J2	CAN Port 4 with NO Termination Resistor	CAN Port 4 with 120 Ω Termination Resistor

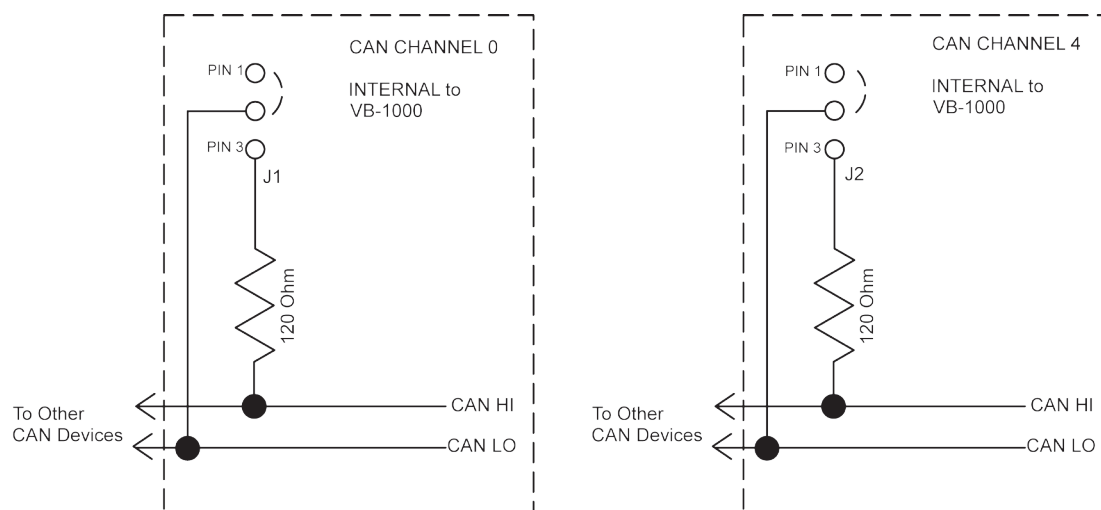


Figure 2.14 - CAN Port Terminations and Jumpers

VB-1000 Target Setting Options

To use some of the function blocks and features on the VB-1000, it may be required to configure additional target properties in the Project Settings Dialog Box. Click **PROJECT** then **SETTINGS**. With the **VB-1000** selected, click **PROPERTIES**.

The following are items that must be configured in the VB-1000 Project Settings, Properties Dialog.

- PWM Properties** This is used to configure the Pulse Width Modulation channels (see *Pulse Width Modulation Outputs*).
- J1939 Properties** This is where SAE J1939 Communications is enabled and configured. Refer to the J1939 section of the EZ LADDER Manual.
- OptiCAN Properties** This is where OptiCAN Communications is enabled and configured. Refer to the OptiCAN section of the EZ LADDER Manual.
- Serial Print Properties** This is used if the Serial Print function block is to be used to transmit data to an external device using the General Purpose Serial port. The serial port is configured here.

Expansion Options

The VB-1000 is designed for field installation of expansion boards (VBEXP-xxxx). The VB-1000 can be expanded by adding one board, vertically mounted and connected to the EXP1 port. For installation of expansion options, see the Expansion Option's Manual. For a list of available expansion options, contact Divelbiss Corporation.

VB-1000 Specifications

Processor:	PLC on a Chip™
Memory:	256K Flash, 12K RAM
Serial Ports:	1 Programming Port (Max baud: 57.6K); 1 Multipurpose Port, RS232 (Serial Print and Modbus Slave)
Networking:	2 CAN Ports for Divelbiss OptiCAN and SAE J1939 Communications Field selectable internal CAN terminating Resistors
Digital I/O:	12 Inputs & 8 Outputs on-board, Expandable using OptiCAN Network Inputs rated 8-32VDC, 2 Groups of 6, Groups may be wired for Sinking or Sourcing Outputs rated 4A Max ^{SEE NOTE 1} , Over-current protected. Sourcing as 2 Groups of 4 Outputs
Counters:	2 Channels, Count Up, 1 - 100KHz (CTA, CTB). Field selectable as NPN or PNP type. 2 Channels may be used as Digital Inputs in addition to Counter Inputs
Analog Inputs:	7 Channels, 10-bit Resolution, field selectable as 0-20mADC, 0-5VDC or 0-10VDC
PWM Outputs:	8 Channels 1.5Hz to 1KHz, Over current Protected, . 4ADC Maximum ^{SEE NOTE 1} , Sourcing 2 Groups of 4 Outputs with Individual +V Power Source Terminal for Source
Input Power Voltage:	8-32VDC, with internal input power monitor using AN7 (PMON)
Input Power Current:	12VDC Input: 45mA Typical (No I/O Included) standard operation Add 5mA for Each I/O Point (Input or Output) Output Loads additional Power for External Sensors and Devices additional Communications additional
Operating Temp:	-40-80°C
Program Language:	Ladder Logic using Divelbiss EZ LADDER Toolkit.
Dimensions:	4.27" Wide x 8.3" Length x 1.0" Tall.
Mounting:	Sub Plate Mount using # 6 Hardware
Type:	Open Board
Storage Temperature:	-40-85°C

NOTE 1: 4ADC Total @ up to 50 ° C Maximum per 2 Output Channels. Channels paired as OT0 / OT1, OT2 / OT3, OT4 / OT5 and OT6 / OT7. Total Current is sum of both paired output channels. See Figure 2.15 for maximum output current per output channel pair based on ambient temperature.

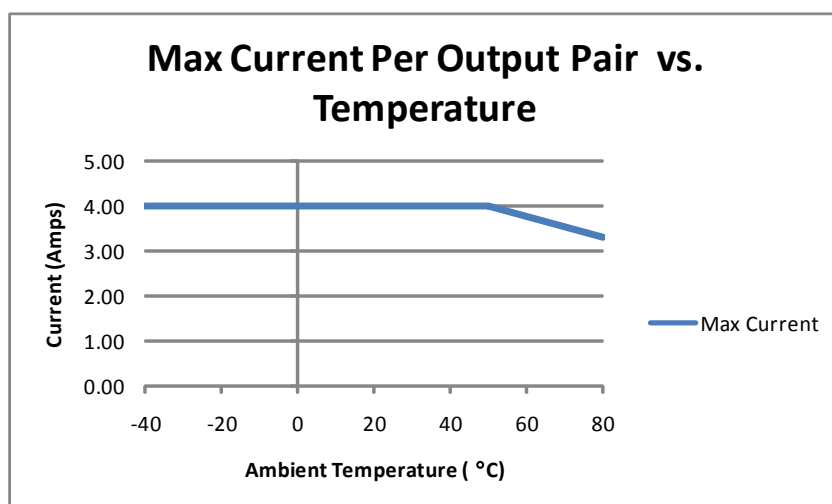


Figure 2.15 - Max Current for Outputs