

GOLDAIR

Operating Instructions

600W Bench Blender



Model: GBB325

General care and safety guide

Thank you for choosing this GOLDAIR Blender. This GOLDAIR appliance has been designed and manufactured to high standards of engineering and with proper use and care, as described in this leaflet, will give you years of useful service. Please read these instructions carefully and keep them for future reference.

ALWAYS

- ✓ Always ensure hands are dry before handling the plug or the Blender.
- ✓ Always operate the Blender in the middle of a secure, dry, level surface.
- ✓ Always allow the Blender to cool before cleaning and storing and before removing and/or cleaning its components.
- ✓ Carry out regular checks of the supply cord to ensure no damage is evident.
- ✓ Return the Blender after a malfunction, or if it has been damaged in any manner, to an authorised electrical service technician for examination, repair or adjustment as special purpose tools are required.
- ✓ Children should be supervised to ensure that they do not play with the appliance.
- ✓ Before washing Blender jug, remove it from the Blender.
- ✓ Unplug from outlet while not in use and before cleaning.
- ✓ Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- ✓ Avoid contact with the moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils away from blades of the Blender during operation to reduce the risk of injury to person and/or damage to the Blender.
- ✓ Prior to initial use, wash all the parts that come into contact with food.
- ✓ Take care when handling the Blender blades; they are very sharp.

NEVER

- ✗ Never use this appliance outdoors.
- ✗ Never use this appliance for any purpose other than its intended use. This appliance is intended for household use only or in similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments
- ✗ Never leave the appliance unattended when in use.
- ✗ Never allow the power cord to overhang the edge of a table or bench top or to touch any hot surface.
- ✗ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they are supervised or have been given instruction concerning the use of the Blender by a person responsible for their safety.
- ✗ Never place this appliance on or near a hot gas or electric burner or where it could touch a heated oven or microwave oven. Do not place in a hot oven.
- ✗ Never immerse the Blender's power housing, the cord set or plug in water or any other liquid to protect against electrical hazards.
- ✗ Never place the Blender in a dishwasher.
- ✗ Never use harsh, abrasive or caustic cleaners to clean this appliance.

TECHNICAL SPECIFICATION

Model No: GBB325
Power Supply: 220 - 240VAC, 50Hz
Power: 600W

CARE AND SAFETY CONTINUED OVERLEAF

General care and safety guide, continued

X Never operate the appliance with a damaged cord or plug, after it malfunctions, or if it has been damaged in any manner. Have the appliance checked and repaired by a qualified electrician if repair is necessary. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

X The Blender is not intended to be operated by means of an external timer or separate remote-control system. The use of an extension cord is not recommended.

X Never use metal scouring pads for cleaning. Small metal pieces can come loose and cause short-circuiting of electrical components, which can cause electric shock or damage the appliance.

X Due to the risk of injury, the use of third party accessories is not recommended by the manufacturer.

X Never blend hot oil or fat.

X Never touch blades while the machine is plugged in.

X Never insert objects into the blender jug while the machine is plugged in.

X Do not allow children to use the blender without supervision.

Before first use

Before first use

Carefully unpack the Blender and remove all packaging material.

Clean the various Blender accessories in warm soapy water. Rinse and dry thoroughly before use.

Cleaning

To avoid risk of electric shock, before cleaning, you **MUST ALWAYS** switch off and unplug the cord from the electrical outlet.

Wipe Blender body with a damp cloth and dry well. **DO NOT** immerse Blender body in water or any other liquid.


Wash blender jug in hot soapy water.

Rinse well and dry. Be very careful with the sharp blades.

Alternatively, partially fill Blender jug with warm water and a little dishwashing liquid. Run the Blender for a short period to clean the jug. Rinse and dry well.

The jug base can be removed, and the Blender blades removed, by unscrewing the base of the jug. Take care as the blades are very sharp. Ensure you reassemble the jug completely.

Components

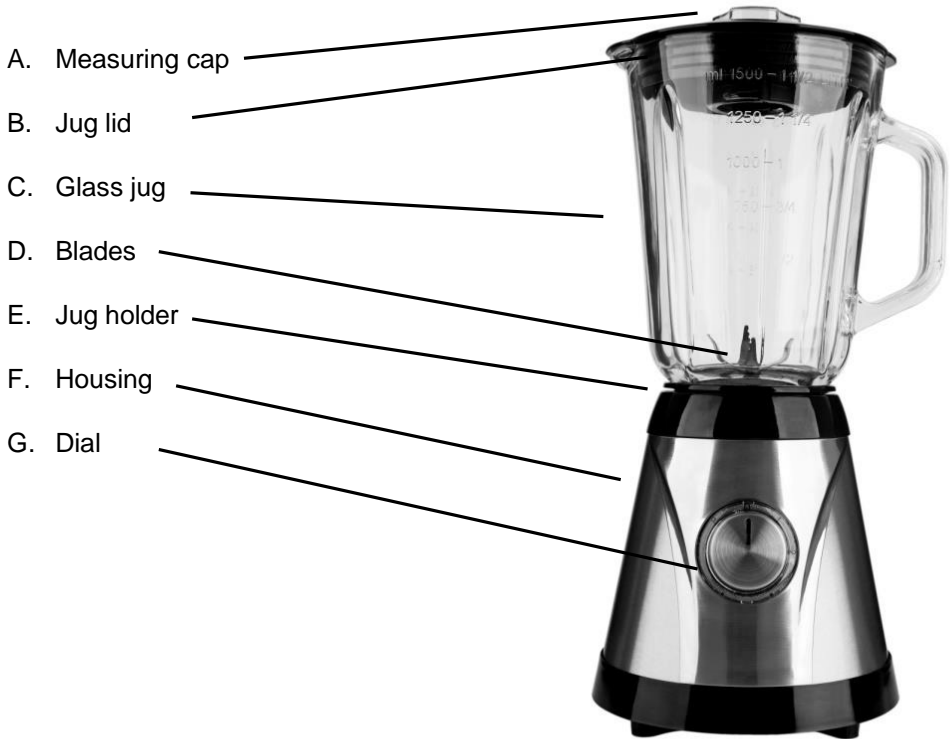

Operating your Blender

1. Before first use, clean the measuring cup, cover and jug.
2. Fit the blender glass jar onto the main body, and turn it slightly in a clockwise direction so it locks into the jug holder on top of the housing.
3. Place items to be blended into the jug. Ensure the contents will not overflow from the jug. Maximum liquid capacity is 1.5L. **DO NOT USE THE BLENDER WITHOUT INGREDIENTS IN THE JUG.**
4. Put the lid on top of the jug and push it down. Insert the measuring cap into the cover and turn till it locks into place.
5. Turn the dial to position 0 in order to make sure the unit is turned off.
6. Plug the blender into the wall socket and turn on.
7. This unit has a safety mechanism and does not work if the jug is not installed properly seated on housing.
8. Turn the dial to required speed
 - 0 = off
 - P = pulse – suitable for ice crushing
 - 1 = low
 - 2 = high
9. While the blender is working, a blue light will show around the dial.
10. Turn the dial back to '0' when finished blending.

IMPORTANT NOTES: When you use the blender, make sure the jug is in position otherwise the unit will not operate.

We recommend that during blending, you stop the unit and redistribute contents of jug. This will help to avoid clumping.

This appliance should be operated for 1 minute at a time. Allow it to cool down before using again.

DO NOT TURN ON THE BLENDER THEN WALK AWAY; THIS IS LIKELY TO RESULT IN THE BLENDER BEING RUN FOR TOO LONG AND THE MOTOR MAY THEN OVERHEAT.

Tips for use

When mixing hot liquids/foods excess pressure may build up inside the blender. This can cause the lid to come off and the contents to splash out. We recommend that you avoid mixing excessively hot foods and that you put only very small quantities of hot liquids or foods into the blender.

Do not use the blender for very hard food products, such as bones, shelled nuts, frozen meats etc., which could either damage the blade or cause the motor to seize.

Do not use the Blender continuously for more than 1 minute.

GOLDAIR

SUPPORT AND TECHNICAL ADVICE

Goldair – New Zealand

Monday – Friday 8am-5pm
Phone +64 (0)9 917 4000
Phone 0800 232 633
info@cdb.co.nz

Goldair – Australia

Monday – Friday 8am-5pm
Phone +61 (0)3 9336 4423
Phone 1300 465 324
info@cdbgoldair.com.au

Recipes

Orange Berry Smoothie

2 navel oranges, peel and pith removed, cut into chunks

1 cup frozen blueberries

1 cup frozen raspberries

Combine all ingredients in blender; blend until smooth.

Carrot and Mango Smoothie

1 ripe mango, chopped (or 1 1/2 cups frozen mango chunks)

1 cup fresh carrot juice

Nutmeg

1/2 cup crushed ice (crush ice in a plastic bag with a rolling pin)

Leave out ice if using frozen mango

Combine all ingredients in blender; blend until smooth

Pomegranate and Berry Smoothie

2 cups mixed frozen berries

1 cup unsweetened pomegranate juice

1 cup water

Combine all ingredients in blender; blend until smooth.

Fruit and Yoghurt Smoothie

1 1/2 cups plain non-fat or low-fat yogurt

1/2 medium chopped peeled pear

Small sliced banana

1 Tablespoon protein powder

3/4 cup crushed ice (crush ice in a plastic bag with a rolling pin)

Combine all ingredients in blender; blend until smooth

GOLDAIR

Two year warranty

Thank you for purchasing this Goldair product. Your product is warranted against faults and manufacture when used in normal domestic use for a period of **two years**. In non-domestic use Goldair limits the voluntary warranty to **three months**.

Goldair undertake to repair or replace this product at no charge if found to be defective due to a manufacturing fault during the warranty period.

This warranty excludes damage caused by misuse, neglect, shipping accident, incorrect installation, or work carried out by anyone other than a qualified electrical service technician.

PLEASE KEEP YOUR RECEIPT AS THIS WILL HELP VERIFY YOUR WARRANTY.

The benefits given to you by this warranty are in addition to other rights and remedies available to you under law in relation to the goods or services to which this warranty relates.

In Australia, our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

In New Zealand this warranty is additional to the conditions and guarantees of the Consumers Guarantee Act (1993).

Goldair – New Zealand

CDB Goldair
PO Box 100-707
N.S.M.C
Auckland

Phone +64 (0)9 917 4000
Phone 0800 232 633
www.goldair.co.nz

Goldair – Australia

CDB Goldair Australia Pty
PO Box 574
South Morang
Victoria, 3752

Phone +61 (0)3 9336 4423
Phone 1300 GOLDAIR (1300 465 324)
www.goldair.com.au

IMPORTANT: Please complete and retain this warranty card



Name Purchased from

Address Date of purchase

..... Name of product

Suburb Model no

Attach a copy of the purchase receipt to this warranty card