# User's Manual Net-LinQ : USB Network Bridge Cable



### 1. Introduction

Congratulations on your purchase of the Net-LinQ: an USB-USB Network Bridge cable. This Net-LinQ USB Network Bridge cable provides a quick and easy solution to network up to 17 USB computers via hot Plug and Play technology without adding any network interface card. It is suitable for small offices, home offices, mobile users, and network gamers.

Net-LinQ USB Network Bridge cable allows you easily to construct a network via USB port, share all the resources such as files, printers peripheral equipments, etc...

### 2. Package Content

- Hardware: USB-USB Network Bridge cable, USB A-B cable
- Software: Net-LinQ driver software
- See 's Manual or Quick Guide

### 3. Product Features

- USB specification revision 1.1 compliant
- USB host to host communication, Single cable solution for network communication, construct USB Network up to 17 PCs
- Resources sharing such as Printers, CD-ROMs, Modems, Scanners, etc.
- Support TCP/IP, NetBEUI, IPX/SPX protocols
- Standard Windows® Explorer user interface
- Data transfer rate: Up to 5M bits/sec

### 4. System Requirements

- IBM PC 486DX4-100 MHz or higher or compatible system
- Available USB port
- CD-ROM drive
- Mindows® 98SE, Windows® ME, Windows® 2000

### 5. Driver Installation (WIN98&ME)

## Before you start installing the driver, please don't plug your USB-USB Network Bridge Cable into the USB port of your computer.

Follow the steps below to install driver of the USB-USB Network Bridge Cable:

- 5.1 Power on the computers where you will connect USB-USB Network Bridge cable and make sure that the USB port is enabled and working properly.
- 5.2 Insert the USB-USB Network Bridge driver into the CD-ROM drive and run the D:\Driver\USB network cable\USB-USB network bridge.exe (D: represents CD-ROM drive) program inside the dirver diskette.
- 5.3The InstallShield Wizard will guide you step-by-step to complete the installation process.
- 5.4 In **Choose Destination Location** Window, you can either install USB-USB Network Bridge driver to C:\program files\ USB-USB Network Bridge Driver V1.6.0.0 or you can install it to the specified directory you want. Click **NEXT**.

	11g
v1 6.0 0 in the following	g folder
ll to a different lakter, cli	ds Browce and select
	v1 5.00 in the followin to a different tokter, cli

- 5.5 The InstallShield Wizard wills pop-up a Question Window. If the computer you installed is not a bridge computer. (Please refer to the section of **Bridge Driver installation** below) you must click "**No**", but in case of you are on the bridge computer, you have to click "Yes". Because this "**USB-USB Bridge Protocal**" **must not be installed on more than one computer in the USB LAN**
- 5.6 Click **Finish** to complete the setup process.
- 5.7 During the installations, the system may ask you to insert the Windows® 98 CD-ROM, please insert your Windows® 98 CD-ROM into your CD-ROM drive then click **OK**.
- 5.8 If the system cannot find any file, please direct to your CD-ROM drive and click **OK**.
- 5.9 The system will ask you to reboot the computer when the installation is complete. Please remove the driver from your CD-ROM drive, connect the USB-USB Network Bridge cable and restart Windows® system.

Attention: If the following screen appears, do not bypass it or you will not be able to access your network.

2	Type a user name and password to log on to Windows.	ОК
1 a	User name:	Cancel
	Password:	

- 5.10 Since USB-USB Network Bridge V1.6 has finished installing the network driver during the installation, your USB network environment is set up automatically when the installation is complete. Now you can see all the computers in your network in Network Neighborhood and you can share programs, files and other peripheral devices through the standard Windows® interfaces, e.g. Windows® Explorer and Network Neighborhood.
- 5.11 To start sharing the resources, please follow the instructions below. Click the **Start** menu, point to **Programs\Windows Explorer**.
- 5.12 Expand the desktop and select the drive, folder, file or printer you want to share.

- 5.13 Move mouse cursor and click right button on the resource.
- 5.14 Select Sharing.
- 5.15 Select **Shared As** and enter the **Shared Name** to be recognized by other computers.
- 5.16 Select an access type. For example, choose **full** to give the complete access right to this resource or **Read-Only** to give others the read-only right to the resource.
- 5.17 Click **OK**.

C Ngt Shared		
🖲 <u>S</u> hared Az		
Share Marrier	1	
Comment	-	
Access Type:		
C Bead-On	¥.	
् ह्य		
C Depends	on Pessword	
Passwords:		
Reaction/F	ettiitiit.	
Full Access F	assword:	

**Note:** When the installation is complete, system will assign IP address and Submask automatically. Don't try to change any settings unless you are an Expert network user. Any improper settings would cause system fail on some network functions.

# 6. Driver Installation (WIN2000)

### Before you start installing the driver, please don't plug your USB-USB Network Bridge Cable into the USB port of your computer.

Follow the steps below to install driver of the USB-USB Network Bridge Cable:

- 6.1 Power on the computers where you will connect USB-USB Network Bridge cable and make sure that the USB port is enabled and working properly.
- 6.2 Insert the USB-USB Network Bridge driver into the CD-ROM drive and run the D:\Driver\USB network cable\USB-USB network bridge. EXE (D: represents CD-ROM drive) program inside the driver diskette.
- 6.3 The InstallShield Wizard will guide you step-by-step to complete the installation process.
- 6.4 In **Choose Destination Location** Window, you can either install USB-USB Network Bridge driver to C:\program files\ USB-USB Network Bridge Driver V1.6.0.0 or you can install it to the specified directory you want.

and the second second		4
	This Program supports 38/HE and 2000. The cuter/OriverVersion Novi The Program ellinets	Hicrosoft Windows = 1.6.0.0 h #Win_2000 Davier
Ø s		General Cancel
up		1
oose Destination Location Select toker where Setup will	i installiller.	18
Setup will install USB-USB Net	work Bridge v1 6.0,0 in the follow	ving toldar
To instal to the folder, slick N another folde:	sd. To instal to a different folder	cick Browns and select
- Destination Folder		
- Destination Folder C1/USB/USB/USB Netwo	uk Bridge v1.6.0.0	Bitowase .

6.5 The InstallShield Wizard wills pop-up a Question Window. If the computer you installed is not a bridge computer. (Please refer to the section of **Bridge Driver installation** below) you must click "**No**", but in case of you are on the bridge computer, you have to click "Yes". Because this "**USB-USB Bridge Protocal**" must not be installed on more than one computer in the USB LAN.



6.6 Click **Finish** to complete the setup process.



6.7 The system will ask you to reboot the computer when the installation is complete. Please remove the driver from your CD-ROM drive, connect the USB-USB Network Bridge cable and restart Windows system.

# Attention: If the following screen appears, do not bypass it or you will not be able to access your network.

6.8 Since USB-USB Network Bridge Driver has finished installing the network driver during the installation, your USB network environment is set up automatically when the installation is complete. Now you can see all the computers in your network in Network Neighborhood and you can share programs, files and other peripheral devices through the standard Windows® interfaces, e.g. Windows® Explorer and Network Neighborhood.

**Note:** When the installation is complete, system will assign IP address and Submask automatically. Don't try to change any settings unless you are an

Expert network user. Any improper settings would cause system fail on some network functions.

# 7. TCP/IP Setup: Access Internet through Ethernet

With USB-USB Network Bridge cable, you can accss Internet through Ethernet. We need to construct an USB LAN and an Ethernet LAN environment, as the diagram shows below:



# 8. Network Construction

**Computer A**: Conects Computer B with USB-USB Network Bridge cable.

**Computer B**: The **Bridge Computer** which connects Computer A through USB-USB Network Bridge cable and connects Computer C with an Ethernet Adapter.

**Computer C**: One PC of the Ethernet LAN connects Computer B with an Ethernet Adapter and can access the Internet directly.

### 9. Bridge Driver Installation

Take this **Network Construction** above as an example, Computer B has to be the **Bridge Computer**, and it needs **Bridge Driver** while installing. The InstallShield Wizard will pop-up a Question Window; In case of **Computer B**, it has to be the **Bridge Computer**, you must click "**Yes**", but in case of Computer A, you have to click "No". Because this "**USB-USB Bridge Protocal**" must not be installed on more than one computer in the USB LAN.

Question	x x x x x x x x x x x x x x x x x x x
?	The USB-USB Bridge Protocol allows USB-USB network to access all other networks from your network card.
	WARNING:USB-USB Bridge Protocol must not be installed on more than one computer on the USB-USB network.
	Do you want to install ?
	Yes

After you install this **Bridge Driver** on Computer B, there will be one more protocol: **USB-USB Networking Bridge** in the Network Configuration. This is a routing protocol; you can use it to bridge between an USB LAN and an Ethernet LAN.

letwork
Configuration Identification Access Control
The following network components are installed:
NetBEUI -> USB-USB Network Bridge Adapter TCP/IP -> Dial-Up Adapter TCP/IP -> USB-USB Network Bridge Adapter USB-USB Network Bridge -> Dial-Up Adapter
USB-USB Network Bridge -> USB-USB Network Bridge A
Add Remove Properties
Primary Network Logon:
<u>F</u> ile and Print Sharing
Description USB-USB Network Bridge is a routing protocol you can use to bridge between an USB-USB Network Bridge and an ethernet network in Windows 98.
OK Cancel

- 10. TCP/IP Setup on Computer A
  - 10.1 When all installation processes are completed, you have to **specify an IP** address, Subnet Mask and Gateway on Computer A:
  - 10.2 Click the Start menu, point to Setting\Control Panel. Double click Network icon. In Configuration tab, select TCP/IP -> USB-USB Network Bridge Adapter, and then click Properties.
  - 10.3 In **IP Address** tab, please choose "**Specify an IP Adress**", and fill in the **IP address and Subnet Mask** value properly. This information should be from your MIS people and make sure this **IP Address**, which is not in use of your **Ethernet**, or it will cause a network failure.
  - 10.4 In **Gateway** tab, you must specify a proper value. This IP Address of Gateway should be the same with the other Computers in the Ethernet.
  - 10.5 When complete all these TCP/IP setup processes, you have to restart your computer again. After that, the **Computer A** can use USB-USB Network Bridge cable to connect Computer B to access the resources of Ethernet (File, CD-ROM, and Scanner sharing) and execute all the functions on Internet (WWW, Email, FTP, Telnet, Gopher... etc.).

a su rapence			Ter man Topentes	CONTRACTOR OF	and second s		
Bindings	Advanced	NetBIOS	Bindings	Adv	vanced	Ne	BIOS
DNS Configuration	Gateway WINS Conf	iguration IP Address	DNS Configuration	Gateway	WINS Con	figuration	IP Addres
An IP address can If your network dor your network admi the space below.	be automatically assigne es not automatically assig nistrator for an address, a	d to this computer. n IP addresses, ask nd then type it in	The first gateway The address order machines are user	in the Install r in the list w d.	ed Gateway I ill be the orde	list will be ti er in which	he default. these
G Cresti an I	address additional cary		New gateway:		1	. 1	
Specily an IP	addiess		192.168.	1.1	60		
JP Address:	192.168. 1	. 2	_Installed gatewa	ys:			
Subnet Mas	255.255.255	. 0			Bems	ave	
Signer max							
	0	Cancel		515075555			

# 11. Driver Uninstallation

- 11.1 Follow the steps below to remove the the USB-USB Network Bridge driver from Windows® system:
- 11.2 Click the **Start** menu, point to **Settings\Control Panel**. Double click **Add/Remove Programs** icon.
- 11.3 In Install/Uninstall tab, select USB-USB Network Bridge Driver V1.6.
- 11.4 Click **Add/Remove** button and then click **OK**.

Add/Rem	ove Programs Properties	2 ×
Instal/Ur	initel   Windows Setup   Startup Disk	
影	To install a new program from a floppy de drive, click install	k ar CD A'OM
		justal .
I	The following rollware can be automatica Windows. To remove a program or to more components, select it from the list and clo Add/Remove.	ly removed by dip its installed h
Intel® I Lexina Microsoft USCO	815 Chipset Graphic Driver End Liser Diagno k 242 Series ColorFine at Office 2000 Pennium in Web Publishing Waard 1 S SS National Refshore View 100	astics Software
20		_
	- Ag	(Income)
		atoma atoma

11.5 Restart Windows® system.

### 12. Troubleshooting

If you have successfully installed the driver, but can't see either your or the other computers' names in Window's Network Neighborhood, please check the following points.

- 12.1 Make sure the USB-USB Network Bridges Cables are firmly connected to the USB ports of your computers or USB hubs.
- 12.2Click the Start menu, point to Settings\Control Panel. Double click Network icon. In Identification tab, ensure each computer has been given a unique name, not to conflict with each other. Make sure the Workgroup name is the same for all the computers in the network.

Window comput comput dependent	u uses the follow et an the network et, the workgroup an of the comp	ng information Please type it will appear i tax	to identify you a name for this n, and a short
Computer name	[		k
Workproups	ſ		1
Computer Description:	F		1

- 12.3 In Configuration tab, check the USB-USB Network Bridge Adapter is in The following network compenents are installed list.
- 12.4In Configuration tab, click File and Print Sharing button. Make sure both I want to be able to give others access to my files and I want to be able to allow others to print to my printer(s) functions are selected. It would cause the File and printer sharing for microsoft networks service be installed and enable this computer to share its files and printers to the others.



After checking all these points, if the network is still not working properly, please contact your supplier instead of revising the settings by yourself unless you are an expert network user.

#### 13. Disclaimer

Information in this document is subject to change without notice. The manufacturer does not make any representations or warranties (implied or otherwise) regarding

the accuracy and completeness of this document and shall in no event be liable for any loss of profit or any other commercial damage, including but not limited to special, incidental, consequential, or other damages.

No part of this document may be reproduced or transmitted in any form by any means, electronic or mechanical, including photocopying, recording or information recording and retrieval systems without the express written permission of the manufacturer.

All brand names and product names used in this document are trademarks, or registered trademarks of their respective holders.

## 14. FCC Statement

This device generates and uses radio frequency and may cause interference to radio and television reception if not installed and used properly. This has been tested and found to comply with the limits of a Class B computing device in accordance with the specifications in Part 15 of FCC Rules. These specifications are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by plugging the device in and out, the user can try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the computer into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.