

KYLIG KYLD

GB



Design and Quality
IKEA of Sweden

Contents			
Safety information	4	Technical data	15
Product description	6	Environmental concerns	16
First use	8	Electrical connection for	
Daily use	8	Great Britain and Ireland only	17
Cleaning and maintenance	10	IKEA GUARANTEE	17
What to do if ...	12		

Safety Information

Before first use

This appliance is intended to be used in household. To ensure best use of your appliance, carefully read this User Manual which contains a description of the product and useful advice.


Keep these instructions for future reference.

1. After unpacking the appliance, make sure it is not damaged and that the door closes properly.
Any functional fault must be reported to IKEA After Sales Service as soon as possible.
2. Wait at least two hours before switching the appliance on, to ensure that the refrigerant circuit is fully efficient.
3. The electrical installation and the electrical connection must be carried out by a qualified technician according to the manufacturer's instructions and in compliance with the local safety regulations.
4. Clean the inside of the appliance before using it.

Precautions and general recommendations
Installation and connection

- The appliance must be handled and installed by two or more persons.
- Be careful not to damage the floors (e.g. parquet) when moving the appliance.
- During installation, make sure the appliance does not damage the power cable.
- Make sure the appliance is not near a heat source.
- To guarantee adequate ventilation, leave a space on both sides and above

the appliance and follow the installation instructions.

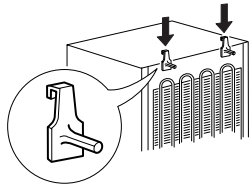

- Keep the appliance ventilation openings free.
- Do not damage the appliance refrigerant circuit pipes.
- Install and level the appliance on a floor strong enough to take its weight and in a place suitable for its size and use.
- Install the appliance in a dry and well-ventilated place.
The appliance is arranged for operation in places where the temperature comes within the following ranges, according to the climatic class given on the rating plate.
The appliance may not work properly if it is left for a long time at a temperature outside the specified range.
- Make sure the voltage specified on the rating plate corresponds to that of your home.

Climatic Class	Amb. T. (°C)	Amb. T. (°F)
SN	From 10 to 32	From 50 to 90
N	From 16 to 32	From 61 to 90
ST	From 16 to 38	From 61 to 100
T	From 16 to 43	From 61 to 110

- Do not use single/multi adapters or extension cords.
- For the water connection, use the pipe supplied with the new appliance; do not reuse that of the previous appliance.
- Power cable modification or replacement must only be carried out by qualified personnel or by After-sales Service.
- It must be possible to disconnect the appliance from the power supply by unplugging it or by means of a mains two-pole switch installed upstream of the socket.

Safety

- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Do not store or use petrol, flammable liquids or gas in the vicinity of this or other electrical appliances. The fumes can cause fires or explosions.
- Do not use mechanical, electric or chemical means other than those recommended by the Manufacturer to speed up the defrost process.
- Do not use or place electrical devices inside the appliance compartments if they are not of the type expressly authorised by the Manufacturer.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- To avoid the risk of children becoming trapped and suffocating, do not allow them to play or hide inside the appliance.
- Do not swallow the contents (non-toxic) of the ice packs (in some models).
- Do not eat ice cubes or ice lollies immediately after taking them out of the freezer since they may cause cold burns.

Use

- Before carrying out any maintenance or cleaning operation, unplug the appliance or disconnect it from the power supply.
- All appliances equipped with an automatic ice-maker and water dispenser must be connected to a water supply that only delivers drinking water (with mains water pressure of between 0.17 and 0.81 Mpa (1.7 and 8.1 bar)). Automatic ice-makers and/or water dispensers not directly connected to the water supply must be filled with drinking water only.


Use the refrigerator compartment only for storing fresh food and the freezer compartment only for storing frozen food, freezing fresh food and making ice cubes.

- Do not store glass containers with liquids in the freezer compartment since they may break.
- Avoid storing unwrapped food in direct contact with internal surfaces of the refrigerator or freezer compartments.

The Manufacturer declines any liability if the above advice and precautions are not respected.

Product description

Carefully read the operating instructions before using the appliance.

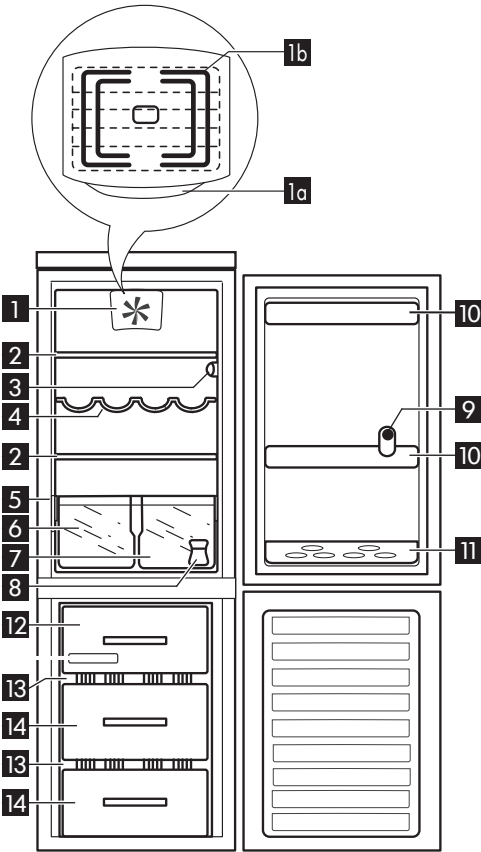

KYLIG

Refrigerator compartment


- 1 Filter in fan
- 1a button of fan
- 1b cover of fan
- 2 Shelves
- 3 Lighting
- 4 Bottle rack
- 5 Rating plate
- 6 Crisper drawer
- 7 Crisper divider
- 8 Reversibility kit
- 9 Separator
- 10 Door trays
- 11 Balcony egg tray

Freezer compartment

- 12 Upper basket (freezing zone)
- 13 Shelves
- 14 Storage baskets for frozen food


Accessories

Balcony egg tray

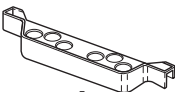

1x

Freezer block

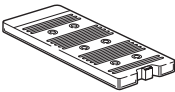

1x

Ice tray




2x

Handles



1x

The refrigerator accessories must not be placed in a dishwasher.

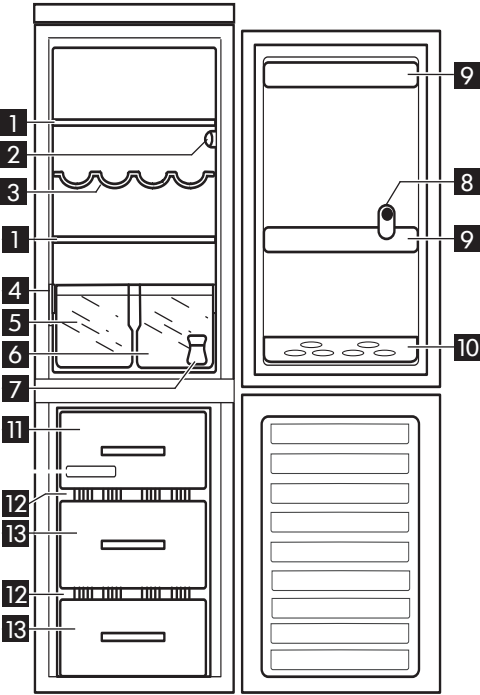

KYLD

Refrigerator compartment


- 1 Shelves
- 2 Lighting
- 3 Bottle rack
- 4 Rating plate
- 5 Crisper drawer
- 6 Crisper divider
- 7 Reversibility kit
- 8 Separator
- 9 Door trays
- 10 Balcony egg tray

Freezer compartment

- 11 Upper basket (freezing zone)
- 12 Shelves
- 13 Storage baskets for frozen food


Accessories

Balcony egg tray

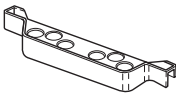


1x

Ice tray

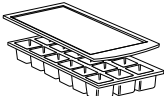


2x

Freezer block

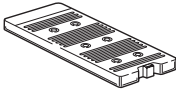

1x


Handles

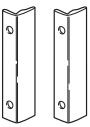

1x

The refrigerator accessories must not be placed in a dishwasher.

Control panel

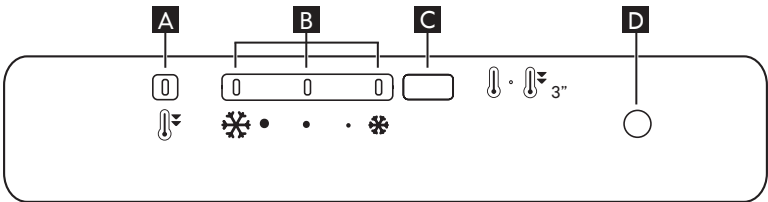

- A** Fast cool function indicator
- B** Indication of temperature settings
- C** Temperature selection / Fast cool push button
- D** Internal light switch

First use

Connect the appliance to the main power supply.
The ideal temperatures for preserving food have already been set at the factory.(MED)

Note: After switching the appliance on, it will be necessary to wait for 4 to 6 hours before a temperature suitable for a standard appliance load is reached.

Daily use

Guide to selecting functions temperature selection

Press the push button on the control panel to adjust the temperature. Temperature selection push button is used to set desired temperature level, from warmest through lower to coldest . Pressing push button setpoint will change cyclically. Temperature set-point is done for both compartments at one time - fridge and freezer.
At first plug-in of appliance factory set-point is chosen - medium position.
Following table shows set-points level:

	High temperature
	Mid-high temperature
	Middle temperature
	Mid-low temperature
	Low temperature

Legend:
 Led OFF
 Led ON

Fast Cooling

The use of this function is recommended to increase the cooling speed when placing a very high quantity of food in the refrigerator compartment by pressing and holding the push button on the control panel for 3 seconds.



The Fast Cool light (yellow LED) will turn on. The function is automatically deactivated after 6 hours.
The Fast Cool function can be manually deactivated by pressing and holding the same push button on the control panel for 3 sec., the yellow LED is off.
Note: fast cool function should be also switched ON before placing fresh food to be frozen in the freezer compartment, in order to maximize the freezing capacity.

Freezing fresh food

Place the fresh food to be frozen inside upper basket in the freezer compartment. Avoid direct contact with already frozen food.

To freeze the quantity of food shown on the rating plate.

Fan (if provided)

The fan improves temperature distribution inside the refrigerator compartment, allowing better preservation of stored food. To switch on or switch off the fan press the button.(1a)

By default, the fan is ACTIVE.

It is advisable to keep the fan active, when the ambient air temperature is above 27 ÷ 28°C or if you perceive drops of water on the glass shelves or in the severe humidity conditions.


To guarantee the right performance at lower ambient temperature (colder than 18°C) and to minimize Energy Consumption, turn off the fan.

The fan is equipped with the filter. The replacement procedure is attached with documents set in the crisper drawer.

Caution!

Do not obstruct the air intake area with food items.

Freezer compartment

This appliance is a refrigerator with a  star rating freezer compartment.

Packed frozen foods can be stored for the period indicated on the packing. Fresh food can also be frozen, ensuring that any contact with already frozen food is avoided.

The quantity of fresh food that can be frozen in a 24 hour period is given on the rating plate. Re-freezing of partially defrosted food is not recommended. This food should be consumed within 24 hours.

Removing the baskets (depending on the model)

Pull the drawers out as far as they go, then lift slightly and remove.

Note: The freezer can also be used without the drawers, in order to maximise space. Ensure that after placing the food on the racks, the freezer door closes properly.

Making ice cubes

Fill the ice cube tray up to 2/3 with water and place in the freezer compartment. Do not use sharp or pointed objects to detach the tray.

Self closing mechanism

Appliance is equipped in feature, which helps customer to close the door.

Cleaning and maintenance

Regularly clean the appliance using a cloth and a solution of warm water, with some soft detergent suitable for cleaning the inside of the refrigerator compartment. Do not use abrasive detergents or tools. To ensure continuous and correct flow of defrost water, regularly clean the inside of the draining hole on the back of the refrigerator near the fruit and vegetable drawer, using the tool provided (see fig.1). Before carrying out any cleaning or maintenance operation, unplug the appliance or disconnect it from the power supply.

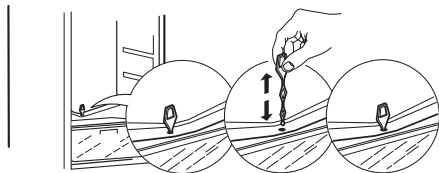


Fig 1

Defrosting the freezer compartment

No Frost freezers provide chilled air circulation around the storage areas and prevent the formation of ice, thereby completely eliminating the need for defrosting. Frozen items don't stick to the walls, labeling stays legible and storage space remains neat and clear.

Storing food

Wrap food so that no water, moisture or condensate can enter; this will prevent odours or aromas going from one part to another in the refrigerator, ensuring better preservation of frozen foods. Never place hot food in the freezer. Cooling hot foods before freezing saves energy and prolongs the life of the appliance.

In case of short vacation

There is no need to disconnect the appliance from the power supply if you will

be away for less than three weeks. Use up perishable food, freeze other food. If your appliance has an automatic ice maker:

1. Turn it off.
2. Shut off the water supply to the automatic ice maker.
3. Empty the ice bucket.

In case of moving

1. Take out all internal parts.
2. Wrap them well, and fix them together with adhesive tape so that they do not bang together or get lost.
3. Screw the adjustable feet so that they do not touch the support surface.
4. Close and fix both doors with adhesive tape and, again using adhesive tape, fix the power cable to the appliance.

If the appliance is not going to be used

Disconnect the appliance from the power supply, remove all the food, defrost and clean. Leave the doors open enough for air to circulate inside the compartments. This will prevent the formation of mould and bad odours.

In case of power failures

Call the local office of your electricity supply company and ask how long it is going to last.

For power failures lasting up to 24 hours. Keep both doors of the appliance closed. This will allow the stored food to stay cold as long as possible.

For power failures lasting more than 24 hours.


1. Empty the freezer compartment and arrange the food in a portable freezer. If this type of freezer is not available and, likewise, no artificial ice packs are available, try to use up the food, which is more easily perishable.
2. Empty the ice bucket.

Note:

- Bear in mind that a full appliance will stay cold longer than a partially filled one.
- If ice crystals are still visible on the food, it may be frozen again, although flavour and aroma may be affected.
- If food is found to be in a poor condition, it is best to throw it away.

Replacing the LED

Always disconnect the refrigerator from the power supply before replacing any light bulb.

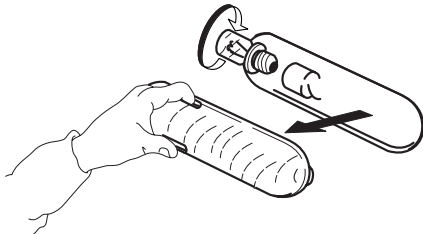

If the inside light is not working, it is necessary to:

1. Remove the light cover: put the fingers into the side ventilation holes (1), stretch the cover gently and move it upwards.
2. Check the bulb. If necessary unscrew the broken bulb and replace it with a LED bulb of the same type available only at After Sales Service.
3. Put on the light cover.

Do not leave the bulb uncovered.

Abnormal appliance operation

When the product is plugged in to the mains, during first 10 minutes of its performance, possible temperature sensor failure will be displayed according to following table:

	Refrigerator Evaporator sensor failure
	Refrigerator sensor failure
	Refrigerator & Evaporator sensor failure
. . .	

Legend:

- Led off Led flashing

The appliance will work preserving the food stored, but it is necessary to contact after-sales service and provide alarm code.

What to do if ...

Caution! Before troubleshooting, disconnect the power supply.

Only a qualified electrician or competent person must do the troubleshooting that is not in this manual.

Problem	Possible cause	Solution
The appliance is too noisy. (see Notes)	The appliance is not installed properly.	Check if the appliance stands stable (all the feet should be on the floor).
	The storage inside appliance is not correct.	Check that: - The internal components are correctly placed. - Bottles and containers are not in contact with each other.
The appliance does not operate	There might be a problem with the electric power supply to the appliance.	Check that: - there isn't a power supply failure. - the power plug is correctly inserted in the power socket and the two-pole switch, if present, is in the correct position (on). - the electric circuit safety devices installed in the house are fully functional. - the power supply cable is not broken.
	The appliance is switched off	Switch on the appliance.
The inside light does not work	- The lamp might need replacing	Disconnect the appliance from the power supply, check the lamp and, if necessary, replace it with a new one (see the section "Replacing the LED").
	- The lamp is fixed incorrectly	Disconnect the appliance from the electric power supply, check the lamp and screw the lamp.

Problem	Possible cause	Solution
The temperature inside the compartments is not cold enough. Water seems to run too much.	There may be several causes (see solutions)	Check that: <ul style="list-style-type: none"> - The doors are closed correctly. - The appliance is not placed near a heat source. - The temperature set is appropriate. - Air circulation through the ventilation grills at the bottom of the appliance is not obstructed.
	<ul style="list-style-type: none"> - a large amount of food has been added to the appliance. - The doors are opened too often - on hot days or if the room is warm, the motor naturally runs longer. 	No solution is necessary
There is water at the bottom of the refrigerator compartment.	The defrost water drain is obstructed.	Clean the defrost water drain hole (see "Cleaning and maintenance").
There is moisture build-up	Air flows vents inside the compartment are not blocked, as this prevents the circulation of air	No solution is necessary.
	<ul style="list-style-type: none"> - Humidity from the room air enters the appliance. - The food is not properly packaged. 	Do not keep the door open longer than necessary. Dry any dampness containers before placing into the appliance.
The front edge of the appliance is hot at the door seal edge.	This is not a fault. It is part of the design to prevent the formation of condensation.	No solution is necessary

Problem	Possible cause	Solution
The doors do not open and close properly	There may be several causes (see solution)	Check that: - food packages are not blocking the door. - the internal accessories are not out of position - the door seals are not dirty or sticky - the appliance is properly leveled
Fan does not work	- Fan is not switched on	Press the button.
	- Compressor is not switched on.	No solution is necessary

Note:

Some of functional noises coming from appliance during normal use can be within hearing:

- A hissing sound when switching on the appliance for the first time or after a long pause.
- A gurgling sound when refrigerant fluid enters into the pipes.
- Buzzing sound when water valve or fan start working.
- A cracking sound when compressor starts or when ready ice drops into ice box
Abrupt clicks when compressor switches on and off.

Different working time of compressor (run and stop) is a normal operation and depends on the ambient temperature and/or thermostat knob adjustment

Before contacting the After-sales service:

Switch the appliance on again to see if the problem has disappeared. If not, switch it off again and repeat the operation after an hour.

If your appliance still does not work properly after carrying out the checks listed in the troubleshooting guide and switching the appliance on again, contact the After-sales service, clearly explaining the problem and specifying:

- the type of fault;
- the model;
- the type and serial number of the appliance (given on the rating plate);
- the Service number (the number after the word SERVICE on the rating plate inside the appliance).

SERVICE 0000 000 00000




Note:

Reversing of appliance door opening is not covered by the warranty.

Technical data

Product dimensions	KYLIG	KYLD
Height	1875	1875
Width	595	595
Depth	640	640
Net Volume Fridge (l)	225	226
Net Volume Freezer (l)	97	97
Defrost system		
Fridge	Automatic	Automatic
Freezer	Automatic	Automatic
Star Rating	4	4
Rising Time (h)	15	15
Freezing Capacity (kg/24h)	4,5	4,5
Energy consumption (kwh/24h)	0,89	0,89
Noise level (dba)	42	42
Energy class	A+	A+

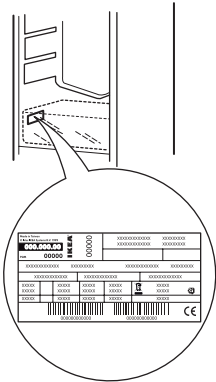

The technical information are situated in the rating plate on the internal side of the appliance and in the energy label

Environmental concerns


1. Packing

The packing material is 100% recyclable and bears the recycling symbol. For disposal, comply with the local regulations. Keep the packing materials (plastic bags, polystyrene parts, etc.) out of the reach of children, as they are a potential source of danger.

2. Scrapping/Disposal

The appliance is manufactured using recyclable material. This appliance is marked in compliance with European Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). By ensuring the correct disposal of this appliance, you can help prevent potentially negative consequences for the environment and the health of persons.



The symbol  on the appliance, or on the accompanying documents, indicates that this appliance should not be treated as domestic waste but must be taken to a special collection centre for the recycling of electrical and electronic equipment.

When scrapping the appliance, make it unusable by cutting off the power cable and removing the doors and shelves so that children cannot easily climb inside and become trapped.

Scrap the appliance in compliance with local regulations on waste disposal, taking it to a special collection centre; do not leave the appliance unattended even for a few days, since it is a potential source of danger for children.

For further information on the treatment, recovery and recycling of this product, contact your competent local office, the household waste collection service or the shop where you purchased the appliance.

Information:

This appliance does not contain CFCs. The refrigerant circuit contains R600a (HC) (see the rating plate inside the appliance). Appliances with Isobutane (R600a): isobutane is a natural gas without environmental impact, but is flammable. Therefore, make sure the refrigerant circuit pipes are not damaged.

Declaration of conformity

- This appliance has been designed for preserving food and is manufactured in compliance with Regulation (CE) No. 1935/2004.



- This appliance has been designed, manufactured and marketed in compliance with:
 - safety objectives of the "Low Voltage" Directive 2006/95/CE (which replaces 73/23/CEE and subsequent amendments);
 - the protection requirements of Directive "EMC" 2004/108/EC.

Electrical safety of the appliance can only be guaranteed if it is correctly connected to an approved earthing system.

Electrical connection for Great Britain and Ireland only

Warning - this appliance must be earthed

Fuse replacement

If the mains lead of this appliance is fitted with a BS 1363A 13amp fused plug, to change a fuse in this type of plug use an A.S.T.A. approved fuse to BS 1362 type and proceed as follows:

1. Remove the fuse cover (A) and fuse (B).
2. Fit replacement 13A fuse into fuse cover.
3. Refit both into plug.

Important:


The fuse cover must be refitted when changing a fuse and if the fuse cover is lost the plug must not be used until a correct replacement is fitted.

Correct replacement are identified by the colour insert or the colour embossed in words on the base of the plug.

Replacement fuse covers are available from your local electrical store.

For the Republic of Ireland only

The information given in respect of Great Britain will frequently apply, but a third type of plug and socket is also used, the 2-pin, side earth type.

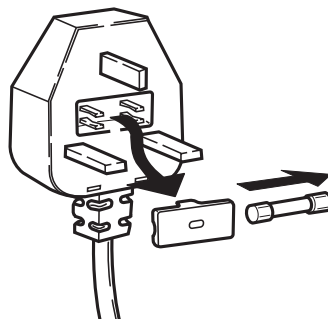

Socket outlet / plug (valid for both countries)

If the fitted plug is not suitable for your socket outlet, please contact After-sales Service for further instruction. Please do not attempt to change plug yourself. This procedure needs to be carried out by a qualified technician in compliance with the manufactures instructions and current standard safety regulations.

IKEA GUARANTEE

How long is the IKEA guarantee valid?

This guarantee is valid for five (5) years from the original date of purchase of your appliance at IKEA, unless the appliance is named LAGAN in which case two (2) years of guarantee apply. The original sales receipt, is required as proof of purchase. If service work is carried out under guarantee, this will not extend the guarantee period for the appliance.

Which appliances are not covered by the IKEA five (5) years guarantee?

The range of appliances named LAGAN and all appliances purchased in IKEA before 1st of August 2007.

Who will execute the service?

IKEA service provider will provide the service through its own service operations or authorized service partner network.

What does this guarantee cover?

The guarantee covers faults of the appliance, which have been caused by faulty construction or material faults from the date of purchase from IKEA. This guarantee applies to domestic use only. The exceptions are specified under the headline "What is not covered under this guarantee?" Within the guarantee period, the costs to remedy the fault e.g. repairs, parts, labour and travel will be covered, provided that the

appliance is accessible for repair without special expenditure. On these conditions the EU guidelines (Nr. 99/44/EG) and the respective local regulations are applicable. Replaced parts become the property of IKEA.

What will IKEA do to correct the problem?

IKEA appointed service provider will examine the product and decide, at its sole discretion, if it is covered under this guarantee. If considered covered, IKEA Service Provider or its authorized service partner through its own service operations, will then, at its sole discretion, either repair the defective product or replace it with the same or a comparable product.

What is not covered under this guarantee?

- Normal wear and tear.
- Deliberate or negligent damage, damage caused by failure to observe operating instructions, incorrect installation or by connection to the wrong voltage, damage caused by chemical or electrochemical reaction, rust, corrosion or water damage including but not limited to damage caused by excessive lime in the water supply, damage caused by abnormal environmental conditions.
- Consumable parts including batteries and lamps.
- Non-functional and decorative parts which do not affect normal use of the appliance, including any scratches and possible color differences.
- Accidental damage caused by foreign objects or substances and cleaning or unblocking of filters, drainage systems or soap drawers.
- Damage to the following parts: ceramic glass, accessories, crockery and cutlery baskets, feed and drainage pipes, seals, lamps and lamp covers, screens, knobs, casings and parts of casings. Unless such damages can be proved to have been caused by production faults.
- Cases where no fault could be found during a technician's visit.

- Repairs not carried out by our appointed service providers and/or an authorized service contractual partner or where non-original parts have been used.
 - Repairs caused by installation which is faulty or not according to specification.
 - The use of the appliance in a non-domestic environment i.e. professional use.
 - Transportation damages. If a customer transports the product to his home or another address, IKEA is not liable for any damage that may occur during transport. However, if IKEA delivers the product to the customer's delivery address, then damage to the product that occurs during this delivery will be covered by IKEA.
 - Cost for carrying out the initial installation of the IKEA appliance.
- However, if an IKEA appointed Service Provider or its authorized service partner repairs or replaces the appliance under the terms of this guarantee, the appointed Service Provider or its authorized service partner will reinstall the repaired appliance or install the replacement, if necessary. This does not apply within Ireland, customer should contact the local IKEA dedicated after sales line or the appointed Service Provider for further information.

These restrictions do not apply to fault-free work carried out by a qualified specialist using our original parts in order to adapt the appliance to the technical safety specifications of another EU country.

How country law applies

The IKEA guarantee gives you specific legal rights, which cover or exceed all the local legal demands.

However these conditions do not limit in any way consumer rights described in the local legislation.

Area of validity

For appliances which are purchased in one EU country and taken to another EU country, the services will be provided in the framework of the guarantee conditions normal in the new country.

An obligation to carry out services in the framework of the guarantee exists only if the appliance complies and is installed in accordance with:

- the technical specifications of the country in which the guarantee claim is made;
- the Assembly Instructions and User Manual Safety Information.

The dedicated AFTER SALES for IKEA appliances

Please don't hesitate to contact IKEA appointed After Sales Service Provider to:

- make a service request under this guarantee;
- ask for clarifications on installation of the IKEA appliance in the dedicated IKEA kitchen furniture;
- ask for clarification on functions of IKEA appliances.

To ensure that we provide you with the best assistance, please read carefully the Assembly Instructions and/or the User Manual before contacting us.

How to reach us if you need our service



Please refer to the last page of this manual for the full list of IKEA appointed After Sales Service Provider and relative national phone numbers.

i In order to provide you a quicker service, we recommend to use the specific phone numbers listed on this manual. Always refer to the numbers listed in the booklet of the specific appliance you need an assistance for. Please also always refer to the IKEA article number (8 digit code) and 12 digit service number placed on the rating plate of your appliance.

i **SAVE THE SALES RECEIPT!**
It is your proof of purchase and required for the guarantee to apply. The sales receipt also reports the IKEA name and article number (8 digit code) for each of the appliances you have purchased.

Do you need extra help?

For any additional questions not related to After Sales of your appliances please contact your nearest IKEA store call centre. We recommend you read the appliance documentation carefully before contacting us.

**BELGIË - BELGIQUE - BELGIEN**

Telefoon/Numéro de téléphone/Telefon-Nummer:	026200311
Tarifet/Tarif/Tarif: Lokaal tarief/Prix d'un appel local/Ortstarif	
Openingstijd:	Maandag - Vrijdag 8.00 - 20.00
Heures d'ouverture:	Lundi - Vendredi 8.00 - 20.00
Öffnungszeiten:	Montag - Freitag 8.00 - 20.00

БЪЛГАРИЯ

Телефонен номер:	02 4003536
Тарифа:	Локална тарифа
Работно време:	понеделник - петък 8.00 - 20.00

ČESKÁ REPUBLIKA

Telefonní číslo:	225376400
Sazba:	Místní sazba
Pracovní doba:	Pondělí - Pátek 8.00 - 20.00

DANMARK

Telefonnummer:	70150909
Takst:	Lokal takst
Åbningstid:	Mandag - fredag 9.00 - 21.00
	Lørdag 9.00 - 18.00
	(Åbent udvalgte søndage, se IKEA.dk)

DEUTSCHLAND

Telefon-Nummer:	06929993602
Tarif:	Ortstarif
Öffnungszeiten:	Montag - Freitag 8.00 - 20.00

ΕΛΛΑΔΑ

Τηλεφωνικός αριθμός:	2109696497
Χρέωση:	Τοπική χρέωση
Ώρες λειτουργίας:	Δευτέρα - Παρασκευή 8.00 - 20.00

ESPAÑA

Teléfono:	913754126
Tarifa:	Tarifa local
Horario:	Lunes - Viernes 8.00 - 20.00
	(España Continental)

FRANCE

Numéro de téléphone:	0170480513
Tarif:	Prix d'un appel local
Heures d'ouverture:	Lundi - Vendredi 9.00 - 21.00

ÍSLAND

Símanúmer:	5852409
Kostnaður við símtal:	Almennt minútuverð
Opnunartími:	Mánudaga - Föstudaga 9.00 - 17.00

ITALIA

Telefono:	0238591334
Tariffa:	Tariffa locale
Orari d'apertura:	Lunedì - Venerdì 8.00 - 20.00

MAGYARORSZÁG

Telefon szám:	(06-1)-3285308
Tarifa:	Helyi tarifa
Nyitvatartási idő:	Hétfőtől Péntekig 8.00 - 20.00

NEDERLAND

Telefoon:	09002354532 en/of 0900 BEL IKEA
Tarief:	Lokaal tarief € 0,10 p/min
Openingstijd:	Maandag t/m - Vrijdag 9.00 - 21.00
	Zaterdag 9.00 - 20.00
	Zondag 9.00 - 18.00

NORGE

Telefon nummer:	23500112
Takst:	Lokal takst
Åpningstider:	Mandag - fredag 8.00 - 20.00

ÖSTERREICH

Telefon-Nummer:	013602771461
Tarif:	Ortstarif
Öffnungszeiten:	Montag - Freitag 8.00 - 20.00

POLSKA

Numer telefonu:	225844203
Stawka:	Koszt połączenia według taryfy operatora
	Poniedziałek - Piątek 8.00-20.00

PORTUGAL

Telefone:	213164011
Tarifa:	Tarifa local
Horário:	Segunda - Sexta 9.00 - 21.00

REPUBLIC OF IRELAND

Phone number:	016590276
Rate:	Local rate
Opening hours:	Monday - Friday 8.00 - 20.00

ROMÂNIA

Număr de telefon:	021 2044888
Tarif:	Tarif local
Orar:	Luni - Vineri 8.00 - 20.00

РОССИЯ

Телефонный номер:	84957059426
Стоимость звонка:	Местная стоимость звонка
Время работы:	Понедельник - Пятница 8.00 - 20.00
	(Московское время)

SCHWEIZ - SUISSE - SVIZZERA

Telefon-Nummer/Numéro de téléphone/Telefono:	0225675345
Tarif/Tarif/Tariffa:	Ortstarif/Prix d'un appel local/Tariffa locale
Öffnungszeiten:	Montag - Freitag 8.00 - 20.00
Heures d'ouverture:	Lundi - Vendredi 8.00 - 20.00
Orario d'apertura:	Lunedì - Venerdì 8.00 - 20.00

SLOVENSKO

Telefónne číslo:	(02) 50102658
Cena za miestny hovor:	
Pracovná doba:	Pondelok až piatok 8.00 - 20.00

SUOMI

Puhelinnumero:	0981710374
Hinta:	Yksikköhinta
Aukioloaika:	Maanantaista perjantaihin 8.00 - 20.00

SVERIGE

Telefon nummer:	0775-700 500
Taxa:	Lokal samtal
Öppet tider:	Måndag - Fredag 8.30 - 20.00
	Lördag - Söndag 9.30 - 18.00

UNITED KINGDOM

Phone number:	02076601517
Rate:	Local rate
Opening hours:	Monday - Friday 9.00 - 21.00

