

# WESLO<sup>®</sup>


# purSUIT R 3.8

www.weslo.com

Model No. WLEX91208.0

Serial No. \_\_\_\_\_

Write the serial number in the space above for reference.

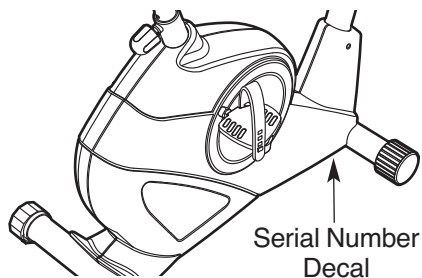

## QUESTIONS?

If you have questions, or if parts are damaged or missing, **DO NOT CONTACT THE STORE;** please contact Customer Care.

**IMPORTANT:** You must note the product model number and serial number (see the drawing above) before contacting us:

CALL TOLL-FREE:

**1-866-699-3756**

Mon.–Fri., 6 a.m.–6 p.m. MT

Sat. 8 a.m.–4 p.m. MT


ON THE WEB:

www.wesloservice.com

## CAUTION

Read all precautions and instructions in this manual before using this equipment. Keep this manual for future reference.

## USER'S MANUAL

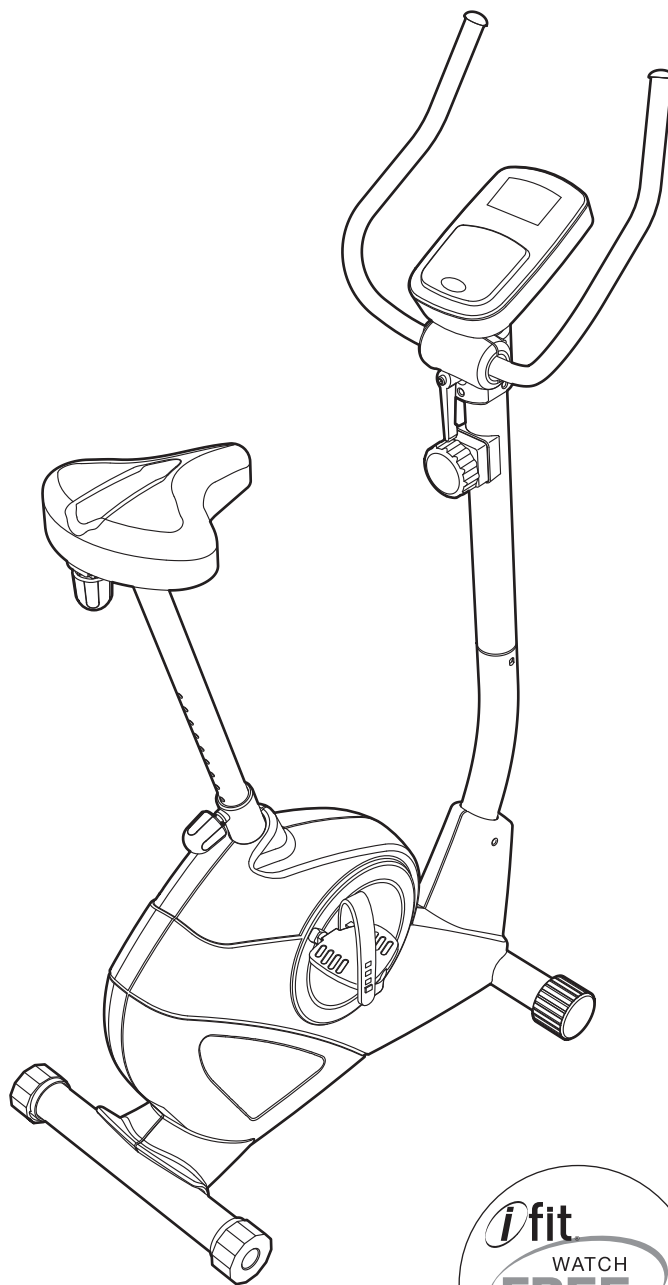

# TABLE OF CONTENTS

WARNING DECAL PLACEMENT .....2

IMPORTANT PRECAUTIONS .....3

BEFORE YOU BEGIN .....4

ASSEMBLY .....5

HOW TO USE THE EXERCISE CYCLE .....11

MAINTENANCE AND TROUBLESHOOTING .....15

EXERCISE GUIDELINES .....16

PART LIST .....18


EXPLODED DRAWING .....19

ORDERING REPLACEMENT PARTS .....Back Cover

LIMITED WARRANTY .....Back Cover

## WARNING DECAL PLACEMENT

This drawing shows the location(s) of the warning decal(s). **If a decal is missing or illegible, see the front cover of this manual and request a free replacement decal. Apply the decal in the location shown.** Note: The decal(s) may not be shown at actual size.

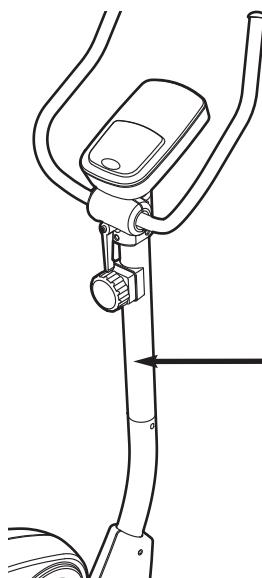

**⚠ WARNING**

- Misuse of this machine may result in serious injury.
- Read user's manual prior to use and follow all warnings and instructions.
- Do not allow children on or around machine.
- Pedals continue to spin when you stop pedaling.
- Spinning pedals can cause injury.
- Reduce pedal speed in a controlled manner.
- User weight must not exceed 250 pounds.
- Replace label if damaged, illegible, or removed.

## IMPORTANT PRECAUTIONS

**⚠️ WARNING:** To reduce the risk of serious injury, read all important precautions and instructions in this manual and all warnings on your exercise cycle before using your exercise cycle. ICON assumes no responsibility for personal injury or property damage sustained by or through the use of this product.

1. Before beginning any exercise program, consult your physician. This is especially important for persons over the age of 35 or persons with pre-existing health problems.
2. It is the responsibility of the owner to ensure that all users of the exercise cycle are adequately informed of all precautions.
3. Your exercise cycle is intended for home use only. Do not use your exercise cycle in a commercial, rental, or institutional setting.
4. Keep your exercise cycle indoors, away from moisture and dust. Place your exercise cycle on a level surface, with a mat beneath it to protect the floor or carpet. Make sure that there is at least 2 ft. (0.6 m) of clearance around your exercise cycle.
5. Inspect and properly tighten all parts regularly. Replace any worn parts immediately.
6. Keep children under age 12 and pets away from your exercise cycle at all times.
7. Your exercise cycle should not be used by persons weighing more than 250 lbs. (113 kg).
8. The pulse sensor is not a medical device. Various factors, including the user's movement, may affect the accuracy of heart rate readings. The pulse sensor is intended only as an exercise aid in determining heart rate trends in general.
9. Wear appropriate exercise clothes while exercising; do not wear loose clothes that could become caught on your exercise cycle. Always wear athletic shoes for foot protection while exercising.
10. Keep your back straight while using your exercise cycle; do not arch your back.
11. When you stop exercising, allow the pedals to slowly come to a stop.
12. If you feel pain or dizziness while exercising, stop immediately and cool down.
13. Use your exercise cycle only as described in this manual.

## BEFORE YOU BEGIN


Thank you for selecting the new WESLO® PURSUIT R 3.8 exercise cycle. Cycling is an effective exercise for increasing cardiovascular fitness, building endurance, and toning the body. The PURSUIT R 3.8 exercise cycle provides a selection of features designed to make your workouts at home more effective and enjoyable.

**For your benefit, read this manual carefully before you use the exercise cycle.** If you have questions after reading this manual, please see the front cover of this manual. To help us assist you, note the product

model number and serial number before contacting us. The model number and the location of the serial number decal are shown on the front cover of this manual.

**To avoid a registration fee for any service needed under warranty, you must register the exercise cycle at [www.wesloservice.com/registration](http://www.wesloservice.com/registration).**

Before reading further, please familiarize yourself with the parts that are labeled in the drawing below.

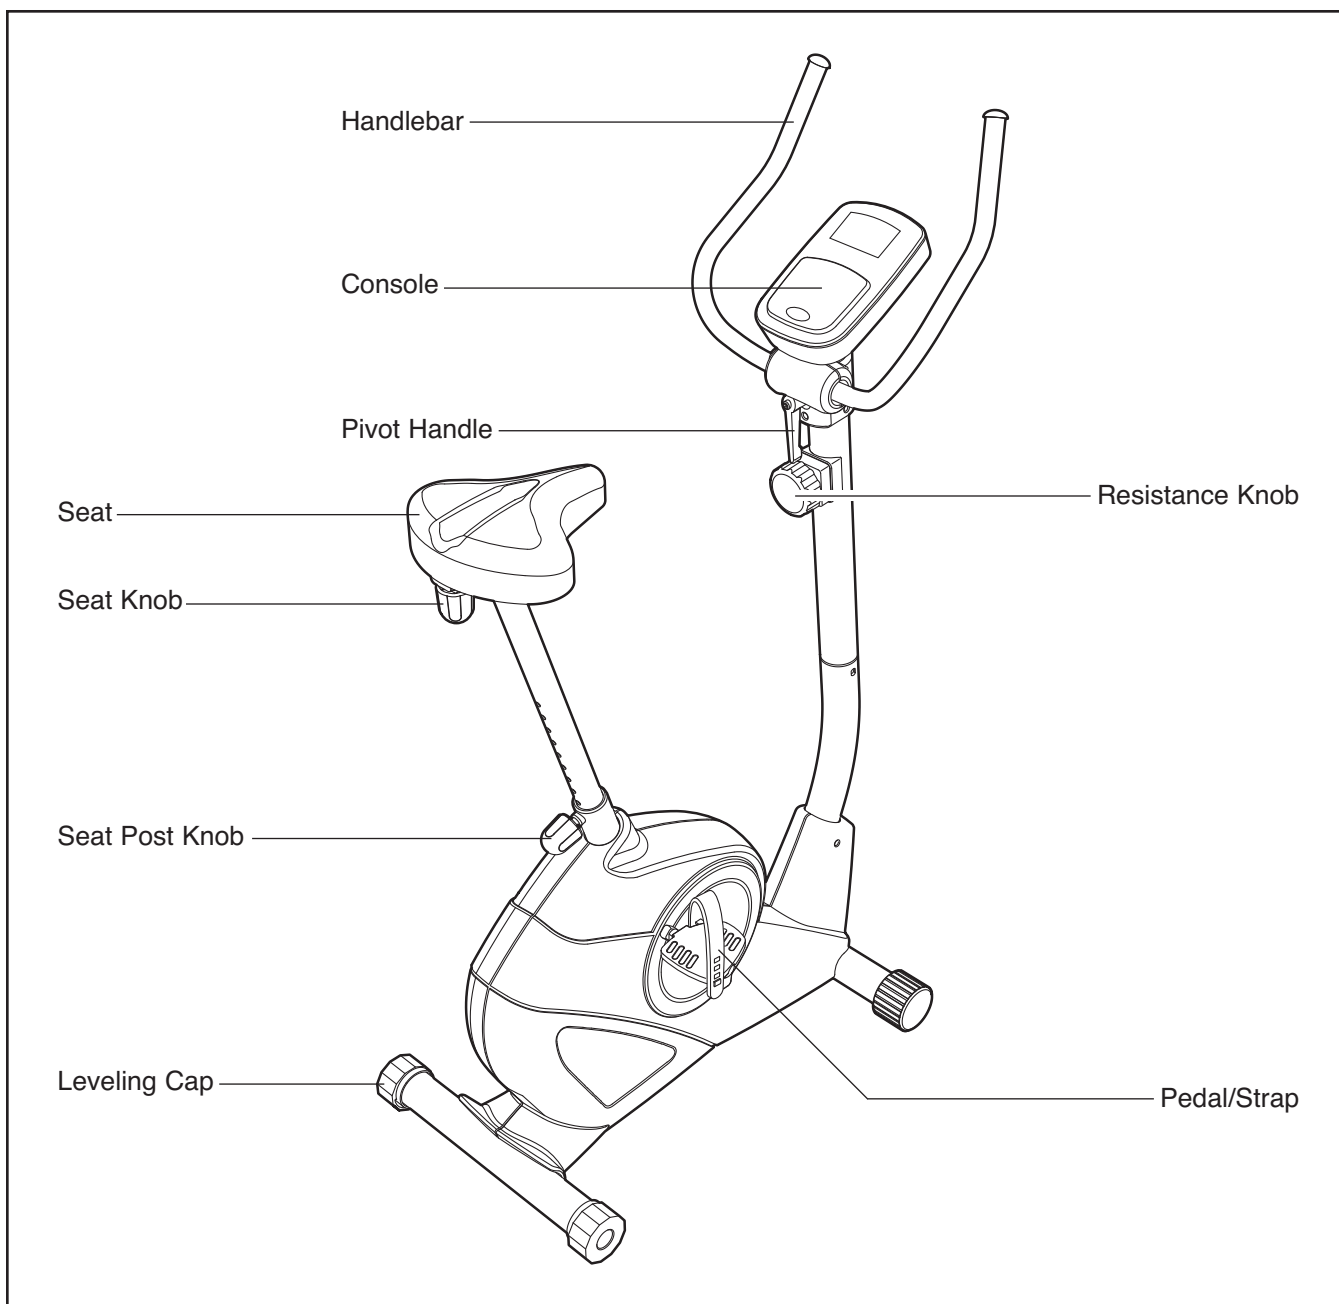


# ASSEMBLY

To hire an authorized service technician to assemble the exercise cycle, call 1-800-445-2480.

**Assembly requires two persons.** Place all parts of the exercise cycle in a cleared area and remove the packing materials. Do not dispose of the packing materials until assembly is completed.

In addition to the included tool(s), assembly requires a Phillips screwdriver , an adjustable wrench , and pliers .


Use the drawings below to identify the small parts used in assembly. The number in parentheses below each drawing is the key number of the part, from the PART LIST near the end of this manual. The second number is the quantity needed for assembly. **Note: Some small parts may have been preassembled. If a part is not in the hardware kit, check to see if it has been preassembled.**

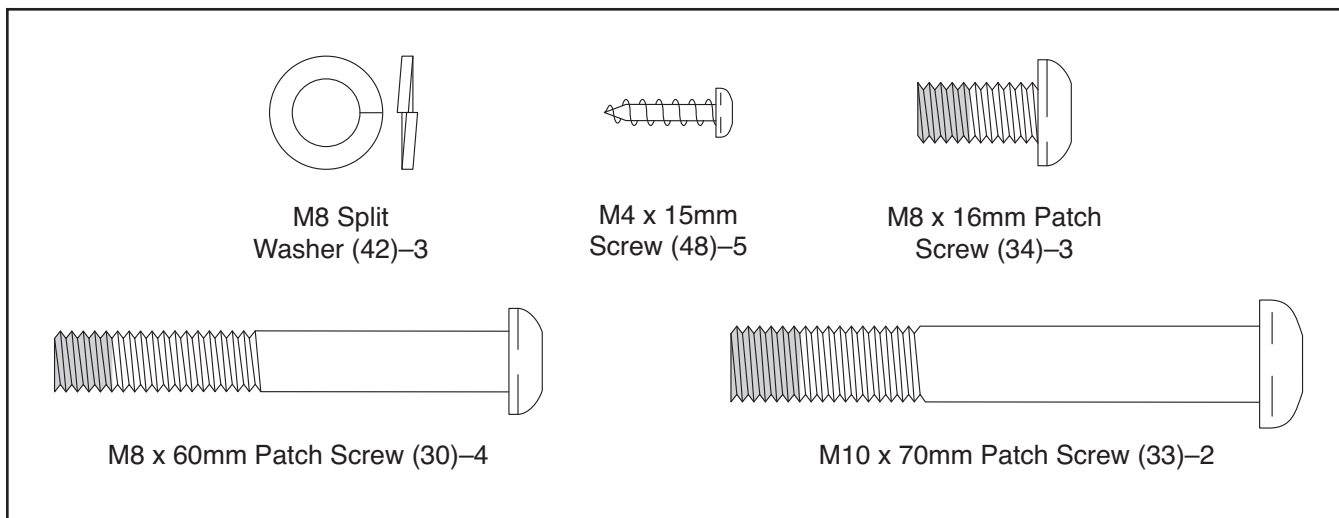

1.


To make assembly easier, read the information on page 5 before you begin.

Insert the Rear Stabilizer (6) into the Frame (1). Attach the Rear Stabilizer with four M8 x 60mm Patch Screws (30).

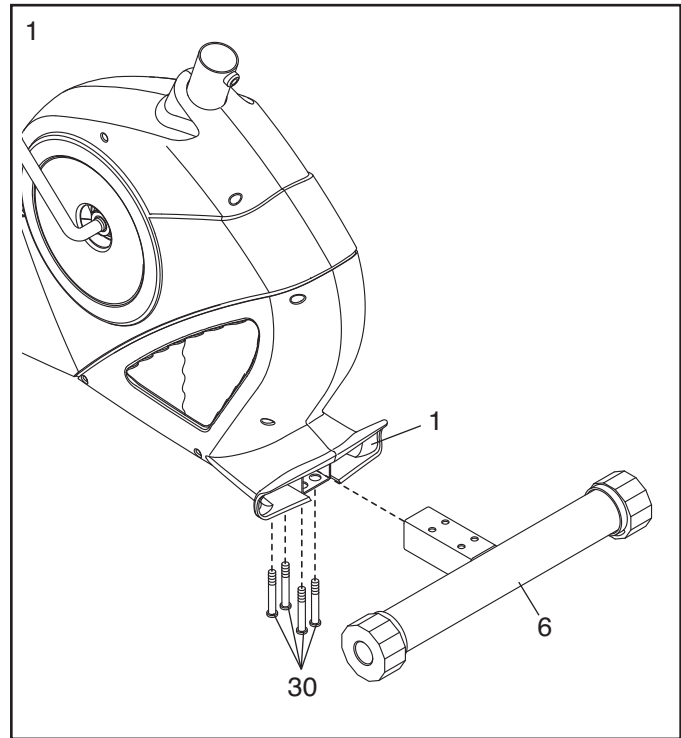

2. Orient the Front Stabilizer (2) so that the large holes face the Frame (1).

Attach the Front Stabilizer (2) to the Frame (1) with two M10 x 70mm Patch Screws (33).

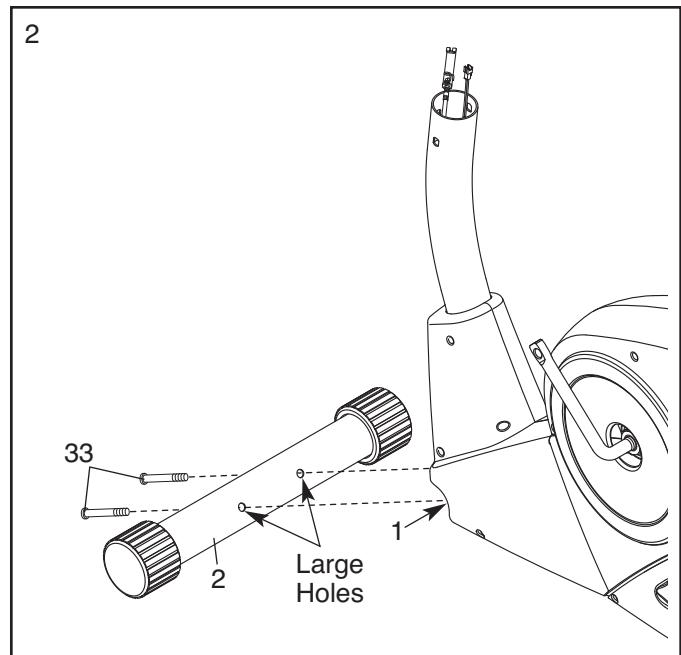


3. While another person holds the Upright (13) near the Frame (1), connect the Extension Wire (23) to the Wire Harness (60). Next, connect the Resistance Cable (19) to the Lower Cable (29) in the following way:

- **See drawing A.** Pull upward on the metal bracket on the Lower Cable (29), and insert the tip of the Resistance Cable (19) into the wire clip inside the metal bracket as shown.
- **See drawing B.** Firmly pull the Resistance Cable (19) upward and slide it into the top of the metal bracket as shown.
- **See drawing C.** Using pliers, squeeze the prongs on the upper end of the metal bracket together.

Push the Wires (23, 60) and the Cables (19, 29) downward into the Frame (1).

**Tip: Avoid pinching the wires and cables.**


Insert the Upright (13) into the Frame (1). Attach the Upright with three M8 x 16mm Patch Screws (34) and three M8 Split Washers (42).

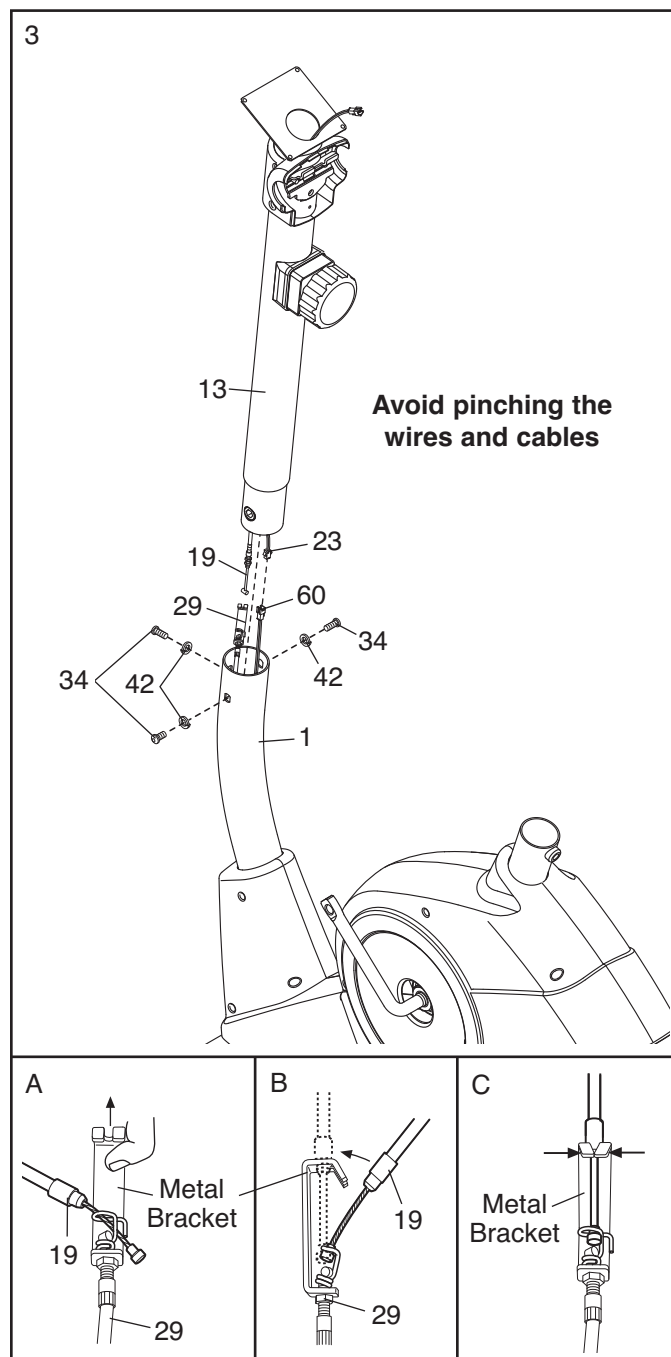


4. Attach the Handlebar (50) to the Upright (13) with the Pivot Clamp (54), the Rear Cover (3), and the Pivot Handle (55).

Note: The Pivot Handle (55) functions like a ratchet. Turn the Pivot Handle clockwise, pull it away from the Upright (13), turn it counterclockwise, push it toward the Upright, and then turn it clockwise again. Repeat this process until the Pivot Handle is tight.

Attach the Rear Cover (3) to the Upright (13) with an M4 x 15mm Screw (48).

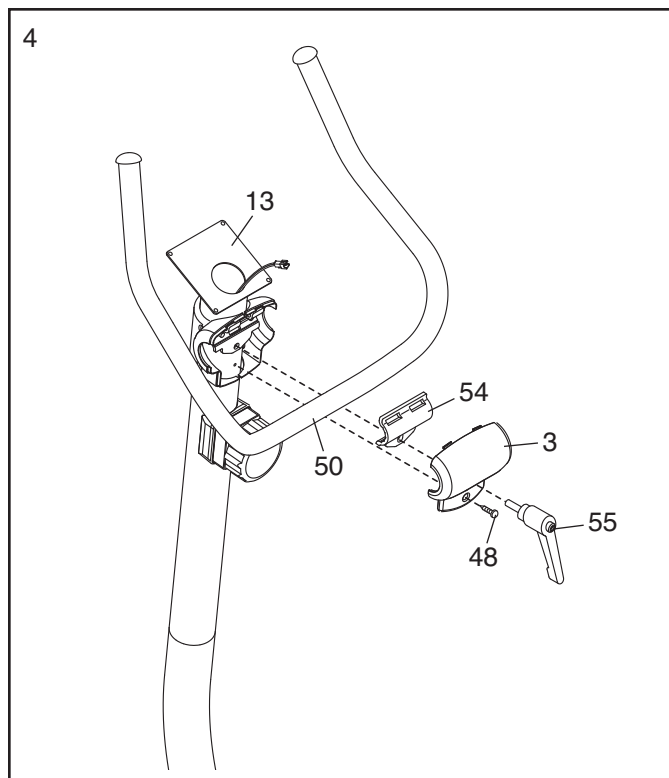

5. The Console (16) requires four AA batteries (not included); alkaline batteries are recommended. **IMPORTANT: If the Console has been exposed to cold temperatures, allow it to warm to room temperature before inserting batteries. Otherwise, you may damage the console displays or other electronic components.** Remove the screw, remove the battery cover, and insert the batteries into the battery compartment. Then, reattach the battery cover. **Make sure to orient the batteries as shown by the diagram inside the battery compartment.**

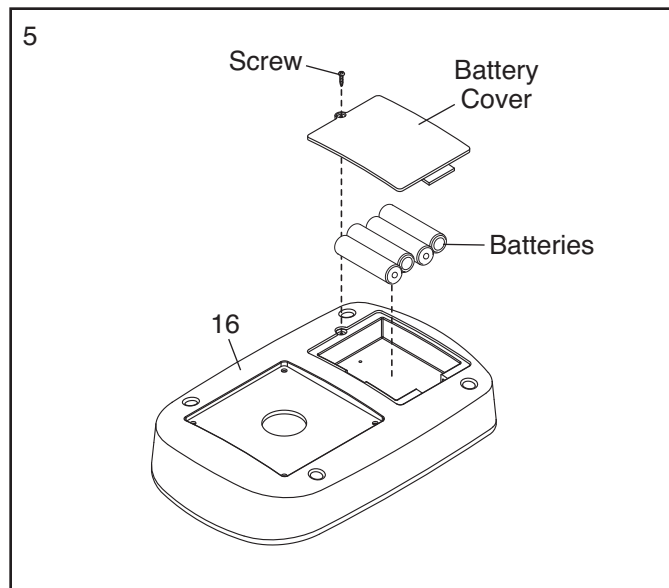




6. While another person holds the Console (16) near the Upright (13), connect the console wire to the Extension Wire (23).

Insert the excess wire downward into the Upright (13).


**Tip: Avoid pinching the wires.** Attach the Console (16) to the Upright (13) with four M4 x 15mm Screws (48).

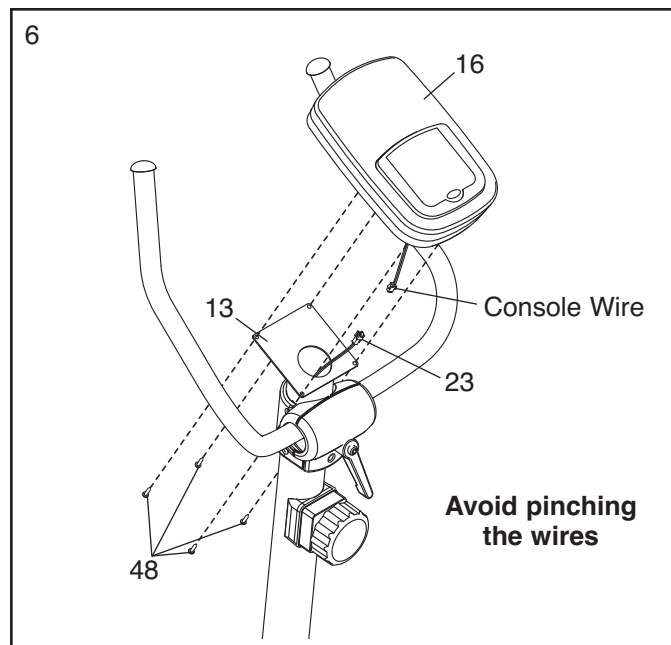

7. Loosen and remove the Seat Knob (56) from the Seat Carriage (58), which is located on the underside of the Seat (12).

**See the inset drawing.** Look underneath the Seat (12) and locate the Seat Carriage (58). Next, locate the Seat Block (57) inside the Seat Carriage.


Set the Seat Carriage (58) in the bracket on the Seat Post (5). Next, insert the Seat Knob (56) upward through the bracket on the Seat Post into the hole in the Seat Block (57). Then, tighten the Seat Knob.

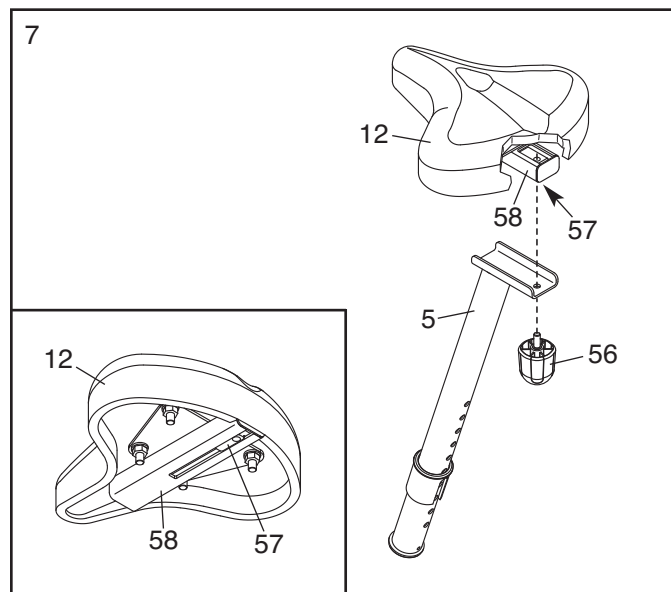

8. Loosen and remove the Seat Post Knob (9) from the Frame (1).

Insert the Seat Post (5) into the Frame (1). Adjust the Seat Post to the desired height and insert the Seat Post Knob (9) through the indicated hole in the Frame into one of the adjustment holes in the Seat Post.

Tighten the Seat Post Knob (9). **Make sure that the Seat Post Knob is firmly engaged in one of the adjustment holes in the Seat Post (5).**

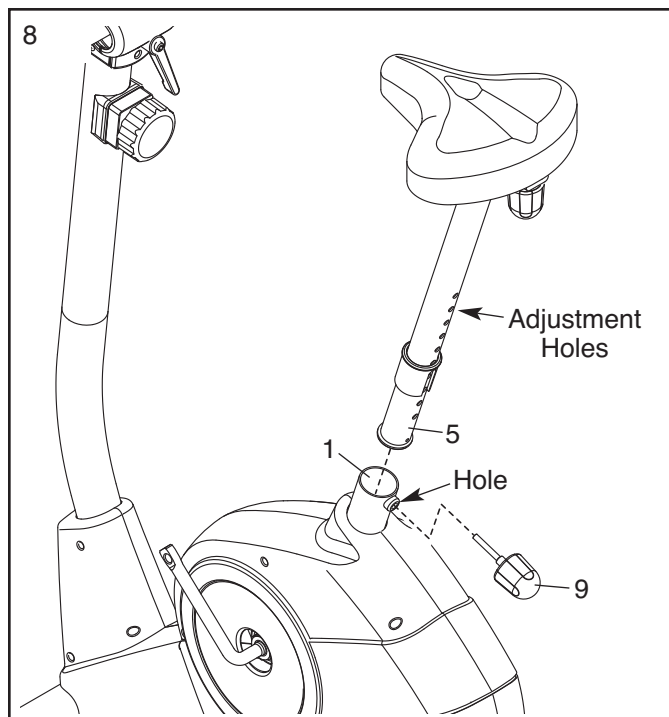


9. Identify the Left Pedal (24), which is marked with an "L."

Using an adjustable wrench, **firmly tighten** the Left Pedal (24) *counterclockwise* into the left arm of the Crank (21).

Tighten the Right Pedal (not shown) *clockwise* into the right arm of the Crank (not shown). **IMPORTANT: Tighten both pedals as firmly as possible. After using the exercise cycle for one week, retighten the pedals. For best performance, keep the pedals tightened.**

Adjust the strap on the Left Pedal (24) to the desired position, and press the end of the strap onto the tab on the side of the Left Pedal.

**Adjust the strap on the Right Pedal (not shown) in the same way.**

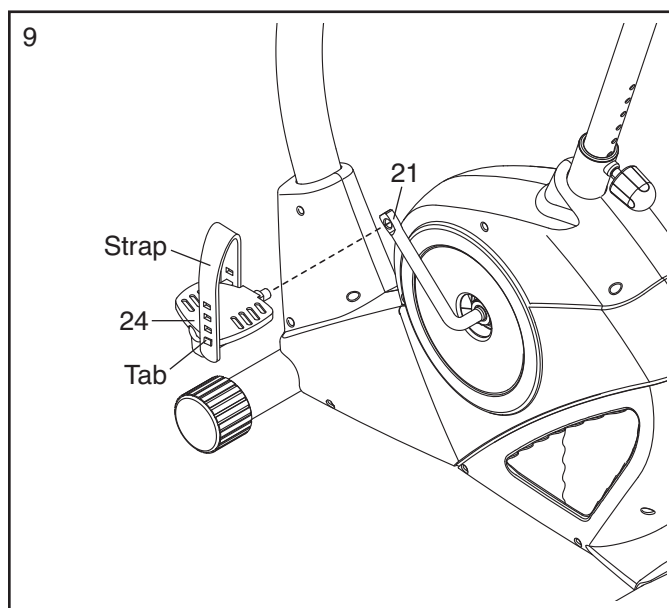


10. **Make sure that all parts are properly tightened before you use the exercise cycle.** Note: After assembly is completed, some extra parts may be left over. Place a mat beneath the exercise cycle to protect the floor.

# HOW TO USE THE EXERCISE CYCLE


## HOW TO ADJUST THE SEAT POST

For effective exercise, the seat should be at the proper height. As you pedal, there should be a slight bend in your knees when the pedals are in the lowest position. To adjust the height of the seat, first loosen and remove the seat post knob. Next, slide the seat post upward or downward and align one of the adjustment holes in the seat post with the indicated hole in the frame. Insert the seat post knob into the frame and the seat post, and then tighten the seat post knob. **Make sure that the seat post knob is inserted through one of the adjustment holes in the seat post.**

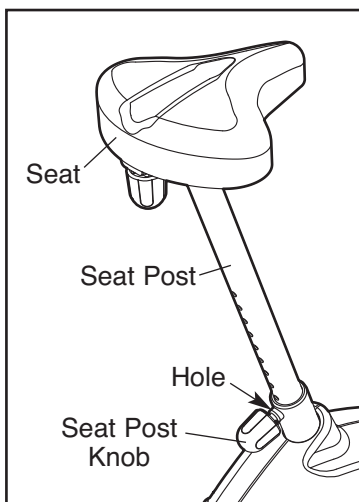


## HOW TO ADJUST THE SEAT

To adjust the horizontal position of the seat, loosen the seat knob under the seat, slide the seat forward or backward to the desired position, and then retighten the seat knob.

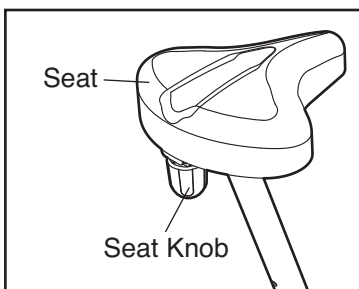


## HOW TO LEVEL THE EXERCISE CYCLE

If the exercise cycle rocks on your floor during use, turn one or both of the leveling caps until the rocking motion is eliminated.

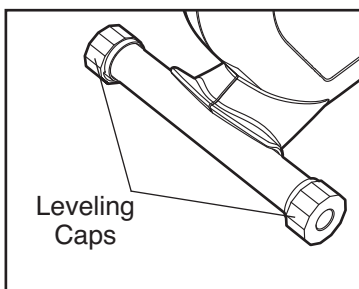


## HOW TO ADJUST THE PEDALING RESISTANCE


To increase the resistance of the pedals, turn the resistance knob clockwise; to decrease the resistance, turn the knob counterclockwise. **IMPORTANT: Stop turning the knob when turning becomes difficult, or damage may result.**

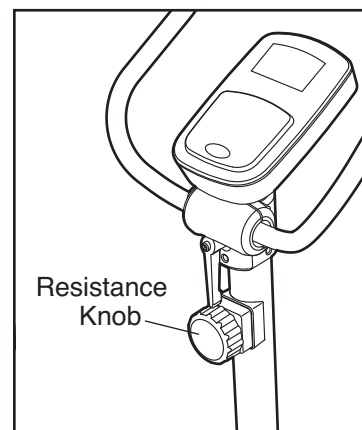

## HOW TO ADJUST THE ANGLE OF THE HANDLEBAR

To adjust the angle of the handlebar, loosen the pivot handle, rotate the handlebar to the desired angle, and then retighten the pivot handle. Note: The pivot handle functions like a ratchet. Turn the pivot handle clockwise, pull it away from the upright, turn it counterclockwise, push it toward the upright, and then turn it clockwise again. Repeat this process until the pivot handle is tight.

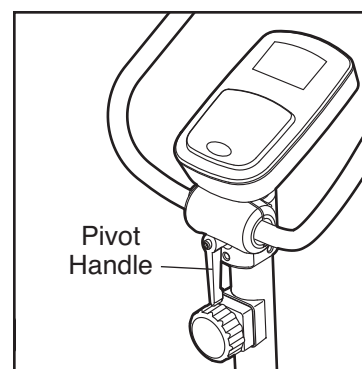

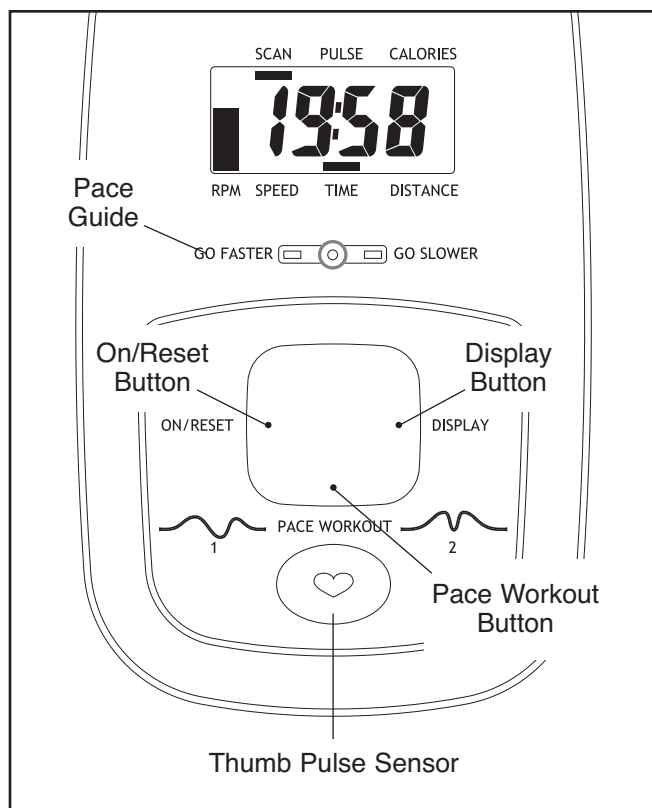

## FEATURES OF THE CONSOLE

The console offers a selection of features designed to make your workouts more effective. As you pedal, the console will provide continuous exercise feedback. You can even measure your heart rate using the built-in thumb pulse sensor.

The console also offers two pace workouts that prompt you to vary your pedaling pace while guiding you through an effective workout.

**To use the manual mode**, see the instructions at the right. **To use a pace workout**, see page 14.

Before using the console, make sure that batteries are installed (see assembly step 5 on page 8). If there is a sheet of clear plastic on the display, remove the plastic.


## HOW TO USE THE MANUAL MODE

### 1. Turn on the console.

To turn on the console, press the On/Reset button or begin pedaling. The entire display and the pace guide will light for a moment; the console will then be ready for use.

### 2. Select the manual mode.

When you turn on the console, the manual mode will be selected. If you have selected a pace workout, reselect the manual mode by pressing the Pace Workout button repeatedly until zeros appear in the display.

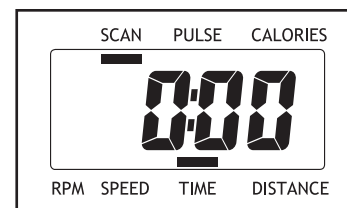

### 3. Follow your progress with the display.

The display can show the following workout information:

**RPM**—The RPM meter on the left side of the display indicates your approximate pedaling pace (revolutions per minute).

**Speed**—This mode shows your pedaling speed, in miles per hour (mph) or kilometers per hour (km/h).

**Time**—This mode shows the elapsed time. Note: When a pace workout is selected, the display shows the time remaining in the workout instead of the elapsed time.


**Distance**—This mode shows the distance you have pedaled, in miles or kilometers.

**Calories**—This mode shows the approximate number of calories you have burned.


**Pulse**—This mode shows your heart rate when you use the thumb pulse sensor.

**Scan**—This mode shows the speed, time, distance, calories, and pulse modes, for a few seconds each, in a repeating cycle. Note: The pulse mode will appear only when you are using the pulse sensor.


When you turn on the console, the scan mode will be selected automatically. One indicator will appear below the word Scan to show that the scan mode is selected, and a second indicator will show which information is currently displayed. Note: If you have selected a different mode, press the Display button repeatedly to reselect the Scan mode.

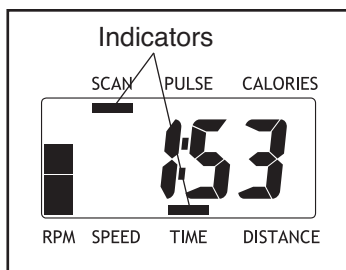

To select the speed, time, distance, or calories mode for continuous display, press the Display button repeatedly. The indicators will show which mode is selected. Make sure there is not an indicator below the word Scan.

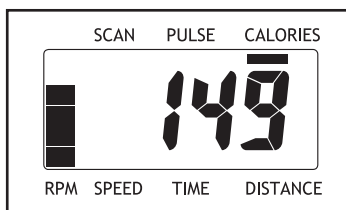

**Note: The console can show speed and distance in either miles or kilometers.** The letters “mph” or “km/h” will appear in the display to show which unit of measurement is selected. To change the unit of measurement, first hold down the On/Reset button for a few seconds. An E (for English) or an M (for metric) will appear in the display. Press the Display button to change the unit of measurement. Note: When the batteries are replaced, it may be necessary to reselect the desired unit of measurement.

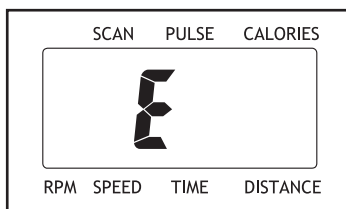


To reset the display, press the On/Reset button.

To pause the console, stop pedaling. If the time is displayed, it will flash. To continue your workout, simply resume pedaling.

#### 4. Measure your heart rate if desired.

To measure your heart rate, **stop pedaling** and place your thumb on the pulse sensor. **Do not press too hard, or the circulation in your thumb will be restricted and your pulse will not be detected.** After a few seconds, the heart-shaped indicator in the display will flash **steadily**, two dashes will appear, and then your heart rate will be shown. Hold your thumb on the pulse sensor for about 15 seconds for the most accurate reading.

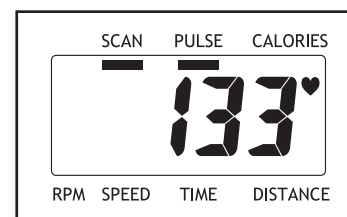

If the displayed heart rate appears to be too high or too low, or if your heart rate is not displayed, lift your thumb off the pulse sensor for a few seconds. Then, place your thumb on the pulse sensor as described above.

Make sure you are applying the proper amount of pressure to the pulse sensor. Try the pulse sensor several times until you become familiar with it. Remember to stand still while measuring your heart rate.

#### 5. When you are finished exercising, the console will turn off automatically.

If the pedals do not move for a few seconds, the console will pause. If the pedals do not move for a few minutes, the console will turn off and the display will be reset.


## HOW TO USE A PACE WORKOUT

### 1. Turn on the console.

See step 1 on page 12.

### 2. Select a pace workout.


To select a pace workout, press the Pace Workout button repeatedly until P1 or P2 appears in the display. A few seconds after you select a pace workout, the display will show the duration of the workout.

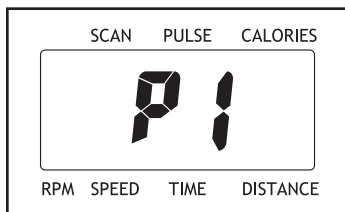

### 3. Begin pedaling to start the workout.

Each pace workout consists of 30 one-minute segments. One target pace is programmed for each segment. Any time the target pace is about to change, the display will flash for a few seconds to alert you.

During the workout, the pace guide will prompt you to keep your pedaling pace near the target

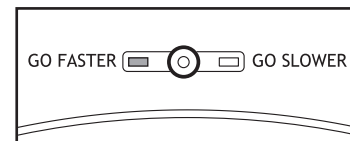

pace setting for the current segment. When the left indicator lights, increase your pace; when the right indicator lights, decrease your pace. When the center indicator lights, maintain your current pace. **IMPORTANT: The pace guide is intended only to provide a goal. Make sure to pedal at a pace that is comfortable for you.**

The display can show the time remaining in the workout. If you stop pedaling for a few seconds, the workout will pause and the time will flash if it is displayed. To restart the workout, simply resume pedaling.

### 4. Follow your progress with the display.

See step 3 on page 12.

### 5. Measure your heart rate if desired.

See step 4 on page 13.

### 6. When you are finished exercising, the console will turn off automatically.

See step 5 on page 13.

## MAINTENANCE AND TROUBLESHOOTING

Inspect and tighten all parts of the exercise cycle regularly. Replace any worn parts immediately.

To clean the exercise cycle, use a damp cloth and a small amount of mild detergent. **IMPORTANT: To avoid damage to the console, keep liquids away from the console and keep the console out of direct sunlight.**


### CONSOLE TROUBLESHOOTING

If the console display becomes dim, the batteries should be replaced; most console problems are the result of low batteries. To replace the batteries, see assembly step 5 on page 8. If the handgrip pulse sensor does not function properly, see step 4 on page 13.

### HOW TO ADJUST THE REED SWITCH

If the console does not display correct feedback, the reed switch should be adjusted. To adjust the reed switch, the left pedal and the left shield must be removed.

Using an adjustable wrench, turn the left pedal clockwise and remove it. Next, remove all of the screws from both shields; **there are two sizes of screws in the shields—note which size of screw you remove from each hole.** Then, carefully remove the left shield.

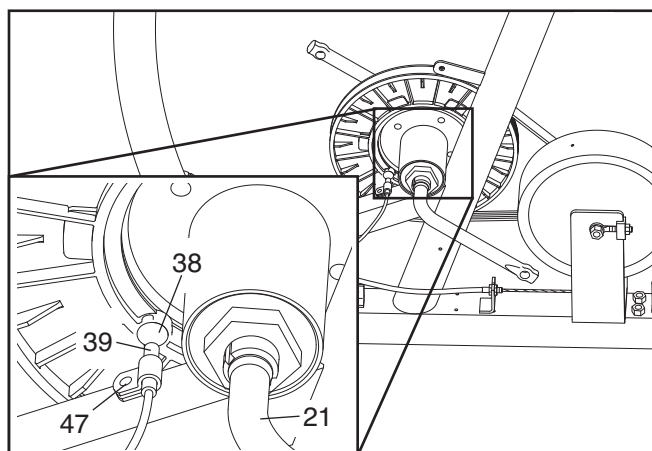

Next, turn the resistance knob to the lowest setting. With the left shield removed, locate the Reed Switch (39). Turn the Crank (21) until a Magnet (38) is aligned with the Reed Switch. Loosen, but do not remove, the M5 x 15mm Screw (47). Slide the Reed Switch slightly closer to or away from the Magnet, and then retighten the Screw. Turn the Crank for a moment. Repeat until the console displays correct feedback.


When the Reed Switch is correctly adjusted, reattach the shields and the left pedal.

### HOW TO ADJUST THE DRIVE BELT

If you can feel the pedals slip while you are pedaling, even when the resistance is at the highest level, the drive belt may need to be adjusted. To adjust the drive belt, the pedals and the shields must be removed.

Use an adjustable wrench to remove the pedals. To remove the left pedal, turn the left pedal clockwise; to remove the right pedal, turn the right pedal counter-clockwise.

Next, remove all of the screws from both shields; **there are two sizes of screws in the shields—note which size of screw you remove from each hole.** Then, carefully remove the shields.

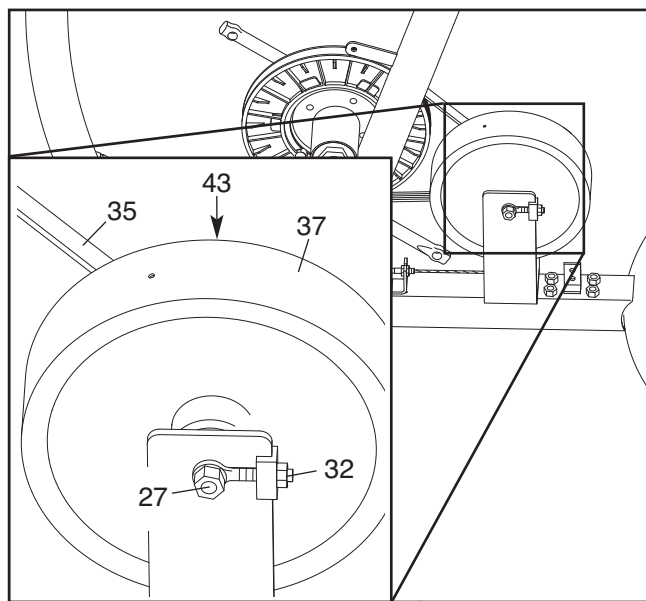

Next, loosen the 3/8" Nut (27) and the Flywheel Nut (43), which are located on each side of the Flywheel (37). Then, tighten the M6 Locknuts (32), one on each side of the Flywheel, until the Drive Belt (35) is properly tightened.

Finally, tighten the 3/8" Nut (27) and the Flywheel Nut (43) and reattach the shields and the pedals.

## EXERCISE GUIDELINES

**⚠️ WARNING:** Before beginning this or any exercise workout, consult your physician. This is especially important for persons over age 35 or persons with pre-existing health problems.

The pulse sensor is not a medical device. Various factors may affect the accuracy of heart rate readings. The pulse sensor is intended only as an exercise aid in determining heart rate trends in general.

These guidelines will help you to plan your exercise workout. For detailed exercise information, obtain a reputable book or consult your physician. Remember, proper nutrition and adequate rest are essential for successful results.

### EXERCISE INTENSITY

Whether your goal is to burn fat or to strengthen your cardiovascular system, exercising at the proper intensity is the key to achieving results. You can use your heart rate as a guide to find the proper intensity level. The chart below shows recommended heart rates for fat burning and aerobic exercise.

165	155	145	140	130	125	115	♥♥
145	138	130	125	118	110	103	♥
125	120	115	110	105	95	90	♥
20	30	40	50	60	70	80	

To find the proper intensity level, find your age at the bottom of the chart (ages are rounded off to the nearest ten years). The three numbers listed above your age define your “training zone.” The lowest number is the heart rate for fat burning, the middle number is the heart rate for maximum fat burning, and the highest number is the heart rate for aerobic exercise.

**Burning Fat**—To burn fat effectively, you must exercise at a low intensity level for a sustained period of time. During the first few minutes of exercise, your body uses *carbohydrate calories* for energy. Only after the first few minutes of exercise does your body begin to use stored *fat calories* for energy. If your goal is to burn fat, adjust the intensity of your exercise until your heart rate is near the lowest number in your training zone. For maximum fat burning, exercise with your heart rate near the middle number in your training zone.

**Aerobic Exercise**—If your goal is to strengthen your cardiovascular system, you must perform aerobic exercise, which is activity that requires large amounts of oxygen for prolonged periods of time. For aerobic exercise, adjust the intensity of your exercise until your heart rate is near the highest number in your training zone.

### WORKOUT GUIDELINES

**Warming Up**—Start with 5 to 10 minutes of stretching and light exercise. A warm-up increases your body temperature, heart rate, and circulation in preparation for exercise.

**Training Zone Exercise**—Exercise for 20 to 30 minutes with your heart rate in your training zone. (During the first few weeks of your exercise workout, do not keep your heart rate in your training zone for longer than 20 minutes.) Breathe regularly and deeply as you exercise—never hold your breath.

**Cooling Down**—Finish with 5 to 10 minutes of stretching. Stretching increases the flexibility of your muscles and helps to prevent post-exercise problems.

### EXERCISE FREQUENCY

To maintain or improve your condition, complete three workouts each week, with at least one day of rest between workouts. After a few months of regular exercise, you may complete up to five workouts each week, if desired. Remember, the key to success is to make exercise a regular and enjoyable part of your everyday life.



## SUGGESTED STRETCHES

The correct form for several basic stretches is shown at the right. Move slowly as you stretch—never bounce.

### 1. Toe Touch Stretch

Stand with your knees bent slightly and slowly bend forward from your hips. Allow your back and shoulders to relax as you reach down toward your toes as far as possible. Hold for 15 counts, then relax. Repeat 3 times. Stretches: Hamstrings, backs of knees, and back.

### 2. Hamstring Stretch

Sit with one leg extended. Bring the sole of the opposite foot toward you and rest it against the inner thigh of your extended leg. Reach toward your toes as far as possible. Hold for 15 counts, then relax. Repeat 3 times for each leg. Stretches: Hamstrings, lower back, and groin.

### 3. Calf/Achilles Stretch


With one leg in front of the other, reach forward and place your hands against a wall. Keep your back leg straight and your back foot flat on the floor. Bend your front leg, lean forward, and move your hips toward the wall. Hold for 15 counts, then relax. Repeat 3 times for each leg. To cause further stretching of the achilles tendons, bend your back leg as well. Stretches: Calves, achilles tendons, and ankles.

### 4. Quadriceps Stretch

With one hand against a wall for balance, reach back and grasp one foot with your other hand. Bring your heel as close to your buttocks as possible. Hold for 15 counts, then relax. Repeat 3 times for each leg. Stretches: Quadriceps and hip muscles.

### 5. Inner Thigh Stretch

Sit with the soles of your feet together and your knees outward. Pull your feet toward your groin as far as possible. Hold for 15 counts, then relax. Repeat 3 times. Stretches: Quadriceps and hip muscles.

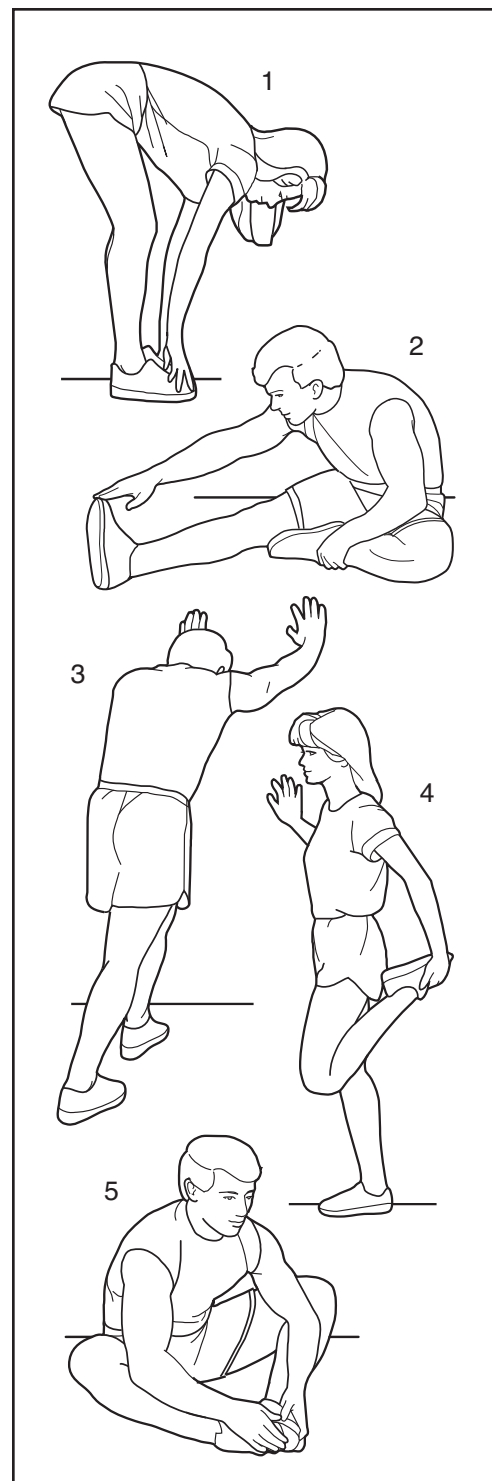

**PART LIST—Model No. WLEX91208.0**


R1108A

Key No.	Qty.	Description	Key No.	Qty.	Description
1	1	Frame	32	2	M6 Locknut
2	1	Front Stabilizer	33	2	M10 x 70mm Patch Screw
3	1	Rear Cover	34	3	M8 x 16mm Patch Screw
4	2	Front Stabilizer Cap	35	1	Drive Belt
5	1	Seat Post	36	1	Crank Bearing Set
6	1	Rear Stabilizer	37	1	Flywheel
7	2	Handlebar Cap	38	2	Magnet
8	2	Leveling Cap	39	1	Reed Switch/Wire
9	1	Seat Post Knob	40	1	M8 x 20mm Bolt
10	4	M8 Locknut	41	7	M4 x 25mm Screw
11	1	Idler	42	7	M8 Split Washer
12	1	Seat	43	3	Flywheel Nut
13	1	Upright	44	1	M5 x 55mm Button Screw
14	1	Left Front Cover	45	1	M8 Washer
15	1	Right Front Cover	46	8	M4 x 15mm Button Screw
16	1	Console	47	1	M5 x 15mm Screw
17	1	Left Shield	48	9	M4 x 15mm Screw
18	1	Right Shield	49	1	M8 Locknut
19	1	Resistance Control/Cable	50	1	Handlebar
20	1	Seat Post Bushing	51	2	Seat Carriage Cap
21	1	Crank/Pulley	52	1	Frame Bushing
22	1	Reed Switch Clamp	53	2	Handlebar Foam
23	1	Extension Wire	54	1	Pivot Clamp
24	1	Left Pedal/Strap	55	1	Pivot Handle
25	1	Spring	56	1	Seat Knob
26	1	Right Pedal/Strap	57	1	Seat Block
27	1	3/8" Nut	58	1	Seat Carriage
28	2	U-bracket	59	1	M4 x 5mm Screw
29	1	Lower Cable	60	1	Wire Harness
30	4	M8 x 60mm Patch Screw	*	—	User's Manual
31	2	Eyebolt	*	—	Assembly Tool

Note: Specifications are subject to change without notice. See the back cover of this manual for information about ordering replacement parts. \*These parts are not illustrated.

# EXPLODED DRAWING—Model No. WLEX91208.0

R1108A

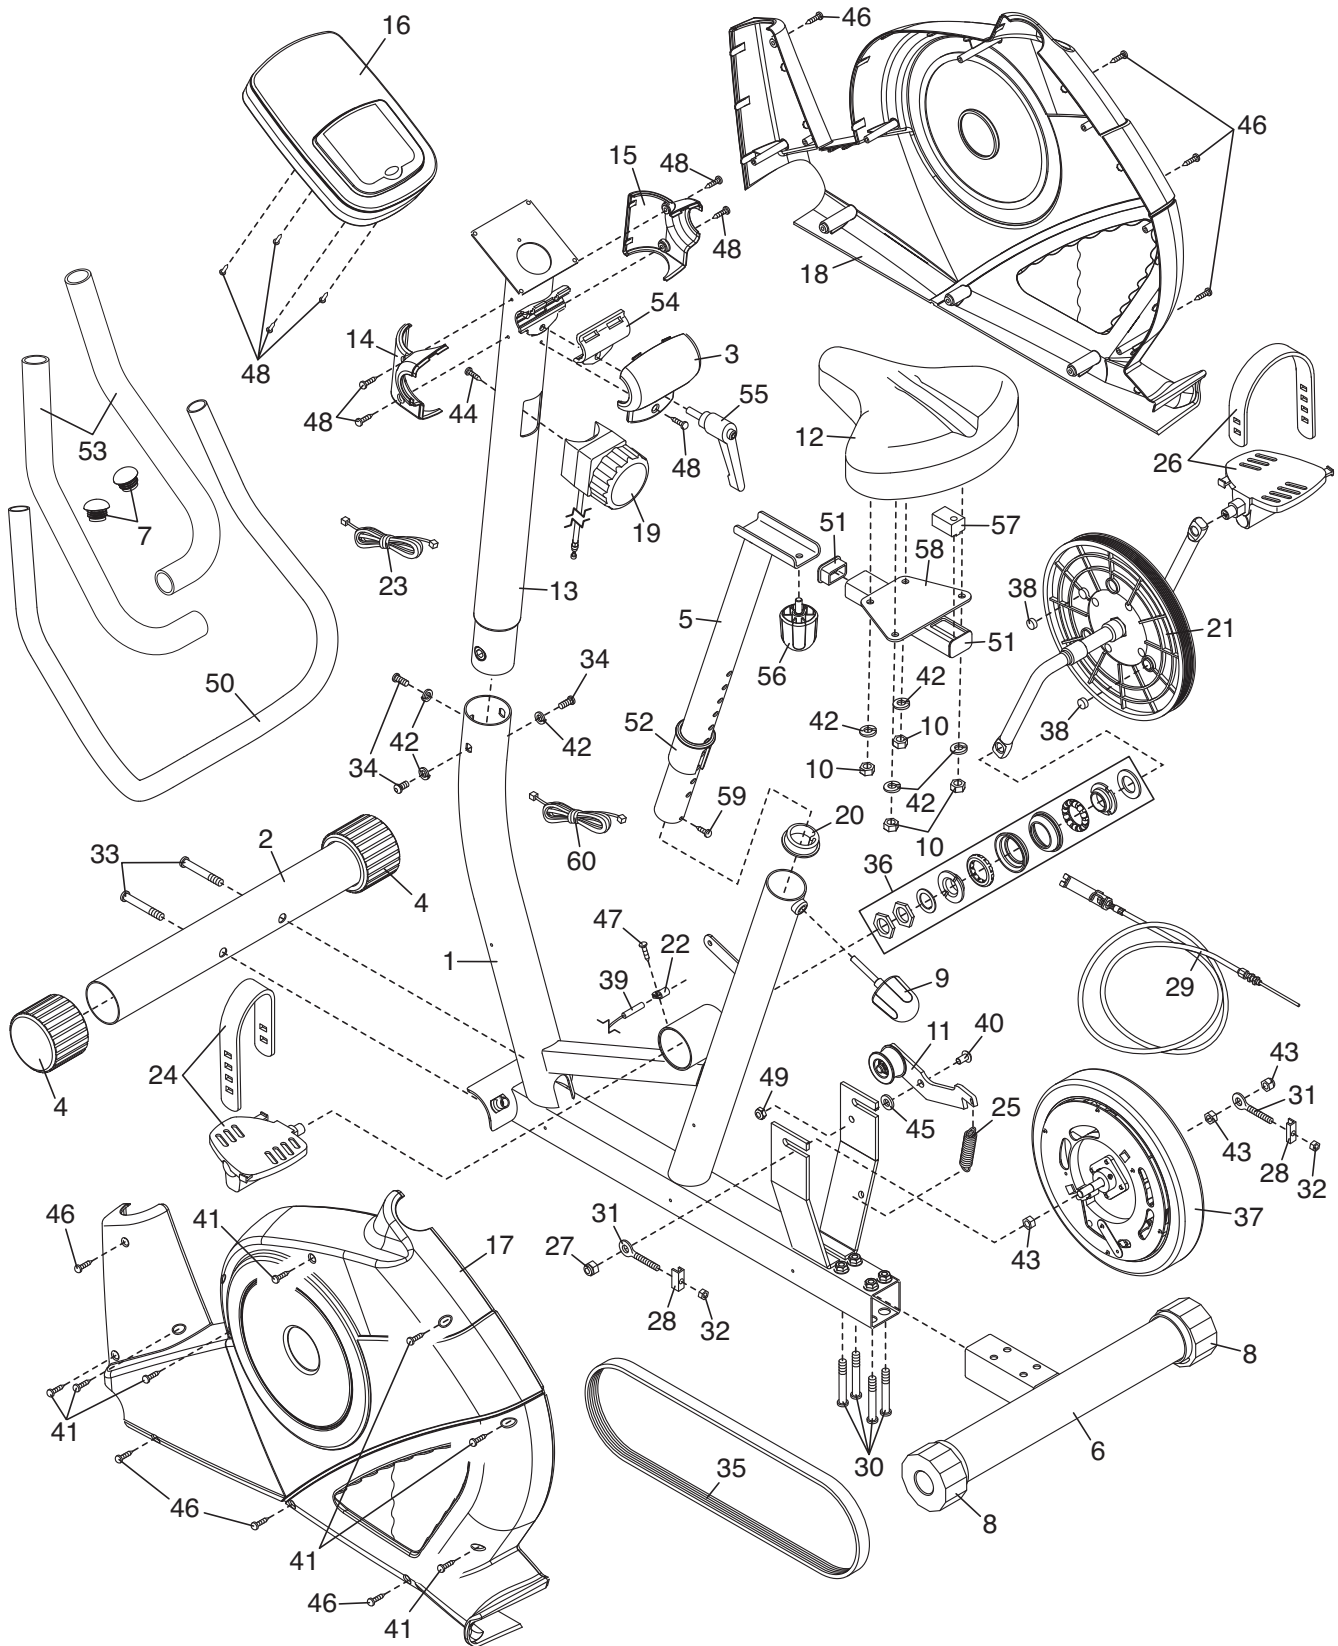

## ORDERING REPLACEMENT PARTS

To order replacement parts, please see the front cover of this manual. To help us assist you, be prepared to provide the following information when contacting us:

- the model number and serial number of the product (see the front cover of this manual)
- the name of the product (see the front cover of this manual)
- the key number and description of the replacement part(s) (see the PART LIST and the EXPLODED DRAWING near the end of this manual)

### LIMITED WARRANTY

ICON Health & Fitness, Inc. (ICON) warrants this product to be free from defects in workmanship and material, under normal use and service conditions. Parts and labor are warranted for ninety (90) days from the date of purchase.

This warranty extends only to the original purchaser. ICON's obligation under this warranty is limited to repairing or replacing, at ICON's option, the product through one of its authorized service centers. All repairs for which warranty claims are made must be preauthorized by ICON. If the product is shipped to a service center, freight charges to and from the service center will be the customer's responsibility. For replacement parts shipped while the product is under warranty, the customer will be responsible for a minimal handling charge. For in-home service, the customer will be responsible for a minimal trip charge. This warranty does not extend to any damage to a product caused by or attributable to freight damage, abuse, misuse, improper or abnormal usage, or repairs not provided by an ICON authorized service center; products used for commercial or rental purposes; or products used as store display models. No other warranty beyond that specifically set forth above is authorized by ICON.

ICON is not responsible or liable for indirect, special, or consequential damages arising out of or in connection with the use or performance of the product; damages with respect to any economic loss, loss of property, loss of revenues or profits, loss of enjoyment or use, or costs of removal or installation; or other consequential damages of whatsoever nature. Some states do not allow the exclusion or limitation of incidental or consequential damages. Accordingly, the above limitation may not apply to you.

The warranty extended hereunder is in lieu of any and all other warranties, and any implied warranties of merchantability or fitness for a particular purpose are limited in their scope and duration to the terms set forth herein. Some states do not allow limitations on how long an implied warranty lasts. Accordingly, the above limitation may not apply to you.

This warranty gives you specific legal rights. You may also have other rights that vary from state to state.

**ICON Health & Fitness, Inc., 1500 S. 1000 W., Logan, UT 84321-9813**