

USER MANUAL

sticktriTEC



Read the user manual before turning on the product.

TECshow

A division of

**AMERICAN
PRO**

Int. Corp.

www.american-pro.com

There are many kind of lighting effects for this items, there are 5 working modes:

- Build-in program
- DMX control mode
- Auto running mode
- Slave mode
- Static color mode

Operate with three buttons, there are two kinds of function for the first button: A press the “mode” above 2 seconds, until the LED display show entren next working mode, then it is enter another kind of working mode. This operation can switch into 5 working modes; B press the “mode” button, then enter the son menu of the current working mode.

OPERATION:

1. Built-in program

1.Press the “mode” button above 2 seconds, switch into 5 working modes, until it showes “P.xx” (01~35), it is the manual build-in programs.

Press the “UP” or “down” to choose the build-in programs effects. (P.01~P.35)。

2.Press “mode” botton until it showes “S.xx” (01~99~FL) 。Press “up” or “down” can adjust the build-in programs speed.

3.Press the “mode” botton, show “F.xx” (00~99) 。Press the botton “up” or “down” to adjust the build-in programs strobe speed.

2. Auto running

1.Press the botton “mode” above 2 seconds, switch into 5 working modes, until it showes “AUT”, then it is enter the auto running mode.

2.Press the “mode”, show “S.xx” (01~99~FL) 。Then press the “up” or “down” to adjust the aut running mode speed .

3.Press the “mode”, show “F.xx” (00~99) 。Press “up” or “down” to adjust the auto running strobe speed.

3. DMX control mode

1.Press the “mode” above 2 seconds, switch into 5 working modes, when it showes “xxx” (001~512), it is the DMX control mode. Press the “up” or “down” to set up the addrss of this kind of products .

2.Press the “mode” botton, show “03c”or“07c”or“36c” 。Press the “up” or ”down” to choose the working mode, there are 3 channel, 7channel, 36 channel for your choose.

DMX working mode 1:03c (3CH)

CHANNEL	VALUE	FUNCTION
CH1	0-255	RED
CH2	0-255	GREEN
CH3	0-255	BLUE

CHANNEL	VALUE	FUNCTION
CH1	0-255	RED
CH2	0-255	GREEN
CH3	0-255	BLUE
CH4	0-255	Strobe
CH5	0-255	MASTER DIMMER
CH6	0-255	Speed
CH7	0-6	CH1~ CH3 work
	7-13	PR.01
	14-20	PR.02
	21-27	PR.03
	28-34	PR.04
	35-41	PR.05
	42-48	PR.06
	49-55	PR.07
	56-62	PR.08
	63-69	PR.09
	70-76	PR.10
	77-83	PR.11
	84-90	PR.12
	91-97	PR.13
	98-104	PR.14
	105-111	PR.15
	112-118	PR.16
	119-125	PR.17
	126-132	PR.18
	133-139	PR.19
	140-146	PR.20

CH7	VALUE	FUNCTION
	147-153	PR.21
	154-160	PR.22
	161-167	PR.23
	168-174	PR.24
	175-181	PR.25
	182-188	PR.26
	189-195	PR.27
	196-202	PR.28
	203-209	PR.29
	210-216	PR.30
	217-223	PR.31
	224-230	PR.32
	231-237	PR.33
	238-244	PR.34
	245-255	PR.35

When it is CH7 0-6, CH1,CH2,CH3 are working.

DMX working mode 3:36c (36CH)

CHANNEL	VALUE	FUNCTION	SECTION
CH1	0-255	RED	1
CH2	0-255	GREEN	
CH3	0-255	BLUE	
CH4	0-255	RED	2
CH5	0-255	GREEN	
CH6	0-255	BLUE	
CH7	0-255	RED	3
CH8	0-255	GREEN	
CH9	0-255	BLUE	

CHANNEL	VALUE	FUNCTION	SECTION
CH10	0-255	RED	4
CH11	0-255	GREEN	
CH12	0-255	BLUE	
CH13	0-255	RED	5
CH14	0-255	GREEN	
CH15	0-255	BLUE	
CH16	0-255	RED	6
CH17	0-255	GREEN	
CH18	0-255	BLUE	
CH19	0-255	RED	7
CH20	0-255	GREEN	
CH21	0-255	BLUE	
CH22	0-255	RED	8
CH23	0-255	GREEN	
CH24	0-255	BLUE	
CH25	0-255	RED	9
CH26	0-255	GREEN	
CH27	0-255	BLUE	
CH28	0-255	RED	10
CH29	0-255	GREEN	
CH30	0-255	BLUE	
CH31	0-255	RED	11
CH32	0-255	GREEN	
CH33	0-255	BLUE	
CH34	0-255	RED	12
CH35	0-255	GREEN	
CH36	0-255	BLUE	

4. Slave mode

Press the “mode” above 2 seconds, switch into 5 working modes, when it shows “SLA”, it is the slave mode.

The master fixture and the slave fixtures are with the same synchronization-change when the master fixture is on the situation of built-in program, auto running or static color mode.

5. Static color mode

1.Press the “mode” above 2 seconds, switch into 5 working modes, when it shows “COL”, it is the static color mode.

2.Press the “mode” button, when it shows “1.-r” or “2.rg” or “3.-g” or “4.gb” or “5.-b” or “6.rb” or “7.FL” or “8.0F”. Press the “up” or “down” to choose the single color.

3.Press the “mode”, show “F.xx” (00~99)。 Press the “up” or “down” to adjust the single color strobe speed.



TRUSTING RESULTS

www.american-pro.com

AMERICAN PRO develops & improves products constantly.
For this reason, the specifications and consigned information in the present
user manual can be modified without notice.

TECshow

A division of

**AMERICAN
PRO**

Int. Corp.

www.american-pro.com