



# **MT Alliance – User Manual**

---

Document No. 75-MTA-1005-R2.5    MTA V4.0

No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Micro Thermo Technologies.

© 1997-2015 by Micro Thermo Technologies.  
All rights reserved worldwide.

Local Phone: (450) 668-3033 | Fax: (450)668-2695  
Toll Free Canada: 1-888-664-1406 | Toll Free USA: 1-888-920-6284  
[www.sporlanonline.com/micro-thermo](http://www.sporlanonline.com/micro-thermo)

## TABLE OF CONTENTS

<b>OVERVIEW .....</b>	<b>3</b>
<b>ACKNOWLEDGING ALARMS .....</b>	<b>7</b>
<b>HOW TO .....</b>	<b>12</b>
NAVIGATE IN THE MAIN WINDOW .....	12
LOG OUT .....	16
LOG IN AS A TEMPORARY USER .....	16
CHANGE SUBSYSTEMS .....	17
CHANGE THE SUBSYSTEM MODE .....	17
DISABLE ALARM MONITORING TEMPORARILY .....	19
DISABLE ALARM MONITORING PERMANENTLY .....	20
CHANGE LIGHTING OR HVAC SCHEDULES .....	21
ADJUST HVAC TEMPERATURE OR HUMIDITY .....	25
OBTAIN ALARM STATISTICS .....	26
SEE ALL ACTIVE ALARMS .....	27
REVIEW ACKNOWLEDGED EVENTS .....	27
ADJUST THE SOUND LEVEL .....	28
TURN OFF THE SOUND ON THE PC .....	28
DELETE A USER .....	33
FIND THE ALARM SETTINGS OF A SENSOR .....	37
FIND A COMPONENT BY NAME .....	41
CHANGE YOUR SITE INFORMATION .....	42
CHANGE ALARM COMPANY INFO .....	43
CHANGE REFRIGERATION COMPANY INFO .....	44
PREVIEW REPORTS .....	45
PRINT DAILY GRAPHS AUTOMATICALLY .....	46
GET IN TOUCH WITH SUBCONTRACTORS .....	48
CHAT WITH A REMOTE TECHNICIAN .....	49
SELECT A PREFERRED PRINTER .....	51
EXPORT DATA INTO EXCEL .....	52
MAKE A BACKUP .....	56
USE ADD-ONS .....	57
EXIT THE MT ALLIANCE .....	58
<b>ALARM CONCEPTS .....</b>	<b>60</b>
<b>TIPS FOR KEYBOARD USERS .....</b>	<b>63</b>
<b>GLOSSARY .....</b>	<b>64</b>

## **Overview**




# Overview

*Think of the MT Alliance as your assistant. It provides you with up-to-date, complete and relevant information. It notifies you whenever a problem arises.*

The MT Alliance Information and Control System is a software platform that interacts with distributed intelligent electronic modules (called nodes). The nodes provide full monitoring and control of your refrigeration, HVAC, lighting and energy subsystems. They control your refrigeration racks and continuously monitor the food cases to prevent product loss 24 hours a day. You will be warned when perishable food products are in danger and that action must be taken before loss occurs. They also control all HVAC equipment such as rooftop units, air handler units, zone controllers, etc. You can adjust room temperature and humidity setpoints. You can adjust lighting schedules or manually set lights on or off. You can get a detailed profile of electrical power consumption.

**MT Alliance is the state-of-the-art in monitoring technology** for refrigerated cases. Each case can be installed with one or more temperature sensors. Sensors measure the discharge air temperature, the actual product temperature, or a simulated product temperature. Each monitored point is assigned a low limit, a high limit, an alarm delay, etc. MT Alliance is a tireless assistant with a phenomenal memory: years worth of logged data, up to one-minute intervals, may be retrieved instantly for each point. It also supports dual temperature cases. Toggling the switch on your dual temperature case does not create false alarms. MT Alliance can also send complete alarm information to your alphanumeric pager.

**MT Alliance is user-friendly** because it displays your site graphically. Red buttons located directly on the floor plan indicate the location of active alarms. By simply pointing and clicking, you get detailed information about each sensed point. It is easy to review alarm limits, to browse the graphical log of measured values, to determine when alarms occurred and who acknowledged them. A new employee can be trained to use the MT Alliance in less than one hour.

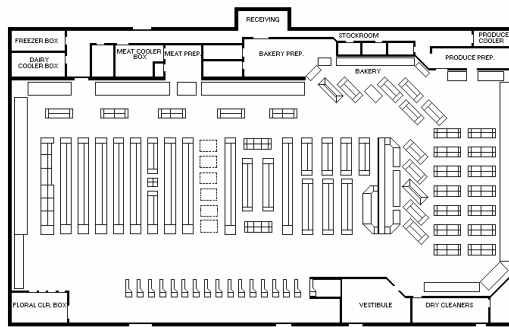

**MT Alliance is safe** because each user has his own specific access permissions. It is possible to give your personnel access to only that portion of the system appropriate to them. Each user must log in with his account. The MT Alliance keeps a complete record of who did what and when.

**MT Alliance is open** because it supports electronic modules from other manufacturers (LonWorks® and MT Alliance Compatible). It is open because it is possible to export monitored points to Microsoft Excel®. It is open because a wide variety of sensors from many manufacturers are supported.

**MT Alliance is forgiving** because it automatically turns monitoring back on if the user forgets to. It also automatically logs the user out if he or she fails to do so.

**MT Alliance is flexible** because it is possible to communicate with the system from a remote location. With a modem and a phone line, everything a user can see and do at the MT Alliance workstation can be done remotely.

**MT Alliance is a time saving tool** for experienced refrigeration technicians. They can diagnose problems and fine-tune the refrigeration system simply by looking at the graphical temperature log of a given refrigerated case. This means better adjustments of the refrigeration process, greater energy savings and lower maintenance costs for you.

**MT Alliance is robust** because the intelligence is built into distributed electronic modules. Alarms are received even if the personal computer is turned off. Furthermore, the built-in watchdog restarts the system if, for some reason, the PC becomes inoperable.

**MT Alliance grows with your needs.** Whenever additional equipment needs to be monitored and controlled, simply add sensors, sensor nodes, alarm relays and alarm relay node: MT Alliance can handle it.

The MT Alliance Information and Control System consists of several components. The MT Alliance software runs on a Windows-based PC usually located in an office environment.

The network components, on the other hand, have been spread out across your site. They can be above or below refrigerated cases, in the mechanical room, in the electrical room, on the refrigeration racks, inside controlled equipment, on the roof, etc. They are all linked together with a data cable (a twisted pair wire). Some may share a low voltage power cable or be powered independently. Nodes can measure things via sensors connected to them. Nodes can control things via controllers connected to them. Nodes can also measure or control things by talking or listening to other nodes via the data cable.

For example, you can have nodes to do the following tasks:

- 8 inputs alarm sensor node
- 4 outputs alarm relay node
- Real-time clock node
- HVAC scheduler node
- Lighting scheduler node
- Suction pressure controller Node
- Compressor controller Node
- 5 Circuits controller Node
- Condenser controller Node
- HVAC controller Nodes (RTU, AHU, ZCU, etc.)
- Light controller Node
- Case temperature display node
- Rack pressure display node
- Others

## **Acknowledging Alarms**

# Acknowledging Alarms

*This quick tour will walk you through a typical alarm acknowledgment process so that you can get back to your business right away.*

**Can you hear it?** When the MT Alliance audible alarm signal is on, it means that at least one active alarm is present.

If you are currently hearing the alarm signal, the first thing to do is to determine on which Subsystem and View the alarm occurred. This is accomplished almost instantaneously by simply turning your attention to the red portions of the window. Each active alarm is displayed on a red line in the "Recent Events" list.

Subsystem in alarm

Active Alarms

Acknowledged Alarm

View in alarm

Sensor in alarm

Number of Active Alarms

Click here to acknowledge

Priority	Date/Time	Event Source	Event Description	Acknowledged by	At Date/Time	Subsystem
Notice	08/18/2000 10:30:04	System 41-4, Deli	Temperature too high			Refrigeration
Notice	08/18/2000 10:17:39	System 12B, Medium Temp.	Temperature too high			Refrigeration
Notice	08/18/2000 10:15:56	System 16-2, Medium Temp.	Temperature too high	Mark Lane	08/18/2000 10:33:10	Refrigeration

Refrigeration - Overview

Store ~RackA ~RackB ~RackC

Refrigeration Management

Engineering Tracy Adcock (TECH) Fri, August 18, 2000 10:36:11

**Click on a red line in the list** to select an alarm and then click on the Acknowledge button.



**Acknowledge**

**Details**

Event Type	Alarm
Priority	Medium
Date / Time	04/30/2003 12:52:34
Sensor	System 41 - 4, Deli Case
Event Description	Temperature too high
View	Store
Subsystem	Refrigeration
Alarm Relay	ACT 2

**Actions**

- Make sure the fan is blowing
- Make sure products are not blocking the air vents

If you can not solve the problem yourself, please call Western refrigeration at (639) 633-7036

**Print Actions**

☐ Acknowledge ALL Refrigeration sensor alarms ?

☐ Print acknowledgement report

Account Name

Password


**OK**      **Cancel**

**Callout 1 (left):** Check it to acknowledge all alarms for the subsystem.

**Callout 2 (right):** If you are already logged in, simply enter your password and click OK.  
If you are not logged in but want to acknowledge the alarm, enter both your account & password and click 'OK'.

**That's it!** Now it is up to you to take whatever action is necessary to remedy the cause of the alarm. Thanks to the floor plans, you know precisely where to go.

**Alternatively** you can move the mouse over the red squares and click. The floor plan will be zoomed and the red squares become red buttons (see next page). Click on a red button and then click the red Acknowledge button. The above window will come up.

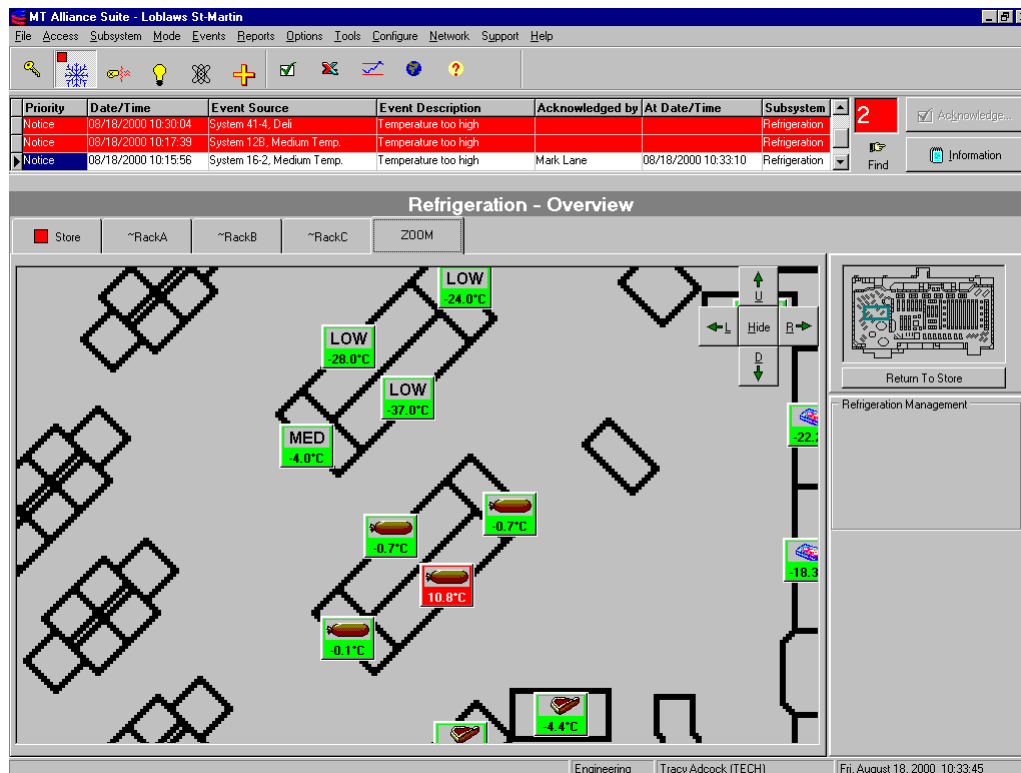

**Refrigerated case alarms:** There are various causes for alarms in refrigerated systems. Here is a brief list to help you in the identification process:

SYMPTOM	POSSIBLE CAUSES	REMEDY
Ice is accumulating around cooling elements in the case.	The defrost system is not working properly. Room humidity is too high.	Contact Refrigeration Company. Attempt to reduce room humidity.
The air flow can't be felt or the fan can't be heard.	Fan is defective. Electrical problem inside case.	Contact Refrigeration Company.
The air is flowing but not sufficiently.	Food products are blocking the air vents. Fan is defective.	Move food products. Contact Refrigeration Company.
The food products are not as cold as they should be.	A door has been left open for too long. Compressors have been stopped for a while (electrical power shortage).	Close door (if not already done) See if you had compressor alarms.

Refer to the 'Alarm Concepts' chapter for more information about refrigeration alarms.

**A GOOD TIP**  
 Want to save money  
 and keep product  
 freshness?

Never exceed the load line of refrigerated cases. Do not obstruct the air discharge vent or the air return vent. Doing this degrades the performance of the case, causes uneven distribution of temperature inside the case and wastes energy.

**Alliance System Problems:** There are a few occasions when the Alliance can malfunction as listed below:

SYMPTOM	POSSIBLE CAUSES	REMEDY
Sensor values are ridiculously too low	Sensor wire cut (opened), or defective. Possibly a defective electronic module or a defective sensor.	Call Technical Support displayed in About Window.
Sensor values are ridiculously too high	Sensor wire short-circuited. Possibly a defective electronic module or a defective sensor.	Call Technical Support displayed in About Window.
Sensors are displayed in black. Malfunction is spoken or Node test failed is displayed in the events list.	Defective electronic module. Problems with network wiring between modules. Network terminator defective.	Call Technical Support displayed in About Window.


## **How To**

# How To

*This section will show you how to perform all your tasks.*

## Navigate in the Main Window


The “Main Window” is displayed below

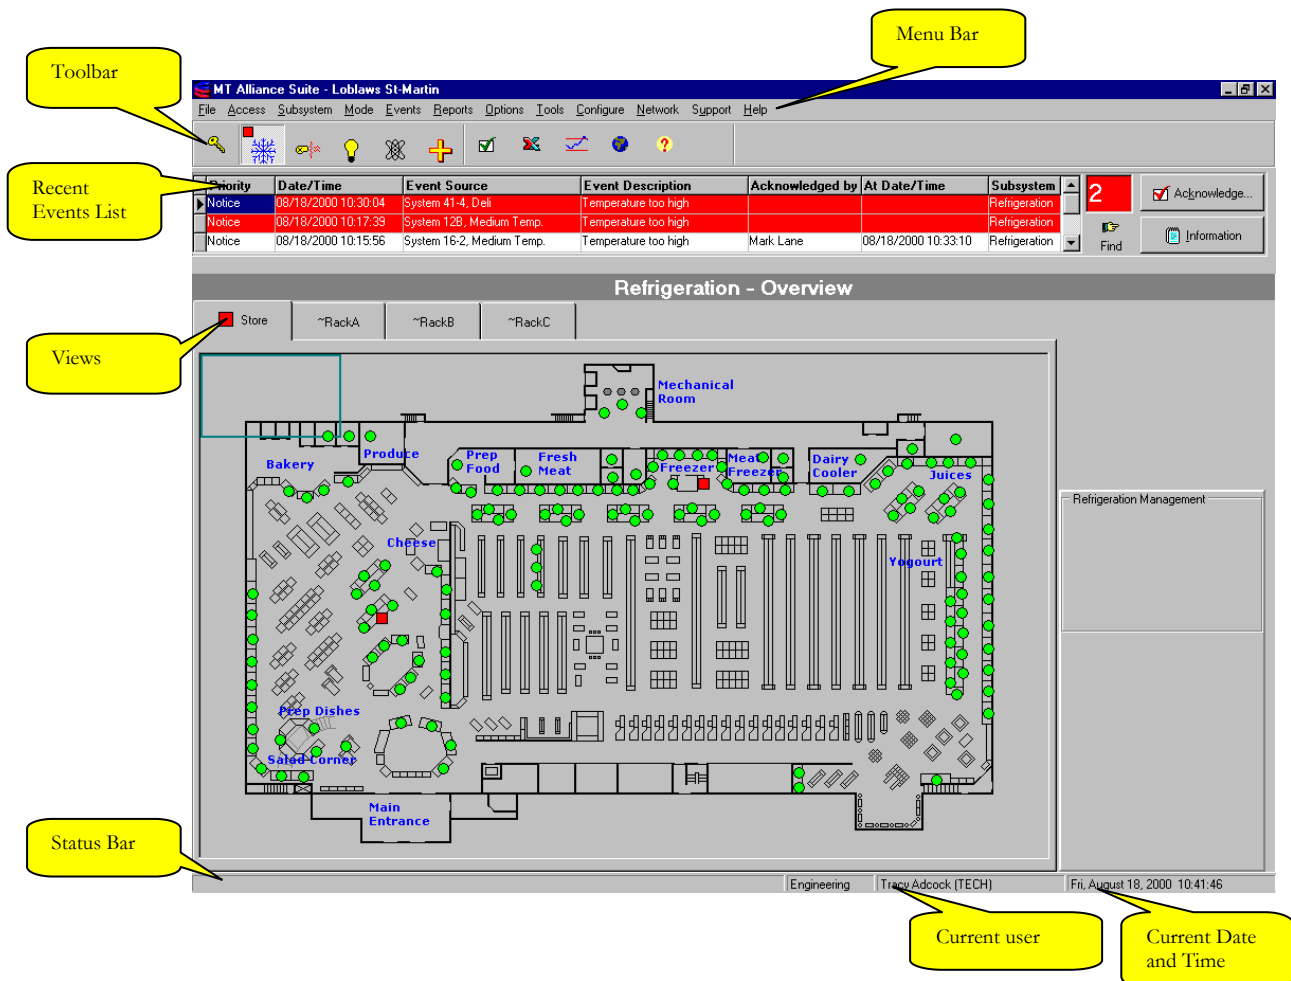

From the “Main Window”, everything is just a few clicks away. The **Menu Bar** contains all functions you can perform. Note that certain functions are allowed only to certain users. Often you will find “grayed” menu items and buttons. You will also find text fields with a gray background and white text. There are basically three reasons why menu items, buttons and fields may be disabled:

- You do not have the permission to access this function.
- This function can only be accessed in “Maintenance Mode” or "Configuration Mode" by a qualified technician
- The context is not right to activate the function (e.g.: the Acknowledge button is disabled when there is no active alarm.)

The **Tool Bar** gives buttons for your most often used menu items. By moving the pointing device over a button, a hint is displayed to remind you what the button means.

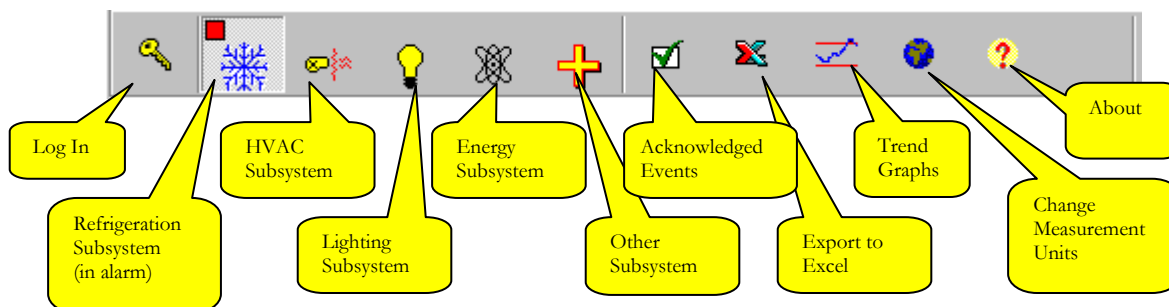

The **Recent Events List** contains active alarms or recent acknowledged alarms. Active alarms are always displayed on a red line. If there are more than three active alarms you may have to scroll through the list to see more. The number of active alarms is displayed to the right of the list. Alarms are always listed with the highest priority and newest event on top.

Priority	Date/Time	Event Source	Event Description	Acknowledged by	At Date/Time	Subsystem		
Notice	08/16/2000 10:59:35	System 59:2, Dairy Product	Temperature too high			Refrigeration	1	<input checked="" type="checkbox"/> Acknowledge...
Notice	08/16/2000 14:22:44	System 41-4, Deli	Temperature too high	Mark Lane	08/16/2000 15:35:04	Refrigeration		<input type="checkbox"/> Find
Notice	08/16/2000 10:59:26	System 21, Frozen Product	Temperature too high	Mark Lane	08/16/2000 13:20:08	Refrigeration		<input type="checkbox"/> Information

If you click on an event line and then click the acknowledge button, you will be able to immediately acknowledge the alarm. If you click on the Information button instead, you will be brought directly to the historical sensor data at precisely the moment of the alarm. If you have acknowledged an alarm a few hours ago, it will still be listed but will no longer be in red. If you click on it and then click and hold the “Find” button, the sensor that generated the alarm will be highlighted momentarily.

The **Store Views** depict graphically what your store looks like. Green circles represent sensors. Simply click on the View name to move from one view to another. If the view displays a rectangle as you move your mouse over it, then the view can be zoomed on. Simply click on a region inside a view for an instant zoom of the area.

Notice how you instantly get access to crucial information such as what is being monitored and what the current sensor values are:

The screenshot displays the 'MT Alliance Suite - Loblaw's St-Martin' software interface. At the top, there is a menu bar (File, Access, Subsystem, Mode, Events, Reports, Options, Tools, Configure, Network, Support, Help) and a toolbar with various icons. Below the menu is a table with the following data:

Priority	Date/Time	Event Source	Event Description	Acknowledged by	At Date/Time	Subsystem
Notice	08/18/2000 10:50:17	System 42.3b, Fresh Meat	Temperature too high			Refrigeration
Notice	08/18/2000 10:30:04	System 41.4, Deli	Temperature too high			Refrigeration
Notice	08/18/2000 10:17:39	System 128, Medium Temp.	Temperature too high	Mark Lane	08/18/2000 10:50:26	Refrigeration

Below the table is the 'Refrigeration - Overview' section. It features a 'Views' button, a 'Store' button, and a 'ZOOM' button. The main area shows a floor plan with several temperature sensors indicated by green and red icons with values: 3.7°C, 4.8°C, 2.8°C, 2.6°C, 3.4°C, 12.9°C, and 4.5°C. A 'Mini Display' callout points to a small inset map on the right. A 'Navigate inside the zoomed view' callout points to a set of arrows (Up, Down, Left, Right) and a 'Hide' button. A 'Return to Store View (zoom out)' callout points to a 'Return To Store' button. The status bar at the bottom shows 'Engineering', 'Tracy Adcock (TECH)', and 'Fri, August 18, 2000 10:50:38'.

Once zoomed, click anywhere on the mini display to the right to instantly move to that region. Or use the arrows that are located inside the zoomed view. To remove the zoom and go back to an entire view, simply click on any view name or on the "Return To" button below the mini display.



The mini display shows you two rectangles. The magenta rectangle indicates where you have zoomed. You can move the green rectangle and click to zoom elsewhere on the same view.

The **Status Bar** contains the name of the “logged in” user and always displays the current date and time.



## Log In



From the main menu, select **Access – Log in...** or click on the “Key” on the toolbar. Enter your account and your password. You can optionally specify how long before the Alliance logs you out. By default, Alliance will log you out after 15 minutes.

The image shows a dialog box titled "MT Alliance Log In". Inside the dialog, there is a label "Enter your account and password". Below this label are two text input fields: "Account" and "Password". Below the "Password" field is a "Valid for" section with two spinners. The first spinner is set to "0" and is followed by the text "Hour(s)". The second spinner is set to "15" and is followed by the text "Minute(s)". At the bottom of the dialog is a button with a green checkmark icon and the text "OK".

Your password may consist of any characters except \$. The password is not case sensitive (a = A). If you have forgotten your account or password, contact your immediate superior. If you are a supervisor, manager or owner and have forgotten your account or password, contact technical support as described in the About Window (**Help – About**).

## Log Out



Click on the “Key” on the toolbar. Don’t do anything more, just leave the “**Log In**” window there

## Log In As a Temporary user




The first time you are login in the system you need a temporary account name and password to go in the system and create your MT Alliance user. There is a temporary user account available for this. The account “temp”, password “temp” let you get in the system to create your new account. This temporary account will be automatically disable 60 days after the installation of MT Alliance.

## Change Subsystems

In order to reduce the amount of information presented to you, only one subsystem is active at a time. The currently active subsystem and its mode of operation is displayed on a gray line just below the "Recent Events List" and above the Views.

Let's say your current subsystem is "Refrigeration" and you want to see "HVAC", you can:

1. Click on the HVAC button in the toolbar or ...
2. Go to the main menu and select **Subsystem – HVAC**

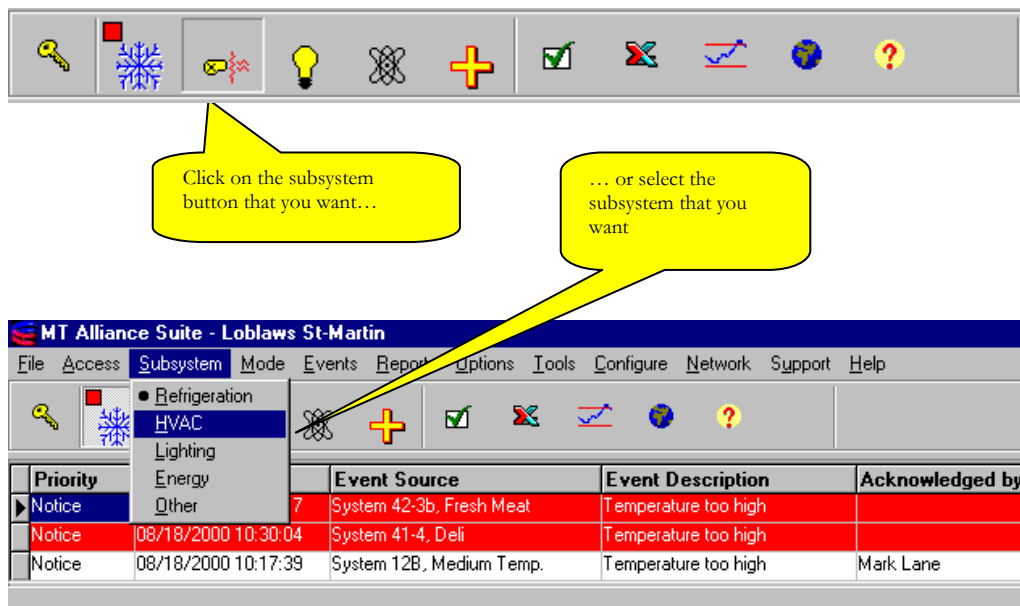

## Change the Subsystem Mode


Subsystem Modes control the actions that a user can take while in a given subsystem. The modes are:

- Overview
- Maintenance
- Configuration

When you change the mode of operation, you are doing it for the currently active subsystem. Each subsystem remembers its mode of operation. You can be in "Refrigeration - Overview". Changing the subsystem to HVAC may bring you to "HVAC - Maintenance".

To change the subsystem mode, use the "Mode" menu item. If you do not see the "Mode" menu item, it is because you do not have the permission to change the mode. If "Maintenance" or "Configuration" are grayed out, you do not have permissions to use these modes.

Note that every time you log in, all subsystem modes are maintained to the last user setting if you have the proper permissions. Otherwise, the mode rolls back to your highest mode permissions.

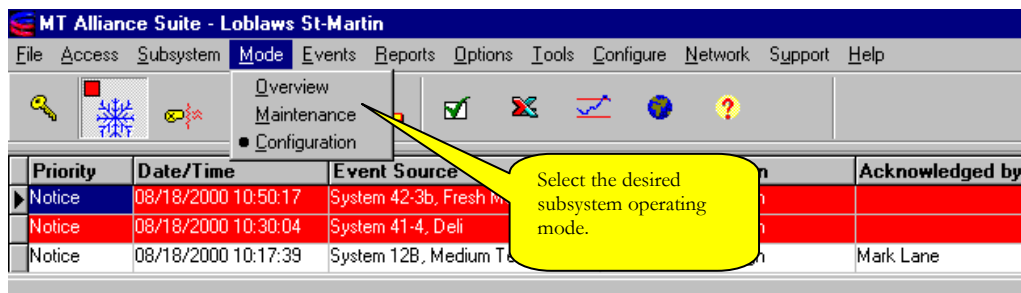

## Disable Alarm Monitoring Temporarily

If you are performing maintenance on a refrigerated case for example, you may not want to have an alarm recall every hour or so. In these situations, it is best to temporarily disable the alarm monitoring for the sensor. Simply click on the sensor button. In the “Alarm settings” tab, select “Disable Alarm Temporarily”. On the right hand side, select for how long (from 1 minute to 22 days). Optionally enter the reason. Click the OK button and keep your changes. If "Disable Alarm Temporarily" is grayed out, you do not have the permission to do this.

**Sensor Information - System 29**

Details Alarm Settings Hardware Graph & Log ● Status Normal Value 4.1 °C

Alarm Activation: Enabled

Change Alarm Activation:

- ☐ Disable Alarm Permanently
- ☒ Disable Alarm Temporarily
- ☐ Enable Alarm

Change Temporarily Disable Alarm Settings:

For: 0 days 0 hours 0 minutes

Until: 08/18/2000 at 09:17

Reason:

Alarm Set 1

Pick Defined Alarm Settings

Description: Dairy Case

High Limit: 8.0 °C

Optimal Value: 0.0 °C

Low Limit: -5.0 °C

Alarm Set Time: 01 h 30 m

Alarm Recall Time: 01 h 00 m

Alarm Actuator: None

Alarm Priority: Medium

The Sensor button will be displayed in light blue to indicate monitoring has been turned off. The view where the sensor is located will also be shown in light blue. After the time has elapsed, monitoring will be enabled automatically.

To re-enable monitoring before the time has elapsed, simply select “Enable Alarm”.

## Disable Alarm Monitoring Permanently

If you are renovating and physically removing a refrigerated case for example, then you will want to disable the alarm monitoring permanently. A technician can come later and completely delete the sensor or move it elsewhere.

Simply click on the sensor button. In the “Alarm Settings” tab, select “Disable Alarm Permanently”. Click the OK button and keep your changes. The Sensor button is displayed in light blue to indicate monitoring has been turned off.



**Sensor Information - System 29**

Details | **Alarm Settings** | Hardware | Graph & Log

Status: ● Normal Value: 2.7 °C

Alarm Activation: Enabled

Change Alarm Activation

- ☒ Disable Alarm Permanently
- ☐ Disable Alarm Temporarily
- ☐ Enable Alarm

Alarm Set 1

Pick Defined Alarm Settings

Description: Dairy Case

High Limit: 8.0 °C

Optimal Value: 0.0 °C

Low Limit: -5.0 °C

Alarm Set Time: 01 h 30 m

Alarm Recall Time: 01 h 00 m

Alarm Actuator: None


Alarm Priority: Medium

OK Cancel Delete


The view where the sensor is located is also shown with a light blue circle

## Change Lighting or HVAC Schedules


First select the desired subsystem (HVAC or lighting). Click on the "Schedules" button at the right side of the screen.

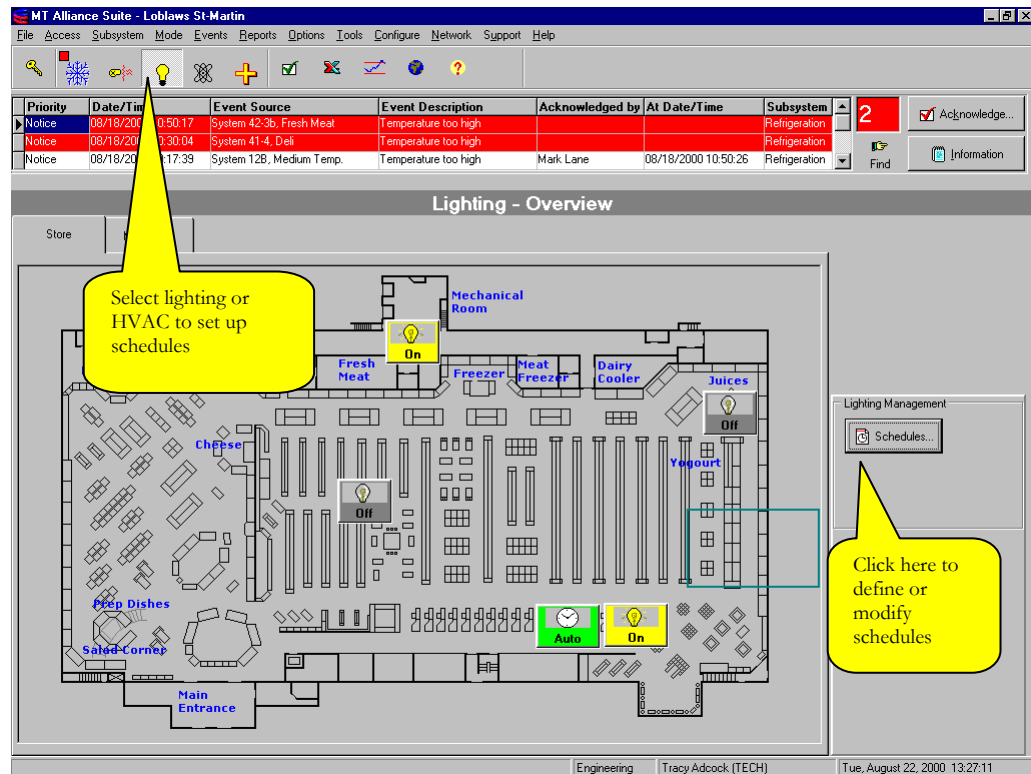

The "Lighting schedules" window shown below appears. Select a schedule from the list and click the "Edit" button:

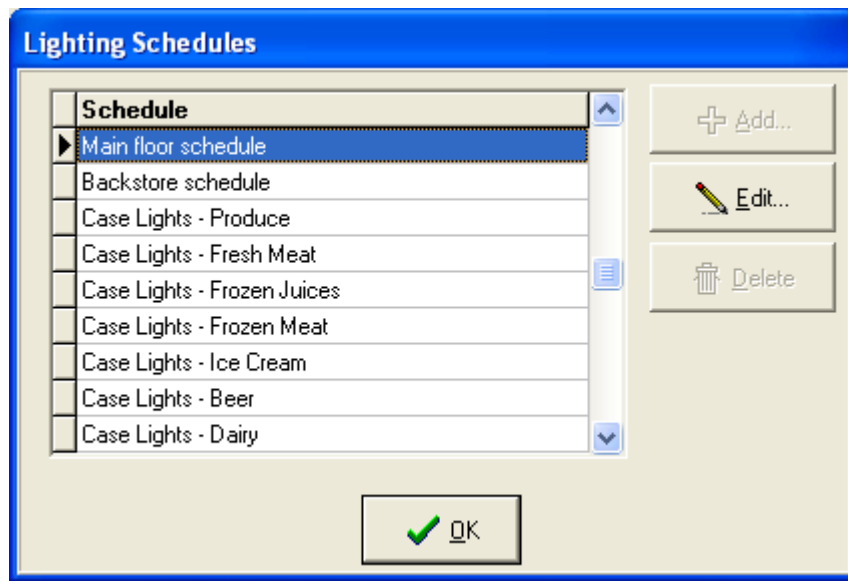

The “Edit Lighting schedule” window appears as follow for a typical week:

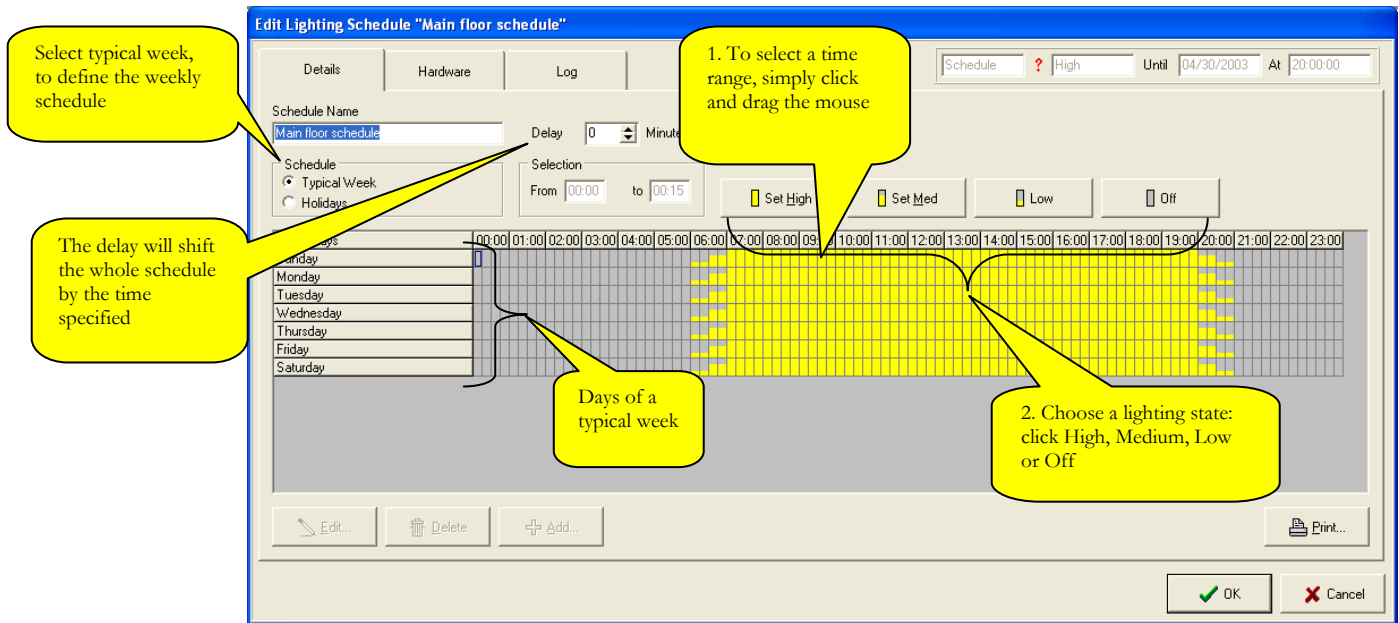

Select a time range by clicking and dragging the mouse. Select "High, Med, Low or Off" for your selection. The result will look like the picture above. If your site is equipped with 2-states lighting (on/off only) then selecting "Medium" or "Low" will be equivalent to "High".

You can also define holidays that will override the typical weekly schedule. Select "Holidays" as shown below:

The screenshot shows the 'Edit Lighting Schedule' window for 'Main floor schedule'. The 'Details' tab is active. The 'Schedule' section has two radio buttons: 'Typical Week' and 'Holidays'. The 'Holidays' radio button is selected. A yellow callout bubble with the text 'Click here' points to this radio button. The 'Selection' section shows a time range from 00:00 to 00:15. The 'Holiday Name' and 'Date' columns are visible in the table below. The 'Add...' button is highlighted.

To be able to add holidays, you must select **maintenance mode** before attempting to modify schedules. There are two types of holiday schedules: those that "repeat every" year and those that are executed "only on" a specific year/month/day. The "only on" holiday schedules can override those that "repeat every" year.

If you want to add a periodic holiday Choose "repeat every" and select a date

The screenshot shows the 'Add New Holiday for Schedule' dialog box. The 'Holiday Name' field contains 'New Year's Day'. The 'Repeat every' radio button is selected, and the 'Only on' field contains '08/22/2000'. The 'OK' button is highlighted.



If you want a holiday schedule to be executed only once, choose “Only on” and select a unique date.

The dialog box titled "Add New Holiday for Schedule 'Main floor schedule'" contains the following fields and controls:

- Holiday Name:** A text box containing "Renovation Day".
- Repeat every:** A radio button, a numeric spinner set to "1", and a dropdown menu set to "January".
- Only on:** A radio button and a date dropdown menu set to "05/24/2001".
- Buttons:** "OK" (with a green checkmark) and "Cancel" (with a red X).

You will then see a new holiday schedule appear. Modify it to suit your needs just as you did for the typical week.

as you did for the typical week.

Holiday Name	Date	00:00	01:00	02:00	03:00	04:00	05:00	06:00	07:00	08:00	09:00	10:00	11:00	12:00	13:00	14:00	15:00	16:00	17:00	18:00	19:00	20:00	21:00	
New Year's Day	01 Jan																							
Renovation Day	24 May 2001																							

If the holiday is periodic, the year is not displayed.

If the holiday is periodic, the year is not displayed.

In order to define a new schedule for a part of your store, you must enter in **configuration mode** first. This is usually reserved to experimented lighting technicians. To set up HVAC schedules, proceed exactly the same way. There is only one difference. The HVAC schedule status can only be Occupied or Unoccupied


The "Edit Lighting Schedule 'Main floor schedule'" dialog box features the following sections:

- Top Bar:** Includes tabs for "Details", "Hardware", and "Log". On the right, it shows "Schedule" with a question mark icon, "High", "Until" with a date "04/30/2003", and "At" with a time "20:00:00".
- General Section:**
  - Scheduler Node:** A dropdown menu showing "SCH 2L".
  - Schedule Number:** A dropdown menu showing "1".
- Associated Controllers Section:**
  - A table with two columns: "Node" and "Network Variable".
  - A "Manage..." button with a pencil icon.
- Buttons:** "OK" (with a green checkmark) and "Cancel" (with a red X) at the bottom right.

The Hardware tab let you see technical specification of your lighting scheduler.

## Adjust HVAC Temperature or Humidity

Click on an HVAC Command button. You will get a window such as the one below:

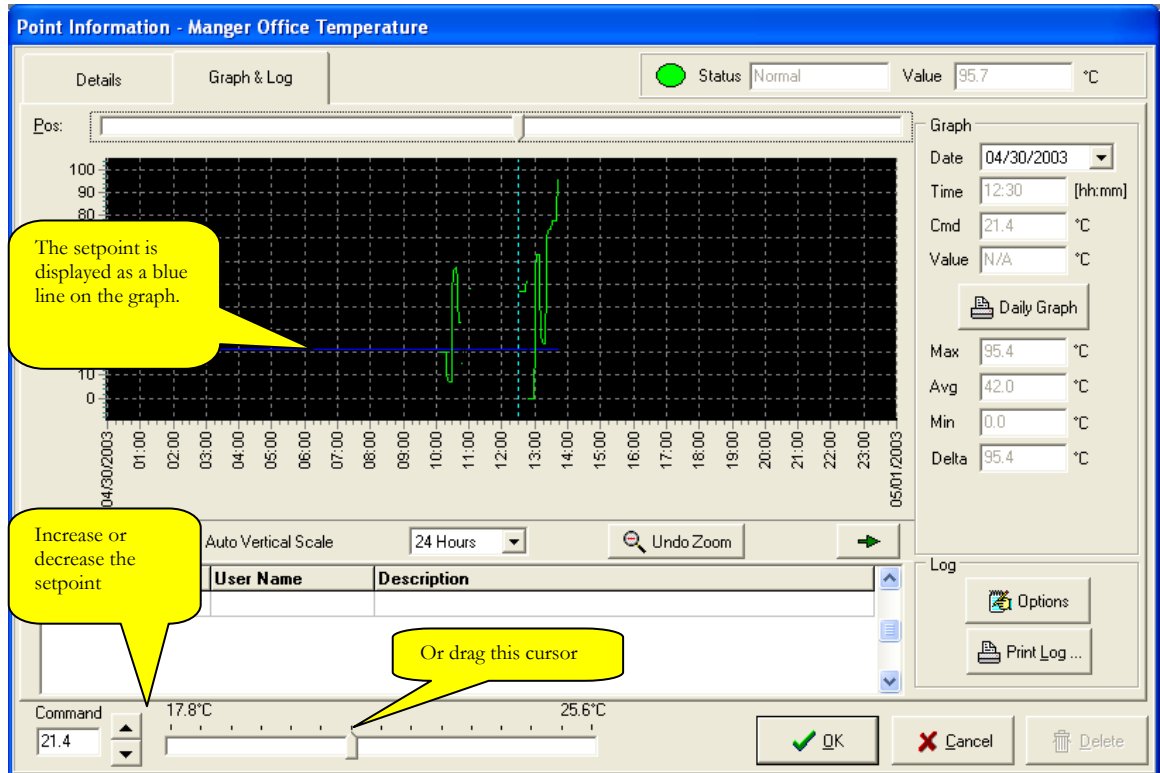

Adjust the temperature or humidity to the desired value and click "OK". The HVAC system will react immediately. However, it will take several minutes before the room temperature reaches your newly specified setpoint. Be patient and avoid "cranking up" or "cranking down" the setpoint. A humidity setpoint works just the same way. If you cannot change the setpoint, it means you do not have the permission to do so.

## Obtain Alarm Statistics

You can easily find out how many alarms there were over a given period of time. First select the appropriate subsystem. Then select **Events – Acknowledged Events Statistics** from the Main menu.

**Acknowledged Events Statistics**

Visible Events

☒ For Refrigeration

☐ Across All Subsystems

Period

From: 08/19/1999

To: 08/18/2000

Print... Cancel

Acknowledged events outside the period you specify will not be included in the report. Press the “Print” button to see an on-screen preview of the report. The report includes the total number of alarms for each sensor in the specified period and the specified subsystem. For example, you can immediately identify refrigerated cases that are giving you more problems. A supermarket chain can track down which stores generate the most alarms.

**Acknowledged Events Statistics Report Preview**

**ACKNOWLEDGED EVENTS STATISTICS**  
FROM 1999-08-19 TO 2000-08-18 FOR REFRIGERATION

MT Alliance Suite  
Version 2.1

Firm : Micro Thermo Refrig Test Lab

Address :

Owner :

Chain :

**No Image**

Source	View	Number of Events
Sensor		
48 D, Deli Case	Main	1
48 C, Deli Case	Main	1
48 B, Deli Case	Main	1
48 A, Deli Case	Main	1
31 A, Deli Case	Main	1
31 D, Deli Case	Main	1
31 B, Deli Case	Main	1
31 C, Deli Case	Main	1
32 B, Deli Case	Main	1
32 A, Deli Case	Main	1
5 A, Low Temp	Main	1
5 D, Low Temp	Main	1
5 B, Low Temp	Main	1
5 C, Low Temp	Main	1
56 D, Sandwich2	Main	1
56 C, Sandwich2	Main	1
56 B, Sandwich2	Main	1
56 A, Sandwich2	Main	1


Page 1 of 1

Print Setup... Print

OK

## See all Active Alarms


When there is more than 3 active events in the "Recent Events List", you can view all active events by selecting **Events – Active Events** from the main menu.

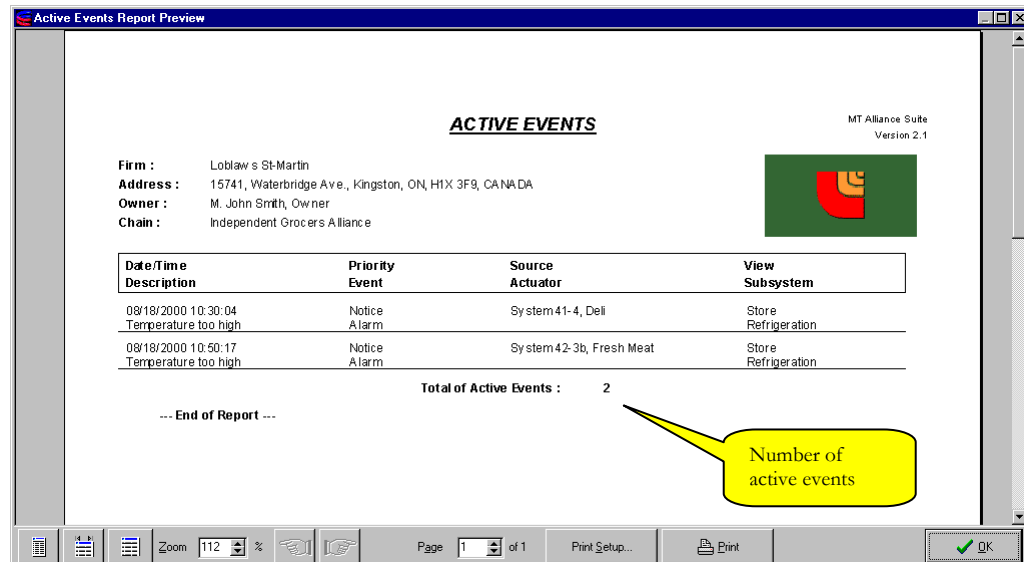

## Review Acknowledged Events

From the main menu, select **Events – Acknowledged Events** or click on the green checkmark on the Tool Bar to display the Acknowledged Events Window.


By default, this list displays the most recent acknowledged event at the top. By clicking on some column headers, you can sort this list by ascending or descending order of the column content. For example, to find all alarms acknowledged by a particular user, click on the “acknowledged by” column header or click on a “Sort By” radio button.

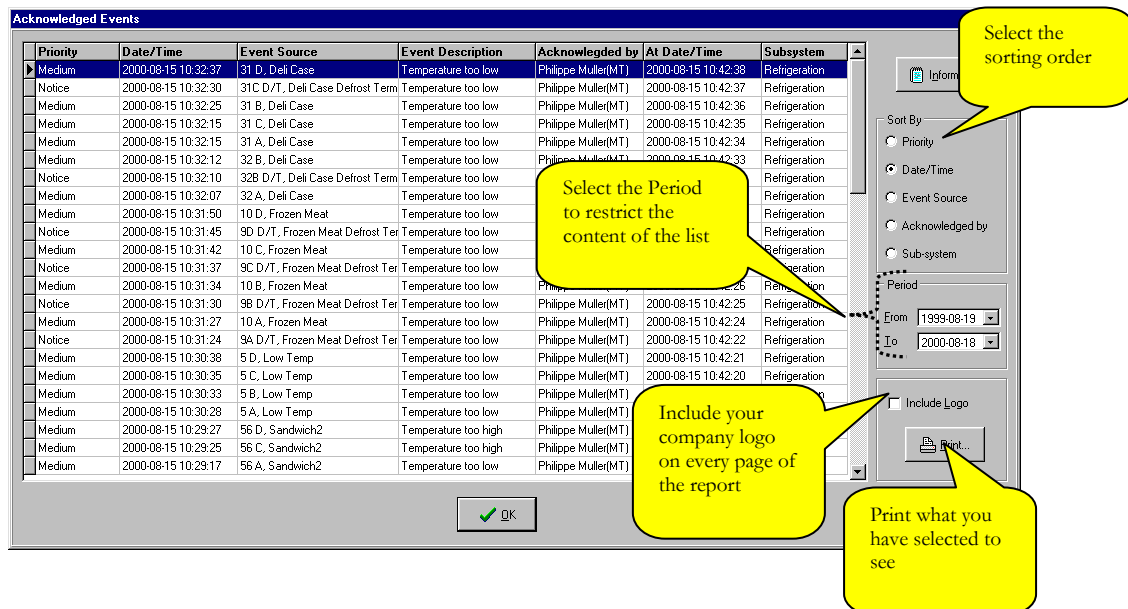

By selecting an event in the list and clicking on the information button, you will get instant access to the sensor graph at the precise moment in time when the event occurred.

### **Adjust the sound level**

The MT Alliance audible alarm signal is usually a female voice that says “Alarm...Alarm...”. The sound level can be adjusted to best fit your working environment. In the main menu, select **Tools – Sound Level**. Adjust the sound level and save your changes. The MT Alliance will remember your preferred sound level until you change it again.

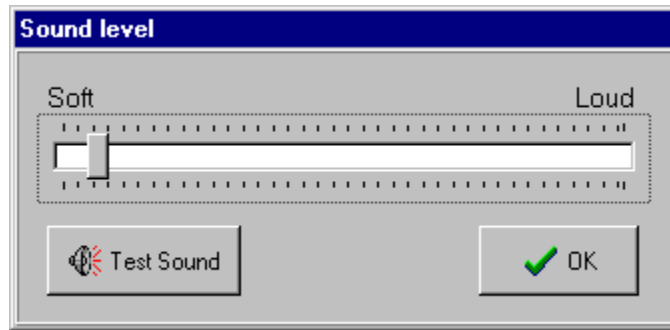


### **Turn off the Sound on the PC**

If you do not want to acknowledge the alarm immediately but the audible alarm signal disturbs you, select **Tools – Sound Off** on the Main menu. If a new alarm comes in, the audible alarm signal will automatically start again. Do not forget to take action and acknowledge the alarm.

## Manage Users

From the main menu, select **Access – Manage Users...**. You will see a list of the currently defined users, showing their user name and account information. There is no limit to the number of users you can define. Each user must have a unique User Name and Account. When you log in with your account and password, your user name appears on the status bar at the bottom of the main window. Every action or change you make is logged with your user name on it.

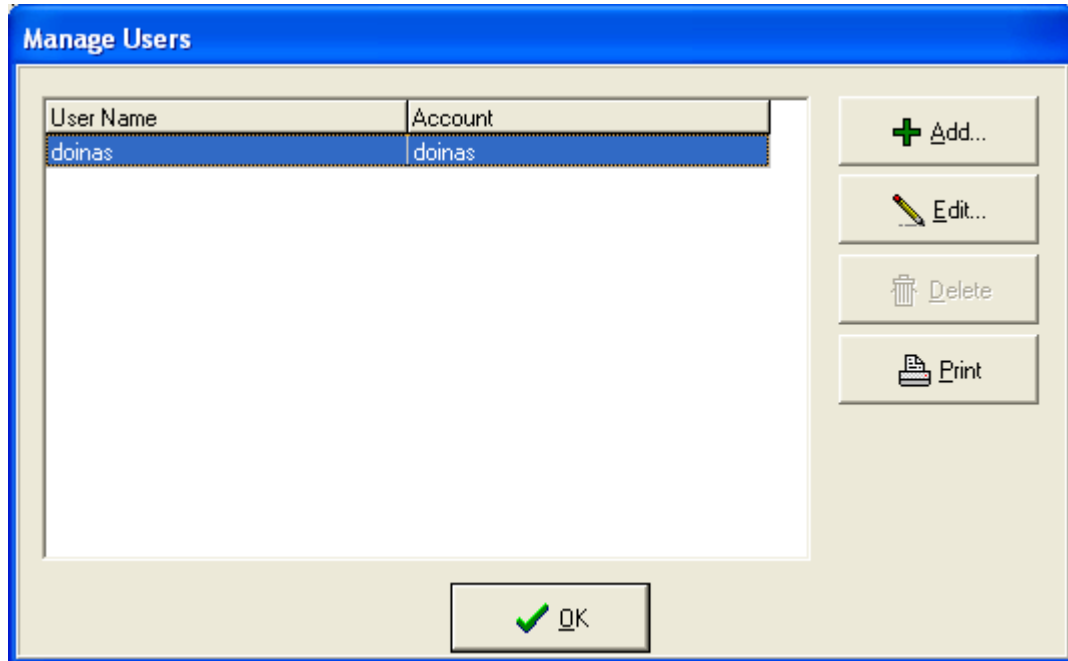

## Add a User

To add a user, click on the “Add” button. The “Add User” window will appear:

**Add User**

 

Full User Name

Account

New Password

Confirm Password

Account type Permanent ▼

User Permissions    Technician Permissions

☐ Manage Users

☒ Acknowledge Events

☒ Activate Alarm Monitoring

☐ Temporarily Deactivate Alarm Monitoring

☐ Permanently Deactivate Alarm Monitoring

☐ Change Site Information

☐ Use Excel Reports

☐ Exit Alliance



☐ Change Refrigeration Setpoints

☐ Change HVAC Setpoints

☐ Change Lighting Setpoints

☐ Change Energy Setpoints

☐ Change Other Subsystem Setpoints

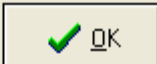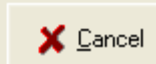If you do not have the permission to manage technicians, you will not see the “Technician Permissions” tab. Give to your new user a full name (e.g.: James Woodbridge). If you have two employees with the same name, add something to the full user name to distinguish between the two. Give your new user an account that nobody else has used (if you do, the MT Alliance will tell you). The account may consist of any characters except \$. The account is not case sensitive (a = A). Then give your new user a new password. You need to re-enter the password a second time to confirm it.

By default, the account is permanent. If you select a temporary account, you will be able to specify an exact date at the end of which the account will be automatically deleted.

The “User Permissions” tab let you specify permissions the new user will have in the MT Alliance. Most permissions are self-explanatory. “Change Site Information” gives a user the power to edit benign site information. Avoid giving your users the permission to “Exit Alliance”, because when they exit the MT Alliance, all historical data gathering is stopped.

You may optionally copy the permissions from one existing user to other users you create. Once you have copied the user permissions, you only have to click on the “Paste” button to apply permissions to a new user.

If you want a user to adjust HVAC temperature or humidity setpoints, select the “Change HVAC Setpoints” permission. If you want a user to override or modify lighting schedules, select the “Change Lighting Setpoints” permission.

The “Change Refrigeration Setpoints” permission allows the user to fine tune things like rack suction pressure setpoint. Needless to say, give that permission only to qualified refrigeration technician.

In the “Technician Permissions” tab, you can grant a user the permission to perform configuration tasks in a particular subsystem. Maintenance permissions should only be given to experienced technicians. Entering maintenance mode allows a technician to fine-tune the control system.

In the same tab (not shown here), you can also grant a user the permission to perform configuration tasks in a particular subsystem. Configuration permissions should only be given to experienced installers of the system. Entering Configuration mode allows the installer to add or remove electronic control modules.

The “Configure Alliance” and “Connect Subsystems” permissions should be given to experienced installers.



## Edit a user

In the “Manage Users” window, select the User Name / Account you want to modify and click on the “Edit” button. In this mode you can either change the user name, the account information, the password, the account type and the user/technician permissions. Once completed, click the “OK” button to proceed.

**Edit Permissions**

Full User Name: James Woodbridge

Account: jamesw

New Password: xxxxxx

Confirm Password: xxxxxx

Account type: Permanent

☒ Manage Users

☒ Acknowledge Events

☒ Activate Alarm Monitoring

☒ Temporarily Deactivate Alarm Monitoring

☒ Permanently Deactivate Alarm Monitoring

☒ Change Site Information

☒ Use Excel Reports

☒ Exit Alliance

☒ Change Refrigeration Setpoints

☒ Change HVAC Setpoints

☒ Change Lighting Setpoints

☒ Change Energy Setpoints

☒ Change Other Subsystem Setpoints

☒ OK ☐ Cancel

You can also modify the password information by selecting from the main menu **Access – Change Password**.




A dialog box titled "Change Password For 'James Woodbridge'". It contains three text input fields labeled "Old Password", "New Password", and "Confirm Password". At the bottom right, there are two buttons: "OK" with a green checkmark icon and "Cancel" with a red X icon.

Provide the old password and enter the new password twice in order to confirm the modification of your Password. Then click the "OK" button to save your modification.

### **Delete a User**


In the "Manage Users" window, select the user you want to delete and click on the "Delete" button. You will be able to confirm or cancel the deletion.

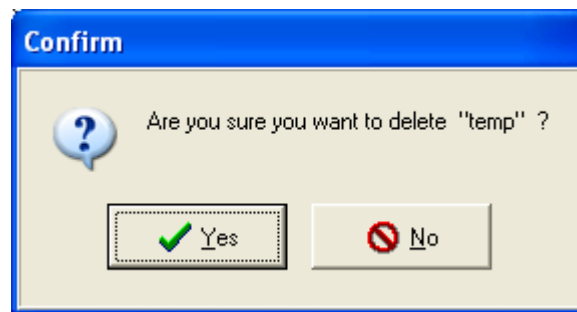

A dialog box titled "Confirm". It features a question mark icon in a blue speech bubble on the left. The text reads "Are you sure you want to delete 'temp' ?". At the bottom, there are two buttons: "Yes" with a green checkmark icon and "No" with a red circle and slash icon.

## Check a Sensor Graph

When an alarm occurs, it may be useful to consult the sensor graph. To do so, simply select the alarm event in the Event List and click on the “Information” button. Alternatively, you can click directly on the sensor button. In the “Graph & Log” tab, you will see the following:

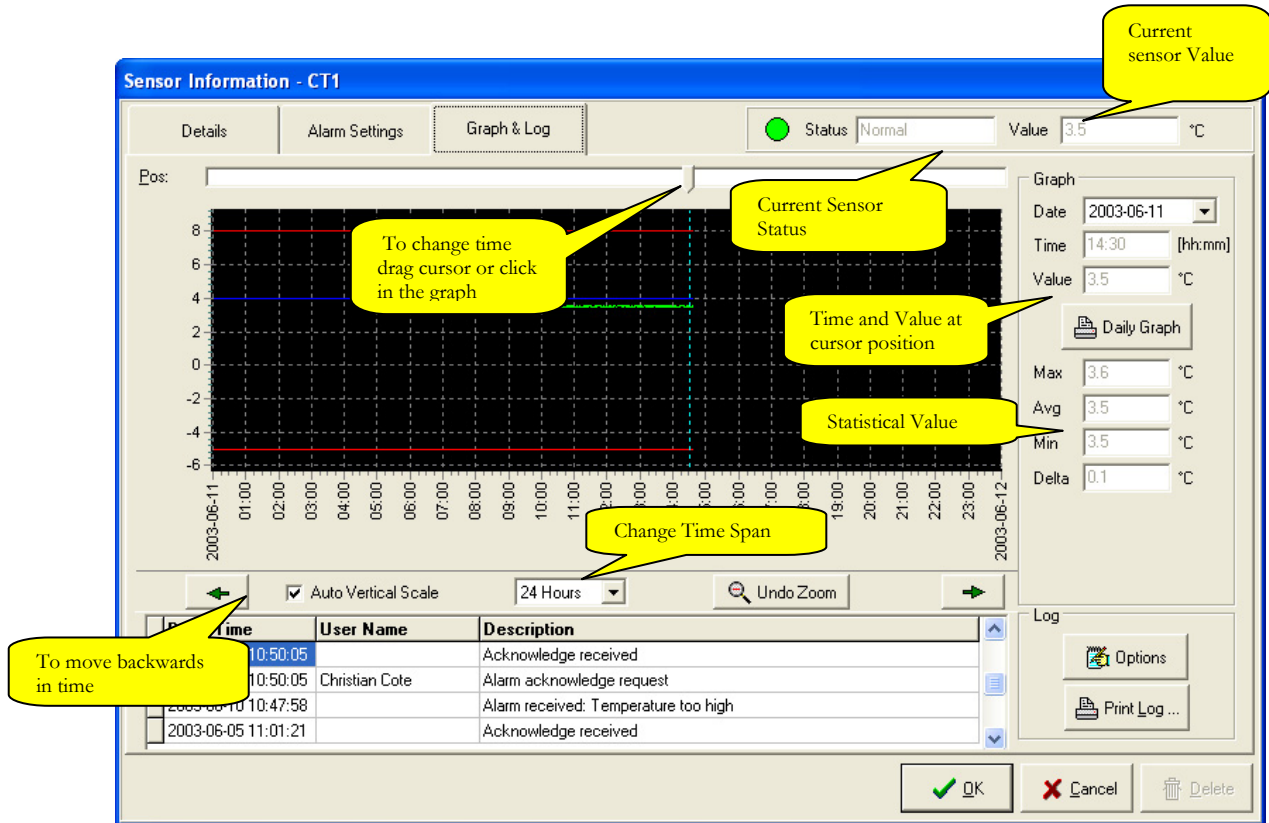

In the top right corner, you see the current status (Normal, In Alarm, Still Outside Limits, etc). You can also see the current value. Moving around in time is very easy. Simply click on the left or right arrows below the graph. Each click moves you in time by half the current time span of the graph (e.g.: with a 24 hours time span, you move forward or backward by 12 hours).


To see one complete day at a time, simply change the graph date in the upper right corner. You can move the cursor above the graph or click anywhere in the graph to position the graph cursor. The “Time” field will display the exact time of the day where the cursor is located and the “Value” field will display the sensor value at that time. By clicking on the “Daily Graph” button, you can preview and print what you are currently looking at.

Notice that in addition to the values, the alarm settings are also shown in the graph. The high limit and the low limit are shown as red lines. The optimal value is shown as a dark blue line. The limit changes are also kept over time and you will see these lines change on the graph if a user changed them.


The graph is color-coded. A green line means the sensor was in a normal state. A red line indicates the sensor was in alarm. A yellow line indicates the sensor was still outside limits after the alarm was acknowledged. A light blue line indicates that the alarm monitoring was turned off for this sensor. No line at all indicates that the MT Alliance was not running.

To see less than 24 hours, use the combo box located underneath the graph. You can select 12 hours, 6 hours or 2 hours.

The vertical scale where the sensor values are displayed is by default autoscaling to show you all sensor values. Remove "Auto Vertical Scale" check button and it will allow you to zoom into a more interesting portion of the graph.

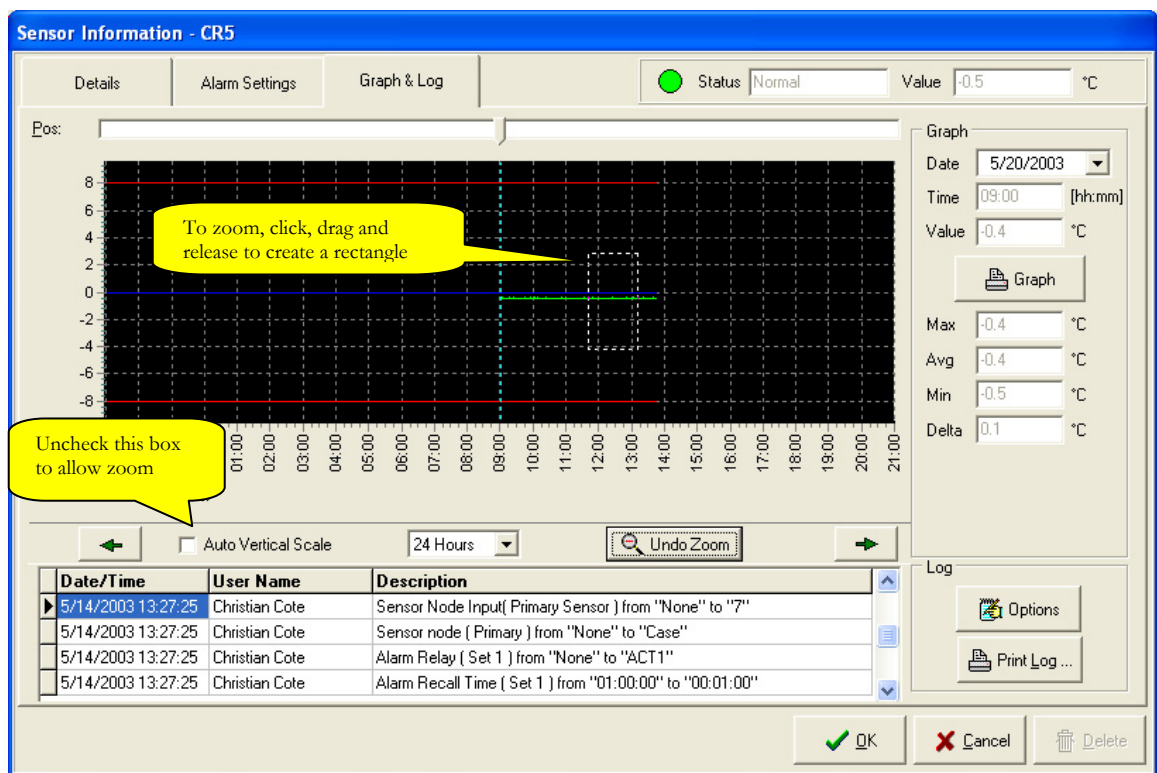


As shown above, zooming is achieved by clicking the mouse in a corner of interest and then, while holding down the mouse, drag the other corner of interest. The end result will look like:

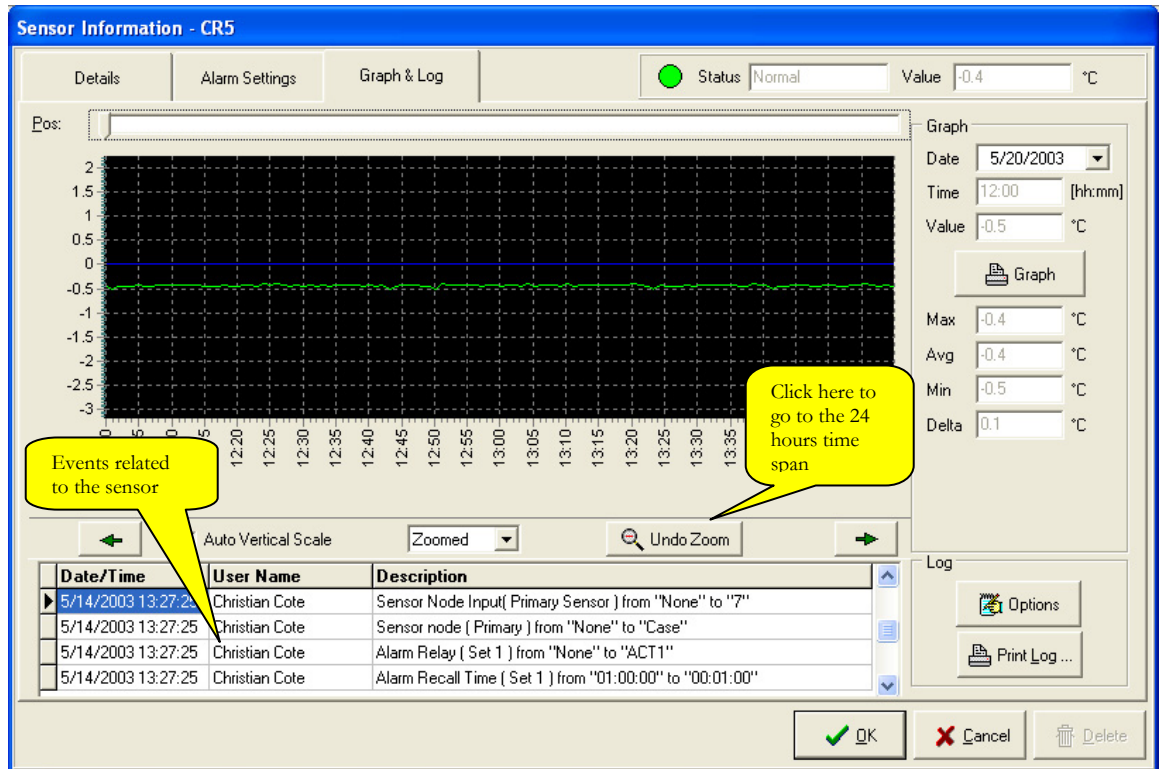


The “Undo Zoom” button will return you to the 24 hours period showing all sensor values during that period.

The bottom part of the window is displaying the sensor log. This includes any changes you (or a technician) have made to the sensor, and also includes external events like alarms. The sensor log is always synchronized with the graph. If you click an event in the log, the graph will position itself precisely at that time. If you click anywhere in the graph, the sensor log will position itself to the nearest event. Click on the “Options” button to make “Log Options” window appear:

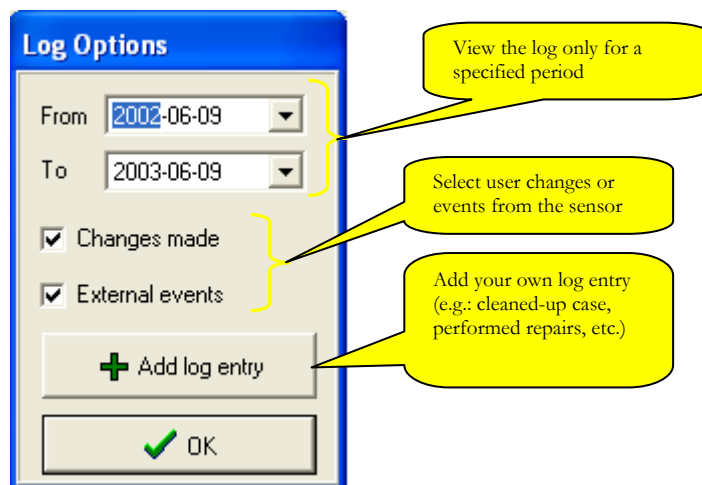

If you select “Changes” you will see any modifications done to this sensor as a result of user actions. If you select “Events” you will also see external events like sensor alarms.


Click on “add log entry” to add your own entry in the sensor log:

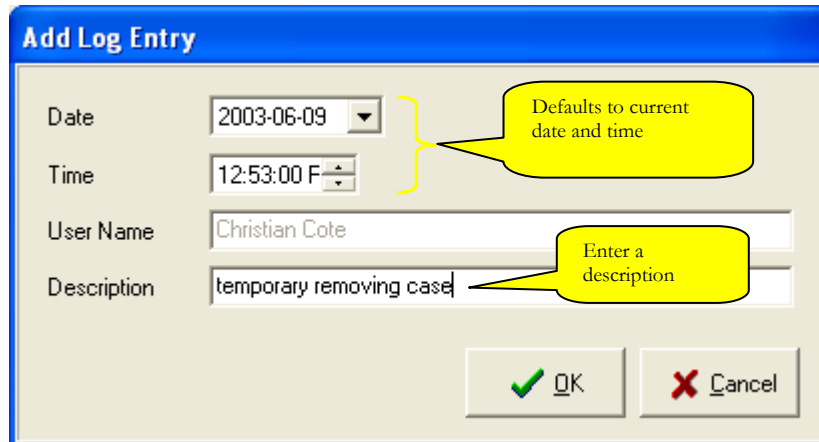

The "Add Log Entry" dialog box is shown with a blue title bar. It contains fields for Date (2003-06-09), Time (12:53:00 F), User Name (Christian Cote), and Description (temporary removing case). A yellow callout bubble points to the Date and Time fields, stating "Defaults to current date and time". Another yellow callout bubble points to the Description field, stating "Enter a description". At the bottom are OK and Cancel buttons.

## Find the Alarm Settings of a Sensor

If you want to find out what the alarm settings are for a particular sensor, simply click on the sensor button. In the “Alarm settings” tab, you will see the following:

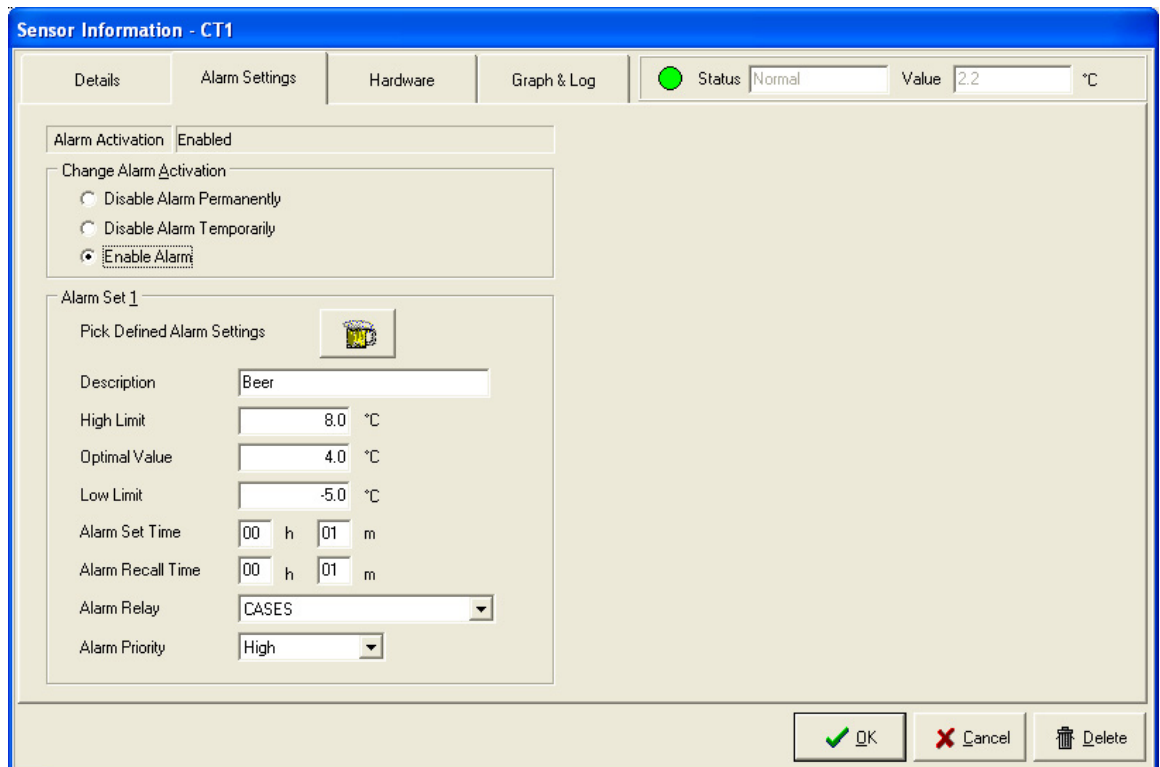

The "Sensor Information - CT1" dialog box is shown with a blue title bar. It has tabs for Details, Alarm Settings, Hardware, and Graph & Log. The Alarm Settings tab is active. At the top right, there is a Status indicator (green circle) showing "Normal" and a Value field showing "2.2 °C". Below the tabs, there is a section for Alarm Activation, which is currently "Enabled". Under "Change Alarm Activation", there are three radio buttons: "Disable Alarm Permanently", "Disable Alarm Temporarily", and "Enable Alarm" (which is selected). Below this is a section for "Alarm Set 1". It includes a "Pick Defined Alarm Settings" button with a beer icon. The fields for "Alarm Set 1" are: Description (Beer), High Limit (8.0 °C), Optimal Value (4.0 °C), Low Limit (-5.0 °C), Alarm Set Time (00 h 01 m), Alarm Recall Time (00 h 01 m), Alarm Relay (CASES), and Alarm Priority (High). At the bottom are OK, Cancel, and Delete buttons.

The current high limit, optimal value, low limit, alarm set time and alarm recall time are all displayed in this window. Refer to the “Alarm Concepts” section for a detailed explanation of all these parameters.

## Compare Trend Graphs

Select **Tools – Trend Graphs** or the corresponding toolbar button to compare sensor values of various sensors against each other.




When adding or removing a graph, each graph is resized vertically so that all graphs fit in the windows. A maximum of 7 trend graphs can be used on the same screen.

In order to add a new graph at the bottom of the screen, click the following

button: .

You can remove any graph simply by clicking the following button: .

You can save your current configuration by clicking the appropriate button: .


You can then load this configuration again later by clicking the following


button: .

Each graph has an associated combo box. The combo box can be filtered to show sensors of a particular subsystem or all subsystems. It can be filtered to show

sensors of a certain type (temperature, pressure, etc) or all types. Can't find a sensor? If it is not in the sensor list, look for it in the point list.


Besides their obvious use as a correlation tool, trend graphs can also be used to obtain a bigger graph than usual. Simply remove all graphs except one and maximize the trend graph window. Trend graphs can also be used to quickly scan sensors. For example, you can quickly see all refrigeration sensors. Change the graph filter to "Refrigeration Temperature Sensors". Then click on the combo box and use the down arrow on the keyboard to scan through all sensors.


You can also move a selected graph on the screen. Simply click this button  to bring up the Reorder screen. This screen allow you to change graph order by selecting the graph you want to move and then click on the corresponding arrows to move it higher or lower

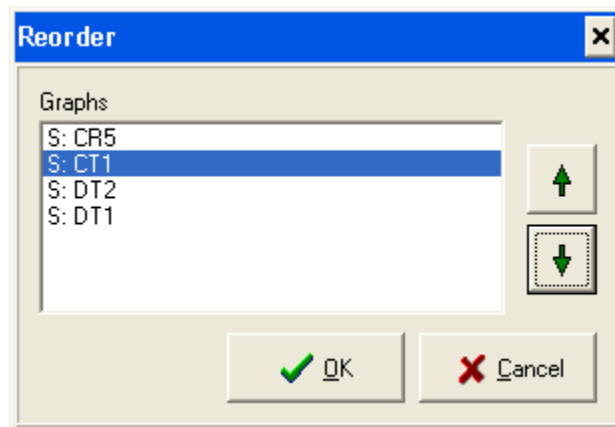






The following button  let you combine all graph on the screen in one big graph. This feature is fairly useful for a general overview of all sensors you want to monitor. Each graph has a distinct color, so you can easily see each sensor. Simply click on the button to go back to previous view.

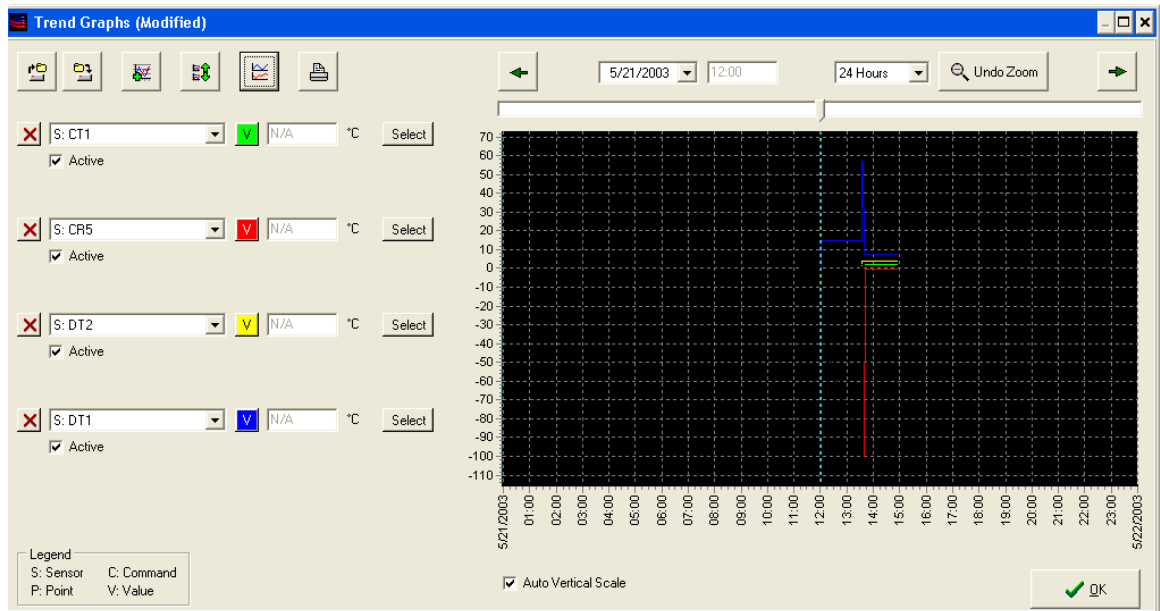

## Find a Component by Name

If you know a component (sensor, equipment, Alarm Relay , etc.) by its name and know in which subsystem it is visible, you can quickly find out where it is by selecting the proper subsystem and then select **Tools – Find Components** from the Main menu. The “Find Component” window looks like this:

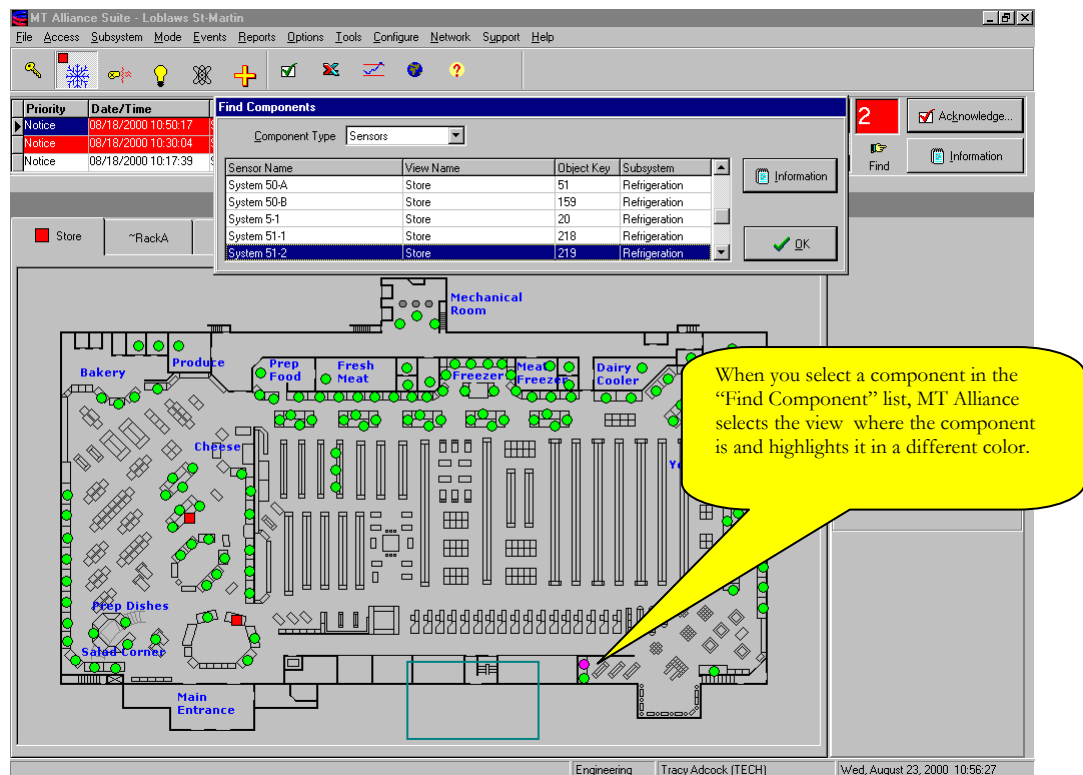


Find components only display the components of the active subsystem. First select the component type: Sensors, Alarm Relays, Equipment, View Links or Points. The list will be updated to show all components of the type you selected. As you select a component in the list, MT Alliance will automatically select the view where the component is and will highlight the component in magenta. If you can't find a component, you may be in the wrong subsystem or in the wrong subsystem mode.

If you select a component in the list and click on the information button, the Component Information Window will be shown. The effect is just the same as if you had clicked on the component button.

Ignore the Object Key, it is useful only for system troubleshooting by qualified technicians.

## Change Your Site Information

You can change the Information about your own site by selecting **Configure – Customer** from the Main menu. The “Configure Customer” window looks like this:

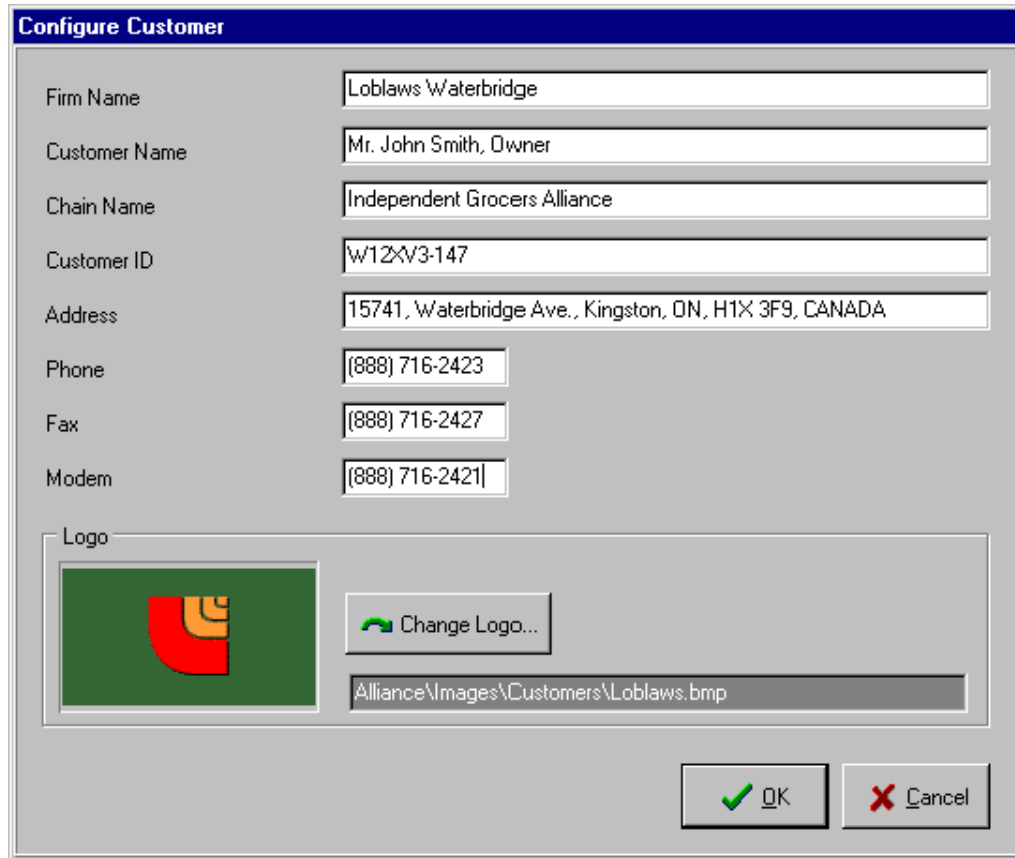

The "Configure Customer" window is a dialog box with a blue title bar. It contains several text input fields and a logo section. The fields are labeled as follows:

- Firm Name: Loblaws Waterbridge
- Customer Name: Mr. John Smith, Owner
- Chain Name: Independent Grocers Alliance
- Customer ID: W12XV3-147
- Address: 15741, Waterbridge Ave., Kingston, ON, H1X 3F9, CANADA
- Phone: (888) 716-2423
- Fax: (888) 716-2427
- Modem: (888) 716-2421

Below the fields is a "Logo" section. It contains a small image of a red and yellow logo on a green background. To the right of the image is a button labeled "Change Logo...". Below the button is a text box containing the file path: Alliance\Images\Customers\Loblaws.bmp. At the bottom right of the window are two buttons: "OK" (with a green checkmark icon) and "Cancel" (with a red X icon).

You can now edit phone numbers, your address, etc. Be sure not to change the "Customer ID" since this is a reference number from your Technical Support Company.

## Change Alarm Company Info

You can change the Alarm Company Information by selecting **Support – Alarm Company** from the Main menu. The “Configure Alarm Company” window looks like this:

**Alarm Company**

Company Name: Secure Inc.

Contact Name: M. John Smith

Address: 8546 Madison avenue

E-Mail: jsmith@secure.com



Web Site: www.secure.com

Phone: (888) 123-4235



Fax: (888) 123-4236

Modem: (888) 123-4237

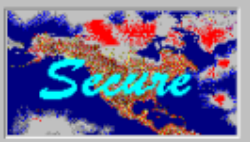Logo

Alliance\Images\Alarm Cie \Secure.bmp

Correct the information related to the Alarm Company. Note that the e-mail and web site information will work only if the PC has access to the Internet.

## Change Refrigeration Company Info

You can change the Refrigeration Company Information by selecting **Support-Refrigeration Company** from the Main menu. You can proceed the same way with the other support companies: HVAC, Lighting, Energy, etc.

The “Configure Refrigeration Company” window looks like this:

**Refrigeration Company**

Company Name: Alie refrigeration

Contact Name: Mrs. Linda Mc Cowan

Address: 831 West Side boulevard

E-Mail: lmccowan@alieref.com


Web Site: www.alieref.com

Phone: (888) 773-2619

Fax: (888) 773-2620

Modem: (888) 773-2698

Logo:

 Change Logo...


Alliance\Images\Support\Alie Refr.BMP

OK Cancel

## Preview Reports

Every time you bring up a report, the Print Preview Window appears. This window allows you to browse the pages of the report, make the page smaller or bigger on the screen and finally print the report.


Most reports are accessible from the “Reports” menu. Some are only accessible from certain components.

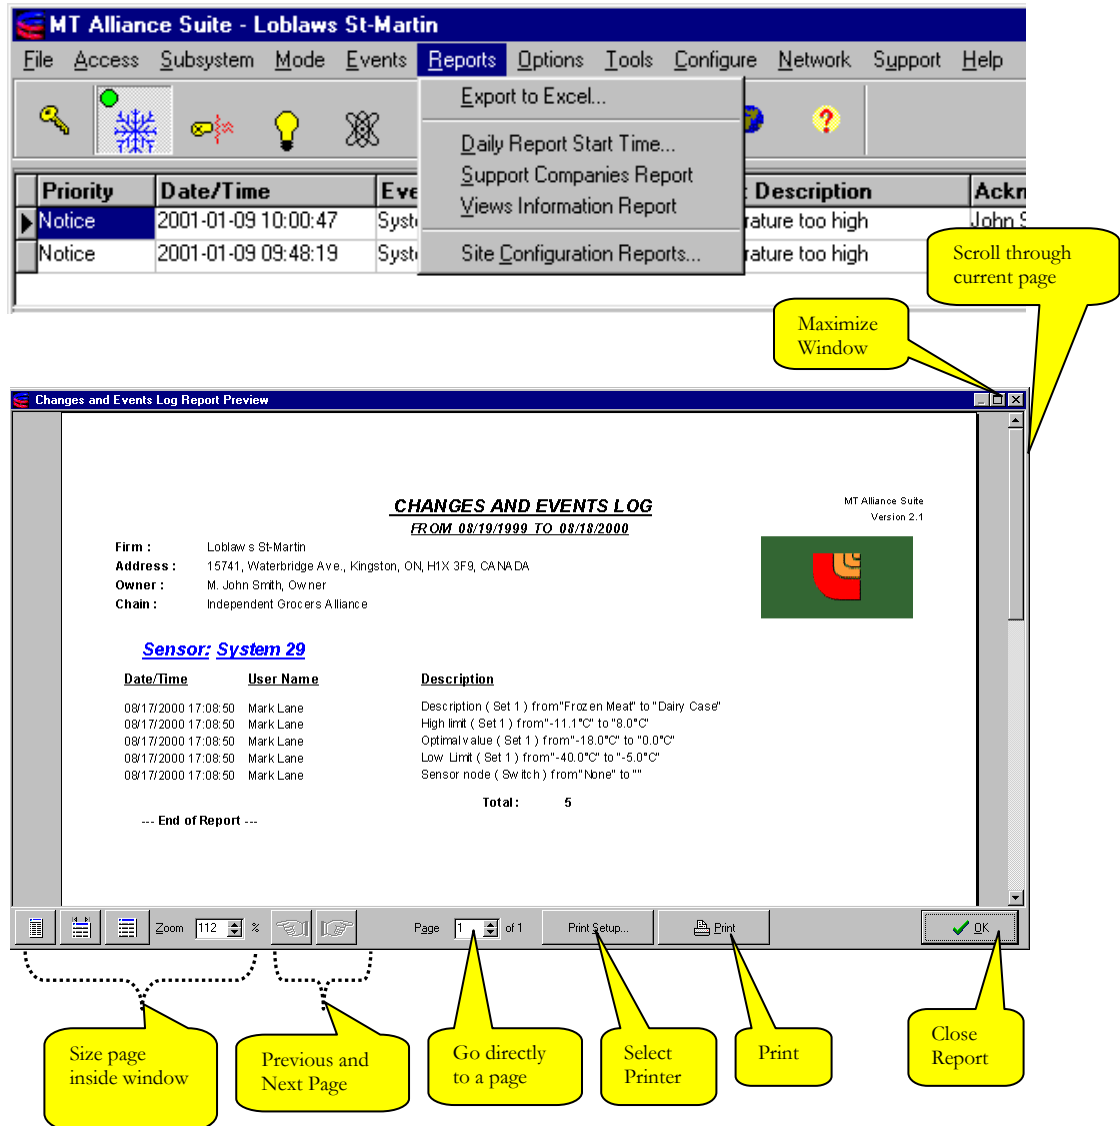

By default, the Alliance prints to the preferred printer which you can set using the Main Menu **File – Select Preferred Printer**. By clicking on "Print Setup" in the "Print Preview Window", you can print the report on any printer. This is only a temporary override of the preferred printer.

## Print Daily Graphs Automatically


You can activate the automatic printing of daily graphs for selected sensors by selecting **Reports – Daily Report Start Time** from the Main menu.

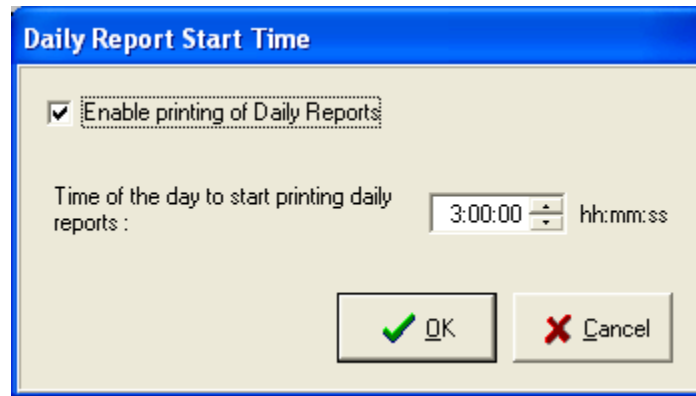


If you select “Enable printing of Daily Reports”, you can also select the time of day when graphs will start printing. Select a time of day where there is little printer activity.

Every day, at the time you selected, daily graphs start printing for each sensor that you have selected for automatic reports. The daily graphs are always yesterday’s graphs of course.

To add or remove a sensor in the daily graph printout, click on the sensor button and select the “Details” tab.

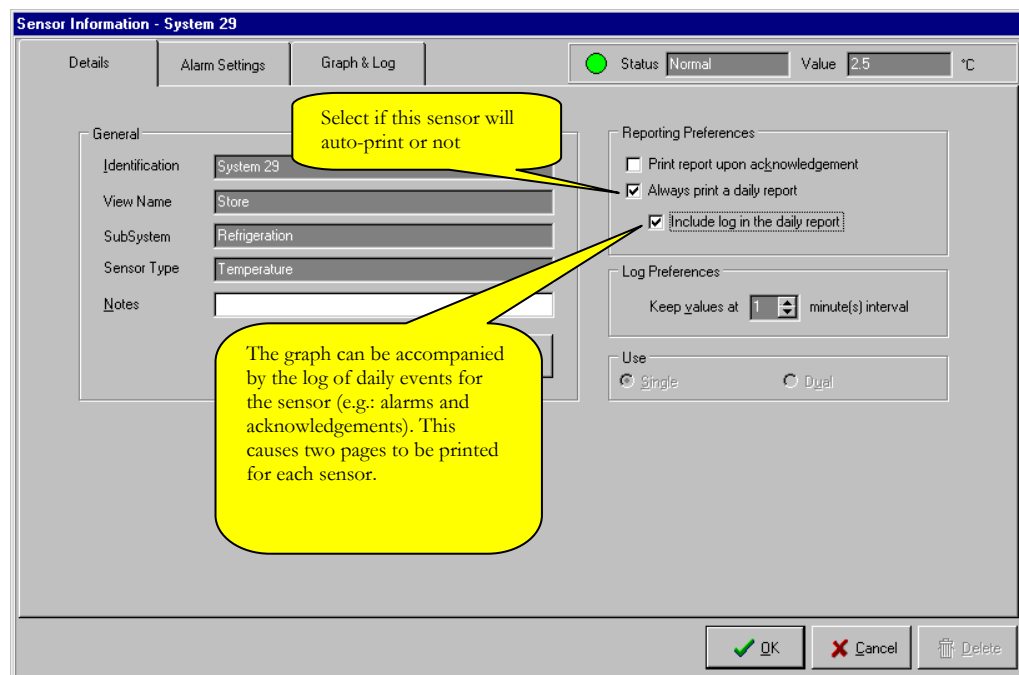

An automatically printed daily graph for a single sensor without the log looks like this:

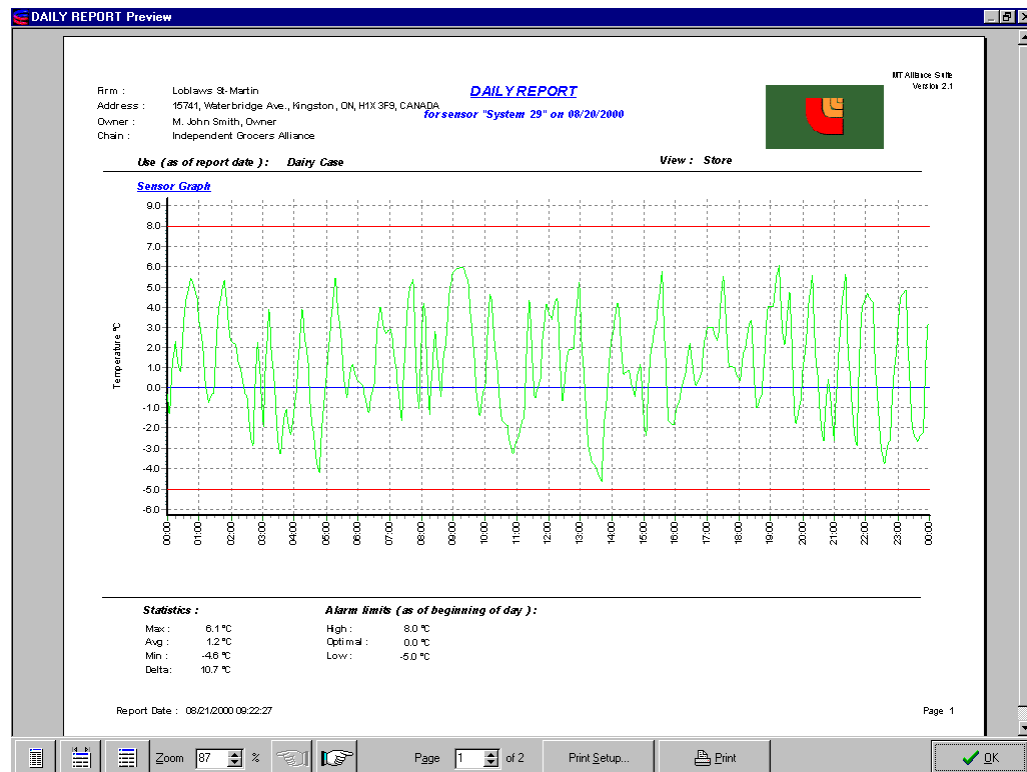




## Get in Touch with Subcontractors

If you get a refrigeration alarm, you should contact the refrigeration company. If you have an HVAC alarm, you should contact the HVAC company. If you have problems with the MT Alliance itself, you should contact the technical support company. You may also need to talk to your alarm company from time to time.

To find out this information, select **Help – About** from the main menu. The following window appears:

About

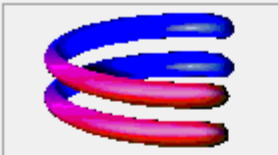MT Alliance™  


Version 7.1.1  
Copyright ©1997-2012 by  
Micro Thermo Technologies  
All rights reserved worldwide.  
<http://www.microthermo.com>

Registration Parameters

Keep history for

5 years

Capacity

512 nodes

Warranty


Installed on

9/13/2005

Expired on

9/12/2006

Licensed To



Micro Thermo Demo

Micro Thermo Technologies

Micro Thermo Technologies

12855 rue Brault, Mirabel, QC J7J 0C4

Customer ID

1

Phone

(888) 920-6284


Fax


(450) 668-2695

Modem


Support Companies

Refrigeration

 Info



You will get detailed information about the support company such as:

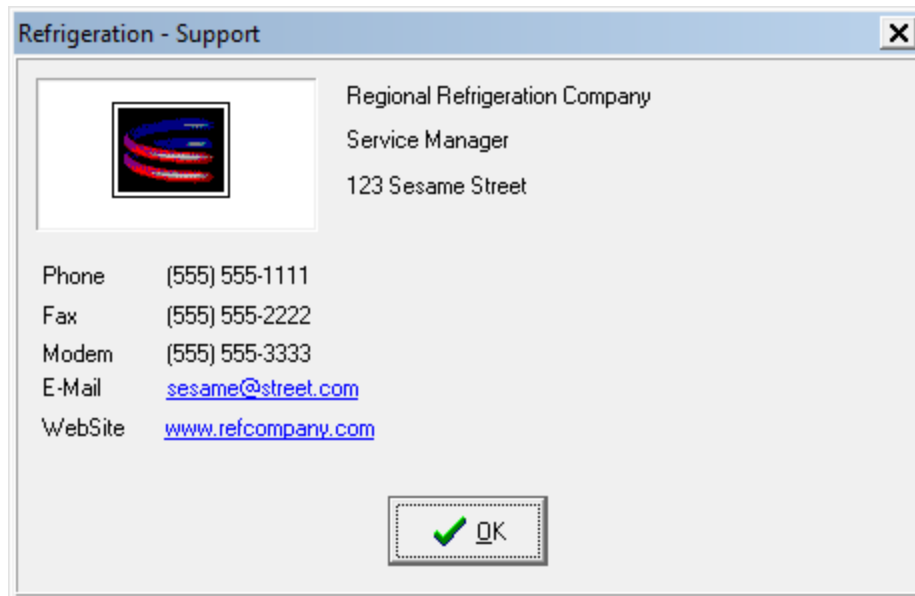


## Chat with a Remote Technician

A technician can call into your site if you require help. Using his computer and a telephone line, the technician can establish communication with the PC located on your site. Once the technician is connected, he can see exactly what you are currently seeing on your PC. He can also use your keyboard and your pointing device. He essentially becomes an invisible man next to you.

Because the technician is connected over phone lines, a little delay exists between what you are seeing and what he is seeing. If you open and close windows continuously, the technician will not see everything you see. Slow down a little.


You and the technician can initiate a chat. From the main menu, select **Help – Chat** to bring up the chat window.

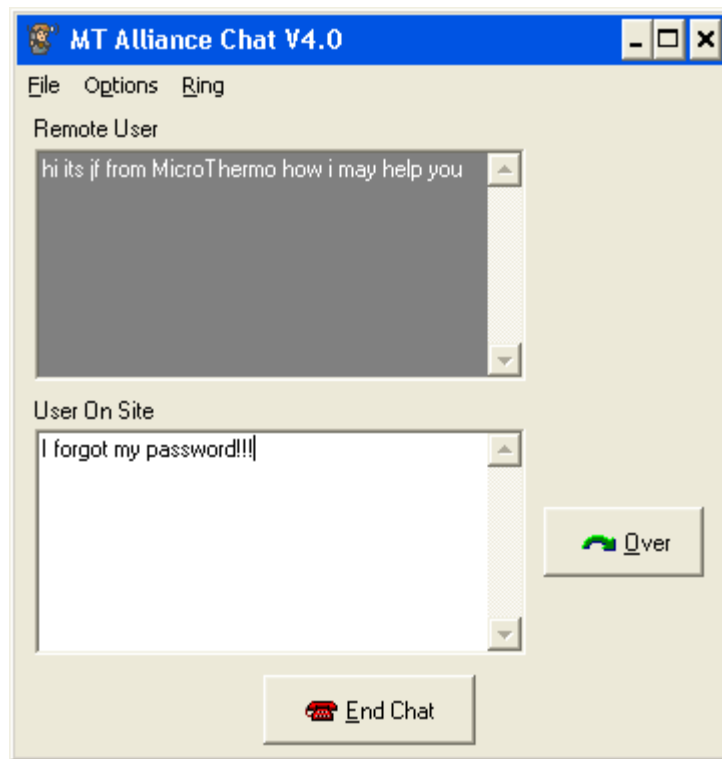

The top part of the window is reserved for the remote technician. The bottom part is where you can type your messages. When the bottom text field is white, it is your time to chat. Type your message and click on the “Over” button to indicate you have finished your point. Do not forget that both you and the remote technician are “fighting” for the same keyboard and mouse. Be patient when waiting for an answer, the connection over phone lines is not always fast.


## Change Units of Measure

If you want for instance to change temperatures from Celsius to Fahrenheit or pressures from Kpa to Psi, select **Options – Change Measure Units** on the Main menu or click on the "Earth" on the toolbar. It may take a short while before all sensors display the newly selected units. The MT Alliance will remember this setting until you change it again.

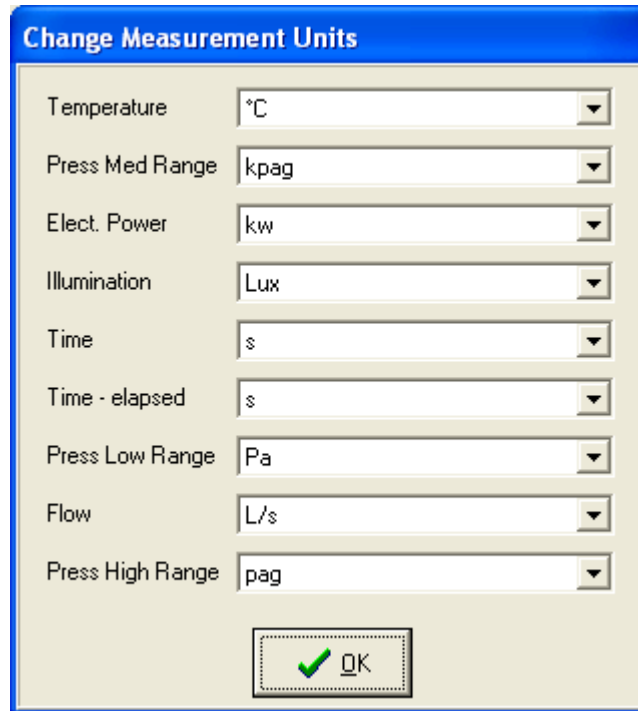

## Select a Preferred Printer

In the main menu, select **File – Select Preferred Printer**. The following window will appear:

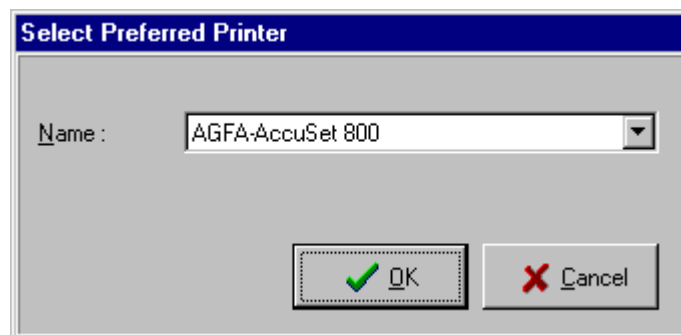


Select the printer where you want all reports to be printed. The MT Alliance will use this printer for all reports instead of the Windows Default printer. For each report, you can also choose to temporarily print elsewhere using the "Print Setup" button.

## Export Data into Excel

Exporting data into Microsoft Excel provides you with the ability to create your own customized reports. Your Excel sheet may even contain additional formulas based on the historical data exported. A typical example is to calculate the demand in Kwh by integrating the instantaneous power in Kw over a time period.

In the main menu, select **Report – Export to Excel** or click on the toolbar icon that looks like Excel. The MT Excel Wizard will come up as shown below.

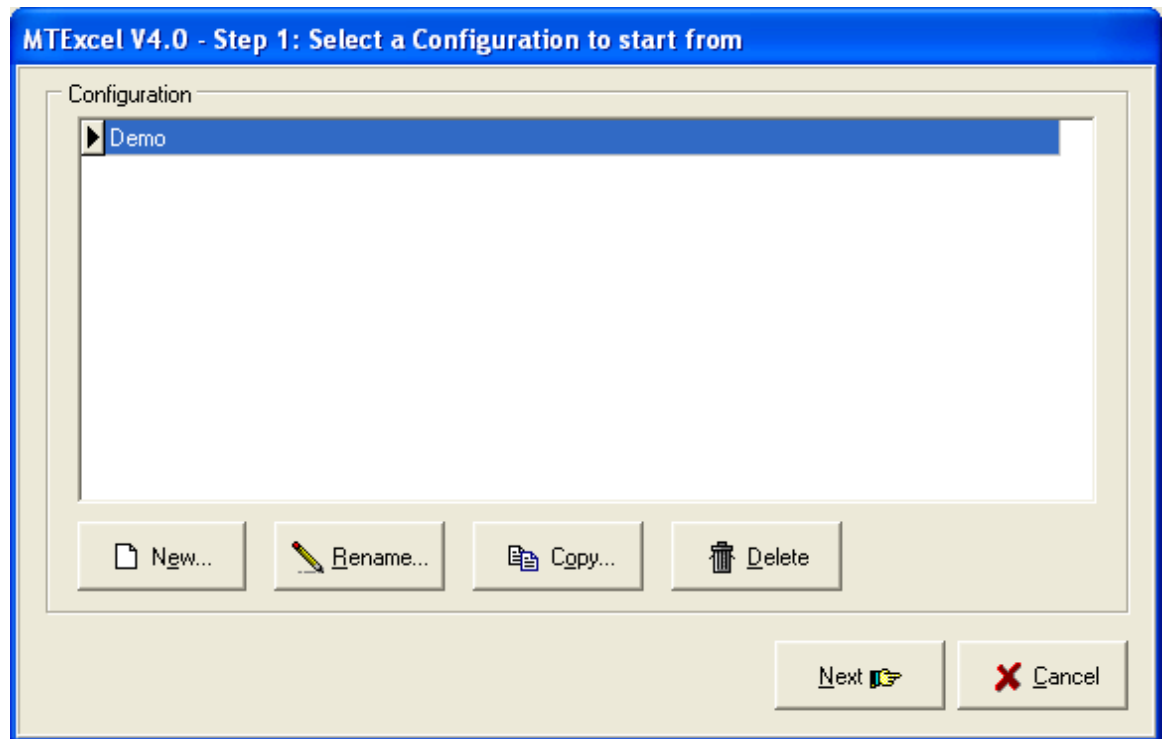

The first step consists of selecting an export configuration. You can create a new (and empty) configuration by pressing the “New” button. Give a name to your new configuration and press “Next”. Alternatively, you can select an existing configuration and press “Next”. You can also select an existing configuration and press “Copy”. Give your copy a meaningful name and press “Next”. You can also rename or delete a selected configuration.

The second step consists of selecting the sensors and points to export. As shown below, the top list contains all sensors and points available through all subsystems. You can sort the items by selecting the column header and moving it to the left. This allows you to sort by identification, view, subsystem or physical type. The bottom list shows the sensor and points you have selected to export. Use the arrow buttons to select or remove items. Alternatively you can drag and drop the desired sensors from the Alliance views directly in the bottom list.

**Step 2: Select Sensors / Custom Points - Demo**

Available Sensors and Points:

Identification	View	Subsystem	Physical Type	Type
CR5	Store	Refrigeration	Temperature	S
DLT	~RackA	Refrigeration	Temperature	M
DT1	Store	Refrigeration	Temperature	S
DT2	Store	Refrigeration	Temperature	S

Click on an available item...

...then click here to select it.

Selected Sensors and Points:

Identification	View	Subsystem	Physical Type	Type
CT1	Store	Refrigeration	Temperature	S

Or drag and drop buttons into this list

Refresh Back Next Cancel

The third step consists in selecting the period of exportation. There are two selection modes. "Selection by period" allows you to specify a "from date" and a period. The averaging interval and the "to date" are calculated automatically. This is the easiest method.

**Step 3: Select Period - Demo**

Selection Mode

☒ Selection by period

☐ Selection by end date/time

From

Date 2003-05-13

Time 0 h 0 m

To

Date 2003-05-13

Time 24:00

Parameters

Period 1 Day

Interval 15 Minutes

Number of values to export 96

Back Next Cancel

The other selection mode “by end date/time” allows you to specify the averaging interval, the “from date/time” and the “to date/time”. Specify the interval first, then the “from date/time” and finally the “to date/time”.

**Step 3: Select Period - Demo**

Selection Mode

☐ Selection by period

☒ Selection by end date/time

From

Date: 2003-06-11

Time: 0 h 0 m

To

Date: 2003-06-11

Time: 24 h 0 m

Parameters

Interval: 1 Minute

Number of values to export: 1440

Back Next Cancel

You must understand that the MT Alliance can keep a tremendous amount of data over time (a few GigaBytes). You will be warned if you have selected a huge amount of data to export. Data gathered by the MT Alliance over the period will be averaged on each interval to reduce the amount of information exported to Microsoft Excel.

The fourth step consists of selecting a few options. A graph can automatically be created if you desire. If that is the case, you can select to display vertical or horizontal gridlines. The “display Min / Max” option will draw a vertical bar corresponding to the lowest and highest values found in each interval. Although the Alliance is supposed to be running 24 hours a day, 7 days a week sometimes it is stopped (power outage or technician on site). Check the “Interpolate if No Data” option if you want to draw a straight line between the last known values. This is useful if you want to estimate Kwh based on Kw over a long period. You can also change the measurement units before exporting the data.

**Step 4: Options - Demo**

Chart

☒ **Export Chart**

X Axis

☐ Date

☒ Time

☐ Date & Time


☒ Horizontal Gridlines


☒ Vertical Gridlines


☒ Display Min / Max


General

☐ Interpolate If No Data

 Measurement Units...


 Back

Next 

 Cancel


The final step is to select a filename to export the data. If you select an existing filename, the exportation will overwrite previous exportation data. If you specify a new filename, MT Excel will create it. Press “Finish” to start the exportation.


**Step 5: Select a File - Demo**


 Select a Microsoft Excel File...

D:\Alliance\Shared Data\Historical\Demo.xls

☐ Start Excel


 Back

 Finish

 Cancel



If Microsoft Excel 97 or greater has not been installed on the PC, you will only be able to export to a text file. A utility named "MTRemoteExcel" is located in the c:\Alliance directory. You can copy it to another machine where Microsoft Excel is installed. It will be able to read the text files created and export them to Excel. MTRemoteExcel is shown below:

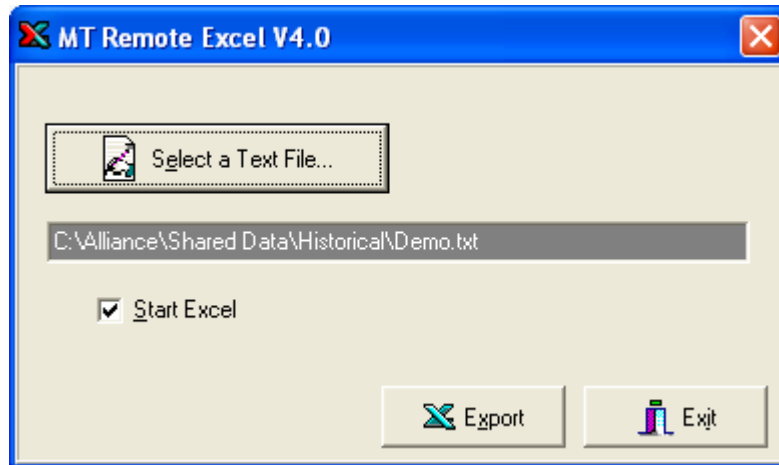


## Make a Backup

It is strongly recommended to make a backup after a technician has adjusted or changed things such as alarm limits, etc. Making backups allows the Technical Support personnel to recover from a known working point.


For example, if the PC power fails unexpectedly, files on the hard disk can get corrupted. If this happens to the MT Alliance database, it may no longer be able to start properly. An uninterruptible power supply (UPS) that can keep the PC powered during short electrical shortages is highly recommended.

So how do you perform a backup? First you must close the MT Alliance. Then click on the "MT Backup" icon on the desktop (it runs c:\Alliance\MTBackup.exe). Simply press "OK" and the backup will proceed.

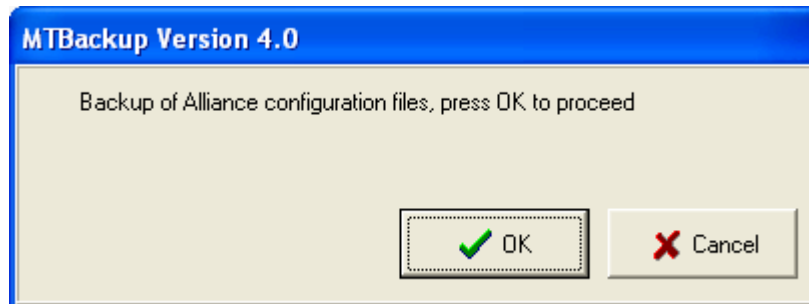

Once completed, an information window will indicate the name given to the backup file and where it is located. The file name contains the date and time when the backup is made.


Since backups are not automatically deleted, you are advised to delete backups that are too old because backup files may be huge. Do not forget to restart the MT Alliance!

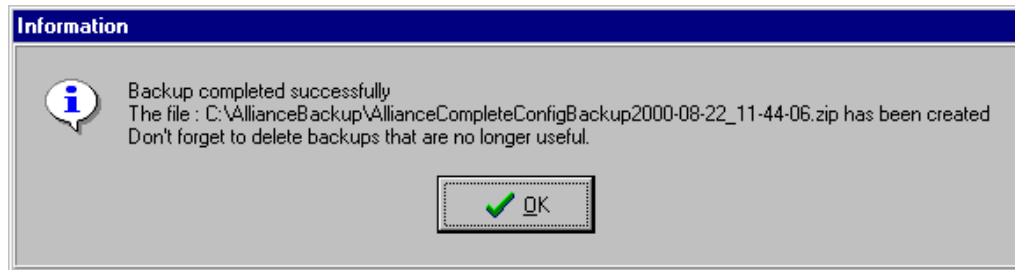

## Use Add-Ons


Add-ons are links to other applications that can be invoked from the MT Alliance toolbar without minimizing the MT Alliance. An add-on can start an application such as Microsoft Word or a document that in turn opens up the associated application.

Be careful because every time you click on an add-on button, a new instance of the application is started (you can end-up with 3 opened Microsoft Word for example).

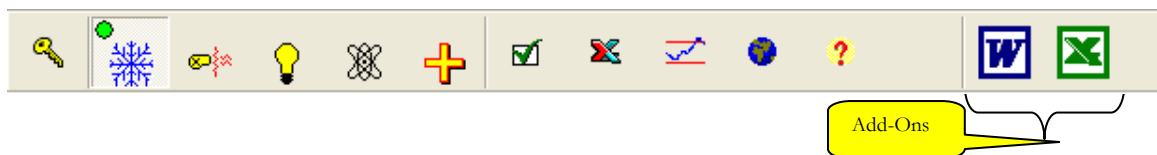

## Exit the MT Alliance

If you exit the MT Alliance, you will lose one very important feature: historical data logging. The MT Alliance is supposed to be running 24 hours a day, all year long so that it can keep detailed historical data about each sensor in your store. If you must exit the Alliance then select **File – Exit** from the main menu. If you cannot exit, it is because you were not granted the permission to exit. Never abruptly turn off the PC while the Alliance is running.

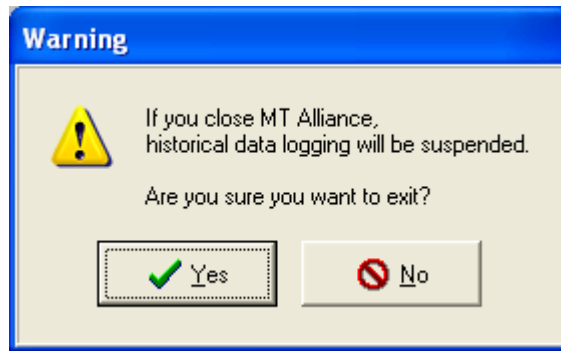

## **Alarm Concepts**


# Alarm Concepts

*Understanding alarm concepts is essential for timely intervention and for taking actions when the alarm condition will not go away.*

The MT Alliance Information and Control System uses predefined alarm settings for most types of food products. However, your site may have special requirements: this is why the MT Alliance allows a technician to override the predefined setting for a given sensor.

**The Alarm Scheme** used by the MT Alliance is as follows: each sensor has a low and high temperature limit. It also has a “set time”, a “recall time” and an Alarm Relay. If the sensor value is outside the limits longer than the specified “set time”, then an alarm is generated. The MT Alliance will sound the audible alarm signal and show the sensor as a red square. The Alarm Relay associated with the sensor is energized so that your local alarm service company can notify you of an alarm condition. The Alarm Relay can also be connected to a flashing light, a buzzer or some other indicator panel.

For refrigerated cases, the alarm “set time” is always selected to be slightly longer than a typical defrost cycle. If you react to an alarm within 10 or 15 minutes, you should have time to take action to prevent food losses (e.g.: by moving food products to another refrigerated case).

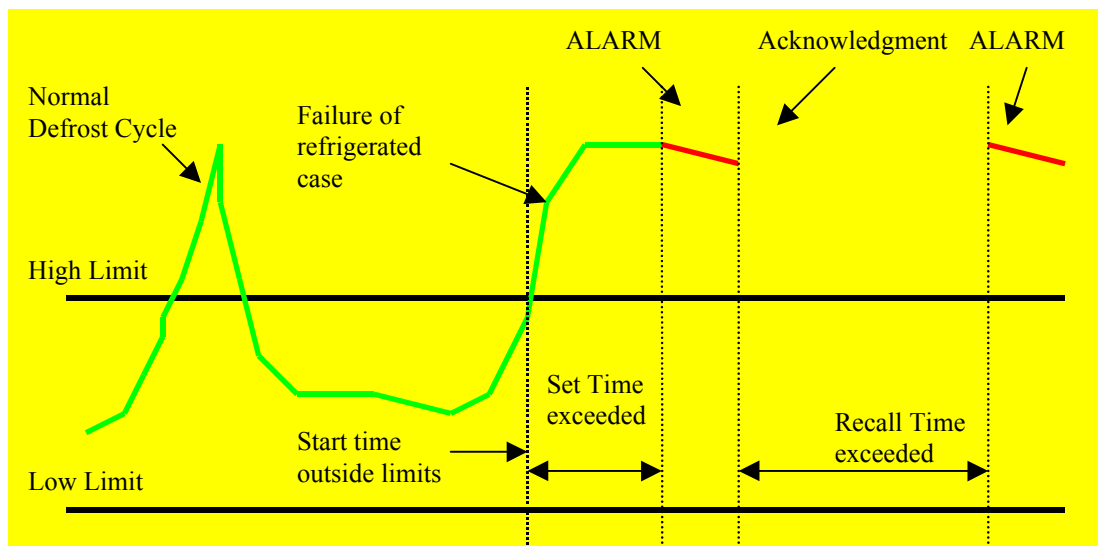

By the time you acknowledge an alarm, some time may have passed. At the moment of the acknowledgment, the sensor value is either inside the specified limits (the problem is no longer present) or outside the specified limits (the problem is still present).

**If the problem is no longer present** when you acknowledge the alarm, you are strongly encouraged to check the sensor graph to find out how long the sensor value was outside limits. For a refrigerated case, this allows you to assess the state of your food products as the result of this temperature excursion. Upon acknowledgment, the sensor button turns into a green circle and the MT Alliance will start alarm monitoring on the sensor right away.

**If the problem is still present** when you acknowledge the alarm, take immediate action to verify the source of the problem (e.g. : is the fan working? was a door left open too long?). After the acknowledgment, the sensor button turns into a yellow diamond if the sensor value is still outside the alarm limits. When the sensor value returns inside the limits, the sensor button turns into a green circle and the MT Alliance starts alarm monitoring on the sensor immediately.

If the problem is still present on this unit and you believe it can be fixed within the “recall time” (usually one hour), acknowledge the alarm. From there, only two things can happen: the sensor value will come back within limits and the MT Alliance restarts alarm monitoring, or the sensor value stays outside the limits past the “recall time” and you get another alarm. The purpose of the “recall time” is to remind you to take an action to prevent food losses.

If you know for a fact that fixing the problem will take longer than an hour, acknowledge the alarm, then click on the yellow sensor button. Select the “Alarm Settings” tab and temporarily disable monitoring on this sensor. You should select a realistic time period. After the time has elapsed, the MT Alliance automatically turns monitoring back on.

If the sensor has been removed or the refrigerated case taken out, you can also disable monitoring permanently. A service technician can later remove the sensor button altogether.

## **Tips for Keyboard Users**

# Tips for Keyboard Users

*Pointing and clicking with a mouse is easier but if you prefer the keyboard, this chapter is for you.*

**Y**our mouse is not working? Or perhaps you do not like using the mouse? Using the keyboard is more tedious than using the mouse for certain tasks but you can use it to navigate through all the windows of the MT Alliance.

**Activating menu items** is achieved by pressing and holding the <Alt> key (left of the spacebar) and then using the left, right, down and up arrows to navigate through the menu structure. Press Enter to activate the menu item.

**Moving from one field or button to another** is achieved by pressing the <Tab> key (left of the Q key). You cannot tab to a field or a control that is disabled.

**Moving back one field or button** is achieved by pressing and holding the <Shift> key and then pressing the <Tab> key.

**Clicking on a button** is achieved by pressing on <Enter> or <Spacebar> when the button has the focus (rectangle shown on button).

**Keyboard limitations:** in some windows you cannot get to all fields and buttons using the <Tab> key. You cannot zoom with the keyboard: however, you can still access all components using the **Search – Find Component** menu item.



## **GLOSSARY**

### **Account**

An account is like a key. Each defined account is associated with a user name and a set of permissions. This way the MT Alliance can keep track of who did what and when, and also restrict access to critical functions.

### **Alarm Company**

The company responsible for contacting you when the MT Alliance generates an alarm.

### **Alarm Relay**

An alarm relay can be a relay in an alarm company box, a flashing light, a buzzer or anything else that can be turned on or off. An alarm relay can be associated with one or more alarm sensors.

### **Backup**

A backup takes the current MT Alliance configuration and zips it to another location.

### **Component**

A component can be an alarm sensor, an alarm relay, an equipment, a view link, etc. Components are dropped on views by the technician.

### **Equipment**

An equipment is a component that cannot be alarmed on. It does not have a state. Equipment can be anything. They are usually used to indicate the location of the PC, network power supply and network terminator inside your store. If you are interested in showing where your electrical outlets are, then a technician can define an electrical outlet and drop it on any view.

### **Event List**

The event list is always displayed on the top part of the Main Window. The event list contains all active alarms. It also contains recent acknowledged alarms (usually not older than 24 hours). If alarms do not occur for many days, the event list will still display a few old acknowledged alarms.

### **Graph**

A sensor or point value plotted against time.

### **Log**

A time tagged event list.

**Log Entry**

One event in a time tagged event list.

**Point**

A point can be of three types: a command point (setpoint), a measure point, or a command/measure point. Measure points are like sensors except they cannot generate any alarm and cannot have automatically printed daily reports.

Command points allows you to change a setpoint (e.g.: room temperature). A measure point allows logging of historical data. A command and measure point allows both features on the same button. Points can be temperature, humidity, switch, gas, pressure, power, power factor, current, etc.

Points allow electronic modules from any manufacturer to be integrated into the MT Alliance. For example, a Siebe Rooftop Unit module can be added to the network, and a temperature command point can be used to allow you to select the desired room temperature.

**Refrigeration Company**

The company responsible for all refrigerated cases and rooms in your store.

**Alarm Sensor**

An alarm sensor can measure temperature, humidity, pressure, particle levels, switch, power, power factor or current. Alarms can be generated for all sensors.

**Status Bar**

The status bar is located at the very bottom of the Main Window and displays the name of the user currently logged in, the current date and time and some other information.

**Subsystem**

A subsystem can be: Refrigeration, HVAC, Energy, Lighting or can be defined by the technician. Each subsystem has its own operation mode (overview, maintenance and configuration).

**Technical Support**

The company responsible for providing support about the MT Alliance system.

**View**

A view is usually a floor plan of your store. Views can be made zoomable by the technician.

**View link**

A view link is a button that is dropped on a view that brings you to another view.



## Historique des révisions

REV	Description	Révisé Par	Date
1.1	Création et formatage document	CBC	5 Juin 2003
1.2	Début de la rédaction du document	CBC	6 Juin 2003
1.3	Mise à jour du document	CBC	9 Juin 2003
1.4	Suite de la mise à jour du document	CBC	11 Juin 2003
1.5	Modification suite à la correction addendum par Yves Roy	CBC	11 Juin 2003
1.6	Correction du document et préparation de la table des matières	CBC	13 Juin 2003
2.0	Première diffusion du document pour révision	CBC	16 Juin 2003
2.1	Correction suite à la révision de Jean-Raymond Touchette	CBC	7 Juillet 03
2.2	Nouvelle formule d'accès lors du « log on » (New feature XP)	CBC	7 Juillet 03
2.3	Révision de la table des matières	CBC	4 Août 03
2.4	Révision et mise à jour pour publication (PDF intérimaire)	CBC	13 nov. 03
2.5	Cover page and formatting	ER	10-Mar-2015