

Quick Start Guide

Important Notice



Water leakage inside caused by misoperation and LCD willful damage is not under warranty.

















Basic function:

GSM850/900/1800/1900MHz, WCDMA, 2G/3G Mobile phone, GPS, WIFI, Bluetooth, Android OS, FM, Audio and video player, Dual camera, Walkie talkie, Compass, Laser light.

Please notice below:

 
To avoid dangerous or illegal use, Please read following information carefully before you start using this mobile phone.

-  In place to ban the use of mobile phone, or the use of mobile phones may cause interference or danger, please shut down the mobile phone.
-  Do not use phone when driving a car, so as not to cause dangerous.
-  In the medical place, please comply with the relevant provisions and near the area of medical equipment, please turn off the phone.
-  Please turn off the phone when boarding the plane, lest the antenna signals interfere with the aircraft control
-  Do not put the phone and accessories in a strong electromagnetic place.
-  Please keep phone away from the magnetic equipment, mobile phone radiation will erase stored on a magnetic device information.
-  when near the sophisticated electronic equipment, please turn off the phone, otherwise it may lead to electronic equipment failure.
-  Please do not tear down mobile phone or accessories, only qualified maintenance personnel can repair the phone.
-  Avoid in high temperature, exposure conditions use the mobile phone and put it in the dry place.
-  Shut down the phone when near the chemical products, fuel and other dangerous articles or petrol station.
-  Please put the mobile phone and accessories where children can't touch, please do not let children use a phone in the case of no regulation.
-  Please use the specified batteries and power adapter, please do not discarded batteries in the fire, so as to avoid explosion.
-  Avoid use of mobile phones in the thunderstorm weather. Especially in the open place without lightning protection environment, should turn off the phone, so as to avoid injury.
-  Use the phone, please comply with the relevant laws and regulations, and respect for other's privacy and rights.

- Before use this mobile phone, please check all accessories is complete or if there is any damage.
- All graphic, icon, interface images in this manual are only for your reference, just for functional specification show, may not correspond with your mobile phone, or since the firmware have update, please refer to your phone.
- To send and receive SMS, upload and download, automatic synchronization or use GPS location services may need other fees. If you would like to avoid to use additional cost, choose the appropriate data rate plan. For more information, please contact your service provider.
- For source software, please install carefully, when go on the internet, some pop-up strange website can click but avoid to perform this operation, so as to avoid phone poisoning.

Introduction

Parts name

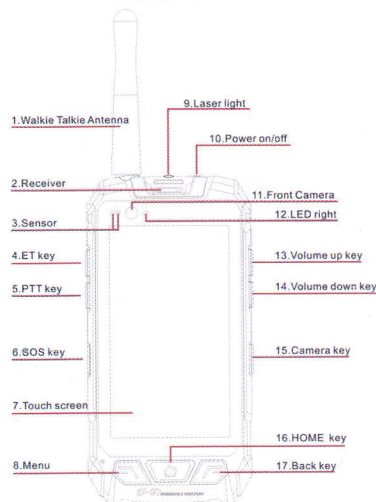

Display menu key function

- HOME Key: Go back to home screen. Long press to pop up recent applications screen.
- Back Key: Back to the pervious page.
- Menu Key: Press to view menu options, answer the phone call when coming call.
- PTT Key: Press PTT key to start walkie talkie function, release to stop.
- ET Key: Press ET key to enter Network intercom function (default is enter wechat software).
- SOS key: Press "SOS" key to start SOS function, second press to stop.
- Power key: Press and hold for several seconds to turn the phone on or off, To save battery, quick press to temporarily turn the screen on or off. Long press this key for 10 seconds will reboot the phone.
- Camera Key: Long press at 3 seconds to open the camera, short press to take photo.

How to use this phone



 
Notice:

1: Do not apply excessive force on screw driver when close the battery Cover. It may cause:

A: the device housing or battery cover Broken.

B: the screw itself broken

2: DO not use over designated standard Screw driver (artificial damage shall Not be guaranteed)

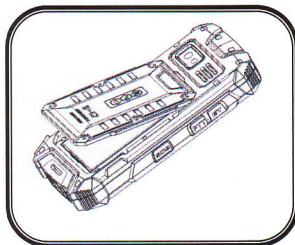

Guide for closing battery cover properly

1, The six screws as shown in pictures two ① ② ③

 
 
④ ⑤ ⑥ should be locked properly Before putting into water.

2, Make sure the screws

① ③ ④ ⑥ as shown in picture



Two in same level with the housing,

Screws ② and ⑤ need gapless with the battery Cover.

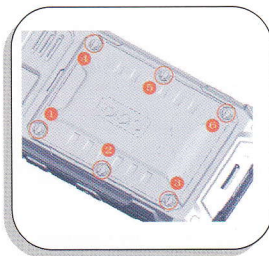

Install the sim card an TF card.

  Have normal SIM card slot and Micro SIM card slot, and the direction of the sim card as picture left, TF card insert way as picture right.

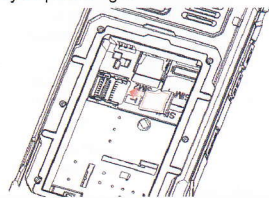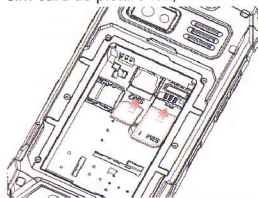

Installation

Install walkie talkie antenna

1. Open the walkie talkie antenna cover.
2. Put the antenna towards to the connector and rotate to the right until it is fixed.



1, To avoid wrong operation, do not use walkie talkie before install the antenna.

2, IT's waterproof even walkie talkie antenna cover is open

The correct tail plug waterproof installation method:



Notice: Must cover this plug before put in the water. If water or ash into this place does not belong to the warranty scope!

 


When open this tail plug don not put the phone in the water, after finish the charge or not use the earphone must Tighten the tail plug. Push the tail plug to straight with the shell.

Waterproof guide

Preparatory work before putting into water

- 1, Battery cover should be locked properly.(see guide for closing battery cover properly)
- 2, Before close the battery cover, make sure inside battery cover is clean. See as shown A B C D,remove the hair, sand....etc.
- 3, After taken out from water, use dry towel to dry the device.
- 4, Make sure the battery cover is downward when you open it.
- 5, Make sure the USB cover is closed properly before put into water, make sure the USB cover and slot is clean, see as shown ABCD ,remove the hair, sand...etc.



maintenance

Use clean water to clean the device after used in the see water and let it dry naturally. Do not use drier.

 
Prohibition:

1. Don't use device under the hot spring or hot water.
2. Don't open the battery cover when the device is wet.
3. Don't use chemical material to clean the device.

How to use walkie talkie and SOS

Walkie talkie guide (Install the walkie talkie antenna before using walking talkie function)

- 1, SQ: (Suggest to set SQ in 1.
- 2, Make same setting for country ,channel ,
ctcss between different devices.
- 3, Full U range :400-470Mhz(UHF),can not
Support VHF range.
- 4, Use standard SMA connector,easy to expand,
- 5, user can select suitable frequency antenna.。
- 6, Support 38 level of CTCSS。
- 7, Support different frequency same CTCSS。
- 8, Walkie talkie signal will become weak
Under the condition of battery capacity shortage.。

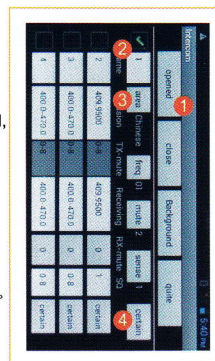

How to use Walkie talkie

Step 1: Install the antenna

Step:2: Open the Walkie talkie software

Step 3: Set ① ② ③ ④ (AS above picture) :

- ① Open walkie talkie;
 - ② ✓ Choose one of the intercom menu bar (2-6 for user Settings);
 - ③ ✓ After choose 1, Selected region.: Channels, returned, sensitivity can choose the default values.
 - ④ Click OK and set success. can start use walkie talkie
- Press the PTT button for transmitting signal, loosen the PTT button for receiving signal.

Set SOS

Before use SOS ,must set one or two SOS phone NO.:

Menu--Settings---safe---setting SOS phone NO.---SOS 1/ SOS 2

Write the SOS phone no you need and confirm ok.

How to use SOS

In the condition of cellphone to unlock, and mobile phone signal is normal,

Short press the SOS key to enter a dial interface and shows the first SOS number, direct dialing. If the first SOS number has not connected will automatically dial the second SOS number.

Tips 1:

GPS antenna is on the left side of device(as below picture),when using GPS function, the gps antenna should keep upward and no blocking .



Q: How to restart when the mobile phone is dead?

A: When the device is dead, press the "Power key" and keep 10 seconds to restart the device, no need open the battery cover or take out the battery.

 
Q: Can walkie talkie work if the antenna is not installed?

A: No, it can't work without antenna.

Q: Can use FM radio if not insert the earphone?

A: No, the earphone is the antenna of the FM, must insert earphone to use FM radio.

After sales service card

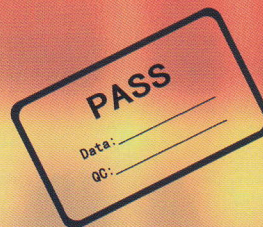

Professional & Focus Warm-hearted service

Warranty Card

Model: _____ Price: _____

Series NO.: _____ Dealer Name/stamp: _____

Purchase Date: _____

Terms of warranty policy:

1: Client can make a replacement within 7days from the date of purchase due to manufacturing quality problem, but the client should keep the device in good condition and packing is complete. This term exclude damage intentionally by the client.

2: The device is under one year free warranty from the date of purchase, this term is only under that the quality issue is caused by manufacturing quality problem, also client should show the warranty card along with the device.

3: This warranty does not cover the conditions of due to damage intentionally or incorrect operation or open the device by client.

4: For the warranty expired device, we will charge repairing and service fee, and user will pay the ship cost.

Notice

- ⊗ Please read the user manual carefully before using;
- ⊗ Throwing the phone or battery to fire or liquid is prohibited;
- ⊗ Please power off the device in the inflammable and explosive environment;
- ⊗ Please keep away the battery from the items such as metal,oil,corrosive,etc;
- ⊗ Please use original or designated battery and charger;
- ⊗ Please use original or designated antenna, do not sure damaged antenna phone:
- ⊗ Please make the phone stickers in good condition,such as screw sticker,etc;
- ⊗ Please make the waterproof sticker in good condition.

★ 1: Please keep this warranty card carefully,show it when repairing.

2:Pictures for reference only, subject to our available products.

Warranty card: Defects description list

Item	Description list	Record 1	Record 2	Record 3
Handset	Defects as user manual list			
	NO display,error,missing line			
	Can not switch or or can not login the network			
	No vibration			
	Dialing error			
	Irregular witch off			
	SIM card loose			
	Keypad out of control			
	No voice, one way silent or abnormal volume			
Charger	Housing damage or crack due to materials			
	Not working or can not charge			
Battery	Not working after charging fully			
	Battery capacity after charging fully less than 80% of standard			
SIM card	Not working			
Earphone	Not working			
USB	Not working			

※If your mobile have above problems, please mark it in black accordingly.

Repair Record	Remark
Record 1	
Record 2	
Record 3	
Record 4	

※If found other defects, please fill in this remark column.