 




NEW WIDETECH

# WDH-716DBH-18

# DEHUMIDIFIER

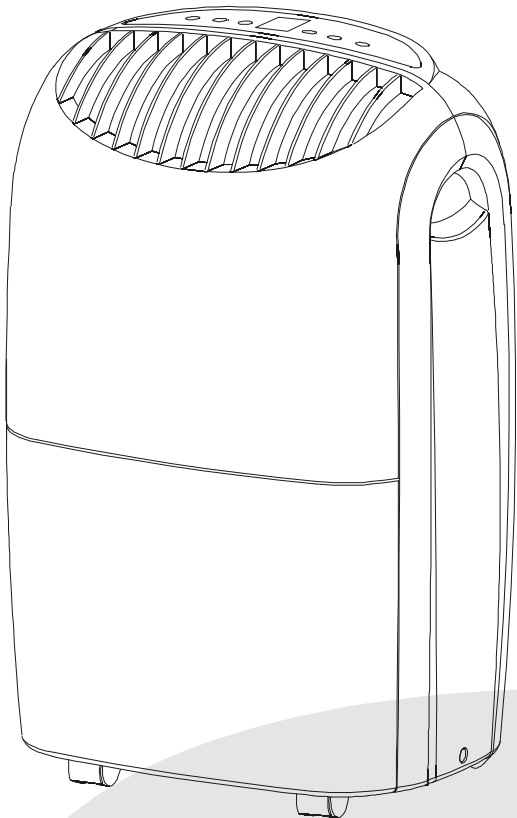

## CONTENTS

WARNING / CAUTION	0
DESCRIPTION OF COMPONENTS	
FUNCTION EXPLANATION	1
OPERATION INSTRUCTIONS	2
CONTINUOUS DRAINAGE	3
CAUTIONS	4
MAINTENANCE / EMERGENCY	5
SPECIFICATION	LAST PAGE

 
## USER'S MANUAL

**VOLTAGE : 220-240V~50Hz**


THANKS FOR YOUR CHOOSING NEW WIDETECH'S DEHUMIDIFIER.  
BEFORE USING IT, PLEASE READ THOROUGHLY OF THIS INSTRUCTION MANUAL.

# WARNING


Do not fold the power cord as shown below !

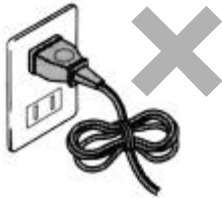

 Make sure the plug is firmly plugged in properly !

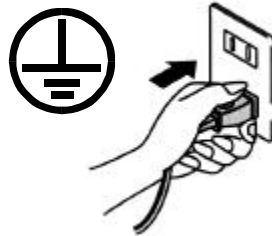

 
Do not use multiple socket as shown below !

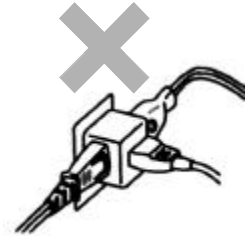


Make sure the plug is clean !



 After turning off the power , please take off the plug.

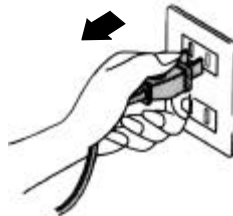


 Do not plug in the power plug with wet hands !

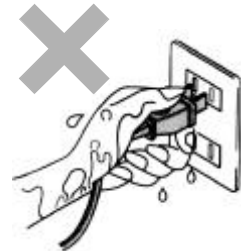


# CAUTION

 Do not place anything on top of the control panel !

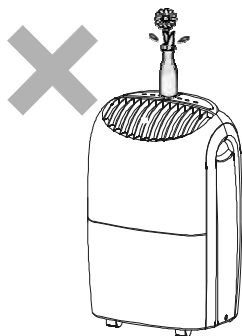

 
Do not cover all the air outlets of the machine !

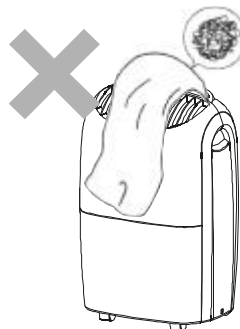


Stop children from playing or climbing the machine !



 
Do not wet the machine or the control panel !

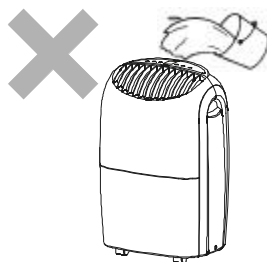

 
Keep the flammable gas/oil away from the machine !

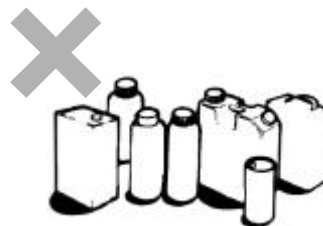


Ask professionals to do the serving !

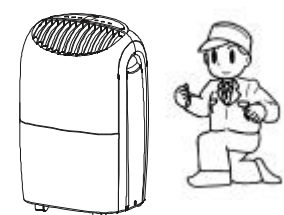 

# DESCRIPTION OF COMPONENTS

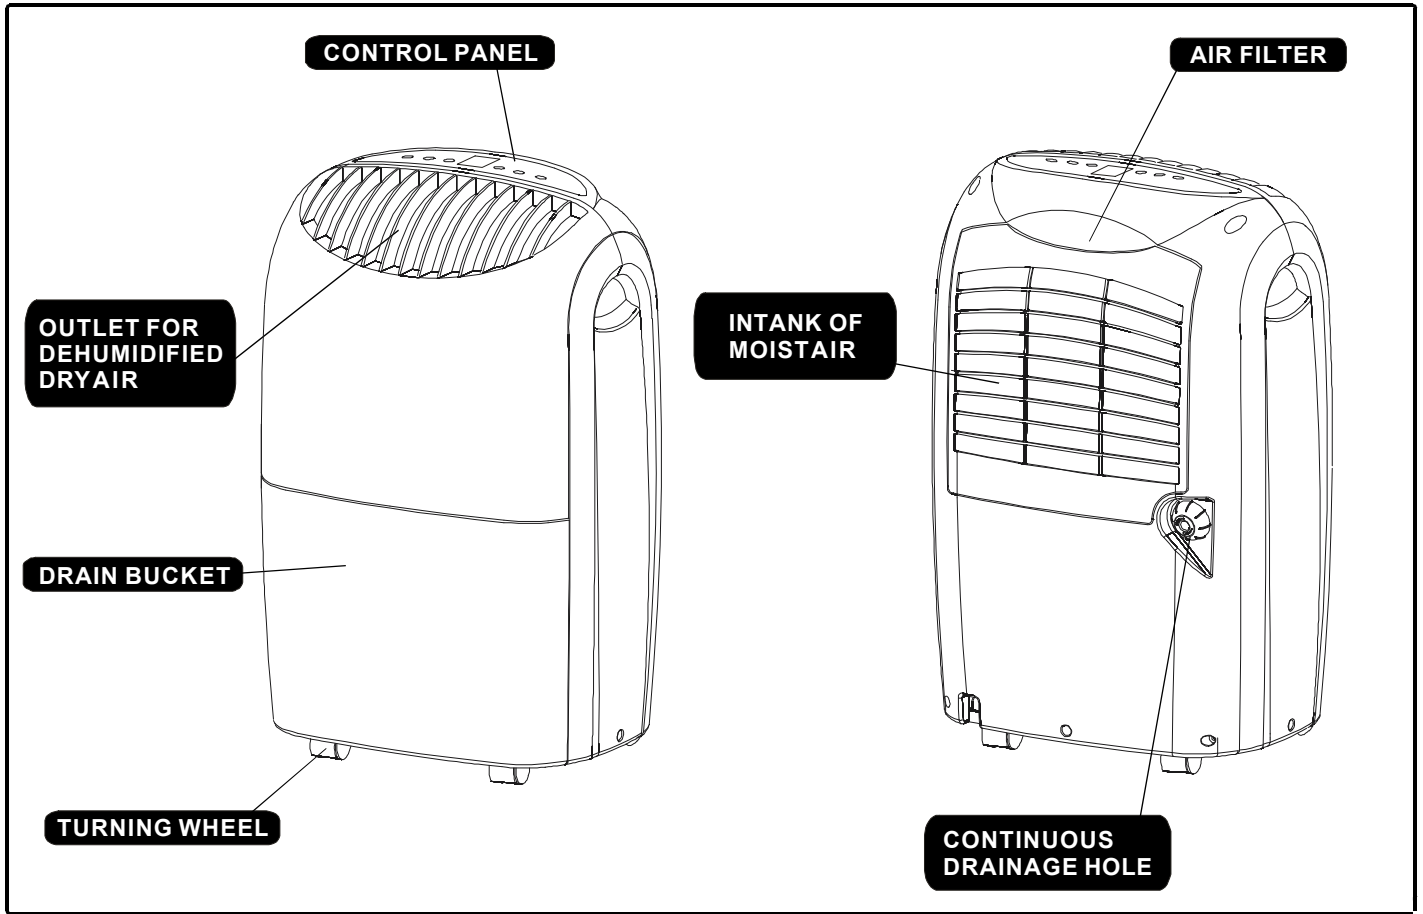 


# FUNCTION EXPLANATION

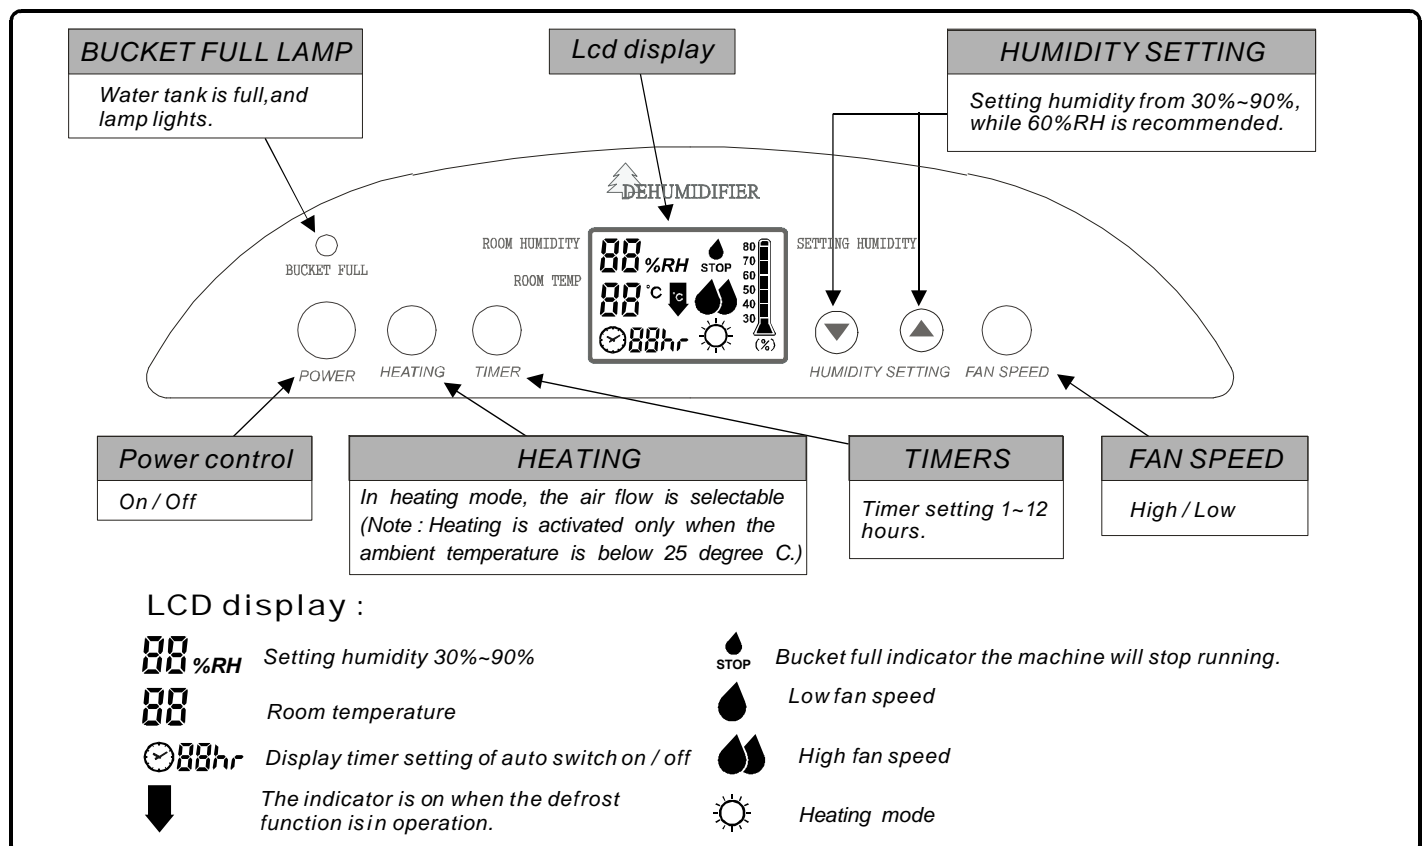 



# OPERATION INSTRUCTIONS

## Start Operation

 - 1) Make sure the plug is firmly plugged on in the socket.

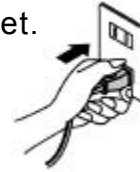

  - 2) Make sure the water tank is placed in proper position.  
(After plug on the machine for the first time, if the full tank lamp light up, just pull out the water tank then push it back to the proper position.)

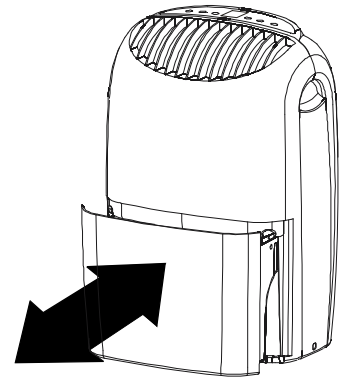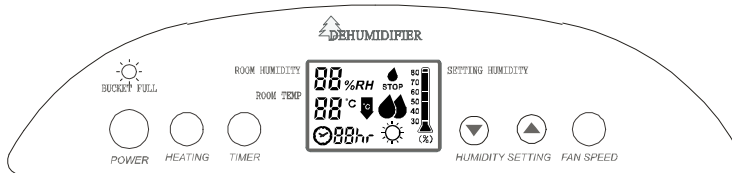

## When Full Tank Lamp Is On

When the water tank is full, the indication lamp will light up, the dehumidifier will stop operating. Remove the water in the tank, then place the water tank back to it's proper position the machine will start operating again.



 
Remove the water in the water tank with two hands

## DEFROST

When operating in low temperatures (less than 12 °C) the surface of the evaporator will accumulate frost and effect the efficiency of the dehumidifier. When this happens the machine will go into periodic defrost mode automatically. This is quite normal. Defrost lamp will come on. Model (insert model no here) will operate in temperatures down to 5 °C. Defrost time may vary. If the dehumidifier freezes up, turn off at power supply and restart unit. If the temperature remains at a very low level, continuously outside the operational range of the dehumidifier, 5 °C to 35 °C, the unit should be switched off. Please contact service agents.

# CONTINUOUS DRAINAGE

## Continuous Drainage Under Good Condition

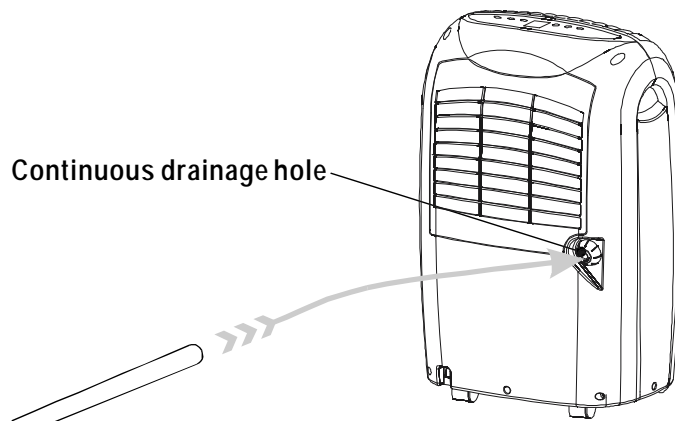



1) Put in the PVC hose into the back of the closed hole, then connect the PVC hose to the front.

1. Prepare PVC hose to drain out water (The hose sold in market with inner dia. 13mm)	For drainage
2. Take out the stopple of the drainage outlet .	Back of the unit Tube stopple
3. Take out the soft cover, put it and tube stopple into the bucket for storage.	Softcover Tube stopple
4. Connect the PVC hose with the drainage outlet.	Drainage PVC hose
5. Place the bucket on its original location.	Drainage PVC hose Push bucket back into the unit toward the direction as the arrow points to Bucket

2) Put the water tank back, do according to the instructed way.


### The Proper Way To Place The Water Drainage PVC Hose

  When using continuous drainage, the PVC hose must be placed below the drainage hole. Most avoid uneven ground and over folded hose.

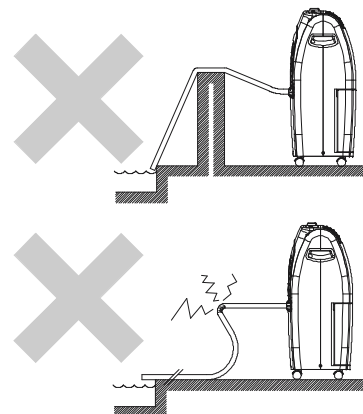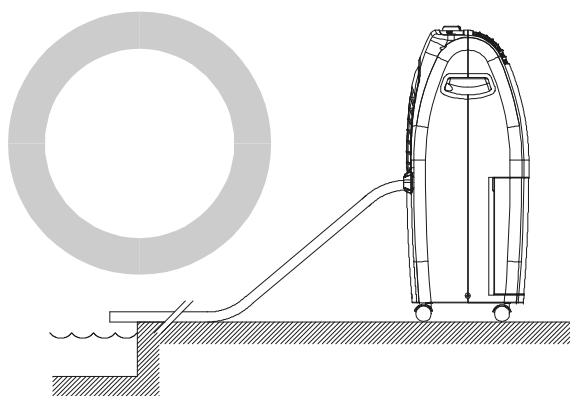


# CAUTIONS

 
Do not pull the power cord to avoid broken cord, which lead to danger.

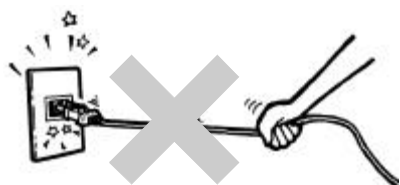

 
Do not use insect, oil or paint spray around the Machine, it might cause damage to the plastic parts or start a fire.

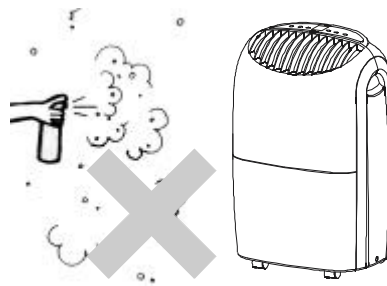

 
Do not place the machine on an uneven ground, to avoid shaking, noise and leakage of water.

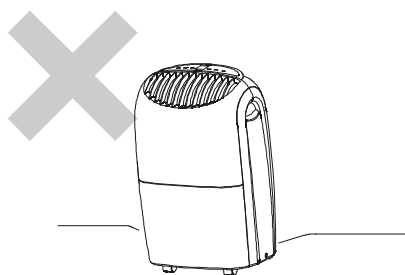

 
Please always keep the unit 20 cm away from the wall to dissipate the heat properly. You may hang the clothing at least 50 cm above the machine.

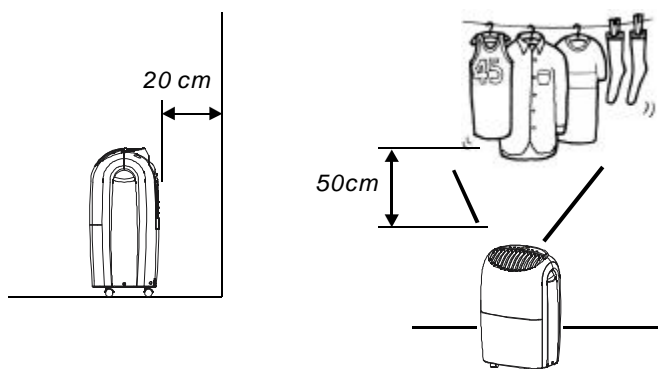

 
It is dangerous to put anything into the machine.

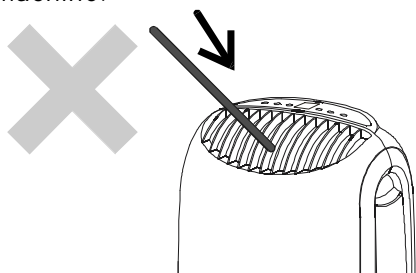

 
Close all the open windows to reach the maximum possible efficiency of removing moisture.

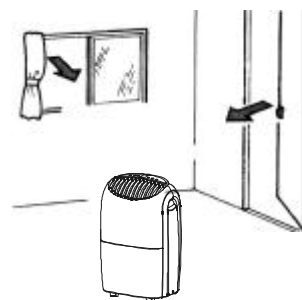

 Keep the machine away from any type of heat sources.

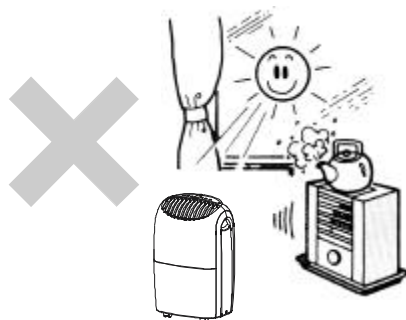


 When moving or put in storage, do not place the dehumidifier on side way or upside down and avoid violent shaking.

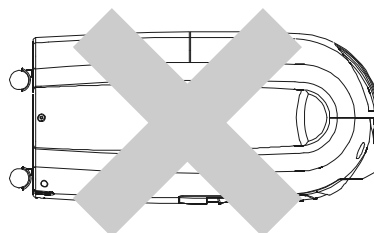

# MAINTENANCE

 Please make sure the dehumidifier is unplugged before serving or cleaning the machine, for safety reasons!

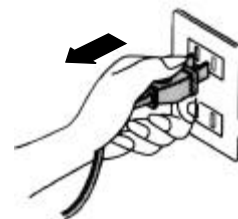

## 1) Clean the Shell :

 
- A. Wipe the shell using soft and clean cloth.
- B. If the dehumidifier is very dirty, please use mild detergent then wipe off the detergent with half dried cloth.
- C. Do not wash the machine with a hose, it will cause leakage of electricity.

## 2) Clean the Air Filter :


The propose of the air filter is to filter the dust or unclean material in the air. If the filter is blocked by the dust the usage of the electricity will be greater than normal, For the best more efficient of removing moisture, please clean the filter once in two weeks.

Cleaning Steps :

- A. Pull out the filter gently.

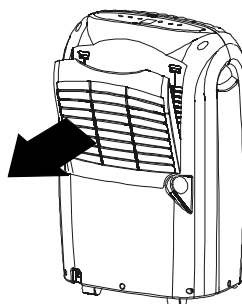

 - B. Clean the filter by vacuum cleaner or washing with clean water then dry the filter using dry cloth.

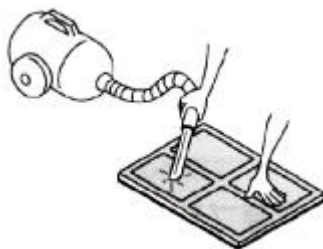

- C. Place the filter back to it's position.

# EMERGENCY

*Please unplugged the machine when there is sometime wrong. Contact the serving department immediately. Do not disassemble the dehumidifier yourself !*

# SPECIFICATION

MODEL		WDH-716DBH-18
POWER		220-240V /50Hz
MOISTURE REMOVAL		9 L/D (27°C 60%RH) 18 L/D (30°C 80%RH)
POWER INPUT	Dehumidification	380W
	Heating and Dehumidifier	950W
SIZE OF SHELL ( W ×H ×D )		362*582*270 mm
WEIGHT		17.5 kg
OPERATING TEMPERATURE		5°C ~ 35°C

- If the power cord on this unit is damaged it must be replaced by the manufacturer , its service agent or qualified persons in order to avoid a hazard .
- This appliance is not intended for use by children or other persons without assistance or supervision if their physical, sensory or mental capabilities prevent them from using it safely. Children should be supervised to ensure that they do not play with the appliance.

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.



**Glendimplex Australasia Ltd**

---